



Directives

Refer to Declaration of

Conformity for relevant

Instruction Manual Thermo-chiller HRSH090 Series

## 1 Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger."

CE

- They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)<sup>\*1)</sup>, and other safety regulations.
- <sup>1)</sup> ISO 4414: Pneumatic fluid power General rules relating to systems.
- ISO 4413: Hydraulic fluid power General rules relating to systems. IEC 60204-1: Safety of machinery - Electrical equipment of machines.
- (Part 1: General requirements)
- ISO 10218-1: Manipulating industrial robots Safety, etc.

This manual contains essential information for the protection of users and others from possible injury and/or equipment damage.

- Read this manual before using the product, to ensure correct handling, and read the manuals of related apparatus before use.
- Keep this manual in a safe place for future reference.
  To ensure safety of personnel and equipment the safety instructions in
- this manual must be observed, along with other relevant safety practices.

A Caution	Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.
<b>M</b> Warning	Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.
A Danger	Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

#### **Warning**

- The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.
- Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

#### Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

 Do not service or attempt to remove product and machinery/equipment until safety is confirmed.

1) The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.

2) When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.

3) Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

#### Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.

1) Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.

### 1 Safety Instructions (continue)

2) Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustions and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specification described in the product catalogue.

3) An application which could have negative effects on people, property, or animals requiring special safety analysis.

4) Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

 Always ensure compliance with relevant safety laws and standards. All electrical work must be carried out in a safe manner by a qualified person in compliance with applicable national regulations.

## **Caution**

• The product is provided for use in manufacturing industries. The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries consult SMC beforehand and exchange specifications or a contract if necessary. If anything is unclear, contact your nearest sales branch

### 2 Specifications

### 2.1 General description and intended use

This product used a built-in pump to circulate a liquid such as water, adjusted to a constant temperature by the refrigeration circuit. This circulating liquid cools parts of customer's machine that generate heat.

### 2 Specifications (continue)

\*2 Use fluid in condition below as the circulating fluid. Tap water: Standard of The Japan Refrigeration and Air Conditioning Industry Association (JRA GL-02-1994).

15% ethylene glycol aqueous solution: diluted by tap water in condition above without any additives such as antiseptics.

Deionized water: Electrical conductivity 1µS/cm and higher (electrical resistivity 1M $\Omega$  · cm or lower).

- \* 3 (1) Ambient temp./Facility water temp. : 32°C, (2) Circulating fluid: Tap water, (3) Circulating fluid temp.: 20°C, (4) Circulating fluid flow rate : Rated flow rate, (5) Power supply: HRSH090- \* -20: AC200V; HRSH090- \* -40: AC400V.
- \*4 (1) Ambient temp./Facility water temp. : 32°C, (2) Circulating fluid : Tap water, (3) Circulating fluid flow rate : Rated flow rate, (4)Power supply : HRSH090-\*-20: AC200V; HRSH090-\*-40: AC400V.
- \* 5 (1) Ambient temp./Facility water temp. : 32°C, (2) Circulating fluid : Tap water, (3)Circulating fluid temp.: 20°C, (4) Heat load : Same as the cooling capacity, (5)Circulating fluid flow rate: Rated flow rate, (6)Power supply : HRSH090- \* -20: AC200V; HRSH090- \* -40: AC400V, (7) External piping length: Minimum
- \*6 With the pressure control mode by inverter. When the pressure control mode is not used, the pump power frequency set mode can be used.
- \*7 Fluid flow rate to maintain the cooling capacity. If the actual flow rate is lower than this, please install a bypass piping.
- \*8 To be prepared by user. A specified earth leakage breaker is installed for option B, option S and 400V type.
- \*9 The anchor brackets (including M10 bolts) are used for fixation with the skid when this product is packed. The anchor bolts are not attached.
- \*10 Copper, bronze and brass is not included when option M [ DI water (pure water) piping] is selected.

## 2.2 Product specifications

### HRSH090-\*\*-\*\*-Options

		•						
	Mo	del		HRSH090-A + -20- +	HRSH090-W # -20- #	HRSH090-A # -40- #	HRSH090-W \$ -40- \$	
Cooling method		Air-cooled	Water-cooled	Air-cooled	Water-cooled			
Cooling method			refrigerated	refrigerated	refrigerated	refrigerated		
	Refrig	erant			R410(HFC),	(GWP:2088)		
	Quantity of refr	igerant	kg	1.32	1.4	1.32	1.4	
	Control	method			PID o	ontrol		
	Ambient ter	nperature <sup>11</sup>			5 to	45		
	Circula	ating fluid* <sup>2</sup>		Tap wa	ater, Ethylene glycol aqueo	us solution 15%, Deonized	d water	
	Operating ter	mp. range <sup>*1</sup>	°C		5 to	40		
_	Cooling ca	ipacity <sup>'3</sup>	kW	9.5	11	9.5	11	
Ē	Heating ca	apacity <sup>14</sup>	kW		2	5		
s's	Temperature	e stability <sup>15</sup>	°C		±0	.1		
ĩ		Rated flow rate (outlet)	L/min		45 (0.5	5MPa)		
륀	Pump capacity	Max. flow rate	L/min		6	0		
ing [		Max. lifiting height	m		5	D		
n la	Settable pressure range <sup>16</sup> M		MPa		0.1 t	0.5		
ŝ	Min. operating flow rate <sup>7</sup>		L/min	20				
Tank capacity		L	18					
Circulating fluid Outlet and Inlet port size			Rc1 (Symbol F: G1, Symbol N: NPT1)					
Tank drain port			Rc1/4 (Symbol F: G1/4, Symbol N: NPT1/4)					
Wetted material <sup>*10</sup>			Stainless steel, Copper (Heat exchanger brazing), Brass, Bronze, Carbon, Ceramic PE, PVC, POM, PTFE, NBR, EPDM, FKM, PP					
Temperature range °C		°C		5 to	40			
	Pressure range MPa		MPa	0.3 to 0.5				
te .	E Required flow rate Umin		L/min	25				
S V S	Facility water pres	sure differential	MPa	more than 0.3				
É	Facility wate	r inlet, outlet port		Rc1/2				
	Wette	d material		Stainless steel, Copper (Heat exchanger brazing), Bronze, Brass, PTFE, NBR, EPDM				
ε	Pow	or supply		AC200/200-230V 50/60Hz 3-phase AC380-415V 50/60Hz 3-phase		0/60Hz 3-phase		
ŝ	Power supply			Allowable voltage	fluctuation ±10%	Allowable voltage	fluctuation ±10%	
sy	Recommended	Rated current	Α	30		2	0	
÷	earth leakage breaker "8	Sensitivity	mA	30				
lec	Rated operating current <sup>15</sup> A		Α	15	12	8	6.8	
-	Rated power co	onsumption <sup>15</sup>	kW	4.6 (5.2 kVA)	3.8 (4.0 kVA)	5.0 (5.6 kVA)	4.0 (4.7 kVA)	
	Sound level (Front 1m	/Height 1m) <sup>15</sup>	dB(A)	66	65	66	65	
	Acces	ssory		Alarm cord list label 2pc.(English 1pc./Japanese 1pc.), Operation manual 2pc. (English 1pc./Japanese 1pc.), Y stainer (40 meshes) 25A. Barrel nipple 25A Anchor brackes 2pcs. (including MID bolts 4pcs.) <sup>3</sup>			), ,	
	Weight (dry co	ndition)	kg	130 121				

Notes:

\*1 Use 15% ethylene glycol aqueous solution if operating in a place where the circulating fluid temp. or ambient temperature is lower than 10°C. Please discharge the facility water from the facility water circuit when there is a risk of freezing.

### 2.3 Production Serial Number Code

The production serial number code printed on the label indicates the month and year of production as per the following table:

	Year	2018	2019	2020	 2022	2023	2024	
Mont	i 🔨	W	X	у	 A	B	С	
Jan	0	Wo	Хо	yo	 Ao	Bo	Co	
Feb	P	WP	XP	yР	 AP	BP	CP	
Mar	Q	WQ	XQ	y Q	 AQ	BQ	CQ	
Apr	R	WR	XR	y R	 AR	BR	CR	
May	S	WS	XS	yS	 AS	BS	CS	
Jun	T	WT	XT	y T	 AT	BT	CT	
Jul	U	WU	XU	yU	 AU	BU	CU	
Aug	V	WV	XV	уV	 AV	BV	CV	
Sep	W	WW	XW	yW	 AW	BW	CW	
Oct	X	WX	XX	yХ	 AX	BX	CX	
Nov	y y	Wy	Ху	уу	 Ay	By	Су	
Dec	7	W7	X7	v7	A7	BZ	CZ	

## 3 How to Order



## 4 Name of Parts and Accessories

### 4.1 Accessories

Check the enclosed accessories with the delivered thermo-chiller.

1	Operation Manual	1pc	
2	Alarm code list label	1рс	
3	Y strainer (40 mesh) 25A	1pc	Ø.
4	Barrel nipple 25A	1pc	
5	Anchor bracket :(HRS-TK004) (The anchor bolts are not attach)	2pc	o o
	For G thread adapter set: - HRSH090-AF-*-* : (HRS-EP019) HRSH090-WF-*-* : (HRS-EP023)	1 set	
6	For NPT thread adapter set: - HRSH090-AN-*-* : (HRS-EP018) HRSH090-WF-*-* : (HRS-EP022)	1 set	
0	For G thread adapter set: - HRSH090-AF-*-J : (HRS-EP021) HRSH090-WF-*-J : (HRS-EP025)	1 set	
	For NPT thread adapter set: HRSH090-AN-*-J : (HRS-EP020) HRSH090-WN-*-J : (HRS-EP024)	1 set	

\*These accessories are not explained in this manual. For details, read the Operation Manual attached.



### HRSH090-SHU14

## 4 Name of Parts and Accessories (continue)

## 4.3 Function of parts

## The names of parts used in this manual are as follows:

Name	Function
Operation display panel	Runs and stops the product and performs settings such as the circulating fluid temperature.
Power supply cable	Power supply of voltage specifications; connect the plug to the breaker of the user's equipment.
Model Label	Shows the part number of the product.
Circulating fluid outlet port	The circulating fluid flows out from the outlet port.
Circulating fluid return port	The circulating fluid returns to the return port.
Drain port	This drain port to drain the circulating fluid out of the tank.

### 4.4 Operation display panel



No	Description	Function		
Digital display		PV	Displays the temperature and pressure of the circulating fluid and alarm codes.	
1	(7-segment, 4 digits)	SV	Displays the discharge temperature of the circulating fluid and the set values of other menus.	

No	Description	Function
2	[°C] [°F] lamp	Equipped with a unit conversion function. Displays the unit of display temperature (default setting °C).
3	[MPa] [PSI] lamp	Equipped with a unit conversion function. Displays the unit of display pressure (default setting MPa).
4	[REMOTE] lamp*	Enables the remote operation (start and stop) by communication. Lights up during remote operation.
5	[RUN] lamp	Lights up when the product is started and in operation. Goes off when the product is stopped. Flashes during stand-by for stop or anti-freezing function, or independent operation of the pump.
6	[ALARM] lamp	Flashes with buzzer when alarm occurs.
7	[ ] lamp	Lights up when the surface of the level indicator falls below the LOW level.
8	[ ] lamp*	Lights up while the run timer or stop timer function is working.
9	[ 📿 ] lamp*	Lights up when the product is in automatic operation.
10	[RUN/STOP] key	Makes the product start or stop.
11	[MENU] key*	Shifts the main menu (display screen of temperature) and secret menu (entry of set values and monitor screen).
12	[SEL] key*	Changes the item in menu and enters the set value.
13	[▼] key	Decreases the set value.
14	[▲] key	Increases the set value.
15	[PUMP] key	Keep the [MENU] and [RUN/STOP] keys pressed down simultaneously. The pump starts running independently to make the product ready for start-up (release the air).
16	[RESET] key	Keep the [♥] and [▲] keys pressed down simultaneously. This will stop the alarm buzzer and reset the [ALARM] lamp.

Operation Manual attached.

### 5 Transportation, Transfer and Moving

- 1) Be sure to unlock the caster (only at the front wheel).
- 2) There is no lock function with the rear casters.
- 3) Push the left and right panels with the handle and move.
- 4) Use corners when pushing the front or rear panel. Pushing at the centre can deform the panel.



## 6 Installation

### 6.1 Installation

## Warning

· Do not install the product unless the safety instructions have been read and understood

### 6.2 Types of Hazard Labels

#### ▲ Warning

Warning related to High Temperatures

Warning related to Rotating Objects

and burns

· The product has various potential hazards and they are marked with warning labels.

### Warning related to Electricity



This symbol stands for a possible risk of electric shock.

## 6 Installation (continue)

## 6.4 Mounting

## Warning

- The Installer / End User is responsible for carrying out a noise risk assessment on the equipment after installation and taking appropriate measures as required.
  - 1) Select a hard flat and level surface suitable to support the weight of the product and which will reduce the effect of vibration.
  - 2) Install the product so the operation panel is easily visible and accessible, electrical and fluid connections can be easily made at the rear of the product and the air inlet and outlet vents are clear of obstructions. After moving into position, lock the front caster wheels again.
  - 3) Fix the product to the floor or base using the anchor bracket (The anchor bolts are not attached).

### 6.4.1 Installation Space



## 6 4 2 Anchor brackets

No	Description	Function
2	[ºC] [ºF] lamp	Equipped with a unit conversion function. Displays the unit of display temperature (default setting °C).
3	[MPa] [PSI] lamp	Equipped with a unit conversion function. Displays the unit of display pressure (default setting MPa).
4	[REMOTE] lamp*	Enables the remote operation (start and stop) by communication. Lights up during remote operation.
5	[RUN] lamp	Lights up when the product is started and in operation. Goes off when the product is stopped. Flashes during stand-by for stop or anti-freezing function, or independent operation of the pump.
6	[ALARM] lamp	Flashes with buzzer when alarm occurs.
7	[ ] lamp	Lights up when the surface of the level indicator falls below the LOW level.
8	[ 🕘 ] lamp*	Lights up while the run timer or stop timer function is working.
9	[ 🔍 ] lamp*	Lights up when the product is in automatic operation.
10	[RUN/STOP] key	Makes the product start or stop.
11	[MENU] key*	Shifts the main menu (display screen of temperature) and secret menu (entry of set values and monitor screen).
12	[SEL] key*	Changes the item in menu and enters the set value.
13	[▼] key	Decreases the set value.
14	[▲] key	Increases the set value.
15	[PUMP] key	Keep the [MENU] and [RUN/STOP] keys pressed down simultaneously. The pump starts running independently to make the product ready for start-up (release the air).
16	[RESET] key	Keep the [▼] and [▲] keys pressed down simultaneously. This will stop the alarm buzzer and reset the [ALARM] lamp.

\*These lamps and keys are not used in this manual. For details, read the



)))

fingers or hand, or entanglement by rotating fan (For air-cooled type).

### Warning related to other General Dangers

This symbol stands for general danger.

This symbol stands for a possible risk of cutting

### 6.3 Environment

### **M** Warning

- · Do not use in an environment where corrosive gases, chemicals, salt water or steam are present.
- Do not use the product in an area of high temperature and humidity which cannot be exhausted, or where it is exposed to corrosive substances. Cooling failure can result.
- Do not use the product outdoors. If the product is subjected to rain or water splash it may cause electrical shock, fire or failure.
- · Do not use in an explosive atmosphere.
- Do not expose to direct sunlight. Use a suitable protective cover.
- Do not mount in a location exposed to radiant heat.
- Do not install in a location subject to vibration or impact. Check the product specifications.
- · Do not use in locations at altitudes of 3000m or higher (except for product storage and transport), refer to the Operation Manual.



- · Before piping make sure to clean up chips, cutting oil, dust etc.
- · When installing piping or fittings, ensure sealant material does not enter inside the port. When using seal tape, leave 1.5 to 2 threads exposed on the end of the pipe/fitting.
- Tighten fittings to the specified tightening torque.

Name	Port size*1	Recommended tightening torque	Recommended piping specification	
Circulating fluid supply	Rc1	26 to 29 N m		
Circulating fluid return	Rc1	30 to 38 N·m	1.0MPa and more.	
Drain port	Rc1/4	8 to 12 N∙m	-	
Overflow port*2	Rc3/4	28 to 30 N•m	Inside diameter 19mm and more of piping.	



## 6.6 Filling of Circulating Fluid

- **Caution**
- When the temperature of the circulating fluid is set to 10°C, use a 15% aqueous solution of Ethylene Glycol. Tap water may freeze in the Thermo-chiller, leading to malfunction.
- If using Ethylene Glycol, refer to the suppliers Material Safety Data Sheet (MSDS) and wear Personal Protective Equipment (PPE) as appropriate.
- Supply the circulating fluid up to the "H" mark on the tank. Operation will stop when the fluid level falls lower than "L".
- 1. Check the drain port is plugged or closed by the valve to prevent the supplied circulating fluid from draining out.
- 2. Turn the lid for the circulating fluid fill port counter clockwise to open, and fill the circulating fluid up to "H" of the level indicator scale.
- 3. After filling to the specified level, turn the lid clockwise to close.



## 6.7 Wiring of the power supply

### **Warning**

- The electrical facilities should be installed and wired in accordance with local laws and regulations of each country and by the person who has knowledge and experience.
- Check the power supply. Operation with voltages, capacities, frequencies and cable sizes other than those specified can cause heat, fire and electrical shock.
- Wire with an applicable cable size and terminal.
- Be sure to shut off the user's power supply. Wiring with the product energized is strictly prohibited

### **A** Caution

- Use an earth leakage breaker.
- Be sure to provide grounding. Incomplete grounding can cause failure and electrical shock.

## 6 Installation (continue)

## 6.7.1 Preliminary preparation for wiring:

Prepare the power supply shown in the following table. For the connection between the product and power supply, use the power supply cable and earth leakage breaker shown below:

Bower		Termin al Recomme			Earth leaka	ge breaker
Model	supply voltage	block screw diamet er	nded crimp terminal	Cable qty. x size*2	Rated current [A]	Sensitivity of leak current [mA]
HRSH090-A*-20-* HRSH090-W*-20-*	AC200/ 200-230V 50/60Hz 3phase		R5.5-5	4 cores x AWG10 (4 cores x 5.5mm <sup>2</sup> ) *including ground	30	
HRSH090-A*-40-* HRSH090-W*-40-*	AC380- 415V 50/60Hz 3phase	М5	R5.5-5 (Power supply) R14-5 (Grounding cable)	3 x 5.5 mm <sup>2</sup> (3 x AWG10) (Power supply) 1 x 14 mm <sup>2</sup> (1 x AWG6) (Grounding cable)	20	30

## 6.7.2 Wiring of Power Supply

1) Remove 4 screws to remove the power supply terminal cover on the back of the product.



- 2) Hold the pull of the power supply terminal cover. Pull the bottom of the cover forward and remove it moving the cover downwards.
- Insert the power supply cable and ground cable to the power supply cable entry of the power supply terminal cover (grommet with film).



4) Connect the power supply and the ground cable as shown in the figure below



## 7 Start, Stop and Temperature Settings

- 7.1 Preliminary Preparation for Start-up
- 7.1.1 Supply of Power
- 1) Turn on the power switch.
- →The initial screen (HELLO) will be displayed for approx. 8 seconds on the operation panel. Then the display changes to the main screen which displays the circulating fluid outlet temperature.

## 7.1.2 Air Release

 Press the [PUMP] key ([RUN/STOP] key and [MENU] key simultaneously). The [RUN] lamp flashes and only the pump continues the operation. This operation allows the discharge of the circulating fluid, and enables checking leakage from the piping and air release.

0

For the option B, option S and HRSH090-\*\*-40-\*

- 2) At this time, the fluid level can lower and cause the alarm "AL01; Low tank level", which will lead to the stop of the product.
- In that case, check that there is no leakage from the user's piping, fill the circulating fluid and take necessary actions in "8. Reset Alarms".
- Repeat steps 1) to 3) until the alarm ("AL01; Low tank level") is no longer generated.

## 7.1.3 Temperature Setting

1) Press the [▼] and [▲] keys to change the SV to the required value.



7.2 Start of the Product

- 1) Press the [RUN/STOP] key.
- ⇒The [RUN] lamp lights up (in green) and the product starts running. The circulating fluid discharge temp (PV) is controlled to the set temp (SV).



## 7.3 Stop of the Product

 Press the [RUN/STOP] key.
 ⇒The [RUN] lamp flashes (in green) and continues the operation until the product is ready to stop. After approx. 15 seconds, the [RUN] lamp goes off and the product stops.



## 8 Reset Alarms

A Caution

- Should some error occur, the [ALARM] lamp flashes (in red) and the buzzer sounds to inform the user of the 'Error'.
- The alarm code will be displayed on the operation panel so that the cause can be checked.



## 8 Reset Alarms (continue)

• Before resetting the alarm, read the "Causes and Remedies" of "Troubleshooting" and eliminate the cause explained there. Otherwise, the same alarm may be repeated.

Reset of alarm

Press the [RESET] key ([▼] and [▲] keys simultaneously).
 ⇒The buzzer and then [ALARM] lamp (red) go off.



## 9 Troubleshooting

## 9.1 Troubleshooting

The troubleshooting method depends on which alarm has been generated. Refer to the "Alarm code list and Troubleshooting".

## **Warning**

In the event of an unexpected problem or malfunction, switch off the product and investigate the cause. If the cause of the problem cannot be determined, do not use the product, but contact SMC for assistance.

Alarm	code	list and	d Troublesh	ootina
/	0040	not an		ooung

Code	Description	Operation	Cause/Remedy (Press the reset key after eliminating the cause.)
AL01	Low level in tank	A.RUN	The fluid level of the level indicator has fallen. Fill the circulating fluid.
AL02	High circulating fluid discharge temp.	A.STP	·Check that the ambient temperature, facility water specifications and heat load are within
AL03	Circulating fluid discharge temp. rise	A.RUN	the specified ranges. ·Wait until the circulating fluid temperature lowers.
AL04	Circulating fluid discharge temp. drop	A.RUN	Check that the filled circulating fluid temperature is within the specified range.

Code	Description	Operation	Cause/Remedy (Press the reset key after eliminating the cause.)
AL05	High circulating fluid return temp.	A.STP	Check that the circulating fluid flows.     Check that the heat load is within the specified range.
AL06	High circulating fluid discharge pressure	A.STP	Check that there is no bend, collapse and clog on/in the external piping.
AL07	Abnormal pump operation	A.STP	The pump does not operate. Check that the pump thermal operation switch is operated.
AL08	Circulating fluid discharge pressure rise	A.RUN	Check that there is no bend, collapse and clog on/in the external piping. In case of displaying EEEE on the PI display of the main display and check monitor menu, the pressure sensor of the circulating fluid circuit has a malfunction. Ask the service.
AL09	Circulating fluid discharge pressure drop	A.RUN	Restart and check if the pump runs. In case of displaying EEEE on the PI display of the main display and check monitor menu, the pressure sensor of the circulating fluid circuit has a malfunction. Ask the service.
AL10	High compressor suction temp.	P.RUN	Check the returned circulating fluid temperature.     Check that the heat load is within the specified range.
AL11	Low compressor suction temp.	P.RUN	Check that the circulating fluid flows.     Use 15% ethylene glycol aqueous solution
AL12	Low super heat temperature	P.RUN	with the set temperature lower than 10 deg. C.
AL13	High compressor discharge pressure	P.RUN	Check that the ambient temperature, facility water specifications and heat load are within the specified ranges.
AL15	Refrigerant circuit pressure (high pressure side) drop	P.RUN	Malfunction of the refrigeration circuit occurred. Ask for the service.
AL16	Refrigerant circuit pressure (low pressure side) rise	P.RUN	Check that the ambient temperature, facility water specifications and heat load are within the specified ranges.
AL17	Refrigerant circuit pressure (low pressure side) drop	P.RUN	Check that the circulating fluid flows higher than the minimum operating flow rate. It is possible that refrigerant is leaking. Ask for the service.
AL18	Compressor running failure	P.RUN	Restart and check if the compressor runs after leaving for 10 minutes.
AL19	Communication error	OFF	No request message is sent from the host computer. Send it again.
AL20	Memory error	A.STP	Malfunction of the controller occurred. Ask for the service.

Trou	ubleshooting	continue		
Code	Description	Operation	Cause/Rem (Press the reset key afte cause.)	edy er eliminating the
AL21	DC line fuse cut	A.STP	Fuse for the power supply of contact input/output connect ·Ask for the service. ·Check that there is no inco the current load is within the	butput of the ctor has blown. prrect wiring and e specified range.
AL22	Circulating fluid discharge temp. sensor failure	A.STP		
AL23	Circulating fluid return temp. sensor failure	A.STP	Malfunction of the temperature sensor occurred. Ask for the service.	
AL24	Compressor suction temp. sensor failure	P.RUN		
AL25	Circulating fluid discharge pressure sensor failure	A.STP	Malfunction of the pressure sensor for the circulating fluid circuit occurred. EEEE is displayed on the PI display of the main display and check monitor display. Ask for the service.	
AL26	Compressor discharge pressure sensor failure	P.RUN	Malfunction of the pressure sensor for the	
AL27	Compressor suction pressure sensor failure	P.RUN	Ask for the service.	1.
AL28	Pump maintenance	OFF	Notices of the periodical	Every 8,000h*5
AL29 <sup>*2</sup>	Fan maintenance	OFF	maintenances. Ask for	Every 30,000h
AL30	Compressor maintenance	OFF	the services of the pump, fan and/or compressor.	Every 30,000h
AL31	Contact input 1 signal detection	A.STP	Contact input is detected	
AL32	Contact input 2 signal detection	A.STP	<ul> <li>Contact input is detected.</li> </ul>	
AL37	Compressor discharge temp. sensor failure	P.RUN	Malfunction of the temperature sensor occurred. Ask for the service.	
AL38	Compressor discharge temp. rise	P.RUN	Check that the ambient tem water specifications and he the specified ranges.	perature, facility at load are within
AL39	Internal unit fan stoppage	A.RUN	Malfunction of the internal u Ask for the service.	unit fan occurred.

Code	Description	Operation	Cause/ (Press the reset key cau	Remedy / after eliminating the use.)
AL40	Dust-proof filter maintenance	OFF	Notice of periodical maintenance. Ask for the service of the dust-pro- filter.	he Every 500h <sup>*3</sup>
AL41	Power stoppage	A.STP	The power was shut of Restart after checking	if during running. the power supply.
AL42	Compressor waiting	A.RUN	The system is waiting f be ready to run. Wait for Will be automatically re	for the compressor to or a while. eleased after running.
AL43*2	Fan breaker trip	P.RUN		Release the fan breaker trip refer to Operation Manual [6.3.2 How to release the fan breaker trip].
AL44*2	Fan inverter error	P.RUN		
L45*1	Compressor breaker trip	P.RUN	Check that there is no power failure	Keep the [▼] and [▲] keys of the operation
L46	Compressor inverter error	P.RUN	such as ground fault, short circuit, voltage fluctuation, abnormal	down simultaneously for 10 seconds to reset.
L47*1	Pump breaker trip	A.STP	open phase, surge	WAIT( <b>BRIL</b> ) will be displayed and the
L48	Pump inverter error	A.STP		product cannot run for 40 seconds. Restart 40 seconds later after resetting.
L47 <sup>*4</sup>	Internal unit fan stoppage	A.RUN	Internal unit fan failure internal unit fan.	Ask for service for the

\*1: This alarm does not occur on the product of power specification '-20'. (Except option S.)

\*2: This alarm does not occur on the product of water cooled type.

\*3: Change the setting within the range of 1 to 9999.

\*4: This alarm does not occur on the product of air cooled type.

\*5: Notice on mechanical seal replacement. Mechanical seal replacement is limited to 2 times. If the cumulative operation time of the pump exceeds 20,000 hours, please consider requesting pump inspection service.

## HRSH090-SHU14

## 9 Troubleshooting (continue)

## 9.2 Other Errors

The causes and remedies for failures that are not indicated by alarm numbers are shown in below table

Content of Failure	Cause	Remedy		
	The breaker of the customer's power supply or/and the optional breaker is/are not turned on.	Turn on the breaker.		
The operation panel displays nothing	Failure of the breaker of the customer's power supply or/and optional power supply.	Replace the breaker.		
	Breaker trip of the customer's power supply or/and the optional breaker due to short- circuit and current leakage.	Repair the short-circuit or current leaking part.		
The [RUN] LED does	Communication is set.	Check communication setting.		
	Failure of the [RUN] LED	Replace the controller.		
switch is pressed.	Failure of the [RUN/STOP] switch	Replace the controller.		

## 10 Maintenance

### 10.1 General Maintenance

### Warning

- · Do not operate switches, etc. with wet hands and do not touch the electrical parts such as the power supply plug. It might cause electric shock
- · Do not splash water directly on the product and do not wash with water. It might cause electric shock and fire, etc.
- · Do not touch the fins directly when cleaning the dustproof filter. It might cause injury

Remount all panels removed for inspection or cleaning. As this might cause injury or electric shock if the prodcut is operated without the panels.

## **A** Caution

- · Not following proper maintenance procedures could cause the product to malfunction and lead to equipment damage.
- · Before performing maintenance, turn off the power supply. After

installation and maintenance, turn on power to the equipment and perform appropriate functional and leakage tests to make sure the equipment is installed correctly.

- Do not make any modification to the product.
- Do not disassemble the product, unless required by installation or maintenance instructions

### 10.2 Control of Circulating Fluid Quality

### **Warning**

- Use specified circulating fluids only. If other fluids are used, they may damage the product or result in dangerous hazards.
- When using fresh tap water ensure that it satisfies the water standard shown in the Operation Manual.

### **A** Caution

Clean the tank, circulating fluid circuit, and change the circulating fluid in the tank if any problems are found during the regular check. Even if no problems are found, it is recommended to change the fluid once every 3 months in case evaporation of the fluid causes concentration of impurities.

### 10.3 Daily Check

### **A** Caution

Check each item of "Daily checklist", and if any error is seen, stop the operation of the product and turn off the user's power supply, and service the product.

### Daily checklist

Item	Descript	tion of checking
Installation	Check the installation	There is no heavy object on the product or excessive force on the piping.
condition	conditions of the product.	Temperature and humidity are within the specified range of the product.
Fluid leakage	Check the connected part of piping	There is no circulating fluid leakage from the connected part of piping.
Fluid amount	Check the liquid level indicator.	The circulating fluid level must be between the scales of "H" and "L".

## 10 Maintenance (continue)

Item	Description of checking			
	Check the display.	The numbers on the display are clear.		
Operation panel	Check the function.	The [RUN/STOP] and [MENU], [SEL], [▼], [▲] buttons operate properly.		
Circulating fluid temperature	Check on the operation panel.	There is no problem for use.		
Operating conditions	Check the operation condition.	There is no abnormal noise, vibration, smell or smoke.		
Ventilating condition (Air-cooled type)	Check the condition of the ventilation grill.	Make sure the ventilation grill is not obstructed.		
Facility water (Water-cooled type)	Facility water condition	Temperature, flow rate and pressure are within the specified range.		

## 10.4 Monthly Check

### Cleaning of air vent (For Air-cooled type) **A** Caution

- · If the air ventilation of the product have clogged with dust or debris, heat radiation performance reduces. This results in the reduction of cooling
- performance, and may stop the operation. · Shut off the power supply of the product when performing cleaning, maintenance or inspection. Otherwise, it might cause electric shock, iniurv or burn. etc.

### 10.4.1 Removal and Cleaning of the Dustproof Filter

- 1) Dustproof filter is installed on the right side of the chiller.
- 2) Hold the pull at the bottom of the dustproof filter and lift the filter. Pull the filter forward, and lift it, then pull it downward. Care should be taken not to deform or scratch the air cooled condenser (fin) while the removal.
- 3) Use a long bristle brush or air gun to clean the condenser.
- 4) Mount the dustproof filter in reverse order of removal.



### 10.5 Inspection Every 3 Months

10.5.1 Replacement of Circulating Fluid

- Clean the tank and replace the circulating fluid (clean water)
- 10.5.2 Replacement of Facility Water (For water cooled type)
- Clean the facility water source and replace the facility water.

#### **10.6 Inspection Every 6 Months**

### **A** Caution

- It is impossible to prevent the leakage from the mechanical seal completely because of its structure. Although the leakage is described as 3cc/hr or less
- The recommend lifetime of the mechanical seal before needing replacement is 6000 to 8000 hours (usually 1 year).
- Check for water leakage from pump.

Remove the panel and check the mechanical seal of the pump for excessive leakage. If the leakage is found, replace the mechanical seal. Order the mechanical seal described in Operation Manual.

## 10.7 Discharge of the Circulating Fluid and Facility Water

## **M** Warning

- Shut off the the breaker of the cutomer's power supply.
- Release the residual pressure before discharging the circulating fluid.
- Before discharging the facility water, in case of water-cooled refrigerated type, stop the equipment for the facility water, or stop the facility water circuit to release the residual pressure.

## 10 Maintenance (continue)

## 10.7.1 Drain of the Circulating Fluid

- 1) Place a container underneath the drain outlet.
- 2) Remove the tank lid.
- 3) Open the ball valve at the drain port and drain the fluid.
- 4) Confirm that all the circulating fluid has been drained from the product and piping, and apply air purge from the circulating fluid return port.
- 5) After the circulating fluid has drained from the tank, close the ball valve at the drain port and put the tank lid back on



## 10.7.2 Drain of the Facility Water Fluid

- 1) Remove facility water piping from the product.
- 2) Open the left side panel then, open the air vent valve. The facility water in the product will be drained from the facility water inlet port.
- 3) After draining, shut the air vent valve and close left side panel.

### 10.8 Consumable Parts

Qty.	Description	Part No.	Remark
1	Dust-proof filter	HRS-S0306	1pc is used per unit
1	Mechanical seal set	HRS-S0307	1 set is used per unit
1	Mechanical seal set	HRS-S0350	1 set is used per unit (Option M)

11 Dec	laration	ı of Co	nformity

11.1 Below is a sample Declaration of Conformity (DoC) used for this product. An actual DoC will be supplied with each product.

SMC Co 4-14-15 declares Thermo HRSH0 Serial N is in confi demonstr	Chiller 90 Series 0.: WR0001 to WR ormity with the relevant	Original decla da-ku, Tokyo 10 sibility, that the follo 19999 nt Union harmonisa	aration 1-0021 Jap wing equipn tion legislati	ent:
SMC Co 4-14-15 declares Thermo HRSH0 Serial N is in confi demonstr	orporation Soto-Kanda, Chiyo under its sole respons Chiller 90 Series lo.: WR0001 to WR omity with the relevan	da-ku, Tokyo 10 sibility, that the follo 19999 nt Union harmonisa	1-0021 Jap wing equipn tion legislati	ban nent:
4-14-1 declares Thermo HRSH0 Serial N is in confi demonstr	Soto-Kanda, Chiyo under its sole respons Chiller 90 Series Io.: WR0001 to WR prmity with the relevan	da-ku, Tokyo 10 sibility, that the follo (9999 nt Union harmonisa	1-0021 Jap wing equipn tion legislati	oan nent:
declares Thermo HRSH0 Serial N is in confi demonstr	under its sole respons Chiller 90 Series Io.: WR0001 to WR prmity with the relevant	sibility, that the follo (9999 nt Union harmonisa	wing equipn	nent:
declares Thermo HRSH0 Serial N is in confi demonstr	under its sole respons Chiller 90 Series o.: WR0001 to WR prmity with the relevant	sibility, that the follo (9999 nt Union harmonisa	wing equipn	ent:
Thermo HRSH0 Serial N is in confi demonstr	Chiller 90 Series lo.: WR0001 to WR ormity with the relevant	19999 nt Union harmonisa	tion legislati	on and has been
HRSH0 Serial N is in confi demonstr	90 Series lo.: WR0001 to WF prmity with the relevan	R9999 nt Union harmonisa	tion legislati	on and has been
Serial N is in confi demonstr	lo.: WR0001 to WR prmity with the relevant	R9999 nt Union harmonisa	tion legislati	on and has been
is in confi demonstr	ormity with the relevan	nt Union harmonisa	tion legislati	on and has been
demonstr	ated to fulfil the requir	in onion namendo	a off to ground to	
Gonnoniou	area to trull the reality	rements with refere	nce to the h	armonised standard(s) as
listed hel	nw	ionicita warrenere	nee to the m	amoniscu standaru(s) as
noted per	Directive	Requirem	onte	Harmonised standard
	Dilective	All oppliable Error	tinia Hoolth and	EN (ISO12100-2040
Machiner	y Directive 2006/42/EC	All applicable Essent	te of Appendix	EN/ISO12100:2010
		Saliety Nequilement	IS OF ALLIEX I	EN 61000-6-2-2005
-		Essential requireme	ents set out in	EN 61000-6-4:2007 + A1:20
E	WC 2014/30/EU	Annex	1	EN 61000-3-2:2007 + A1:20
				EN 61000-3-3:2008
	Distributor in EU and	EFTA:		
Country	Distributor in EU and Company	EFTA: Telephone		Address
Country Austra	Distributor in EU and Company SMC Pneumatik GmbH (Austria)	EFTA: [43] 2262-62260 (43) 3285-62260	Graistasse 8,	Address A5-2100 Komeuburg # 20. 5-2160 Wommelsem
Country Austra Belgium Bulgaria	UISTRIDUTOR IN EU and Company SMC Pneumatik GmbH (Austra) SMC Pneumatics N.V.S.A. SMC Industral Automation Bulgar	EFTA: (43) 2262-62280 (32) 3-385-1454 (32) 3-385-1454 (359) 2 9744492	Girakatrasse 8, Nijverheidsstra Business Park	Addrees AT-2100 Komeuburg af 20, 5-2160 Wommegen Softa, Building S-8th Floor, BG-1715 Softa
Country Austria Belgum Bulgaria Croatia Croatia	UISTRIBUTOR IN EU and Company SMC Pheumatik (mbH (Austra) SMC Pheumatics NV/SA SMC Industria Automatica duo SMC Industria Automatica duo SMC Industria Automatica duo	EFTA: (43) 2283-62280 (32) 3-385-1464 ta E000 (359) 23744452 a (385) 1370 72 88 a (385) 1370 72 89	Grakstasse 8, Niverheidssta Business Park Zagrebadta Av	Addrees AT-2100 Komeuburg 8 20, B-2160 Wommelgen Softa, Building 9-6m Pioor, BG-1715 Softa enja 104, 10 000 Zagreb 2-3100 Rev.
Country Austria Belgum Bulgaria Croatia Croatia Czech Republic Denmark	UISTRIBUTOR IN EU and Company SMC Preunatis (other) (Austra) SMC Preunatios N.V.S.A SMC Industria Automatica do o SMC Industria Automatica do SMC Industria Automatica do SMC PreunatikA/S	EFTA: (43) 2524-45200 (32) 3-385-1454 1a E000 (35) 2-3754452 a (385) 1370 72.88 a (420) 541-424-61 (42) 70 25 29 00	Giralistrasse 8, Nijverheidisstra Business Park Zagrebačka Aw Hudoova 78a C Egestorvej 1, C	Address AT-2100 Komeuburg at 20, 5-2160 Wommeigen Softa, Building 8-6th Floor, BG-1715 Softa ang 13 UL 10 000 Zogete Z-61200 Bmo Xx46700 Homens
Country Austra Belgum Bulgaria Creatia Czech Republic Denmark Bistonia	UISTIDUTOR IN EU and Company ONC Preunatis Griter (Autra) SNC Industra Automator Buga SNC Industria Automator Buga SNC Industria Automation C2 s.r. SNC Preunatis A Stormator SNC Preunatis A	EFTA: [43] 2505-42200 (43) 2505-42200 (359) 2974442 a (359) 2974442 a (359) 1370 72 88 a (420) 541-424-61 (45) 70 25 20 00 (457) 261-627-72 (457) 2	Girakstrasse 8, Niverheidsstra: Business Part Zagrebačka Aw Hudova 78a C Egeskowig 1, 0 Egeskowig 1, 0 Laki 12, EE-10	Address AT-2100 Komeuburg at 0, 5-2108 Wommeigen Sofa, Building 3-45R Picour, BG-1715 Sofia entis 140, 1000 Zagneb Z-41200 Bro- X-6700 Honsens Z-21 Tailinn 201 Tailinn
Country Austra Belgum Bulgana Croatia Croatia Creatia Creatia Estonia Finiand Finiand	UISTIDUTOR IN EU and Company SIXC Presentation MUGA SIXC Presentation MUGA SIXC Industrial Automatics do co SIXC Industrial Automatics do co SIXC Industrial Automatics do co SIXC Presentati A0 SIXC Presentation Statistics Statistics SIXC Presentation Statistics Constitution SIXC Presentation Statistics Constitution SIXC Presentation Statistics Constitution Statistics SIXC Presentation Statistics Statistics Constitution Statistics SIXC Presentations Statistics Statistics Constitution Statistics SIXC Presentations Statistics Statistics Statistics SIXC Presentations Statistics Statistics Statistics Statistics SIXC Presentations Statistics Stati	EFTA: (43) 2245-40290 (32) 3-385-1444 ra E000 (35) 3-385-144 a (35) 1370 728 a (35) 1370 731 (35) 227513 51 a (35) 227513 51	Girakstrasse 8, Niverheidsstra Eusiness Part Zagrebačka Aw Hudova 78a C Egeskowej 1, Egeskowej 1, Egeskowej 1, Uski 12, 22-100 PU/2, Tistinni 1 Boulevard o	Address Address (12), 52163 Kommigkett (20), 52163 Kommigkett (20), 52163 Kommigkett (20), 52163 Kommigkett (20), 52163 (20),
Country Austria Belgium Bulgaria Croatia Czech Republic Denmark Estonia Finland France	UISTIDUTOT IN EU and Company GuiC Phermatics MUSA SWC Industrials MUSA SWC Industrial Admonton Eugen SWC Industrials Admonton C2 un SWC Industrials Admonton SWC Industrials Industrial SWC Industrials Industrial SWC Industrial Industrial	EFTA: (43) 24524220 (42) 24524220 (42) 34524220 (42) 545442240 (45) 547442441 (45) 547442441 (45) 547442441 (45) 5474524070 (35) (25) 4077 (35) (33) 14475-1000 (43) 14475-1000	Giralistrasse 8, Niverhedisstra: Business Parti Zagreboka Aw Hudoova 78a C Egretiovve 1, 0 Laki 12, EE-100 PL/2, Tistimit 1 Boulevard 6 Georges, F-77	Address AT-5100 Komesbarg 820 52100 Wormsegen fast build year brox, BS-1715 Softa reijs 110.1000 Zagne 24100 Brox 24100 Brox 2410 Brox
Country Austra Seigum Bulgaria Creata Creata Creata Creata Prinand France France Germany Germany Germany	UISTIDUTOR IN EU And Company SMC Prevands (more) (Austri) SMC Prevands (more) (Austri) SMC (relativa Automatice Car SMC (relativa	EFTA: (43) 2252-42280 (32) 3-385-1454 fa 80000 (35) 2574-442 a (356) 2574-442 a (356) 2574-442 a (356) 251-424-4 (45) 70 22 80 00 (372) 651-6374-6 (356) 257 133 513 (33) 14-676-1000 (49) 5103-422-0 (00) 210-772-68	Girakstrasse 8, Niverheidsstras Busines Park Zagrebadka Aw Hukova 78a C Egeekovej 1, Laki 12, EE-100 P L/12, Tistmit 1 Boulevard 0 Georges, F-77 Boochring 13-1 Academisters	Address AT-2100 Kamedung 420, 52-100 Vermesten 120, 52-100 Vermesten 120, 120, 120, 120, 120, 120, 120, 120,
Country Austra Belgium Bulgaria Craeta Czech Republic Demunit Bistoria Pinland France Germany Greece Hungary	UISTROUTOR IN EU and Company Star Perunati Greini Austia Stor Perunati Greini Austia Stor Perunatis N.V.S.A. Stor Industria Admittalioni Sugar Stor Perunatis Admittalioni Casi Stor Perunatis Admittalioni Stor Perunatisa Falario do Stor Perunatisa Falario do Stor Perunatico Reference Stor Perunatico Refe	EFTA:	Grakstrase 8, NuerHeidsstra Busnese Part Zagrebotica Av Busnese Part Zagrebotica Av Bostevreg 1, Bostevreg 1,	Address Afford Kamesbag 20,5-2100 Kamesbag 20,5-2100 Kamesbag 20,5-2100 Kamesbag 20,5-200 Kamesbag 21,7-200 Kamesbag 21,
Country Country Austra Belgum Bugarla Croatia Croatia Croatia Croatia Croatia Croatia Croatia Croatia Croatia Estima France Germany Greece Hungary Head	UISTIDUTOR IN EU and Company Stat Phenaratis Control Australi Stat Phenaratis Control Australi Stat Phenaratis Aufornation Bulger State Phenaratis Aufornation Control State Phenaratis Aufornation Control State Phenaratis Aufornation Control State Phenaratis Aufornation Control State Phenaratis Family State Phe	EFTA: (43) 2264 42360 (43) 2264 42360 (43) 2264 42360 (43) 2364 42360 (43) 2364 42360 (43) 2374 4424 (43) 2374 4424 (44) 4512 420- (46) 4512 420- (4	Gralastrase 8, Nucrehelssera Busines Part Zagrebolta Au Hutzour 78a C Besetkovet 1, 1 Boschrigt 15-1 Boschrigt 15-1 Puzz Tisternit Boschrigt 15-1 Arozentiseos Totolag u. 19, 2020 Caynest In z Arobest z	Address Address 20.5.2.100 kommented 20.5.2.100 kom
Country Country Keets Belgum Delgaria Croata	Unstributor in EU and Company Stoc Perunatis Green (Aanta) Stoc Perunatis Green (Aanta) Stoc Perunatis NVSA. Stoc Industria Admittan Eugan Stoc Perunatis Admittan Eugan Stoc Perunatis Admittan Eug Stoc Perunatis Admittan Stoc Perunatis Admittan Stoc Perunatis Industria Stoc Perunatis Industria	EFTA: 13) 255 256 14) 255 256 15) 255 256 15) 255 256 15) 251 251 255 16) 251 251 255 16) 251 251 251 16) 251 251 251 251 251 251 16) 251 251 251 251 251 251 251 251 251 251	Gross/trase 6. Nuerte-Stats Surres Pak 23pres/shi A // Epstaver 1 Epstaver 1 Epstaver 1 Epstaver 1 Boulevart 0 P-172 Tistmit Boulevart 0 Georges, F-77 Bosoring 13- Aragemiseos Totage L 19. 2020 Citywest 1 Date Cana st	ASTRO ATURE VIEW AND
Austria Austria Selgum Selgum Sugaria Craeta Craeta Craeta Craeta Craeta Craeta Storia Craeta Craeta Storia Craeta Storia	UISTROUTOR IN EU and Company 2002 Persentia Green Autory 2002 Persentia Autoritato 4 ao 2003 Persentia Autoritato 4 ao 2005 Persentia Autoritato 4 ao 2005 Persentia Autoritato 4 ao 2005 Persentia Estima 3 2002 Persentia Estima 3 2002 Persentia Estima 2005 Persentia Estima 2005 Persentia Estima 2005 Persentia Comit 2005 Persentia Unitori 2005 Persentia Unito 200 2005 Persentia Unito 200 2005 Persentia Unito 200	EFTA: 103,2024-02300 104,2024-02300 104,202	Graistrase 6. Nuertessizz Busness Part. 2 agreexts Av. Hudovo Tao C Beekkover 1. General 2 agreet Boschrog 1. Augusta 2 agreet Boschrog 1. Zodo Coynest I. Va Cantada 6. Descaras 6. Desca	An in a series of the series o
Austra Austra Belgum Bulgaria Craeta Republic Dermark Estoria Priand Prance Gemany Gemany Gemany Gemany Itisand Itisand Lahua	UISTROUTOR IN EU and Conservatio Control (LASIS) Second State (L	EFTA:	Gratatizase 8, Niverhectistiz Busness Paix Zagretozkia Aw Hutotour TBa C Egestavovej 1, 0 Lata 12, 22-10 Boskvard C Georges, F-77 Boskvard C Georges, F-77 Boskvard C Georges, 1 Aragemiseos Totolagu 11, 2022 Copyest 1 Va Combalt, 2 Cop o 1, 1720 Cop o 1,	ASTRO AT US Connauna Contextual and Contextual and Contextual Contextual and Contextual and Contextual and Contextual and Contextual Contextual and Contextual and Contextual and Contextual and Contextual Contextual and Contextual a
Austria Seiglum Seiglum Seiglum Seiglum Stata Seiglum Stata France Geneary Geneary Geneary France Austria Seiglum Seig	Lustroutor in EU and Content 2000 Personal Green (Astro- 2000 Personal Control (Astro- 20	EFTA: Telepton (4) 255 4200 (5) 255 420 (5) 255 420 (5) 251 420 (5) 251 420 (5) 150 728 (5) 150 728	Gratefrage 6, Nuerhedssta, Susnes Pair, Zagnodola Au Puddator 784, 122, Isan 22, 122, 132, Isan 22, 22, 132, Bocchrog 13-1 Augurtises Todosy u. 11, 2002, Cyperel 3, Dockard 6, Orace 3, 1274 De Pugenase Vollauen 11, De Pugenase Vollauen 11, De Pugenase Vollauen 11, De Pugenase	A (13) control     A (13) control     A (13) control     A (13) control     A (14) c
Country Austria Belgium Buggria Cracta Belgium Duggria Cracta Belgium Estanta Finand Finand Finand Germany Germany Germany Germany Germany Belgium Duggria Dug	UISTROUTOR IN EU and Company SMC Personal Control (Add) SMC Personal Control (Add)	EFTA: 143 2254 4250 143 2254 4250 155 2500 501 2254 4250 155 2500 501 2254 4250 155 250 501 2254 4250 155 251 250 250 155 251 250 250 155 251 250 250 155 251 4254 450 155 251 4254 450 155 251 425 455 451 450 155 251 455 455 450 155 251 455 455 450 450 155 251 455 450 450 155 251 450 450 450 450 155 251 450 450 450 450 450 450 450	Grakstrase 8, Nuerheitssta Busines Pari Zagribskia Au Hudova 780 (Egetekovej 1, Gata 12, E2-10) PL/2, Tistimit PL/2, Tistimit	A this manage A this manage A this manage A this constraints of the this solution and the this solution of the this solution and the this solution of the this solution and the this solution of the this solution of the this solution of the this solution of the this solution of the this solution and the this solution of the this solution of the this solution and the this solution of the this solution of the this solution and the this solution of the this solution
Austra Kastra Bigarta Catela Beglarn Catela Pepublic Catela Pe	Unstructurer in EU and Compare 300 Personal Green (Astro- State) (State) 200 Personal Compare 200 Personal Compare 200 Personal Compare 200 Personal Princip 200 Personal Princip 200 Personal Compare 200 Personal Pe	EFTA:	Gratatimes 6. NummerStatistics 2015 Summer 2015 Productors 11. Superstatistics 2015 Productors 11. Superstatistics 2015 Productors 11. Superstatistics 2015 Superstatistics 2015 Descurate 5. Descurate	A CTU WATER A CTU WATER A CTU WATER AND A STATUS AND A CTU STATUS AND A STATUS AND A CTU STATUS AND A CTU AND A CTU A
Castry Austra Austra Selarm Selarm Selarm Castra Persona Castra Pepsolo Comman Castra Pepsolo Comman Castra Pensolo Consolo Castra Pensolo Castra Pensolo Castra Pensolo Consolo Castra C	LUSTROUTOR IN EUG and Compared Stor, Perunda Gronn, Jacob Stor, Passanda Computation Store Research Adversaria de Store Research Adversaria de Store Research Adversaria de Store Research Adversaria Store Research Balance Store Research Bala	EFTA: 40 3254260 000 001, 2004 400 000 001, 2004 400 000 001, 2004 400 000 001, 2004 400 001 102 001 001 001 001 100000000000000000000	Garaturtasse E. Nucleitasse E. Susinese Part Zogenschaften Part Hetzour Tao C. Benkows I. J. Bestevent E. Bestevent E. Sourcent G. De Carata State Totaligue I. Sourcent G. De Carata State De Ruyfendat Ubsident I.S. De Ruyfendat Ubsident	A role and a role of the second secon
Constry Austra Segurn Constry Austra Belgara Create Republic Centra Create Republic Centra Create Republic Centra Create Segurn France Greate Centra Centra Centra Centra Centra Centra Centra Centra Centra Centra Centra Centra Centra Centra Constra	Unstructurer in EU and	EFTA:           (4) 305-4200           (5) 305-4200           (5) 305-4200           (6) 305-3200           (6) 305-3200           (6) 305-3200           (6) 305-3200           (6) 305-3200           (6) 305-3200           (6) 305-3200           (6) 305-3200           (7) 30-445-4200           (8) 305-3200	Gratatose 8, 6 Nuertesgas Bayrossa II. Hattos 7, 10 P. 22, Tistmin Hattos 7, 10 P. 22, 10 P. 21,	A the second sec
Constry Austra Constry Austra Bigliam Bigliam Bigliam Bigliam Bigliam Consta Republic District France Germany Crease Storia France Storia France France Storia France Franc	Construction in E-U and Construction and Construction Construction and Construction Construction and Construction Construction and Construction Construction and Construction Construction and Construction	Image: Part of the second se	Socializational Revealed Science (Construction) Superservice (Constructio	A role area 2015 and 2015 and
Country Austra Belgum Bulgara Crath Republic Dermart Estoria France Germany Germany Germany Germany Lahua Lahua Lahua Lahua	LUISTIDUTOR IN EU Jandi Company 2002 Peruntak Centre (Autor) 2003 Peruntak Centre (Autor) 2004 Peruntak Autoritation Sol 2005 Peruntak Centre (Autoritation 2005 Peruntak Soleris a) 2002 Peruntak Soleris a)	EFTA: teleptom (4) 255-556 (42) 255-564 (42) 555-564 (42) 555-564 (42) 555-564 (42) 557-568 (42) 557-568 (42) 557-568 (42) 557-568 (42) 557-568 (42) 557-578 (42) 577-578 (42) 577-578	Ginalastrasie 8, Niverheidsstra Susness Part. Zagrebolica Jw. Hudrou 78a C Bejekkovej 11, Bull 12, EE-100 PUZ, Tiskrini Boschrig 13-1 Aragerriaeos Tortagy L 19, 2002 Chyweit Jw. Debatas 6, T. Debatas 6, T. Oeio a 1, 1704	Address Address 20.5-200 Komesbarg 20.5-200 Komesbarg 20.5-200 Komesbarg 24.200 Process 24.200 P
Country Austra Belgarla Cracta Cracta Demark Prinand Prance Balaria Prance Germany Greece Hungary Iresand Rahy Libuaria Nonasy Poland Poland Poland Poland Poland Poland Poland Poland	UISTROUTOR IN EU and Company 2002 Percentità Grineri (ALER) 2002 Percentità (NVCA espan 2002 Percenità (NVCA espan 2002 Percentità (NVCA espan 2002 Perceni	EFTA: 143 226 4200 82000 20 226 4200 82000 20 226 4200 103 246 4200 104 256 4200 105 256 4000 105 256 4000 105 256 4000 105 256 4000 105 40000 105 4000 105 4000 105 40000 105 4000 105 40000	Granstrase R. Nuerhedissta Eusnes Park Zagrobolica Au Egenkova 11.0 Boschnes 1.2.7 Boschnes 1.7.7 Boschnes 1.7.	A transmission of the second s
Country Autra Autra Belgarn Bugara Cracta Republic Demnark Estoria France Gernary Gernary Gernary Hungary Hang	Unstructurer im EU and Compare 300 Percent Activity 200 Percent	EFTA: (4) 255/210 (4) 255/210 (4) 255/210 (4) 255/210 (4) 255/210 (4) 255/210 (4) 755/210 (4) 755/210	Graduitase 5 Nucrinosisso: Susness Park Zogenoxics Park Dependencies Park Dependencies Park Dependencies Park Hetrosoft State Park Beschen Filt Beschen Filt Besc	A role over the second
Constry Austra Austra Bigara Crasta Begalari Digara Crasta Republic Demnark Estaria Prance Gemany Generary Generary Generary Generary Republic Behrlanda Beh	Unstructure in EU and Compart Stormant Control Assist Stormant Annual Storm Assist Stormant Annual Storm Stormant Annual Storm Stormant Annual Storm Stormant Annual Storm Stormant Annual Storm Stormant Storm Storm Stormant Storm Stormant Storm Storm Stormant Storm Stormant Storm Stormant Storm Storma	EFTA:	Groatstrates 6. NUCHTGOSDAT Supress Part. 20gmodE3 AM Hudroug TB3 C Begelonnet 10. PL22 Telepinet 1 Souteward 0. Descript 13-1 Toolspire 10. Descript 14. Toolspire 10. Descript 14. Descript 14. Descri	A trible sending in the sending in t
Carefy Austra Segian Bugara Crasta Crasta Cr	Unstructurer in EU and Conservations and Conservation Conservations and Conservations and Conservation Conservations and Conservations and Conservations C	EFTA:           (4) 255 4200           (5) 255 4200           (5) 255 4200           (5) 255 4200           (5) 255 4200           (5) 255 4200           (5) 255 4200           (5) 255 4200           (5) 1475 450	Gratatrace 8, Waterhestera 2, graduate 1, 4, 4, 4, 5, 5, 5, 5, 5, 5, 5, 5, 5, 5	A 100 annual      A 100 a
Contry Autra Contry Autra Bejarn Bujara Bujara Bujara Conta Republic Conta Republic Conta Republic Conta Republic Conta Republic Conta Republic Conta Republic Prace Centra Prace	Unservice or net-U and provide the service service of the service service of the servic	EFTA: (4) 054 000 (4) 055 000	Constituents III Numerica Constituents III Expersion Para Hustona Tal Constituent III Subversion III Ball Constituent III Subversion III Ball Constituent III Subversion III Subversion IIII Subversion III Subversion III Subversion III Subversion IIII Subversion IIII Subversion IIII Subversion IIII Subversion IIII Subversion IIII Subversion IIIII Subversion IIII Subversion IIIII Subversion IIII Subversion IIIII Subversion IIII Subversion I	A role and a set of the set of th
Country Austra Selaum Selaum Sugaria Crastia Caech Republic Demark Estonia Finiand Fonce Gemany Greece Hungary Heono Biblio Libuaria Netherlands Norady Poland Ponuga Romania Souvalia	Unstructurer in EU and Compare 300 Personal Green (Astro- State) (State) 200 Personal Compare 200 Personal Compare 200 Personal Compare 200 Personal Princip 200 Personal Princip 200 Personal Compare 200 Personal Pe	EFTA:	Gratatimes 6. NummerStatistics 2015 Summer 2015 Productors 11. Superstatistics 2015 Productors 11. Superstatistics 2015 Productors 11. Superstatistics 2015 Superstatistics 2015 Descurate 5. Descurate	4 (19)

## 12 Limitations of Use

- 8.1 Limited warranty and Disclaimer/Compliance Requirements
- The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements". Read and accept them before using the product

## 12 Limitations of Use (continue)

### Limited warranty and Disclaimer

1) The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first (1). Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch

2) For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided.

This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.

3) Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products.

<sup>(1)</sup> Vacuum pads are excluded from this 1 year warranty.

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty

### Compliance Requirements

1) The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.

2) The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

#### **A** Caution

## · SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been gualified by type approval tests relevant to the metrology (measurement) laws of each country.

Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

13 Conta	icts
AUSTRIA	SMC Pneumatik GmbH, Girakstrasse 8, AT-2100 Korneuburg
BELGIUM	SMC Pneumatics N.V./S.A. Nijverheidsstraat 20, B-2160 Wommelgem
BULGARIA	SMC Industrial Automation Bulgaria EOOD, Business Park Sofia, Building 8-6th floor, BG-1715 Sofia
CROATIA	SMC IndustrijskaAutomatikad.o.o. ZagrebačkaAvenija 104,10 000 Zagreb
CZECH REP.	SMC Industrial Automation CZ s.r.o. Hudcova 78a, CZ-61200 Brno

DENMARK	SMC Pneumatik A/S,Egeskovvej 1, DK-8700 Horsens
ESTONIA	SMC Pneumatics Estonia Oü,Laki 12, EE-10621 Tallinn
FINLAND	SMC Automation Oy, PL72, Tiistinniityntie 4, SF-02031 Espoo
FRANCE	SMC France, 1, Boulevard de Strasbourg, Parc Gustave Eiffel, Bussy Saint Georges, F-77607 Marne La ValleeCedex 3
GERMANY	SMC Deutschland GmbH, Boschring 13-15, 63329 Egelsbach
GREECE	SMC Italia Hellas Branch, Anagenniseos 7-9-P.C. 14342 N.Philadelphia, Athens
HUNGARY	SMC Hungary IpariAutomatizálásiKft.Torbágy u. 19, HU-2045 Törökbálint
IRELAND	SMC Pneumatics (Ireland) Ltd.2002 Citywest Business Campus, Naas Road, Saggart, Co. Dublin
ITALY	SMC Italia S.p.A.Via Garibaldi 62, I-20061Carugate, (Milano)
LATVIA	SMC Pneumatics Latvia SIA, Dzelzavas str. 120g, Riga, LV-1021,
LITHUANIA	UAB "SMC Pneumatics", Oslo g. 1, LT-04123 Vilnius
NETHERLANDS	SMC Pneumatics B.V.De Ruyterkade 120, NL-1011 AB Amsterdam
NORWAY	SMC Pneumatics Norway AS, Vollsveien 13 C, GranfosNæringspark, N- 1366 Lysaker
POLAND	SMC Industrial Automation, Polska Sp z o.o. 02-826 Warszawa, ul. Poloneza 89
PORTUGAL	SMC Sucursal Portugal, S.A.Rua De Eng Ferrerira Dias 452 4100-246, Porto
ROMANIA	SMC Romania S.r.I. StrFrunzei 29, Sector 2, Bucharest
RUSSIA	SMC Pneumatik LLC. Business centre, building 3, 15 Kondratjevskij prospect, St.Petersburg, 195197
SLOVAKIA	SMC PriemyselnáAutomatizáciaSpols.r.o. Fantranská 1223, Teplickanadvahom, 01301
SLOVENIA	SMC IndustrijskaAvtomatikad.o.o. Mirnskacesta 7, SLO-8210 Trebnje
SPAIN	SMC España S.A. Zuazobidea 14, 01015 Vitoria
SWEDEN	SMC Pneumatics Sweden AB,Ekhagsvägen 29-31, SE-141 71 Segeltorp
SWITZERLAND	SMC Schweiz AG, Dorfstrasse 7, Postfach, 8484 Weisslingen,
TURKEY	SMC PnömatikSanayiTicaretveServis A.Ş. GülbaharCaddesi, Aydın Plaza, No: 9/4 Güneşli – 34212, Istanbul
ик	SMC Pneumatics (U.K.) Ltd. Vincent Avenue, Crownhill, Milton Keynes, Buckinghamshire MK8 0AN

# **SMC** Corporation

URL: http://www.smcworld.com (Global) http://www.smceu.com (Europe) 'SMC Corporation, Akihabara UDX15F, 4-14-1, Sotokanda, Chivoda-ku, Tokyo 101 0021 Specifications are subject to change without prior notice from the manufacturer © 2018 SMC Corporation All Rights Reserved. Template DKP50047-F-085G