

Operation Manual

Product Name

Pulse Valve Bulkhead Fitting

Model / Series / Product Number

JSXF(A)E JSXFN

SMC Corporation

Piping method for JSXF(A)E/JSXFN



Piping

\Lambda Warning

Do not use the compression fitting to support the piping.

The piping could disconnect from the valve/bulkhead fitting. Be sure to mount to secured piping. (Compression fittings do not have a valve-holding function.)

🕂 Caution

Be sure to tighten the compressor nut sufficiently to prevent the nut from loosening and to prevent leakage from occurring.

Wrench Tightening Angle after Hand-tightening (Guide for tightening the nut)


Size	Additional tightening angle
3/4(20A)	90°~270°
1(25A)	135°~315°
1·1/2(40A)	150°~330°

Note 1) Mount the valve/bulkhead fitting to the fixed piping.

Note 2) Insert the piping until it stops to prevent the piping from being slanted.

Note 3) Do not expose the piping to oil or moisture. Otherwise, the valve/bulkhead fitting may come off easily.

Note 4) Sealing performance will decrease due to the deterioration of seals. Tighten the compression nut regularly.

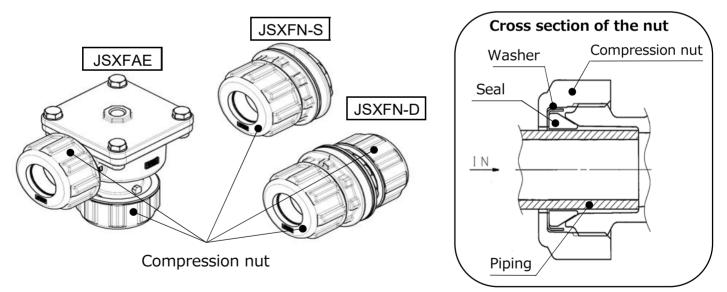

SMC Corporation

Tel: + 81 3 5207 8249 Fax: +81 3 5298 5362

URL https://www.smcworld.com

Note: Specifications are subject to change without prior notice and any obligation on the part of the manufacturer © SMC Corporation All Rights Reserved