



Operation Manual

PRODUCT NAME

ROTARY ACTUATOR
Standard Type

MODEL / Series / Product Number

C * RB * 10 to 40- *

SMC Corporation

Contents

Safety Instructions	2
Rotary Actuators Precautions	4
Auto Switches Precautions	11
1. Product Description	17
2. Internal Construction and Description of Individual Parts.....	20
Single Vane (90°,180°Specifications: Size 10, 15)	
Single Vane (90°,180°Specifications: Size 20, 30, 40).....	21
Single Vane (270°Specifications).....	22
Double Vane (Size 10).....	23
Double Vane (Size 15,20,30,40).....	24
With Auto Switch (Single Vane: 90°,180°Specifications).....	25
Auto Switch Proper Mounting Position.....	26
Operating Angle and Hysteresis Angle	
3. Basic Circuit	27
Circuit Configuration	
Recommended Models	
4. Setting	28
Limit Load to the Shaft	
Use of Shaft Fitting	
How to Mount Loads	29
Mounting	
Adjusting the Rotating Angle	30
Operating Environment	31
5. Setting of Rotation Time	32
Moment of Inertia	
Kinetic Energy	34
Eternal Stopper	35
6. Maintenance and Inspection.....	36
Single Vane (90°,180° Specifications: Size 10, 15)	
Single Vane (90°,180° Specifications: Size 20, 30,40).....	37
Single Vane (270°Specifications).....	38
Double Vane (Size 10)	39
Double Vane (Size 15,20, 30, 40).....	40
With Auto Switch (Size 20, 30, 40)	41
7. Troubleshooting.....	42
Notice on Trouble and Troubleshooting	43



Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of “**Caution**,” “**Warning**” or “**Danger**.” They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)*1), and other safety regulations.

*1) ISO 4414: Pneumatic fluid power - General rules and safety requirements for systems and their components
ISO 4413: Hydraulic fluid power - General rules and safety requirements for systems and their components
IEC 60204-1: Safety of machinery - Electrical equipment of machines - Part 1: General requirements
ISO 10218-1: Robots and robotic devices - Safety requirements for industrial robots - Part 1: Robots
etc.

	Danger	Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.
	Warning	Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.
	Caution	Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.

Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.

1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

4. Our products cannot be used beyond their specifications. Our products are not developed, designed, and manufactured to be used under the following conditions or environments. Use under such conditions or environments is not covered.

1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
2. Use for nuclear power, railways, aviation, space equipment, ships, vehicles, military application, equipment affecting human life, body, and property, fuel equipment, entertainment equipment, emergency shut-off circuits, press clutches, brake circuits, safety equipment, etc., and use for applications that do not conform to standard specifications such as catalogs and operation manuals.
3. Use for interlock circuits, except for use with double interlock such as installing a mechanical protection function in case of failure. Please periodically inspect the product to confirm that the product is operating properly.



Safety Instructions

Caution

We develop, design, and manufacture our products to be used for automatic control equipment, and provide them for peaceful use in manufacturing industries.

Use in non-manufacturing industries is not covered.

Products we manufacture and sell cannot be used for the purpose of transactions or certification specified in the Measurement Act.

The new Measurement Act prohibits use of any unit other than SI units in Japan.

Limited warranty and Disclaimer/Compliance Requirements

The product used is subject to the following “Limited warranty and Disclaimer” and “Compliance Requirements”.

Read and accept them before using the product.

Limited warranty and Disclaimer

1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.*2)

Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.

2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided.

This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.

3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.

***2) Vacuum pads are excluded from this 1 year warranty.**

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered.

Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty

Compliance Requirements

1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.

2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

Warning

(1) Confirm the specifications.

Products represented in this catalog are designed only for use in compressed air systems.

Do not operate at pressures or temperatures, etc., beyond the range of specifications, as this can cause damage or malfunction. (Refer to the specifications.)

We do not guarantee against any damage if the product is used outside of the specification range.

(2) If the operation involves load fluctuations, ascending/descending movements, or changes in friction resistance, make sure to provide safety measures.

Failure to provide such measures could accelerate the movement, which may be hazardous to humans, machinery, and other equipment.

(3) If there is a chance that the product will pose a hazard to humans, install a protective cover.

If the moving portion of the product will pose a hazard to humans or will damage machinery or equipment, provide a construction that prevents direct contact with those areas.

(4) Make sure that the secured portions will not loosen.

Be sure to adopt a reliable connecting method if the rotary table is used very frequently or if it is used in a location that is exposed to a large amount of vibrations.

(5) There may be cases in which a speed reduction circuit or a shock absorber is required.

If the driven object moves at high speeds or is heavy, it will be unfeasible for only the rotary actuator cushion to absorb the shock. Therefore, provide a speed-reduction circuit to reduce the rotary actuator speed before the thrust is applied to the cushion, or an external shock absorber to dampen the shock. If these countermeasures are taken, make sure to take the rigidity of the mechanical equipment into consideration.

(6) Consider the possibility of a reduction in the circuit air pressure caused by a power failure.

When an actuator is used as clamping mechanism, there is a danger of workpiece dropping if there is a decrease in clamping force, due to a drop in circuit pressure caused by a power failure. Therefore, safety equipment should be installed to prevent damage to machinery and bodily injury.

(7) Consider the possibility of power source related malfunctions that could occur.

For equipment that relies on power sources such as compressed air, electricity, or hydraulic pressure, adopt countermeasures to prevent the equipment from causing a hazard to humans or damage to the equipment in the event of malfunction.

(8) If a speed controller is provided in the exhaust restrictor, implement a safety design taking the residual pressure into consideration.

If air pressure is applied to the air supply side without residual pressure in the exhaust side, the rotary actuator will operate at abnormally high speeds, which could pose a hazard to humans and damage the machinery and equipment.

(9) Consider the behavior of the rotary actuator in the event of an emergency stop.

Devise a safe system so that if a person engages the emergency stop, or if a safety device is tripped during a system malfunction such as a power failure, the movement of the rotary actuator will not cause a hazard to humans or damage the equipment.

(10) Consider the action of the rotary actuator when restarting after an emergency stop.

Devise a safe design so that the restarting of the rotary actuator will not pose a hazard to humans or damage the equipment. Install manually controlled equipment for safety when the actuator has to be reset to the starting position.

(11) Do not use the product as a shock absorber.

If an abnormal pressure or air leakage occurs, the rotary actuator speed reduction capability could become severely affected, which could pose a hazard to humans and damage the machinery and equipment.

(12) Select a speed within the product's allowable energy value.

If the kinetic energy of the load exceeds the allowable value, it could damage the product, and cause a hazard to humans, or damage the machinery and equipment.

(13) Provide a shock absorber if the kinetic energy that is applied to the product exceeds the allowable value.

If the product's kinetic energy exceeds the allowable value, it could damage the product, and cause a hazard to humans, or damage the machinery or equipment.

(14) Do not stop or hold the product at midpoint by keeping air pressure in the product.

For a product without an external stopping mechanism, if the directional control valve is closed to keep the air pressure in the product, in an attempt to stop the product at midpoint, it might not be possible to maintain that stopped position due to an air leakage. As a result, it could pose a hazard to humans and cause damage to machinery and/or equipment.

(15) Give consideration to the decline in strength

caused by changes in the shaft shape.

Some shaft types, such as simple specials, may have shapes and dimensions that result in decreased strength when compared with standard models. Consider this carefully when using

(16) Do not use two or more rotary actuators with the aim of synchronized movement.

One of the actuators may bear the load of operation, making synchronized movement impossible, and possibly leading to deformation of the equipment.

(17) Do not use in a location where external leakage of lubricant could have an adverse effect.

The lubricant coating the interior of the product may leak to the outside of the product from connecting parts of the rotary body, cover, etc.

(18) Do not disassemble the product or make any modifications, including additional machining.

This may cause human injury and/or an accident.

(19) Refer to the Auto Switches Precautions when using with an auto switch.

Caution

(1) Do not use below the adjustment range specified for the product.

If the product is used below the specified speed adjustment range, it could cause the product to stick, slip, or the movement to stop.

(2) Do not apply external torque to the product that exceeds the rated output.

If an external force that exceeds the product's rated output is applied to the product, it could damage the product.

(3) If it is necessary to provide repeatability of the rotation angle, directly stop the load externally.

Even with a product that is equipped with an angle adjuster, there are times when the initial rotation angle could change.

(4) Do not use the product under hydraulic pressure.

The product will be damaged if it is used by applying hydraulic pressure.

(5) Do not use in a location where there are many temperature fluctuations.

When using in lower temperature applications, take care not to allow frost inside the cylinder.

Operation may be unstable.

(6) Perform speed adjustment in the environment in which the product is to be used.

Speed adjustments may be necessary if the environmental conditions vary.

(7) Adjust the speed control in the environment in which the product is to be used.

Speed adjustments may deviate if the environment changes.

Warning

(1) Operation manual

Install the product and operate it only after reading the operation manual carefully and understanding its contents. Also, keep the manual in a location where it can be referred to as necessary.

(2) Ensure sufficient space for maintenance activities.

When installing the products, allow access for maintenance.

(3) Tighten threads with the proper tightening torque.

When installing the products, follow the listed torque specifications.

(4) Before adjusting the angle by supplying air pressure, take appropriate measures to prevent the equipment from rotating unnecessarily.

When an adjustment is performed under air pressure, the equipment could rotate and fall during the adjustment, depending on the mounted posture of the equipment. As a result, it could pose a hazard to humans and damage the machinery and equipment.

(5) Do not loosen the angle adjustment screw beyond the allowable adjustment range.

The angle adjustment screw could fall out if it is loosened beyond its allowable adjustment range and cause a hazard to humans or damage to machinery and equipment.

(6) Do not place a magnetic object near the product.

The auto switch is a magnetic sensing type. If a magnetic object is placed close to it, the rotary actuator could operate suddenly, which could pose a hazard to humans and damage the machinery and equipment.

(7) Do not perform additional machining to the product.

Additional machining to the product can result in insufficient strength and cause damage to the product.

This can lead to possible human injury and damage to the surrounding equipment.

(8) Do not enlarge the fixed throttle by modifying the pipe connectors.


If the hole diameter is enlarged, the product's rotation speed will increase, causing the shock force to increase and damage to the product. As a result, it could pose a hazard to humans and damage the machinery and equipment.

(9) If shaft couplings are to be used, use those with angular freedom.

If shaft couplings that lack angular freedom are used, they could scrape due to eccentricity, leading to equipment malfunction and product damage. As a result, it could pose a hazard to humans and damage the machinery and equipment.

(10) Do not apply a load that exceeds the values given in the catalog.

If a load that exceeds the allowable value is applied to the product, it could lead to equipment malfunction, a hazard to humans, or damage to the machinery and equipment. Provided that a dynamic load is not generated, a load that is within the allowable radial / thrust load can be applied. However, applications in which the load is applied directly to the shaft should be avoided whenever possible. The methods such as those described below are recommended to prevent the load from being applied directly to the shaft in order to ensure a proper operating condition.

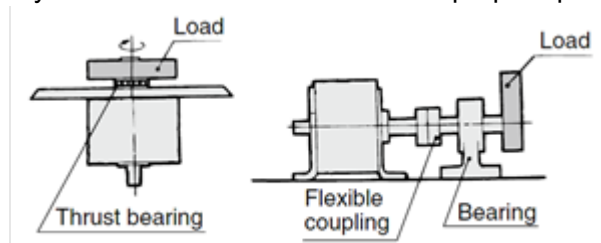


(11) Place an external stopper in a position away from the rotating shaft.


If the stopper is placed near the rotating shaft, the torque that is generated by the product itself will cause the reaction force which is directed to the stopper to be redirected and applied to the rotating shaft. This will lead to the breakage of the rotating shaft and bearing. As a result, it could pose a hazard to humans and damage the machinery and equipment.

Precautions when using external stoppers

Be sure to install external stoppers in the proper places. Installation in the wrong place can result in equipment breakage, which could damage other equipment or cause human injury.

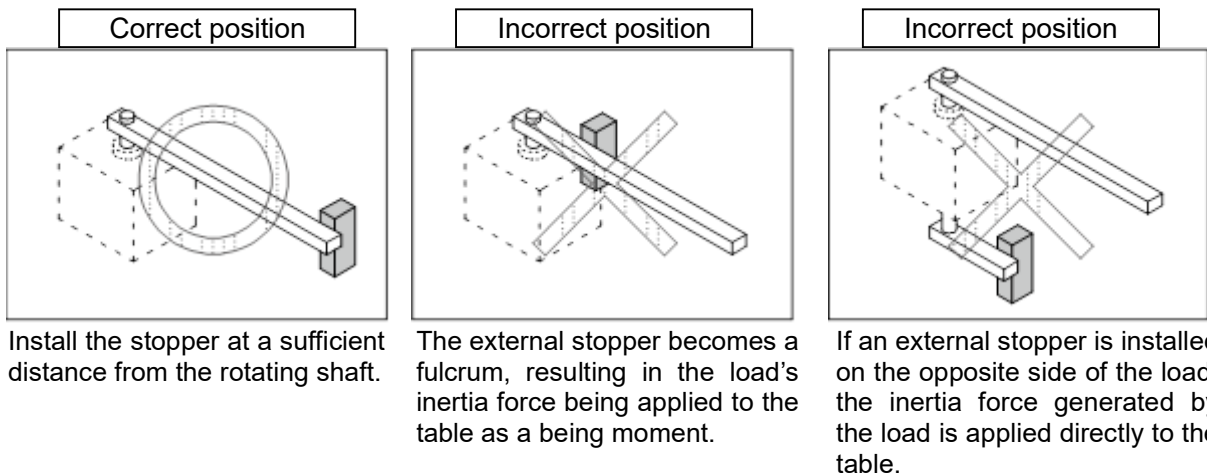


Install external stoppers within the range of the rotating angle. Installing an external stopper at the maximum rotation angle may result in an inability to fully absorb the kinetic energy generated, and damage to equipment may occur.

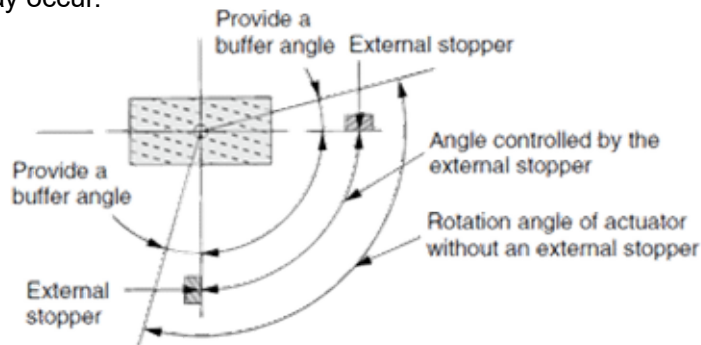

Precautions when Converting Rotational Motion to Linear Motion

When using a link mechanism, etc., to convert rotational motion to linear motion, and determining the operation end using the stopper on the linear motion end (see below), a small value for θ at the operation end may result in the torque of the rotary actuator causing excessive radial load to act on the output axle, and equipment breakage may occur.

Install a stopper on the rotation motion side, or increase the value of θ at the operation end, to make sure the load generated does not exceed the allowable value for the product.

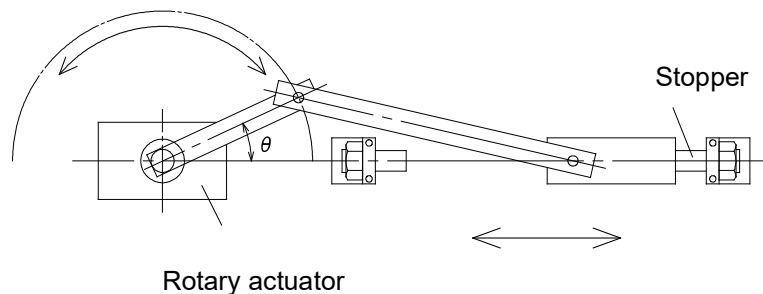

(12) Do not use springs, etc., to add force in the rotational movement direction.

When rotational force from an external spring, etc., acts and generates negative pressure on the product's interior, breakage of the internal seal or acceleration of abrasion may occur.


Caution

- (1) **Do not use organic solvent to wipe the area of the name plate that shows the model.**
It will erase what is indicated on the name plate.
- (2) **Do not hit the output shaft by securing the body or hit the body by securing the output shaft.**
These actions could cause the table to bend or damage the bearing. When a load must be coupled to the output shaft, secure the output shaft.
- (3) **Do not step directly onto the table or on the equipment that is coupled to the table.**
Standing directly on the output shaft could cause the output shaft or the bearing to become damaged.
- (4) **If a product is equipped with an angle adjustment function, use it within the specified adjustment range.**
If the product is used outside the specified adjustment range, it could lead to equipment malfunction or product damage. Refer to the product specifications for details on the adjustment range of the products.

Pinping

Caution

- (1) **Refer to the Fittings and Tubing Precautions for handling one touch fittings.**
- (2) **Preparation before pinping**
Before piping is connected, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil and other debris from inside the pipe.
- (3) **Wrapping of pipe tape**
When screwing piping or fittings into ports, ensure that chips from the pipe threads or sealing material do not enter the piping. Also, if sealant tape is used, leave 1.5 to 2 thread ridges exposed at the end of the threads.

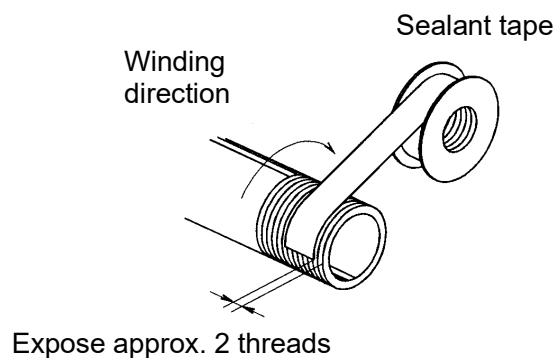

Speed and Cushion Adjustment

Warning

(1) To make a speed adjustment, gradually adjust starting from the low speed end.

If the speed adjustment is performed from the high speed end, it could damage the product. As a result, it could pose a hazard to humans and damage the machinery and equipment.

For products with shock absorbers, when the shock absorber stops moving before reaching the stroke end by using a stopper mechanism with the objective of shortening tact time, be sure the shock absorber is stopped in a position where it has adequately absorbed the kinetic energy.

Failure to do so can result in damage to equipment.

Lubrication

Warning

(1) This product should be used without lubrication. Although it will operate even if it is lubricated, it could lead to sticking or slipping.

Air Supply

Warning

(1) Type of fluids

Use compressed air.

(2) When there is a large amount of moisture

Compressed air containing a large amount of moisture can cause malfunction of pneumatic equipment. An air dryer or water separator should be installed upstream from filters.

(3) Drain flushing

If condensation in the drain bowl is not emptied on a regular basis, the bowl will overflow and allow the condensation to enter the compressed air lines. This may cause malfunction of pneumatic equipment.

If the drain bowl is difficult to check and remove, installation of a drain bowl with an auto drain option is recommended.

(4) Use clean air.

Do not use compressed air that contains chemicals, synthetic oils that include organic solvents, salt, corrosive gases, etc., as it can cause damage or malfunction.

Caution

(1) When low dew point air is used as the fluid, degradation of the lubrication properties inside the equipment may occur, resulting in reduced reliability (or reduced service life) of the equipment. Install an air filter.

(2) Install an air filter.

Install an air filter upstream near the valve. Select an air filter with a filtration size of 5µm or smaller.

- (3) Take measures to ensure air quality, such as by installing an aftercooler, air dryer, or water separator.**

Compressed air that contains a large amount of moisture can cause malfunction of pneumatic equipment such as rotary actuator. Therefore, take appropriate measures to ensure air quality, such as by providing an aftercooler, air dryer, or water separator.

- (4) Ensure that the fluid and ambient temperature are within the specified range.**

If the fluid temperature is 5°C or less, the moisture in the circuit could freeze, causing damage to the seals and equipment malfunction. Therefore, take appropriate measures to prevent freezing.

Operating Environment

Warning

- (1) Do not use in an atmosphere containing corrosive gases, chemicals, sea water, water, steam, or where there is direct contact with any of these.**

Refer to the construction diagram for information on the materials used in the rotary actuator.

- (2) Do not expose the product to direct sunlight for an extended period of time.**
(3) Do not use in a place subject to heavy vibration and/or shock.
(4) Do not mount the product in locations where it is exposed to radiant heat.
(5) Do not use in dusty locations or where water oil, etc., splash on the equipment.

Maintenance

Warning

- (1) Perform maintenance inspection according to the procedures indicated in the operation manual.**

If handled improperly, malfunction and damage of machinery or equipment may occur.

- (2) Maintenance work**

If handled improperly, compressed air can be dangerous. Assembly, handling, repair and element replacement of pneumatic systems should be performed by a knowledgeable and experienced person.

- (3) Drain flushing**

Remove drainage moisture from air filters regularly.

- (4) Removal of equipment, and supply/exhaust of compressed air**

When components are removed, first confirm that measures are in place to prevent workpieces from dropping, run-away equipment, etc. Then, cut off the supply pressure and electric power, and exhaust all compressed air from the system using the residual pressure release function.

When machinery is restarted, proceed with caution after confirming that appropriate measures are in place to prevent cylinders from sudden movement.

Caution

- (1) For lubrication, use the designated grease for each specific product.**

The use of a non-designated lubricant could damage the seals.

Auto Switches Precautions

Design / Selection

Warning

(1) Confirm the specifications.

If the product is used with excess load applied or beyond the specification range, this may cause the product to break or malfunction. We do not guarantee against any damage if the product is used outside of the specification range.

(2) Cautions for use in an interlock circuit

When an auto switch is used for an interlock signal requiring high reliability, devise a double interlock system to avoid problems by providing a mechanical protection function, or by using another switch (sensor) together with the auto switch. Also, perform regular maintenance and confirm proper operation.

(3) Do not attempt to disassemble, modify (including exchanging the printed circuit boards), or repair the product.

This may cause human injuries and accidents.

Caution

(1) Pay attention to the length of time when a switch is ON at an intermediate stroke position.

When an auto switch is placed at an intermediate position of the stroke and a load is driven, at the time the piston passes the auto switch will operate, but if the speed is too great the operating time will be shortened and the load may not operate properly.

The maximum piston speed is:

$$V \text{ (mm / s)} = \frac{\text{Auto switch operating range (mm)}}{\text{Time load applied (ms)}} \times 1000$$

(2) Keep wiring as short as possible.

<Reed>

As the length of the wiring to a load gets longer, the rush current at switching ON becomes greater, and this may shorten the product's life. (The switch will stay ON all the time.)

1) Use a contact protection box when the wire length is 5m or longer.

2) Even if an auto switch has a built-in contact protection circuit, when the wiring is more than 30m long, it is not able to adequately absorb the rush current and its life may be reduced. It is again necessary to connect a contact protection box within 1m of the auto switch in order to extend its life.

<Solid state>

3) Although wire length should not affect switch function, use a wire 100m or shorter.

Even if the length is less than 100m, longer wiring makes it more likely to be affected by noise.

When the wire length is long, we recommended a ferrite core should be attached to both ends of the cable to prevent excess noise.

A contact protection box is not necessary for solid state switches due to the nature of the product construction.

(3) Do not use a load that generates surge voltage.

If a surge voltage is generated, discharge may be generated at the contact, possibly reducing the product life.

<Reed>

Use an auto switch with built-in contact protection circuit or use a contact protection box.

<Solid state>

Use a built-in surge absorbing element type device.

(4) Take precautions when multiple rotary actuator are used close together.

When multiple auto switch rotary actuator are used in close proximity, magnetic field interference may cause the auto switches to malfunction. Maintain a minimum separation of 40mm between rotary actuator.

The auto switches may malfunction due to the interference from the magnetic fields.

Use of a magnetic screen plate (MU-S025) or commercially available magnetic screening tape can reduce the interference of magnetic force.

(5) Pay attention to the internal voltage drop of the auto switch.

<Reed>

1) Auto switch with an indicator light

- If auto switches are connected in series as shown below, take note that there will be a large voltage drop because of internal resistance in the LED. (Refer to the internal voltage drop in the auto switch specifications.)

[The voltage drop will be “n” times larger when “n” auto switches are connected.]

Even though an auto switch operates normally, the load may not operate.



- In the same way, when operating under a specified voltage, although an auto switch may operate normally, the load may not operate. Therefore, the formula below should be satisfied after confirming the minimum operating voltage of the load.

$$\text{Supply voltage} - \text{Internal voltage drop of auto switch} > \text{Minimum operating voltage of load}$$

- 2) If the internal resistance of a light emitting diode causes a problem, select an auto switch without an indicator light.

<Solid state>

Generally, the internal voltage drop of the solid state auto switch is larger than that of the reed auto switch. When the auto switches (“n” pcs.) are connected in series, the voltage drop is multiplied by “n”. In this case, even if the auto switches operate correctly, the loads may not operate. Additionally, note that the 12 VDC relay does not apply to the auto switch.

(6) Pay attention to leakage current.

<Solid state / 2-wire type>

Current (leakage current) flows to the load to operate the internal circuit even when in the OFF state.

$$\text{Operating current of load (OFF condition)} > \text{Leakage current}$$

If the criteria given in the above formula are not met, it will not reset correctly (stays ON). Use a 3-wire switch if this specification will not be satisfied.

Moreover, leakage current flow to the load will be “n” times larger when “n” auto switches are connected in parallel.

(7) Ensure sufficient clearance for maintenance activities.

When designing an application, be certain to allow sufficient clearance for maintenance.

(8) Use the rotary actuator and auto switch in proper combination.

The auto switch is pre-adjusted to operate properly for an auto-switch-capable SMC rotary actuator. If the auto switch is mounted improperly, used for another brand of rotary actuator or used after changing the machine installation, the auto switch may not operate properly.

Mounting / Adjustment

Caution

(1) Do not drop or bump.

Do not drop, bump or apply excessive impacts (300m/s^2 or more for reed auto switches and 1000m/s^2 or more for solid state auto switches) while handling. Although the body of the auto switch may not be damaged, the inside of the auto switch could be damaged and cause malfunction.

(2) Observe the proper tightening torque for mounting an auto switch.

When an auto switch is tightened beyond the range of tightening torque, auto switch mounting screws, auto switch mounting brackets or auto switch may be damaged.

On the other hand, tightening below the range of tightening torque may allow the auto switch to slip out of position.

(3) Do not carry a rotary actuator by the auto switch lead wires.

Never carry a rotary actuator by its lead wires. This may not only cause broken lead wires, but it may cause internal elements of the auto switch to be damaged by the stress.

(4) Fix the auto switch using the appropriate screws on the switch body. If other screws are used, the auto switch may be damaged.

Wiring

Caution

(1) Confirm proper insulation of wiring.

If there is any improper insulation (mixed contact with other circuits, grounding faults, improper insulation between terminals, etc.) in the wiring, an over-current may flow in, causing the auto switch to break.

(2) Wire separately from power lines or highvoltage lines, avoiding parallel wiring or wiring in the same conduit with these lines.


If an inrush current is generated, the noise may cause the auto switch to malfunction.

(3) Avoid repeatedly bending or stretching lead wires.

Broken lead wires will result from repeatedly applying bending stress or stretching forces to the lead wires.

Stress and tensile force applied to the connection between the lead wire and auto switch increases the possibility of disconnection.

Keep the lead wire from moving, especially in the area where it connects with the auto switch.

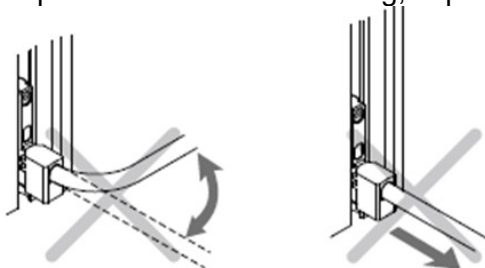

(4) Be certain to connect the load before power is applied.

<2-wire type>

If the power is turned ON when an auto switch is not connected to a load, the auto switch will be instantly damaged because of excess current (Short circuit).

In addition, when using a commercially available checker, etc., to perform an acceptance inspection or check the operation of a 2-wire auto switch, be sure to confirm the wiring method of the checker beforehand and make sure to connect the terminal with a built-in load (IN, etc.) to the 0 V terminal. (Do not connect the power supply terminal and the ground terminal directly when in a non-load state.)

(5) Do not allow short-circuit of loads.

<Reed>

If the power is turned ON with a load in a short circuit condition, auto switch will be instantly damaged because of excess current flow into the switch.

<Solid state>

PNP output type auto switches do not have built-in short circuit prevention circuits.

If a load is short circuited, the auto switch will be instantly damaged as in the case of reed auto switches.

Take special care to avoid reverse wiring with the brown power supply line and the black output line on 3-wire type auto switches.

(6) Avoid incorrect wiring.

<Reed>

A 24 VDC auto switch with indicator light has polarity. The brown lead wire or terminal No.1 is (+), and the blue lead wire or terminal No.2 is (-).

- 1) If connections are reversed, the auto switch will operate, but the light emitting diode will not light up.

Also, take note that a current greater than that specified will damage the light emitting diode and it will no longer operate.

Applicable models: D-93, A93V

<Solid state>

- 1) If connections are reversed on a 2-wire type auto switch, the auto switch will not be damaged if protected by a protection circuit, but the auto switch will remain in an ON state. However, it is still necessary to avoid reversed connections, since the auto switch could be damaged by a load short circuit in this condition.
- 2) If connections are reversed (power supply line + and power supply line-) on a 3-wire type auto switch, the auto switch will be protected by a protection circuit. However, if the power supply line (+) is connected to the blue wire and the power supply line (-) is connected to the black wire, the auto switch will be damaged.

Operation Environment

Warning

(1) Never use in an atmosphere with explosive gases.

Auto switches are not designed to prevent explosion. This may cause an explosion hazard.

Caution

(1) Do not use in an area where a magnetic field is generated.

Auto switches will malfunction or magnets inside rotary actuators will become demagnetized.

- (2) Do not use in an environment where the auto switch will be continually exposed to water.**
Although auto switches satisfy IEC standard IP67 construction, do not use auto switches in applications where they will be continually exposed to water splash or spray. This may cause improper insulation or malfunction.
- (3) Do not use in an environment with oil or chemicals.**
If auto switches are used in an environment with containing coolant, cleaning solvent, various oils or chemicals, even for a short period of time, this may adversely affect the auto switches, resulting improper insulation, malfunction due to the swelling of potting resin, or hardening of lead wires.
- (4) Do not use in an environment with temperature cycles.**
If temperature cycles other than normal temperature changes are applied, this may adversely affect the insides of the auto switches.
- (5) Do not use in an environment where there is excessive impact shock.**
<Reed>
When excessive impact (300m/s^2 or more) is applied to a reed auto switch during operation, the contacts will malfunction and generate or cut off a signal momentarily (1ms or less). If further excessive impact is applied, the reed auto switch may break. Depending on the environment, a solid state auto switch may be required.
- (6) Do not use in an area where surges are generated.**
<Solid state>
If there is an equipment unit (electromagnetic lifter, high-frequency induction furnace, motor, radio, etc.) that generates large surges or electromagnetic waves around cylinders or actuators with solid state auto switches, this may cause the circuit element inside the auto switch to break.
- (7) Avoid the accumulation of iron waste or close contact with magnetic substances.**
If too many iron particles, such as cutting chips or spatters, accumulate around a cylinder or actuator with auto switches, or if a magnetic substance (attracted by a magnet) is put close to a cylinder or actuator with auto switches, the magnetic force inside the cylinder or actuator may weaken, causing the auto switch to malfunction.
- (8) Do not use in direct sunlight.**
- (9) Do not mount the product in locations where it is exposed to radiant heat.**
- (10) Take appropriate measures against the lightning surge on the equipment side as the auto switches do not have any lightning surge resistance specified in the CE marking.**

Maintenance

Warning

- (1) Removal of equipment, and supply/exhaust of compressed air.**
Before any machinery or equipment is removed, first ensure that the appropriate measures are in place to prevent the fall or erratic movement of driven objects and equipment, then cut off the electric power and reduce the pressure in the system to zero. Only then should you proceed with the removal of any machinery and equipment.
When machinery is restarted, proceed with caution after confirming that appropriate measures are in place to prevent actuators from moving suddenly.
- (2) Do not touch a terminal during energizing.**
Touching a terminal during energizing may cause electric shock, malfunction, or auto switch breakage.

Caution

(1) Perform the following maintenance and inspection periodically in order to prevent possible danger due to unexpected auto switch malfunction.

- 1) Secure and tighten auto switch mounting screws.
If screws become loose or the mounting position is dislocated, retighten them after readjusting the mounting position.
- 2) Confirm that there is no damage to lead wires.
To prevent faulty insulation, replace auto switches or repair lead wires if damage is discovered.
- 3) Confirm the detection setting position.
 - Red light on 1-color indicator auto switch
Confirm that the set position stops at the center of the operating range (red indication area).
 - Confirm the green light and position of the 2-color indicator auto switch.
Confirm that the set position stops at the center of the appropriate operating range (green indication area). If stopped with the red LED lit, the operation may become unstable due to effects of the equipment environment or external disturbance. So, set the mounting position at the center of the appropriate operating range again.
Some rotary actuators indicate a specific setting procedure for the auto switch. If so, set the mounting position according to the specific setting procedure.

(2) Do not use solvents, such as benzene, thinner, etc., to clean the product.


They could damage the surface of the body and erase the markings on the body. For heavy stains, use a cloth lightly dampened with diluted neutral detergent, then wipe up any residue with a dry cloth.

1. Product Description

■ This manual describes the operation of the vane type compact rotary actuator, CRB Series.

Confirm the operating conditions such as load size (inertial moment), rotating time, and the product specifications before using this product.

■ How to Order

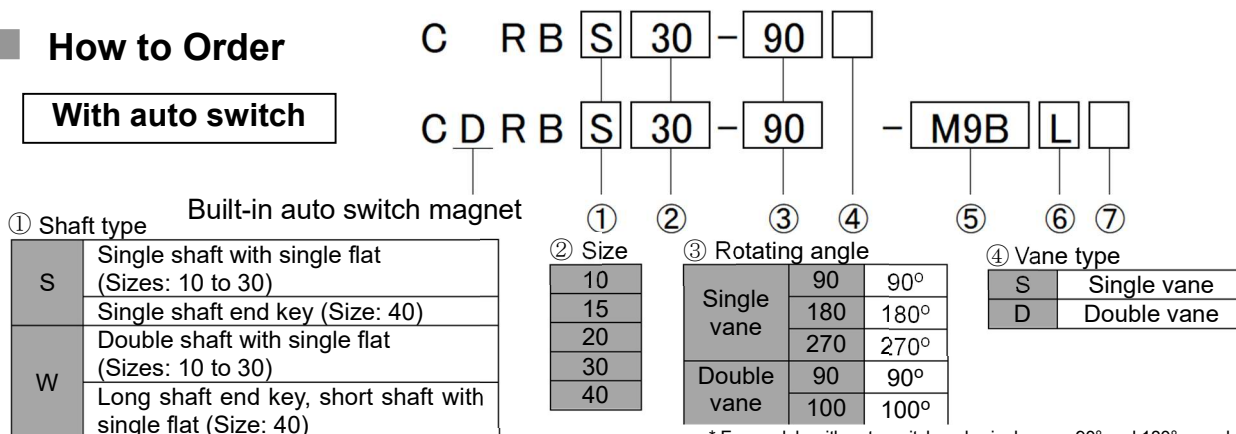

⑤ Auto switch

Nil	Without auto switch (Built-in magnet)
-----	---------------------------------------

* For applicable auto switches, refer to the table below.

⑥ Lead wire length

Nil	Grommet / Lead wire: 0.5 m
M	Grommet / Lead wire: 1 m
L	Grommet / Lead wire: 3 m
Z*	Grommet / Lead wire: 5 m

* The 5m lead wire is produced upon receipt of order.

⑦ Number of auto switches

S	1
Nil	2

Applicable Auto Switches/Refer to the Web Catalog or Best Pneumatics Catalog for further information on auto switches.

Type	Electrical entry	Indicator light	Wiring (Output)	Load voltage [DC]		Auto switch model	Lead wire type	Lead wire length [m]				Pre-wired connector	Applicable load	
								0.5 (Nil)	1 (M)	3 (L)	5 (Z)			
Solid state auto switch	Grommet	Yes	3-wire (NPN)	24 V	5 V, 12 V	M9N	Oilproof heavy-duty cord	●	●	●	○	○	IC circuit	Relay, PLC
			3-wire (PNP)					●	●	●	○			
			2-wire					●	●	●	○			
						M9P								
						M9B								

* Auto switches are shipped together, but not assembled.
 * Auto switches marked with "○" are produced upon receipt of order.

■ Single Vane Specifications

Size	10	15	20	30	40	
Rotating angle range	90° ^{+5°} / ₀ 180° ^{+5°} / ₀ 270° ^{+5°} / ₀	90° ^{+4°} / ₀ 180° ^{+4°} / ₀ 270° ^{+4°} / ₀	90° ^{+/-10°} 180° ^{+/-10°} 270° ^{+4°} / ₀			
Fluid	Air (Non-lube)					
Proof pressure [MPa]	1.05			1.5		
Fluid temperature [°C]	5 to 60					
Max. operating pressure [MPa]	0.7			1.0		
Min. operating pressure [MPa]	0.2					
Speed adjustable range [s / 90°] ^(Note 2)	0.03 to 0.5 ^(Note 1)			0.04 to 0.5	0.07 to 0.5	
Allowable kinetic energy [J]	0.00015	0.001	0.003	0.02	0.04	
Shaft load N	Radial	15	15	25	30	60
	Thrust	10	10	20	25	40
Port size	M5X 0.8 (90°, 180°) M3X0.5 (270°)			M5X0.8		

Note1) Size 10 requires at least 0.35 MPa of operating pressure to reach the minimum rotation time (0.03 s/90°).

Note2) Operate within the speed adjustable range.

Operation at a low speed outside of the speed adjustable limit may cause stick slip or operation failure. It is difficult to make adjustments during use if rotation time is changed to 0.5 s/90° or lower.

Double Vane Specifications

D

Size		10	15	20	30	40
Rotating angle range		90° ^{+5°} ₀ 100° ^{+/-2.5°}		90° ^{+4°} ₀ 100° ^{+/-2°}		
Fluid		Air (Non-lube)				
Proof pressure [MPa]		1.05			1.5	
Fluid temperature [°C]		5 to 60				
Max. operating pressure [MPa]		0.7			1.0	
Min. operating pressure [MPa]		0.2				
Speed adjustable range [s / 90°] ^(Note 3)		0.05 to 0.5			0.1 to 0.5	
Allowable kinetic energy [J]		0.0003	0.0012	0.0033	0.02	0.04
Shaft load N	Radial	15	15	25	30	60
	Thrust	10	10	20	25	40
Port size		M3X0.5			M5X0.8	

Note3) Operate within the speed adjustable range.

Operation at a low speed outside of the speed adjustable limit may cause stick slip or operation failure.


Double Vane Specifications require at least 0.5 MPa of operating pressure to reach the minimum rotation time.

It is difficult to make adjustments during use if rotation time is changed to 0.5 s/90° or lower.


Effective torque

D


Size10

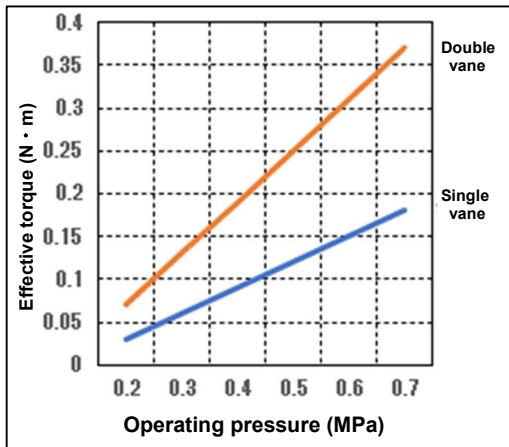


Size15

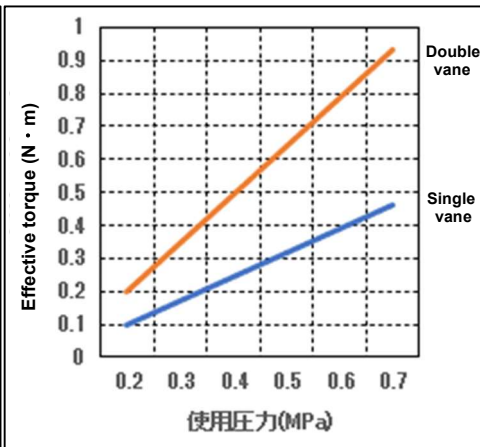


Size20

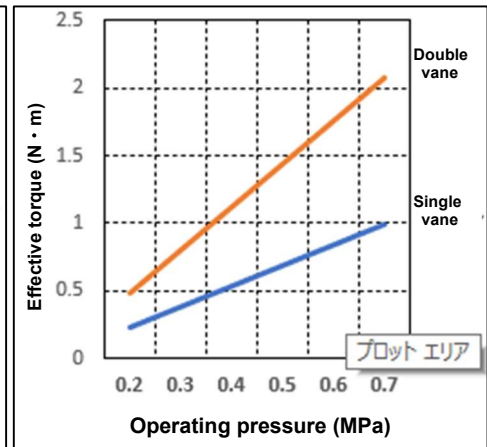

Size30

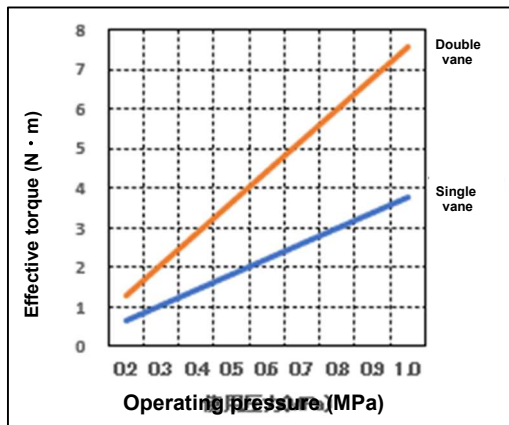


Size40

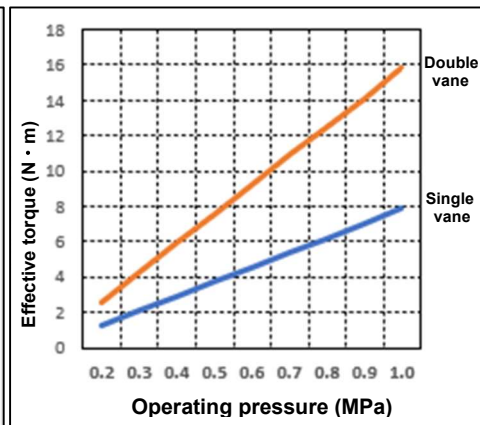

Chamfered Position and Rotation Range: Top View from Long Shaft Side Chamfered positions shown below illustrate the conditions of actuators when B port is pressurized.

• **Single vane**


Size: 10, 15

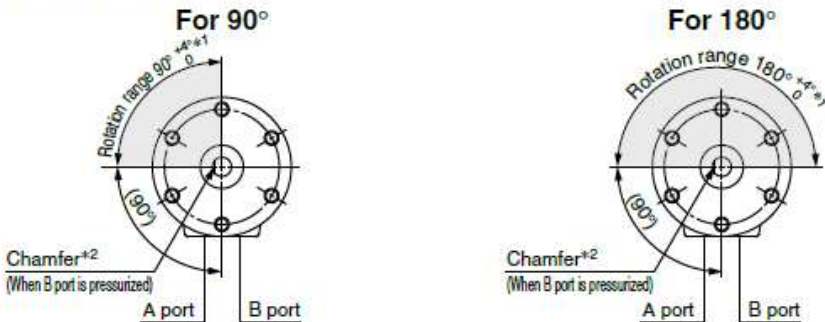


*1 For size 10, the tolerance of rotating angle of 90° and 180° will be $^{+5^{\circ}}$ /₀.

Size: 20, 30, 40

Size: 10, 15, 20, 30, 40

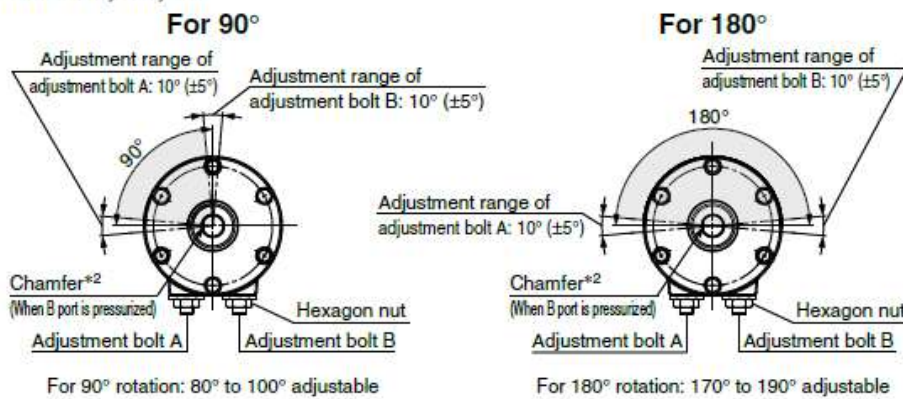

For 270°

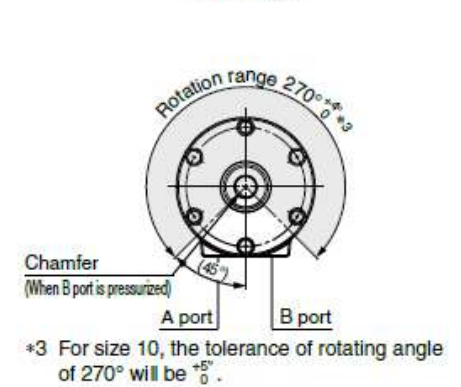


• **Double vane**

For 90°

For 100°

D

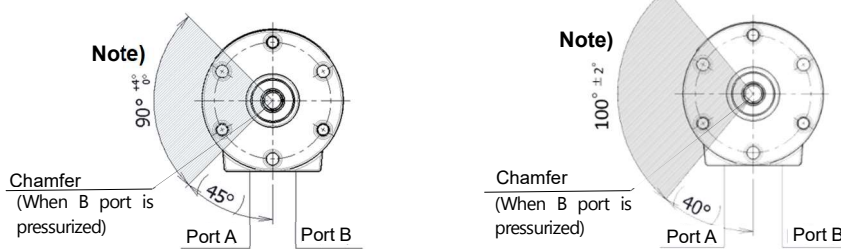

*4 For size 10, the tolerance of rotation angle of 90° will be $^{+5^{\circ}}$ /₀ and 100° will be $^{+2.5^{\circ}}$.




Note) The angle adjusting screw (adjustment bolt) is set at random within the adjustable rotating range. Therefore, it must be re-adjusted to obtain the angle that suits your application. (Refer to page 11.) For size 40 actuators, a parallel key will be used instead of chamfer.

Size	Recommended tightening torque for hexagon nut to fix the adjustment bolt
20	1.5N · m
30,40	3.0 N · m

2. Internal Construction and Description of Individual Parts

■ Single Vane (90°, 180° Specifications: Size 10, 15)

Size: 10, 15

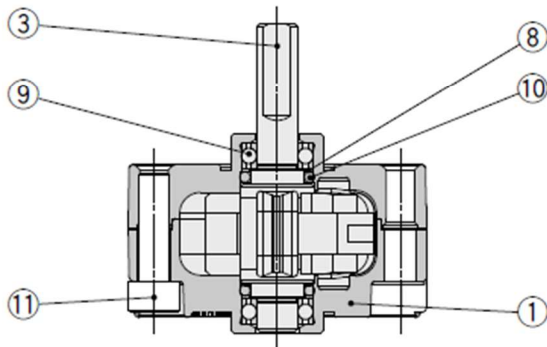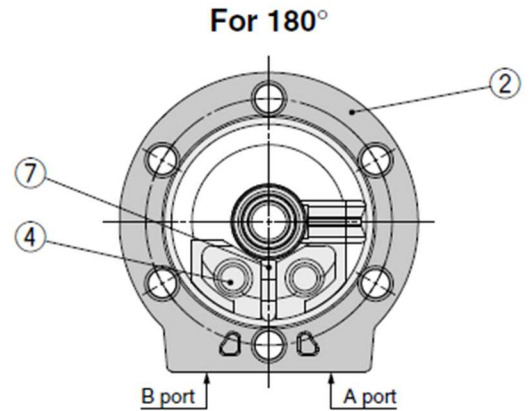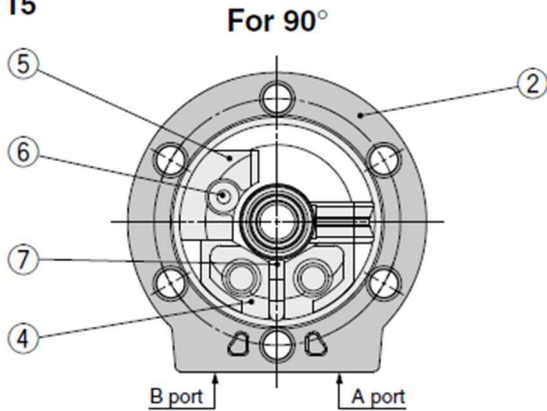


Component Parts

No.	Description	Material	Note
1	Body (A)	Aluminum alloy	Painted
2	Body (B)	Aluminum alloy	Painted
3	Vane shaft	Stainless steel	
4	Stopper	Resin	
5	Stopper for 90°	Resin	For 90°
6	Holding rubber	NBR	For 90°
7	Stopper seal	NBR	Special seal
8	Back-up ring	Stainless steel	
9	Bearing	Bearing steel	
10	O-ring	NBR	
11	Hexagon socket head cap screw	Chrome molybdenum steel	Special screw

Single Vane (90°, 180° Specifications: Size 20, 30, 40)

Size: 20, 30, 40

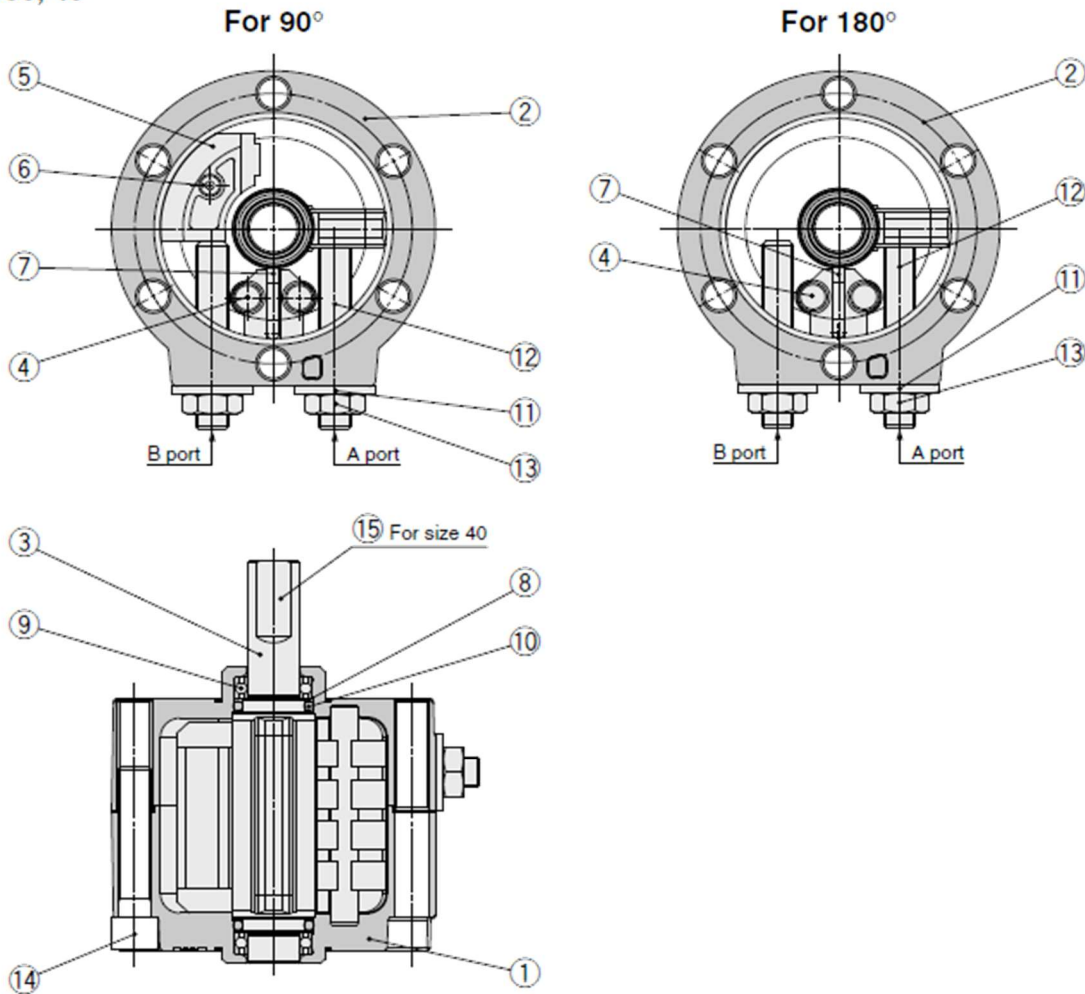

Component Parts

No.	Description	Material	Note
1	Body (A)	Aluminum alloy	Painted
2	Body (B)	Aluminum alloy	Painted
3	Vane shaft	Stainless steel *	
4	Stopper	Resin	
5	Stopper for 90°	Resin	For 90°
6	Holding rubber	NBR	For 90°
7	Stopper seal	NBR	Special seal
8	Back-up ring	Stainless steel	
9	Bearing	Bearing steel	
10	O-ring	NBR	
11	Seal washer	NBR	
12	Adjustment bolt	Chrome molybdenum steel	
13	Hexagon nut	Steel wire	
14	Hexagon socket head cap screw	Chrome molybdenum steel	Special screw
15	Parallel key	Carbon steel	For size 40


* The material is chrome molybdenum steel for sizes 30 and 40.

B

■ Single Vane (270° Specifications)

Size: 10, 15, 20, 30, 40

For 270°

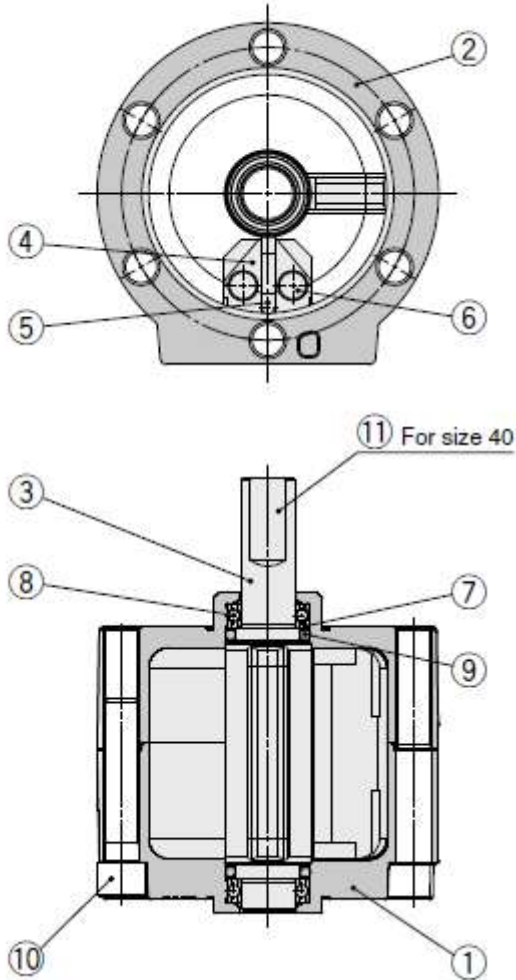

* The left figures show the position of the ports during rotation.


Component Parts

No.	Description	Material	Note
1	Body (A)	Aluminum alloy	Painted
2	Body (B)	Aluminum alloy	Painted
3	Vane shaft	Stainless steel *	
4	Stopper	Resin	
5	Stopper seal	NBR	Special seal
6	Stopper pin	Bearing steel	
7	Back-up ring	Stainless steel	
8	Bearing	Bearing steel	
9	O-ring	NBR	
10	Hexagon socket head cap screw	Chrome molybdenum steel	Special screw
11	Parallel key	Carbon steel	For size 40

* The material is chrome molybdenum steel for sizes 30 and 40.

Double Vane (Size 10)

D


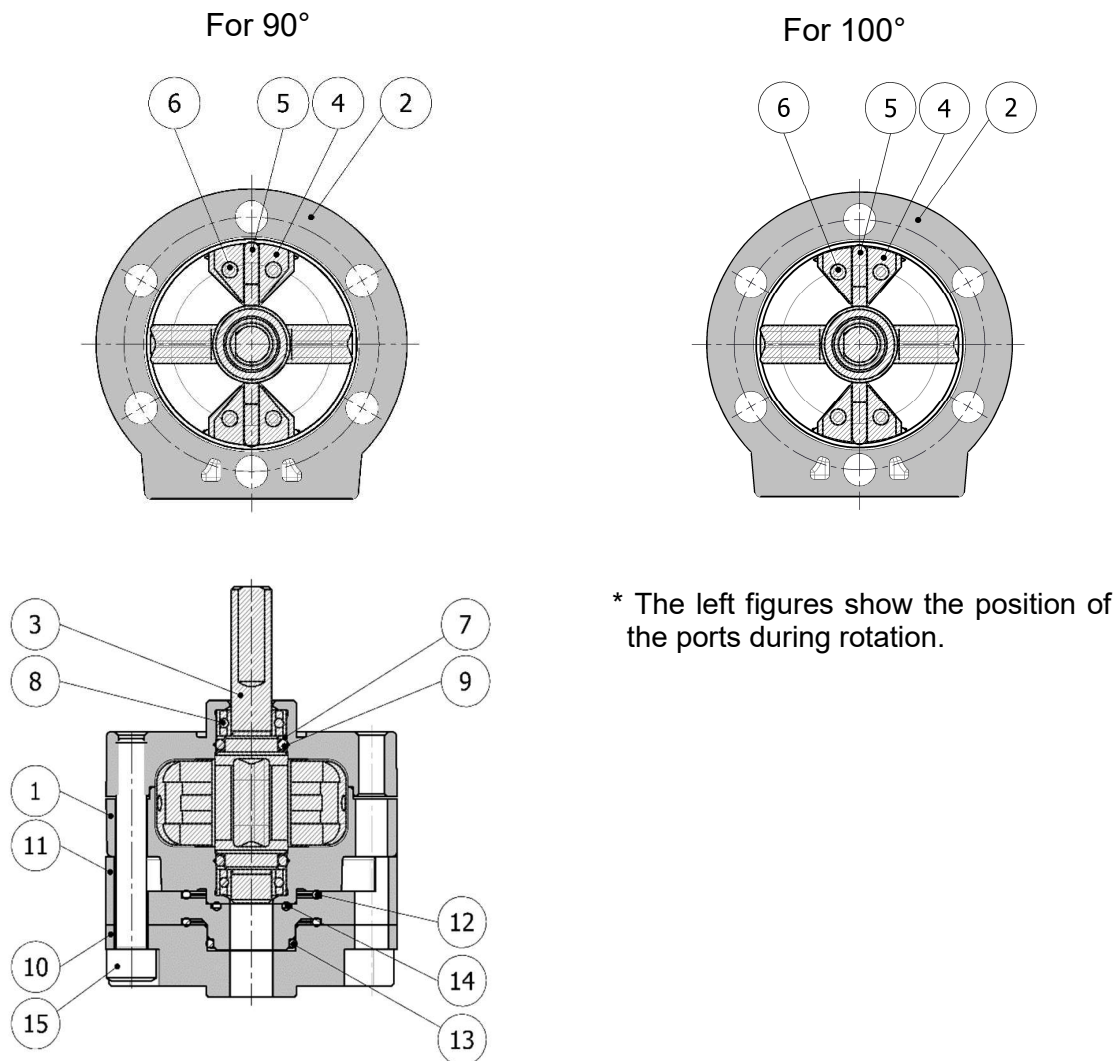


Component Parts

No.	Description	Material	Note
1	Body (A)	Aluminum alloy	Painted
2	Body (B)	Aluminum alloy	Painted
3	Vane shaft	Chrome molybdenum steel	
4	Stopper	Resin	
5	Stopper seal	NBR	Special seal
6	Stopper pin	Bearing steel	
7	Back-up ring	Stainless steel	
8	Bearing	Bearing steel	
9	O-ring	NBR	
10	Cover(D)	Aluminum alloy	
11	Plate	Resin	
12	Gasket	NBR	
13	O-ring	NBR	
14	O-ring	NBR	
15	Hexagon socket head cap screw	Chrome molybdenum steel	Special screw

Double Vane (Size 15,20,30,40)

D

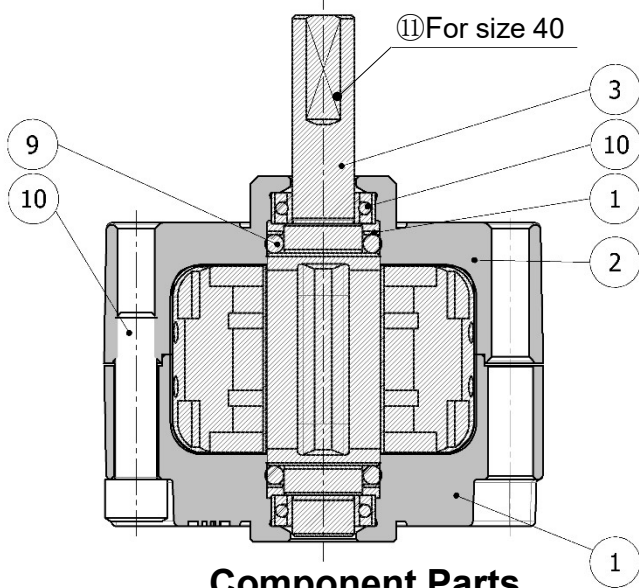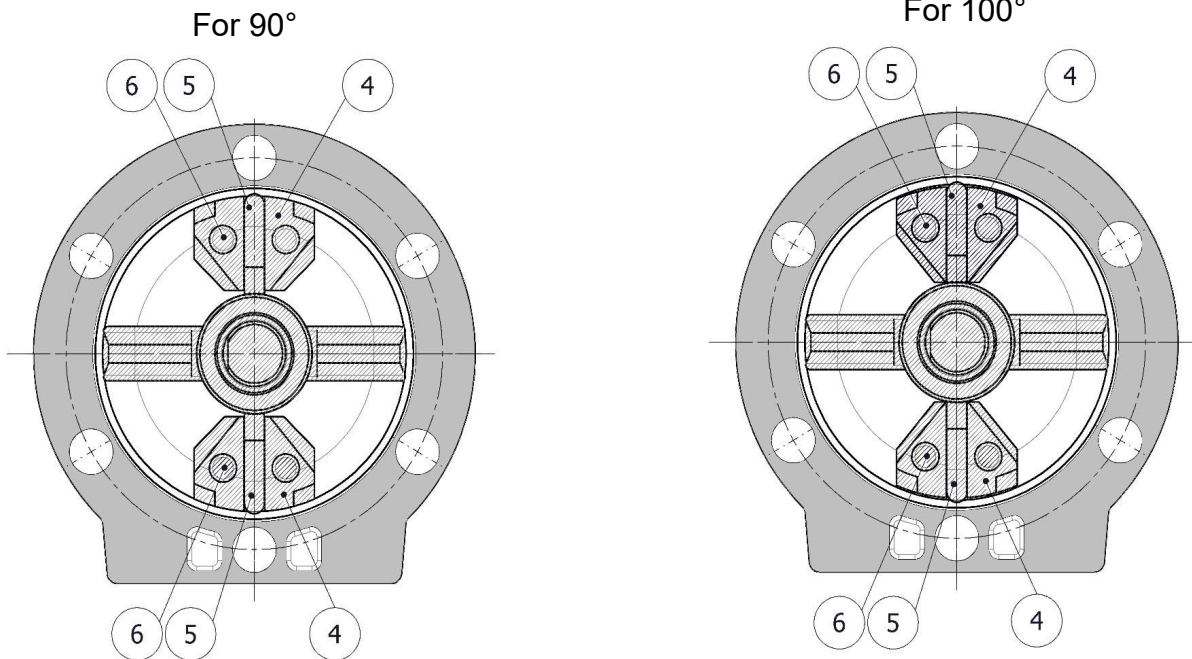

* The left figures show the position of the ports during rotation.

Component Parts

No.	Description	Material	Note
1	Body (A)	Aluminum alloy	Painted
2	Body (B)	Aluminum alloy	Painted
3	Vane shaft	Stainless steel *	
4	Stopper	Resin	
5	Stopper seal	NBR	Special seal
6	Stopper pin	Bearing steel	
7	Back-up ring	Stainless steel	
8	Bearing	Bearing steel	
9	O-ring	NBR	
10	Hexagon socket head cap screw	Chrome molybdenum steel	Special screw
11	Parallel key	Carbon steel	For size 40

* The material is chrome molybdenum steel for sizes 30 and 40.

■ With Auto Switch (Single Vane: 90°, 180° Specifications)

* For models with auto switch, only 90° and 180° can be selected.





Note: The single vane 270° and double vane specifications do not have this structure.

For details, please refer to the instruction manual No. JCRB-OM0002.

D

Size: 10, 15

Size: 20, 30, 40

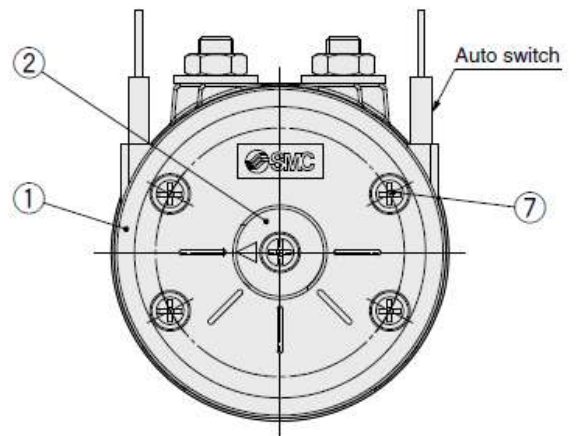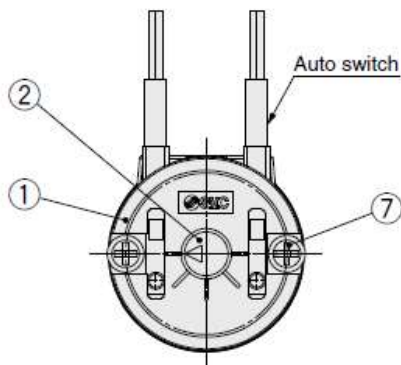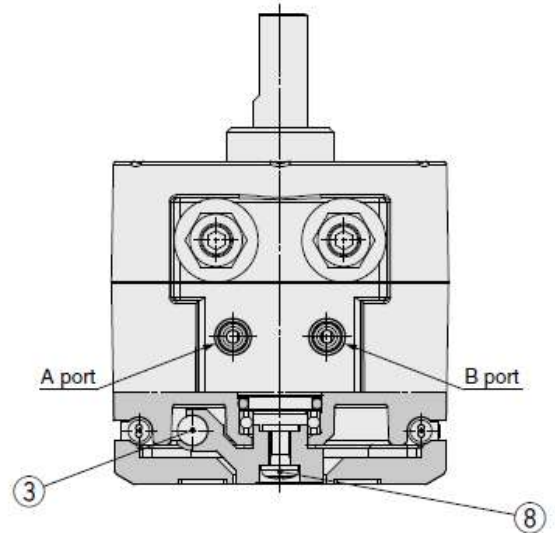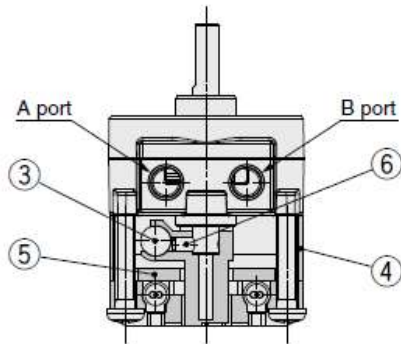

Component Parts

No.	Description	Material
1	Cover	Resin
2	Magnet holder	Resin
3	Magnet	Magnetic material
4	Body C	Resin
5	Switch plate	Aluminum alloy
6	Spring pin	Stainless steel
7	Cross recessed round head screw	Chrome molybdenum steel *
8	Cross recessed round head screw	Chrome molybdenum steel


* The material is stainless steel for sizes 10 and 15.

■ Auto Switch Proper Mounting Position


(mm)

Size	Solid state auto switch	
	D-M9□	
	A	
10	6	
15	6	
20	6	
30	6	
40	6	


Size: 10, 15

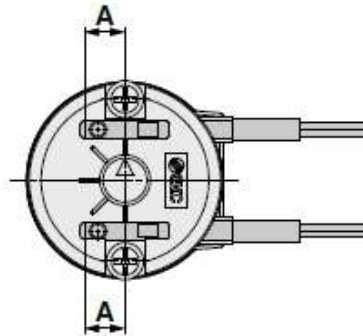

Size: 20, 30, 40

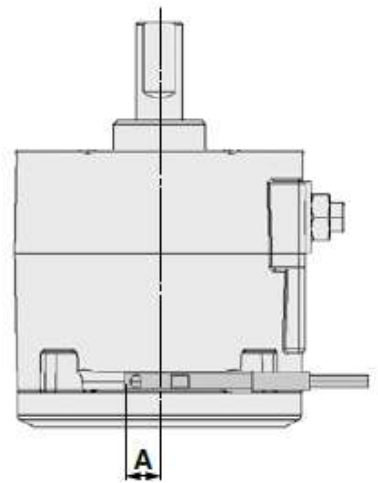

■ Operating Angle and Hysteresis Angle

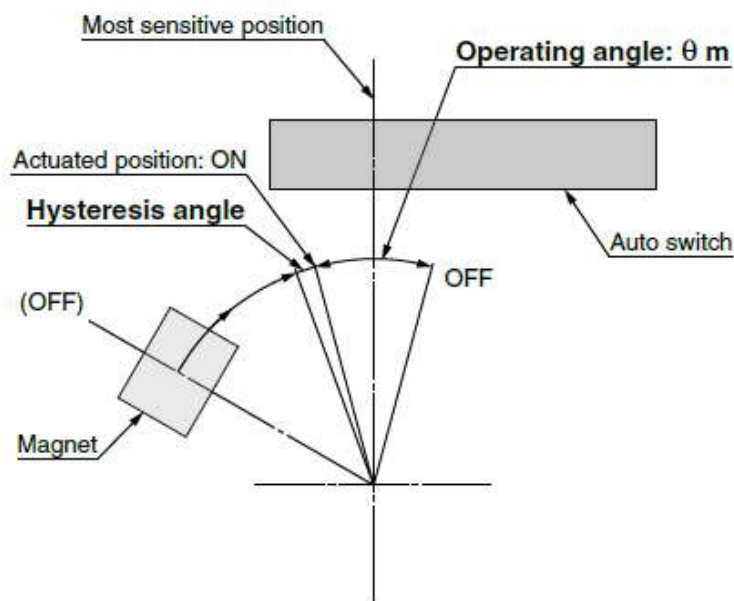

Size	Solid state auto switch	
	D-M9□	
	Operating angle (θ_m)	Hysteresis angle
10	36°	5°
15	36°	5°
20	20°	5°
30	20°	5°
40	20°	5°

Note) Since the figures in the table on the left are provided as a guideline only, they cannot be guaranteed. Adjust the auto switch after confirming the operating conditions in the actual setting.

Proper tightening torque: 0.05 to 0.15 [N·m]

3. Basic circuit

■ Circuit Configuration

The standard circuit for operating a rotary actuator with an air filter, regulator, solenoid valve and speed controller is shown in Fig. 1 below.

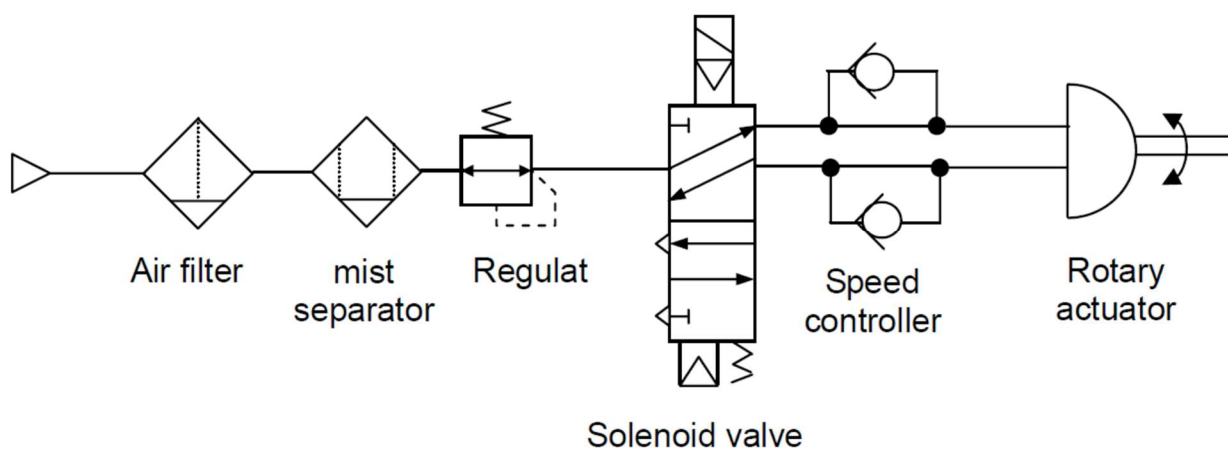


Fig.1

■ Recommended models

Recommended models for the standard circuit in Fig. 1 are shown in Table 1 below.

Table 1

Size	Solenoid valve (CV)	Speed Controller	Tubing
10 15	0.05	AS*-M5 AS*-M3(Type270°)	φ4/ φ2.5 φ6/ φ4
20 30 40	0.1 to 0.2	AS*-M5	φ4/ φ2.5 φ6/ φ4

Note) The speed controllers must be used in a meter-out control.
(Do not use a speed controller for slow speed.)

4. Setting

■ Limit load to the shaft Warning

(1) Although static loads shown in Table 2 are allowable, avoid applying load directly to the shaft.

Table 2 Allowable shaft load

Size	Load direction		
	Fs [N]	Fr [N]	M [N-m]
10	9.8	14.7	0.13
15	9.8	14.7	0.17
20	19.6	24.5	0.33
30	24.5	29.4	0.42
40	40	60	1.02

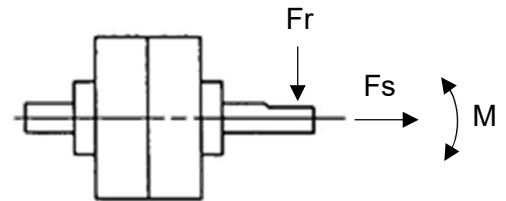


Fig.2

Note) Application point of force "Fr" is at the center of longitudinal dimension of the key.

(2) For better operating conditions it is recommended to use the method shown in the figure below to avoid applying direct load to the shaft.

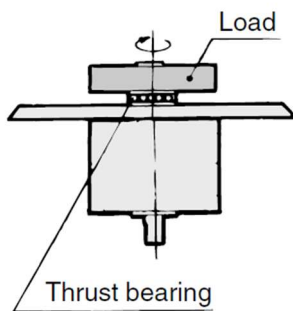


Fig.3

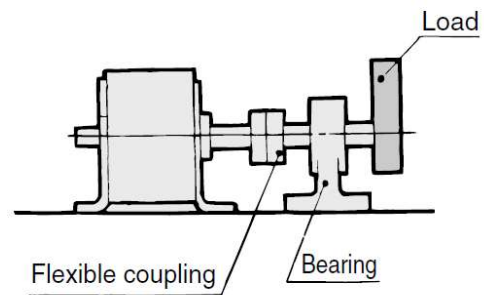


Fig.4

■ Use of Shaft fitting Warning

As shown in Fig. 5, when the rotary actuator is used with an extended shaft, align the center of the shaft of the rotary actuator and the counterpart. If they are off-centered, the load factor becomes partially large and an excessive bending moment may be applied to the shaft.

In such a condition, the assembly may not perform a stable operation and the shaft may be damaged. In this case, use **Flexible Fitting** ("flexible joint" defined in JIS).

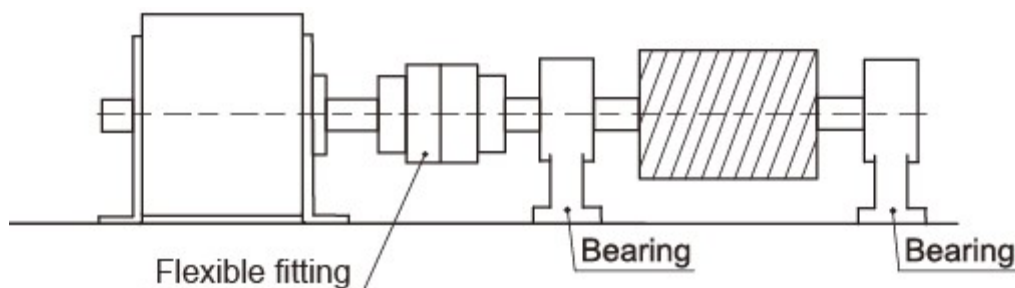


Fig.5

How to Mount Loads

How to connect a load directly to a single flat shaft.

To secure the load, select a bolt of an appropriate size from those listed in tables 3 and 4 by taking the shaft's single flat bearing stress strength into consideration.

Table 3 Directly Fixed with Bolts (Refer to Fig. 6)

Size	Shaft dia.	Bolt size
10	4	M4 or larger
15	5	M5 or larger
20	6	
30	8	M6 or larger

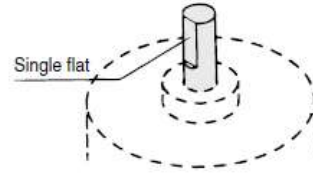


Fig.6

Table 4 Fixed with a Holding Block (Refer to Fig. 7 and 8)

Size	Shaft dia.	Bolt size	Plate thickness (t)
10	4	M3 or larger	2 or wider
15	5		2.3 or wider
20	6	M4 or larger	3.6 or wider
30	8	M5 or larger	4 or wider

The plate thickness (t) in the table above indicates a reference value when a carbon steel is used.

Besides, we do not manufacture a holding block.

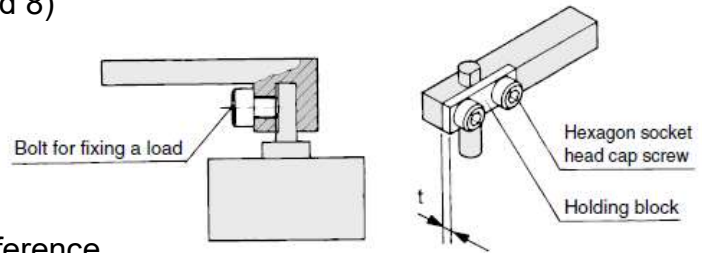


Fig.7

Fig.8

Warning

Mounting

Mounting 1

Using the tapped holes on the output shaft side of body (Refer to Fig. 9)

Table 5 Bolt, Tightening torque

Size	Bolt	Recommended tightening torque
10	M3	0.63 N·m
15		
20	M4	1.50 N·m
30	M5	3.00 N·m
40		

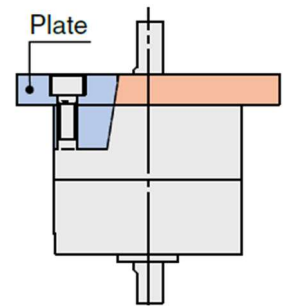


Fig.9

Mounting 2

Using a plate with tapped holes (Refer to Fig. 10).

L dimension when the unit is used as a flange is shown in the table below.

(Only for standard CRB without auto switch)

Table 6 Bolt, Tightening torque

Size	L	Bolt	Recommended tightening torque
10	11.5	M2.5	0.36 N·m
15	16		
20	24.5	M3	0.63 N·m
30	35	M4	1.50 N·m
40	40		

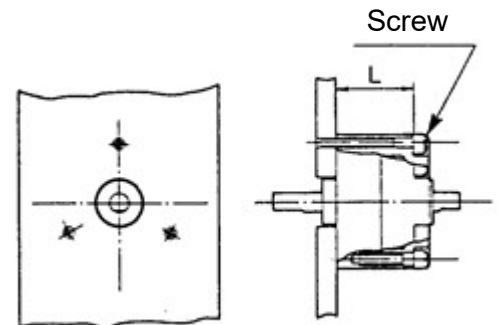


Fig.10

Warning

■ Adjusting the rotating angle


Do not apply a load when adjusting the rotating angle.

For size 20, 30 and 40, the rotation range can be set as shown in Fig.11 and 12 by adjusting the adjustment bolt whilst supplying air to the opposite port.

*A Box wrench may be required to adjust the angle depending on the usage environment.

Example 1) For 90 degrees

- (1) Set the adjustment bolt B while supplying pressure from the A port.

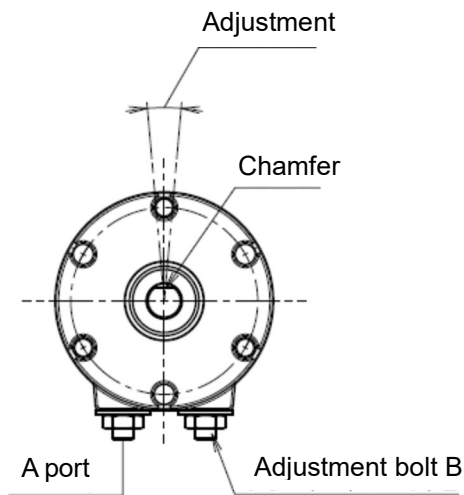

- (2) Set the adjustment bolt A while supplying pressure from the B port.


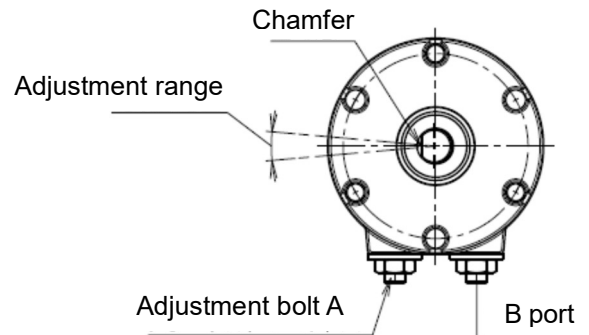


Fig.11

Example 2) For 180 degrees

- (1) Set the adjustment bolt B while supplying pressure from the A port.

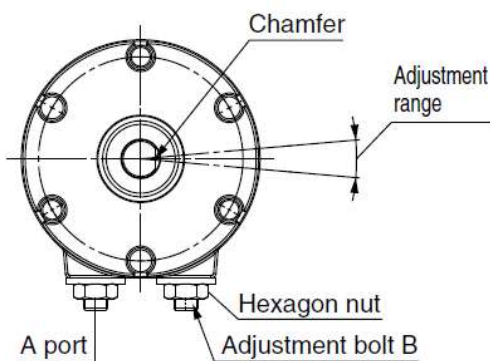

- (2) Set the adjustment bolt A while supplying pressure from the B port.

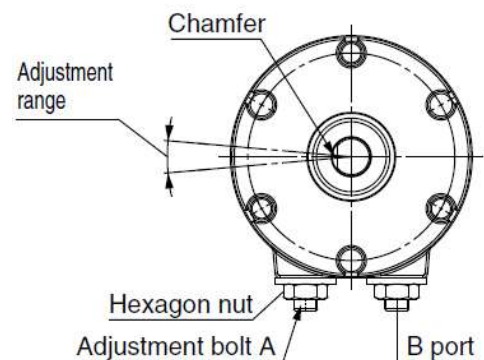


Fig.12

Warning

■ Operating environment

Do not use in environments where there is a danger of corrosion.

Refer to "Internal Construction and Components" on pages 4 to 6 for materials used for the rotary actuator.

Never use this product in dusty locations or where water, oil, etc., splash on the equipment.

Caution

■ Air Supply

- (1) The air supplied to the rotary actuator shall be filtered by an SMC air filter and regulated to the specified set pressure by an SMC AR series regulator.
- (2) This is a non-lube type actuator. Never supply lubricant oil.
- (3) If lubricant is supplied to the actuator, the grease inside the actuator will be washed away, and this may cause operation failure.
Compressed air containing a large amount of condensate may cause malfunction of rotary actuator.
Therefore, take appropriate measures to ensure air quality, such as by providing an after cooler, air dryer, or water separator.

5. Setting of Rotation Time

Even if the torque - required by the load in the rotation movement is small, the shaft and/or internal parts could become damaged depending on the inertia of the load. Therefore, select an appropriate model for your application by taking the load's moment of inertia, kinetic energy, and rotation time into consideration.

■ Moment of inertia

- (1) Moment of inertia is the tendency of a stationary object to resist rotation, or, conversely, the tendency of a rotating object to resist stopping.

When the actuator moves an object (load), inertia (kinetic energy) is generated in the object. The actuator stops at the rotation end, but due to inertia, a large shock (kinetic energy) is applied to the rotary actuator.

The kinetic energy can be calculated using the formula below.

$$E = 1/2 \times I \times \omega^2$$


E : Kinetic energy	(J)
I : Moment of inertia	(kg/m ²)
ω : Angular speed	(rad/s)

- (2) There is a threshold of kinetic energy that a rotary actuator allows. Therefore, by finding the moment of inertia, it is possible to find the threshold value of the rotation time. The basic formula for finding the moment of inertia is shown below.

Moment of inertia can be found with the basic formula shown below.

$$I = m \times r^2 \qquad m: \text{Weight (kg)}$$

This represents the moment of inertia for a shaft with mass M, which is located at distance r from the shaft.

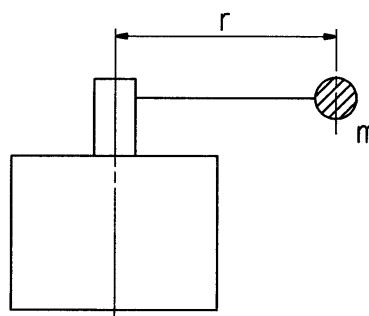


(3) Moment of inertia of each style can be found with the calculation formula shown below.

How to read Graph 1.

Example 1) When there are constraints for the moment of inertia of load and rotation time.
From "Graph 1", to operate at the load moment of inertia $1 \times 10^{-4} \text{ kg}\cdot\text{m}^2$ and at the rotation time setting of $0.3 \text{ s}/90^\circ$, the model will be CRB□30.

Example 2) When there are constraints for the moment of inertia of load, but not for rotation time.
From "Graph 1", to operate at the load moment of inertia $1 \times 10^{-5} \text{ kg}\cdot\text{m}^2$
CRB15 will be 0.22 to 0.5 sec/ 90°
CRB20 will be 0.13 to 0.5 sec/ 90°.

[Remarks] As for the rotation times in "Graph 1", the lines in the graph indicate the adjustable speed ranges.
If the speed is adjusted towards the low-speed end beyond the range of the line, it could cause the actuator to stick, or, in the case of the vane type, it could stop its operation.

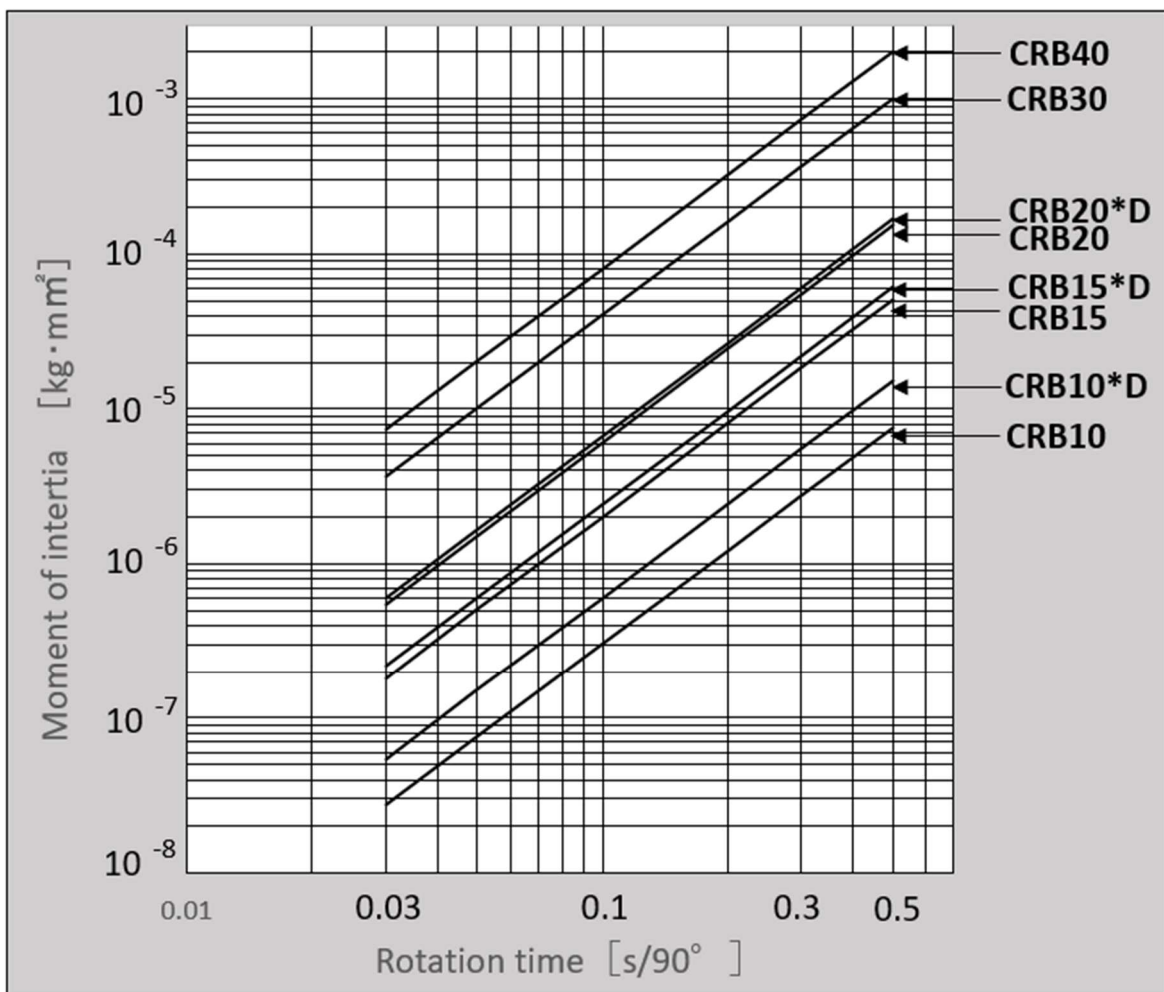

Graph 1

■ Kinetic energy

Allowable kinetic energy is shown in Table 7.

Size	Allowable kinetic energy	
	Single Vane	Double Vane
10	0.00015	0.0003
15	0.001	0.0012
20	0.003	0.0033
30	0.02	
40	0.04	

Unit (J)

D

Since the rotary actuator reaches the rotation end in the middle of acceleration, terminal acceleration " ω " can be found with the calculation shown below :

$$\omega = 2\theta / t$$

θ : Rotating angle (rad)

t : Rotation time (s)

Kinetic energy E can be found with the formula below :

$$E = 1/2 \cdot I \cdot \omega^2$$

Therefore, rotation time " t " of the rotary actuator is as shown below.

$$t = \sqrt{\frac{2 \cdot I \cdot \theta^2}{E}}$$

E : Kinetic energy (J)

I : Moment of inertia (kg / m²)

θ : Rotating angle (rad) 180° = 3.14 rad

During uniform acceleration, angular speed ω after t seconds and displacement angle θ can be found as shown below.

$$\omega = \dot{\omega} \times t \quad (1)$$

$$\theta = \int \dot{\omega} t dt = 1/2 \dot{\omega} t^2 + C \quad (2)$$

C is integration constant.

When $t = 0$, rotation angle $\theta = 0$, so the integration constant is $C = 0$.

$$\theta = 1/2 \dot{\omega} t^2 = 1/2 \omega t$$

Therefore,


$$\omega = 2\theta / t$$

External stopper

If the kinetic energy - generated by the load exceeds the actuator's threshold value, an external dampening function must be provided to absorb the energy.

The figure below shows the correct installation of external stopper.

* As a rotary actuator itself has a slight angular error due to the construction, use an external stopper when accurate positioning is required.

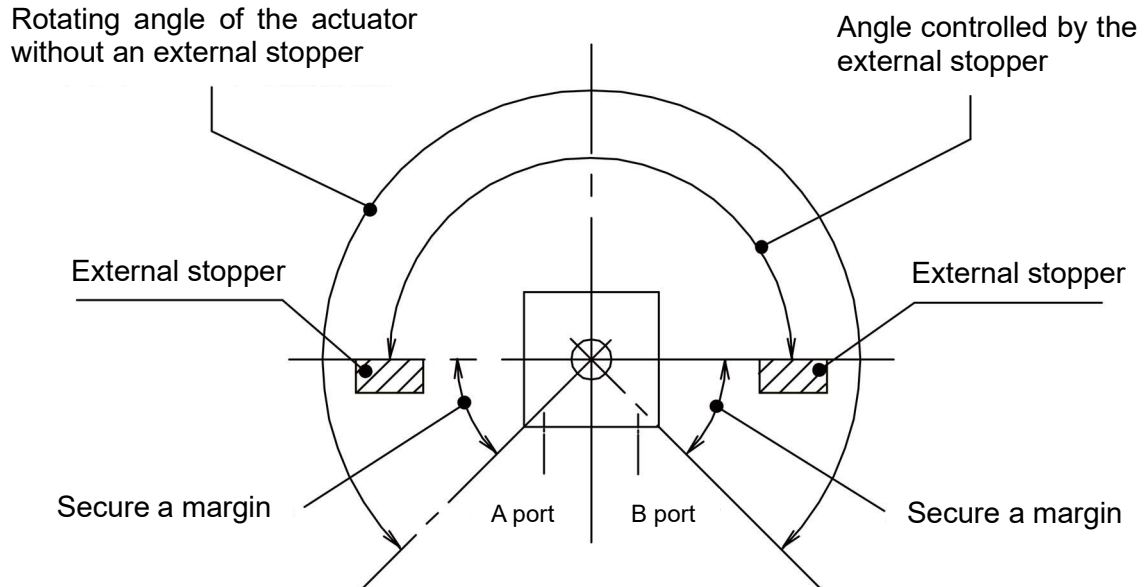

Correct position	
Incorrect position	<p data-bbox="986 1469 1358 1637">The external stopper works as a fulcrum, resulting in the load's inertia force being applied to the shaft as a bending moment.</p>
Incorrect position	<p data-bbox="1002 1760 1358 1962">If an external stopper is installed to the shaft on the opposite side of the load, the inertia force generated by the load is applied directly to the shaft.</p>


When buffer such as Shock Absorber is used, or when load is within allowable energy range, single rod can be used.

6. Maintenance and Inspection


[Precautions]

- Disassembling the product will void SMC's warranty. If disassembly is really necessary it is recommended to fully understand the internal construction before disassembling the products.
- Do not damage the seals when reassembling the product.
Be sure to add grease to all the seals and sliding surfaces of the bodies and vane shaft.
- Use caution to prevent any damage to the sliding surfaces of the bodies (A) and (B) and vane shaft.
- As the rubber of the vane shaft is baked to adhere to the vane, it cannot be removed.
- If locking adhesive is applied to the bolts or screws, apply locking adhesive again during re-assembly.

Single Vane (90°, 180° Specifications: Size 10, 15)

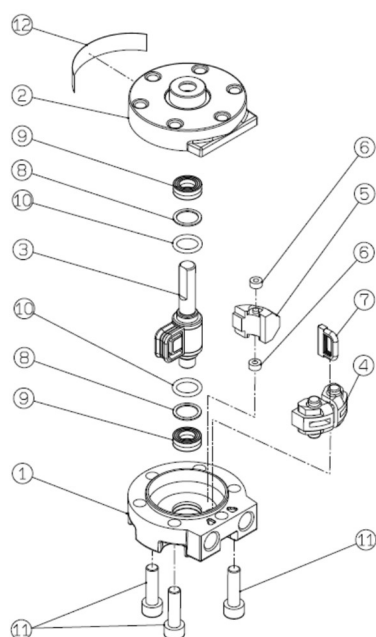

90° specification

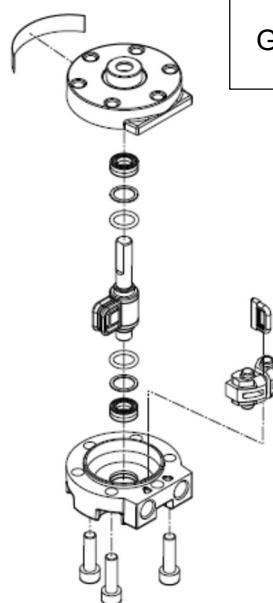

180° specification

Applicable grease package
part number
GR-L-005 (inner capacity: 5g)

- Be sure to install an air filter to clean the supply air.
- Do not disassemble the actuator. When disassembling it for an unavoidable reason, follow the procedures below, and prevent dust and/or foreign matter from entering the product. (As operation failure is caused by an increase in the internal leakage in most of the cases, the speed controller needs to be readjusted. It is recommended to operate the product in the stable speed adjustable range (see "Speed adjustable range" on page 1))

For CRB10, 15-90


<Disassembly>

- Remove the hexagon socket head cap screws (11).
- Hold either body A (1) or body B (2), and separate the body A and B by pushing the vane shaft (3) out.
- Take out the vane shaft (3), stoppers (4) and (5).


<Reassembly>

- Mount the vane shaft (3) into the body B (2).
- Mount the stopper seals (7) into the stopper (4).
- Mount the stoppers (4) and (5) into the body B (2).
(Note) The stopper has the specified position for mounting.
- Insert the vane shaft (3) into the body A (1).
- Tighten the body A (1) and body B (2) with the hexagon socket head cap screws (11).
(Refer to table 8.)

■ Single Vane (90°,180° Specifications: Size 20, 30,40)

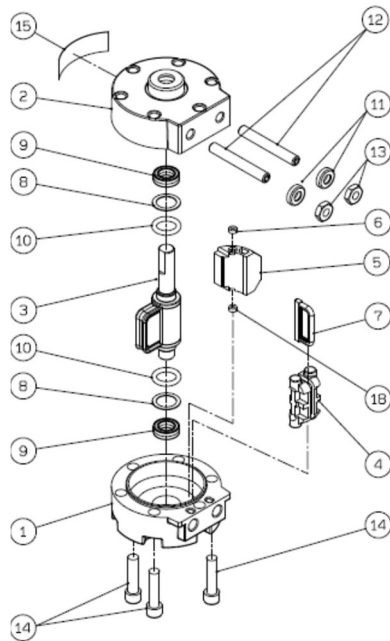

90° specification

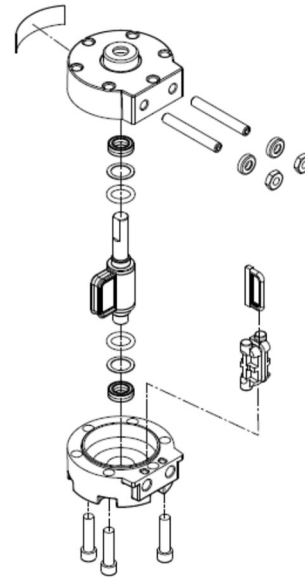

180° specification

- Be sure to install an air filter to clean the supply air.
- Do not disassemble the actuator. When disassembling it for an unavoidable reason, follow the procedures below, and prevent dust and/or foreign matter from entering the product. (As operation failure is caused by an increase in the internal leakage in most of the cases, the speed controller needs to be readjusted. It is recommended to operate the product in the stable speed adjustable range (see "Speed adjustable range" on page 1)

For CRB20, 30, 40-90


<Disassembly>

1. Remove the parallel key. (For size 40.)
2. Remove the hexagon socket head cap screw (14).
3. Hold either body A (1) or body B (2), and separate the body A and B by pushing the vane shaft (3) out.
4. Take out the vane shaft (3), stoppers (4) and (5).

<Reassembly>

1. Mount the vane shaft (3) into the body B (2).
2. Mount the stopper seals (7) into the stopper (4).
3. Mount the stoppers (4) and (5) into the body B (2).
(Note) The stopper has the specified position for mounting.
4. Insert the vane shaft (3) into the body A (1).
5. Tighten the body A (1) and body B (2) with the hexagon socket head cap screws (14).
(Refer to table 8.)
6. Mount the parallel key (For size 40).

■ Single Vane (270° Specifications)

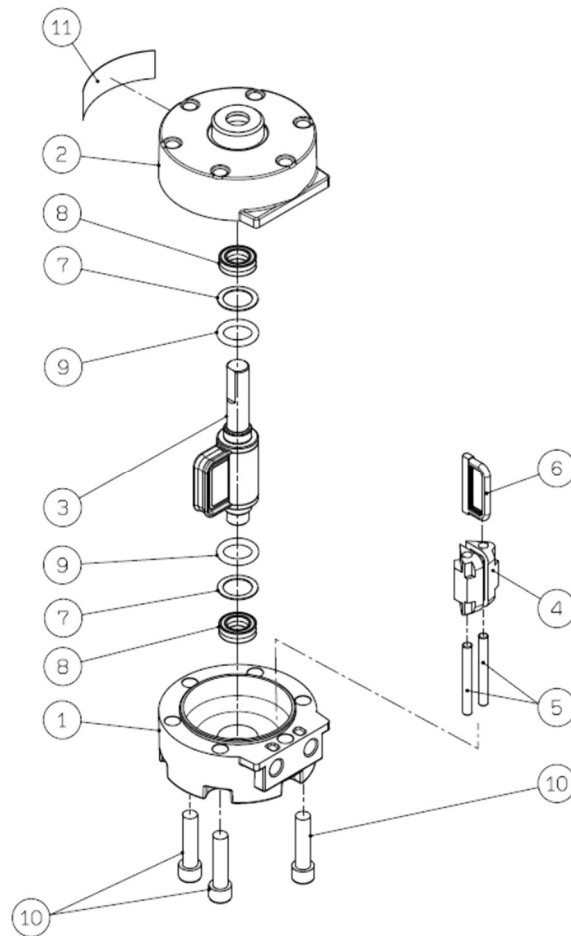

- Be sure to install an air filter to clean the supply air.
- Do not disassemble the actuator. When disassembling it for an unavoidable reason, follow the procedures below, and prevent dust and/or foreign matter from entering the product. (As operation failure is caused by an increase in the internal leakage in most of the cases, the speed controller needs to be readjusted. It is recommended to operate the product in the stable speed adjustable range (see "Speed adjustable range" on page 1))

<Disassembly>

1. Remove the parallel key. (For size 40.)
2. Remove the hexagon socket head cap screws (10).
3. Hold either body A (1) or body B (2), and separate the body A and B by pushing the vane shaft (3) out.
4. Take out the vane shaft (3), stoppers (4). (The stopper pin must not be removed from the stopper.)

B


<Reassembly>

1. Mount the vane shaft (3) into the body B (2).
2. Mount the stopper seals (6) into the stopper (4).
3. Mount the stoppers (4) into the body B (2).
(Note) The stopper has the specified position for mounting.
4. Insert the vane shaft (3) into the body A (1).
5. Tighten the body A (1) and body B (2) with the hexagon socket head cap screws (10).
(Refer to table 8.)
6. Mount the parallel key (For size 40).

A
B

■ Double Vane (Size 10)

D

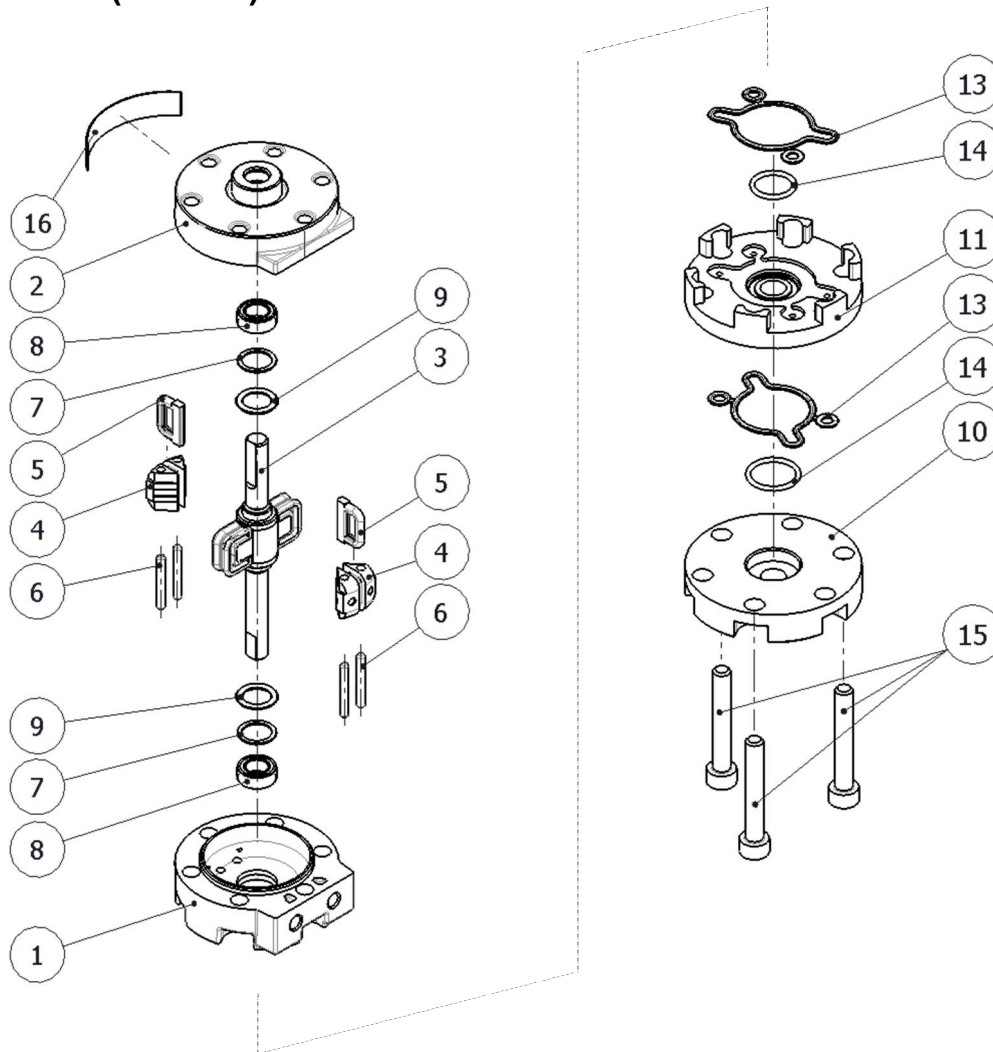

- Be sure to install an air filter to clean the supply air.
- Do not disassemble the actuator. When disassembling it for an unavoidable reason, follow the procedures below, and prevent dust and/or foreign matter from entering the product. (As operation failure is caused by an increase in the internal leakage in most of the cases, the speed controller needs to be readjusted. It is recommended to operate the product in the stable speed adjustable range (see "Speed adjustable range" on page 1))

<Disassembly>


1. Remove the hexagon socket head cap screws (15).
2. Hold either body A (1) or body B (2), and separate the body A and B by pushing the vane shaft (3) out.
3. Take out the vane shaft (3), stoppers (4). (The stopper pin must not be removed from the stopper.)

<Reassembly>

1. Mount the vane shaft (3) into the body B (2).
2. Mount the stopper seals (5) into the stopper (4).
3. Mount the stoppers (4) into the body B (2).
(Note) The stopper has the specified position for mounting.
4. Insert the vane shaft (3) into the body A (1).
5. Tighten the body A (1) and body B (2) with the hexagon socket head cap screws (15).
(Refer to table 8.)

■ Double Vane (Size 15,20,30,40)

D

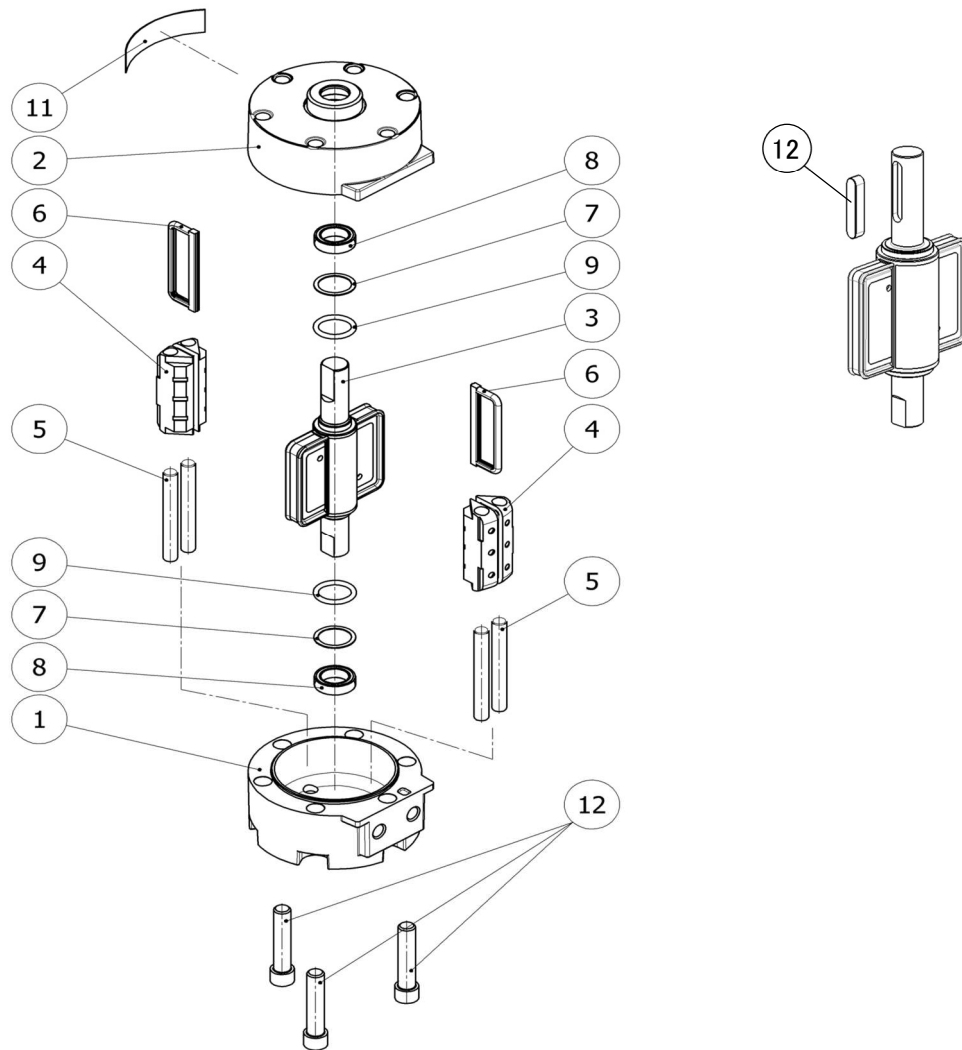

- Be sure to install an air filter to clean the supply air.
- Do not disassemble the actuator. When disassembling it for an unavoidable reason, follow the procedures below, and prevent dust and/or foreign matter from entering the product. (As operation failure is caused by an increase in the internal leakage in most of the cases, the speed controller needs to be readjusted. It is recommended to operate the product in the stable speed adjustable range (see "Speed adjustable range" on page 1))

<Disassembly>


1. Remove the hexagon socket head cap screws (12).
2. Hold either body A (1) or body B (2), and separate the body A and B by pushing the vane shaft (3) out.
3. Take out the vane shaft (3), stoppers (4).

<Reassembly>


1. Mount the vane shaft (3) into the body B (2).
2. Mount the stopper seals (5) into the stopper (4).
3. Mount the stoppers (4) into the body B (2).
(Note) The stopper has the specified position for mounting.
4. Insert the vane shaft (3) into the body A (1).
5. Tighten the body A (1) and body B (2) with the hexagon socket head cap screws (12).
(Refer to table 8.)

■ With Auto Switch (Size 20, 30, 40)

B

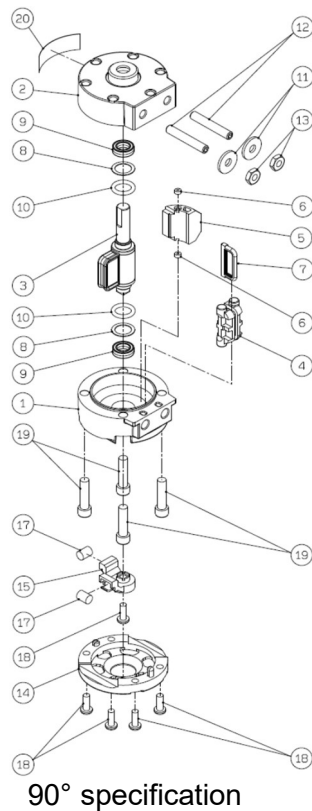

90° specification

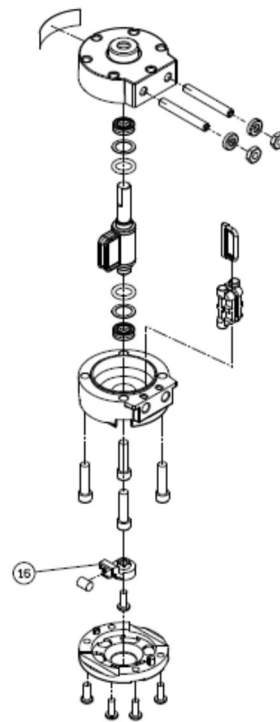

180° specification

For CDRB20, 30, 40-90

<Disassembly>

1. Remove the parallel key. (For size 40.)
2. Remove the cross recessed round head screw (18).
3. Remove the cover (14) and magnet holder (15).
4. Remove the hexagon socket head cap screw (19).
5. Hold either body A (1) or body B (2), and separate the body A and B by pushing the vane shaft (3) out.
6. Take out the vane shaft (3), stoppers (4) and (5).

<Reassembly>

1. Mount the vane shaft (3) into the body B (2).
2. Mount the stopper seals (7) into the stoppers (4).
3. Mount the stoppers (4) and (5) into the body B (2).
(Note) The stopper has the specified position for mounting.
4. Insert the vane shaft (3) into the body A (1).
5. Tighten the body A (1) and body B (2) with the hexagon socket head cap screws (19).
(Refer to table 8.)
6. Mount magnet holder (15) and cover (14).
(Note) Align the rotating angle indicator of the magnet holder and the chamfered position of the shaft.
7. Tighten with cross recessed round head screws (18). Tightening torque: 0.6 to 0.7 Nm.
(Note) Apply locking adhesive.
8. Mount the parallel key (For size 40).

* The CRB with switch (size 10 and 15) cannot be disassembled.

Table 8. Hexagon socket head cap screws tightening torque

Size	Bolt	Tightening Torque (N · m)
10,15	M3	0.8 to 1.2
20	M4	2.0 to 3.4
30,40	M5	4.0 to 6.0

7. Troubleshooting

■ Notice on Trouble and Troubleshooting

Failure	Possible causes	Countermeasures
No operation	The product is not used at a speed within the range of the stable speed adjustable range.	Use the product within the specified speed adjustable range shown in the catalog or operation manual.
	Increase in the internal leakage due to damage to the internal seal with foreign matter, drainage, etc.	Replace the vane shaft and stopper seals with new ones. (The whole product needs to be replaced as a rule.)
	Sealing failure of the internal seal or increase in the internal resistance due to operation outside of the operating temperature(Including freezing).	Operate the product within the operating temperature range. (For sealing failure, replace the vane shaft and stopper seals with new ones.)
	Malfunction of the peripheral equipment. a. The speed controller is not adjusted properly. b. Operation failure of the solenoid valve. c. Air is not supplied sufficiently due to clogging of the air filter. d. Air pressure is reduced due to operation failure of the regulator.	Use the countermeasure peripherals. (Including circuit problems)
Broken shaft	Load energy is too large. a. Load weight is too large. b. Operating speed is too fast. c. Radius of rotation is too large.	Replace the shaft. a. Use the product with the energy within the allowable range. b. Absorb the impact energy. Mount the cushion and external stopper correctly.
	External force other than load is applied to the shaft.	Replace the shaft. Avoid excessive external force being applied to the shaft.
	Eccentric load due to misalignment.	Replace the shaft with a new one.
Operation without the specified rotation angle	Joint of the rotating shaft or internal stopper is damaged.	Replace the joint or replace the whole product with a new one.
Damage to the bearing	Excessive load (Loads in thrust and radial directions are too large.)	Replace the bearing with a new one. Operate with the radial load and thrust load which is within the allowable range.
	Eccentric load due to misalignment.	Replace the bearing for correct alignment.
	Too much vibration is applied to the product.	Replace the bearing to reduce the vibration.
External leakage	Sealing failure with the O-ring due to damage to the bearing or bending of the shaft.	Replace the bearing or the shaft with a new one. Reduce the external force.
	Damage to the O-rings due to foreign matter and/or drainage.	Replace the O-rings with new ones. Prevent foreign matter or drainage from entering the product.
Internal leakage	Damage to the seals due to foreign matter or drainage.	Replace the vane shaft and stopper seals. (The whole product needs to be replaced as a rule.) Prevent any foreign matter and drainage from entering the product.
	Sealing failure due to operation outside of the operating temperature range.	Replace the vane shaft and stopper seals with new ones. (Replace the whole product as a rule, especially for the product used at a high temperature.) Operate the product within the operating temperature range.

Notes for the Troubleshooting shown above

Causes of the operation failure due to product life are not shown in the troubleshooting table.

Revision history

- A : Size 20 and 30 270° specifications added.
- B : Size 10, 15 and 40 270° specifications added.
- C : Added note about angle adjustment (P12)
- D : Double vane specifications added.

SMC Corporation

Tel: + 81 3 5207 8249 Fax: +81 3 5298 5362

URL <https://www.smcworld.com>

Note: Specifications are subject to change without prior notice and any obligation on the part of the manufacturer.
© SMC Corporation All Rights Reserved