5-Port Solenoid Valve


Plug-in Type

Due to the flow increase, the valve size can be reduced! Saves energy and space

CAT.EUS11-103E-UK



5-Port Solenoid Valve

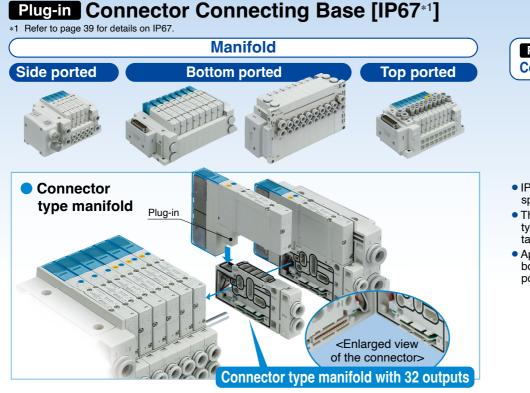



- IP67 enclosure for standard specifications
- The M12 waterproof connector type ensures easy attaching/detaching and wiring.
- Applicable to the side, top, and bottom-ported types (4A and 2B ports)

Plug-in Metal Base [IP40] Side ported










Bottom ported



Wiring

-	D-sub Connector) (Flat Ribbon Cable) (Terminal Block Box) (Lead Wire) Circular Connector) (Serial Transmission)													
				smissi	on									
Serial Trans	smissi	on Varia	ations											
	Gate	way-type	Integra	ated-type (for ir	nput/output)		Integrated-ty	ype (for output)						
Series	EX510	EX500	EX600	EX245	EX250	EX260	EX126	EX120	EX180					
	Call	L HILL	Sa S . Willia			ALL LINE		A LILLING	- Hilke					
Applicable protocol	No an	- 1 Catrice	a line and		10 00 An 10 100	St. Eththe		All Constants	And Colore					
DeviceNet®	<u> </u>													
PROFIBUS DP	<u> </u>		ŏ			—ŏ—								
CC-Link	-0-						_		_ _					
EtherNet/IP [©]					_									
EtherCAT						•								
PROFINET		•												
AS-Interface														
OMRON CompoBus/S														
CompoNet™														
Ethernet POWERLINK														
IO-Link						•								
EtherNet/IP™ compatible wireless base														
PROFINET compatible wireless base			-											
PROFIsafe		1			1									

Power Saving

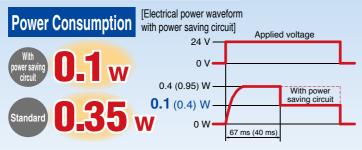

Power consumption is reduced by the power saving circuit.

Power consumption is decreased to approx. 1/3 by reducing the wattage required to hold the valve in an energised state. (Effective energizing time is over 67 ms at 24 VDC.) Refer to the electrical power waveform to the left.

- Only products with an indicator light are equipped with the power saving circuit.
- The value in () is for the quick response and high pressure types.

(Only for the rubber seal type)

Long Service Life


Metal seal

(Service life: 200 million cycles)^{*1}

- *1 According to SMC life
- *2 Please contact SMC if life
- test data is required.


Space Saving / Improved Operability

Panel fitting

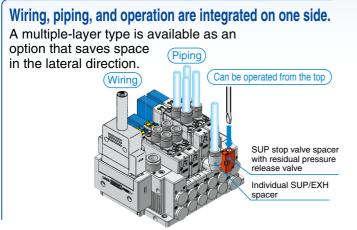

A bottom-ported type is available (A and B ports). Space saving

By using the bottom-ported type, it is possible to reduce the amount of space required for installation.

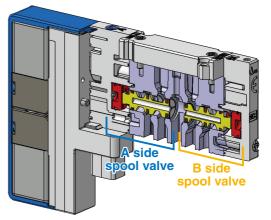


A 4-position dual 3-port valve is available.

Two 3-port valves built into one body

- 3-port valves on the A and B sides can be operated independently.
- When used as a 3-port valve, only half the number of stations
- is required.
- Can also be used as a 4-position, 5-port valve
- A 4-position dual 3-port valve with a back pressure check valve is also available.
- Combination examples


Series	A side	B side
SY⊟A ₃ 0	N.C. valve	N.C. valve
SY□B ₃ 0	N.O. valve	N.O. valve
SY□C ₃ 0	N.C. valve	N.O. valve

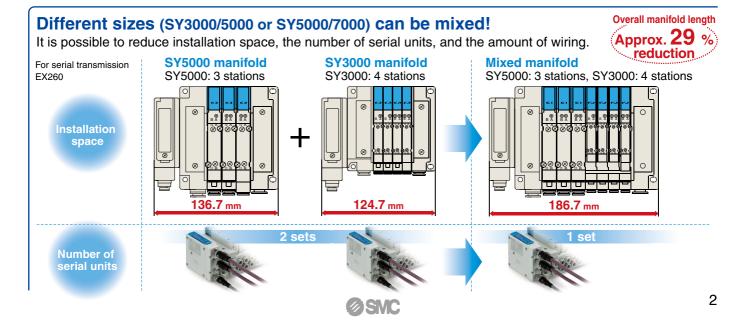


5-Port Solenoid Valve Improved Functionality

Back Pressure Check Valve

This prevents actuator and air operated valve malfunctions caused by the exhaust from other valves.*1

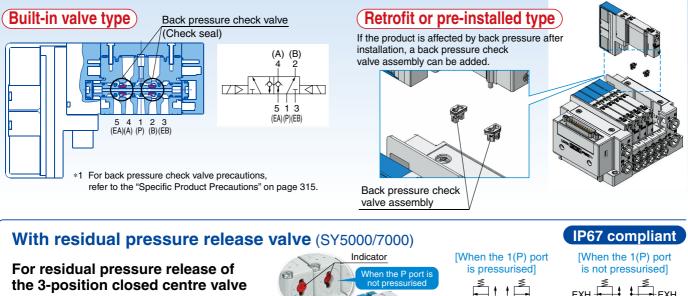


- The pressure of the 4 (A) and 2 (B) ports is exhausted automatically when the pressure of the 1 (P) port is exhausted.
- . The pressure can be visualised using the indicator (red).
- Since this valve is not a spacer type, the flow rate is equivalent to that of the normal closed centre valve.

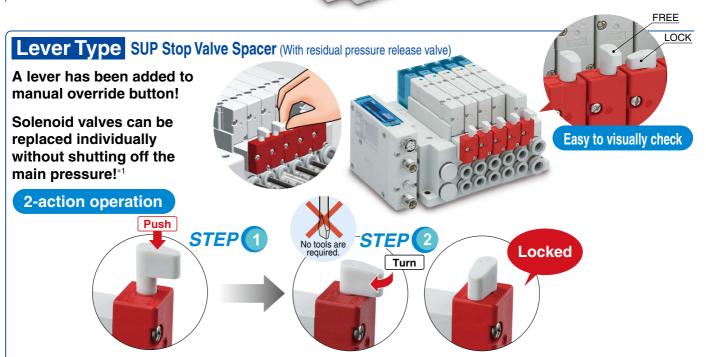

Air for solenoid valves can be shut off individually!

The operation of an actuator can be checked by individually shutting off the air for the solenoid valves on the base while the main air is being supplied during a trial operation.

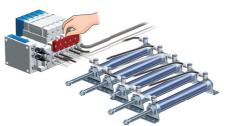

*1 This product is only for internal pilot specifications as the external pilot air cannot be shut off.

Solenoid valves can be replaced individually!

FXH

7. 🗠 🕁

4 2

4 2

r ZD^M

The solenoid valves can be replaced individually without stopping the equipment during maintenance.

<Application example>

For air operated valves, such as sanitary valves, and automatic valve control






Improved Functionality

Slotted Type

SUP Stop Valve Spacer


(With residual pressure release valve)

Air supply to each valve can be stopped individually. The valve and cylinder can be replaced without stopping other devices and equipment.

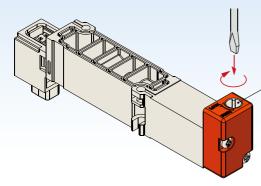

Button for manual release of residual pressure

To exhaust residual pressure on the cylinder side

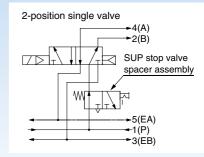


2-position single valve example

Slotted Type Double Check Spacer


(With residual pressure release valve)

Long intermediate stops and position holding are possible.

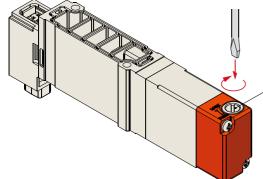

Button for manual release of residual pressure

To exhaust residual pressure on the cylinder side

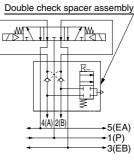

Exhaust centre

[Intermediate stop]

The ON/OFF state

-5(EA) -1(P) - 3(EB)


[Drop prevention]

Double check spacer assembly

2-position single/double


With slide locking manual override

ON/OFF operation and locking can be performed manually.

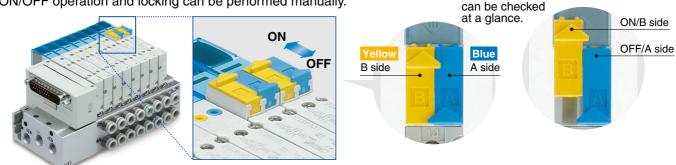

5-Port Solenoid Valve

Improved Safety

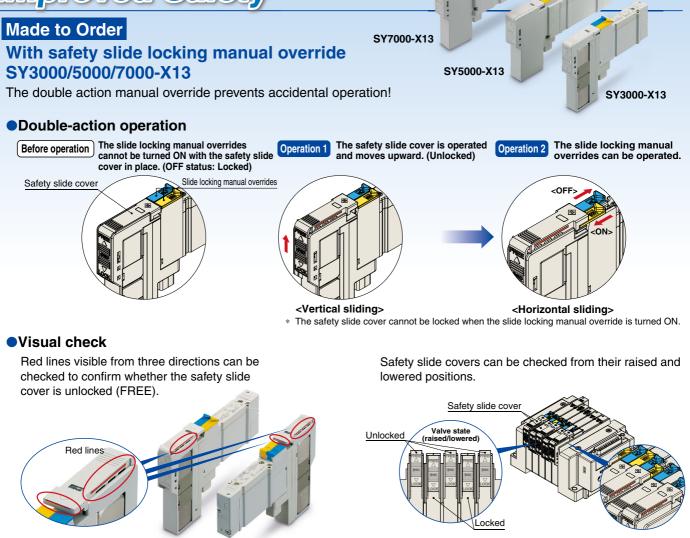


Made to Order

2-Position Single Solenoid Valve with Built-in Return Spring (Only rubber seal type) SY3000/5000/7000-X350

The main valve returns to the OFF position when it is not pressurized.


The main valve has a built-in spring which allows it to return to origin (the OFF position) when the supply pressure is stopped. This product can be used in SRP/CS (safety-related parts of control systems) constructions in accordance with safety standards (ISO 13849).

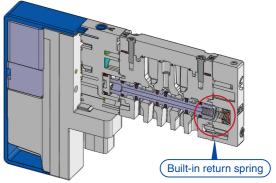




5-Port Solenoid Valve

To mount the piping on top

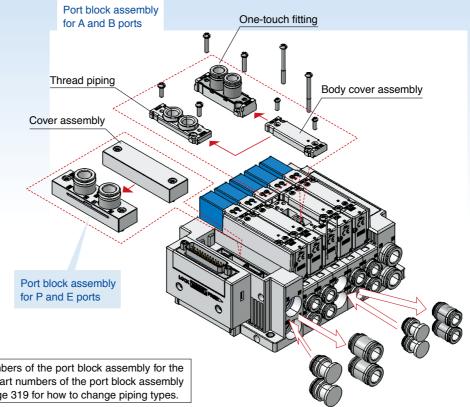

Refer to page 24 for part numbers of the port block assembly for the A and B ports, page 225 for part numbers of the port block assembly for the P and E ports, and page 319 for how to change piping types.

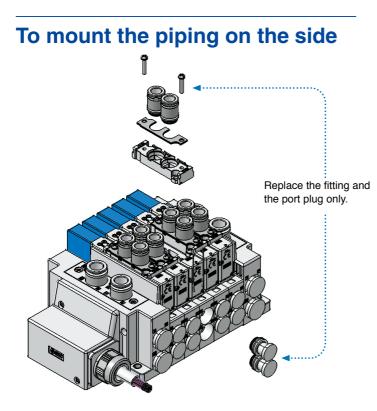


Mixed top-ported and sideported mounting is possible.

Top ported

Side ported

For SY3000 Blanking Plate with Output

The blanking plate extracts the individual signal of the manifold valve.

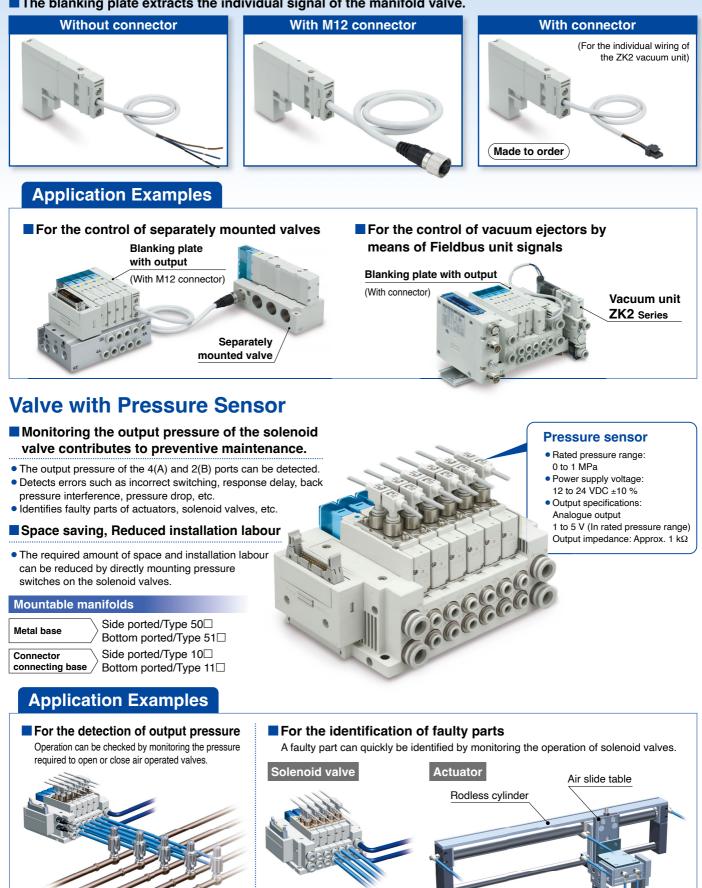


Air gripper


5-Port Solenoid Valve


Only for External Pilot Vacuum Release Valve with Restrictor SY³₅A R Series

Vacuum suction and release can be controlled with a single valve!

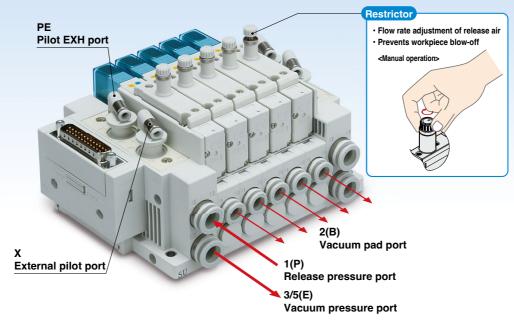

Can be mounted on the same manifold as standard valves
 When an individual EXH spacer is used

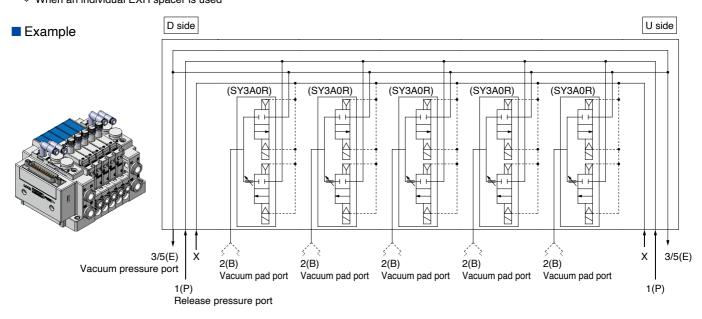

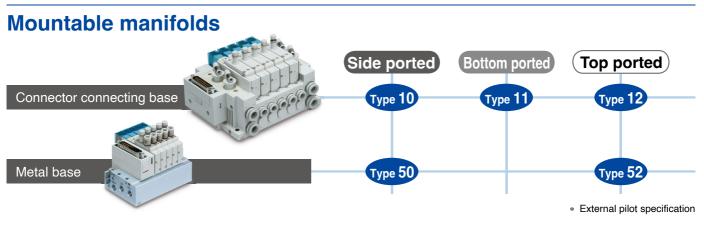

Applicable to EX600-W Series Wireless Systems

Noise resistance

- Uses the 2.4 GHz ISM frequency band
- Frequency hopping: Every 5 ms

Communication cables not required

- Reduced wiring work, space, and cost
- Minimized disconnection risk

High-speed connection

 From the remote power supply ON to start of communication: Min. 250 ms

Number of I/O points

• Max. 1280 inputs/1280 outputs (Max. 128 inputs/128 outputs per module)

T 66

0 0

10

1

Communication response

• Wireless communication signal Response time: **5 ms**

Compatible protocol


EtherNet/IP



æ



Application Examples

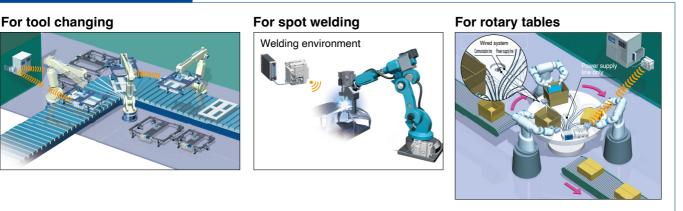

The EX260 series supports safety communication (PROFIsafe).

This is a Fieldbus unit which supports safety standard ISO 13849-compliant safety circuit constructions.



PROFIsafe is established as an international standard (IEC 61784-3-3). It is a communication protocol that transmits safety-related data by PROFINET communication and can be used up until safety standards ISO 13849-1 PL e and IEC 61508/IEC 62061 SIL 3.

Using the safety communication protocol

Refer to the EX260 Web Catalogue for details on units that support the safety communication protocol.

When using a manifold valve within an ISO 13849-compliant safety system, the device needs to be considered from both the pneumatic circuit and the electric side.

Devices (including valves) need to be selected based on whether their functions are in line with the safety level of the equipment as a whole. The use of valves that have been validated as being compliant with ISO 13849-2 may be required.

For details on valves that have been validated, please contact SMC.

In addition, refer to "Safety Instructions" for precautions on model selection.




5-Port Solenoid Valve

Variations

				Wiring														Α	, В								
			Valve		1	1		1	(Cor	nne	ctio									imon ication						
			Series			type)	×		L			Se	rial	tra	ans	mi	ssi	on		_	_						
				etor	able	pring	k bo	a	ecto	stor		nts)								mon	common					C2	
		Variations	5 ports	D-sub connector	Flat ribbon cable	Terminal block box (Spring type)	Terminal block box	Lead wire	Circular connector	M12 connector	EX510	EX500 (128 points)	EX600	EX245	EX250	EX260	EX126	EX120	EX180	Positive common	Negative com	M5	1/8	1/4	13/8	Straight piping	
ISe		туре	SY3D0																								
g Ba		2 10□	SY5□0□							_	—											_	-	—	-		
ctin		Pice From p. 43	SY7□0□																							_	
Plug-in Connector Connecting Base	Manifold	Type 11 From p. 43	SY5⊡0⊡	•			•	•			_	•	•	•	•						•		_	_	_		
Ject	2	p. 43	SY7⊡0⊡																								
Son		Type 12	SY3⊡3⊡																			•	-	_			
lin			SY5⊡3□				•			_	—									0	•				—		
Pluç		dou	SY7⊡3⊡																				_		e		
	ted		SY3⊡0⊡																					—			
	Side ported	Type 50□ From p. 247	SY5⊡0⊡	•		_	_	_	_	–	•	—	—	_	_	_	_	_	_		•		0	0	_		
ase	Side	p. 247	SY7⊡0⊡																				_	0	e .		
Plug-in Metal Base	ported	Туре	SY3⊡0⊡																					–			
l eta			SY5⊡0⊡	0		—	—	-	_	–		—	—	-	—	_	_	_	_	0	•				_		
Ę	Bottom	p. 247	SY7⊡0⊡																				-		i		
Plug			SY3□3□																				_				
	Top ported	Type 52□ From p. 267	SY5⊡3□			-	_	_	_	-		_	-	–	_	_	_	—	_		•			[-		
	Top	p. 267	SY7⊡3⊡																				_			_	
ate			SY3□ ⁰ ₃ □																					_			
Plug-in		From p. 306	SY5□ ₃ □	_	_	-	_	-	_		-	-	-	–	_	_	—	—	_			_	_			—	
ā		M12 connector	SY7□ ⁰ ₃ □																				-	-			

Standard ○ Option ▲ Made to order (Refer to page 36.)

Ро	rt S	Size	•								Ν	lar	nifo	d	Op	tio	ns	рр	. 20	3-21	8	p	o. 26	68-2	78			۷	alv	e C	Opt	ion	S		Valv Fu	ves v ncti	vith on
On	ie-t	oud	ch 1	fitti	ng	S					spacer	acer	e release valve	release valve		or	sembly	sembly	output	disk	disk	l installed type)	_	ction type)			ounting	ounting	turbine oil)	cification	es	ė	S		ase valve	restrictor	sor
C3 (N1)			C (N	;6 7)	C (N		C [.] (N	10 11)	C			H spé	al pressure	al pressure	plate	gulat	ock as	ock as	with o	sking	king	ly (Manifold	fittinç	ig conne		late	ed mo	ed mo	signated	re spe	essur	essur	g size	e IP67	re rele	e with	e sen
 Straight piping	Straight piping	Elbow piping*1	Straight piping	Elbow piping*1	Straight piping	Elbow piping*1	Straight piping	Elbow piping*1	Straight piping	Elbow piping*1	Individual SUP	Individual EXH spacer	SUP stop valve spacer with residual pressure release valve	Double check spacer with residual pressure release valve	Blanking plate	Interface regulator	Individual SUP block assembly	Individual EXH block assembly	Blanking plate with output	SUP/EXH blocking disk	Label for blocking disk	Back pressure check valve assembly (Manifold installed type)	Dual flow fitting	Silencer (One-touch fitting connection type)	Plug	Name plate	SY3000/5000 mixed mounting	SY5000/7000 mixed mounting	Oil resistant (Other than designated turbine oil)	Vacuum/Low-pressure specification	Different pressures	Reverse pressure	Mixed fitting sizes	Enclosure IP67	With residual pressure release valve	Vacuum release valve with restrictor	With pressure sensor
•	•	•	•	•	—	—													0				0					_						*0	*3	*4	-
_										—	0	0	0	0	0	0	0	0	_	0	0	0		0	0	0				External Pilot	O Individual SUP	External Pilot	•	*2	*3		
	-	_	•	•	•	•													-				-		_		_	-		FIIOL	30F	FIIOL			_		
_	•		•		•						0	0	0	0	0	0	0	0	_	0	0	0		0	0	0		_			0			*2	*3	*4	
	-				•	-													_								_			External Pilot	Individual SUP	External Pilot					
•					_	-													0									_						*2		*4	_
_			•		•					—	0	0	0	—	0	0	0	0	_	0	0	0		0	0					External Pilot	O Individual SUP	External Pilot	•		_		_
	-				_														0						_		_								_		_
	•		•		•			_			0	0	0	0	0	0	_	_	_	_	_	_			0						O Individual			_	*3	*4	
	-				•		•		•										_											External Pilot	SUP	Pilot					
					_	-													0																*3		-
_										_	0	0	0	0	0	0	-	-	_	—	—	-			0	—				_	Individual SUP	-	•	_	•	-	
	-				_														0						_										_		_
					•			_			0	0	0	_	0	0	_	_	_	_	_	_			0						0			_	_	*4	-
	-		•		•		•												_											External Pilot	Individual SUP	External Pilot					_
													\sim																						*3		
	-				-	-	<u> </u>		—	_	_	_	0	0	—	0	-	-	_	_	_	_	—	_	-		_	—		External Pilot		External Pilot	_		-	_	-

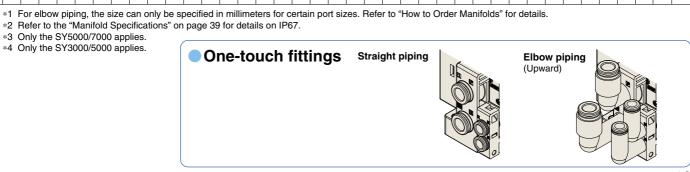


CONTENTS

Optimum Actuation Size Chart of Air Cylinder	
Valve Specifications (Specifications, Response Time, Weight)	
Valve Construction	

Manifold Plug-in	Connector Connectin Base	p. 38		ype 10/ Side ported	Type 11/ Bottom ported	Type 12/ Top ported
	D-sub		Ported, Ty	pe 11/Bottom P	orted, Type 12/T	op Ported
Flat	Connecto	Plug-in Connecto	-			-
ribbon ca						-
Lead wire		Terminal Block Bo	ox [IP67]			p. 66
	Circular	Lead Wire [IP67]				p. 79
	S. Miller					
	EX500	-) [IP67] ······ System (Fieldbus System) [I	
- Sund	EX600				nsmission System [IP6	
EX245	EX250	EX250 Integrated	Type (For Inpu	ut/Output) Serial Trar	nsmission System [IP6]	7]······ p. 134
EX260	A CONTRACTOR	EX260 Integrated	Type (For Out	put) Serial Transmiss	sion System [IP67]······	p. 142
	EX126	EX126 Integrated	Type (For Out	put) Serial Transmiss	sion System [IP67] ······	р. 153
EX120		-			sion System [IP20] ······	-
	EX180	-			sion System [IP20] …	р. 169
		Type 10/Side Por (External Pilot, Sil			g Manual Override) ·····	······ p. 177
		Type 11/Bottom F	orted: Commo	n Dimensions		p. 180
						-
	Mixed mounting					-
					arts Nos.]·····	
						-
		-	-	-		-
		Manifold Options	••••••			p. 227







Type 50/Side Ported, Type 51/Bottom Ported, Type 52/Top Ported

Contraction of the second	Plug-in Metal Basep.	. 245
Flat ribbon cable	D-sub Connector, Flat Ribbon Cable [IP40]	
	Type 50/Side Ported ······ p .	. 247
	Type 51/Bottom Ported ······ p .	. 247
	Type 52/Top Ported ····· p .	. 267
	Wiring Specificationsp.	. 272
C. MIT	EX510 Gateway Type Serial Transmission System [IP20]	
EX510	Type 50/Side Ported ·····p.	. 275
	Type 51/Bottom Ported ······ p .	. 275
	Type 52/Top Ported ····· p .	. 285
	Manifold Exploded View [Exploded View, Manifold Parts Nos.]	. 290
	One-touch Fitting, Plug Assembly Part Nos	. 291
	Manifold Optionsp.	. 292



	-
	e" .
and	0

Plug-in Sub-plate Specifications (M12 Connector)	p. 305
Sub-plate Parts Nos.	p. 307

Valve Replacement Parts	······p. 24
With Residual Pressure Release Valve	·····p. 26
Vacuum Release Valve with Restrictor	р. 30
Valve with Pressure Sensor	·····p. 34
Made to Order for Valves	р. 36
Specific Product Precautions	·····p. 314



Optimum Actuation Size Chart of Air Cylinder

Applicable	Main valve	Quitas	Applicable cylinder													
cylinder speed	seal type	Series	Ø	6	Ø	10	Ø	16	Ø	20	Ø	25				
	Rubber seal	SY3000			•		•									
		SY5000														
100 mm/s		SY7000														
or less		SY3000														
	Metal seal	SY5000														
		SY7000														
	Rubber seal	SY3000														
		SY5000														
300 mm/s		SY7000														
or less		SY3000		1 1 1 1 1 1 1 1 1												
	Metal seal	SY5000														
		SY7000		1 1 1 1 1 1 1 1 1 1												
		SY3000														
	Rubber seal	SY5000		 												
500 mm/s		SY7000		1 1 1 1 1 1 1 1												
or less		SY3000														
	Metal seal	SY5000														
		SY7000		 												

[Common conditions]

• Pressure: 0.5 MPa

• Piping length: 1 m


Load ratio: 50 %

Stroke: 200 mm

Connector type manifold (for the side and bottom-ported types)

* Use as a guide for selection.

Please check the actual conditions with SMC Model Selection Software.

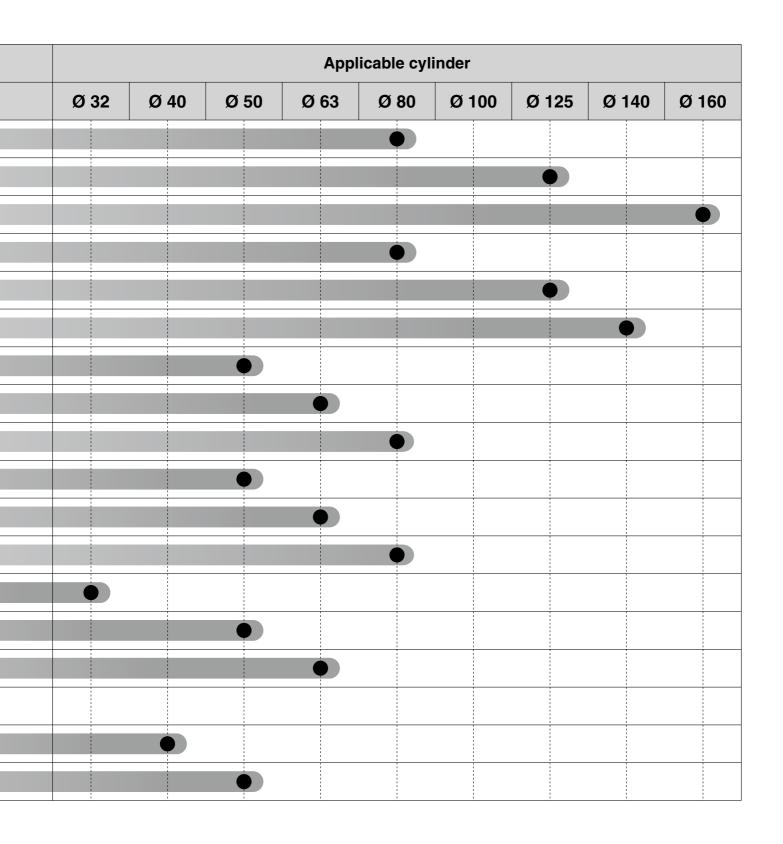

SY3000/5000/7000 Series Valve Specifications

Valve Specifications

V	/alve type		Rubber seal	Metal seal						
Fluid			A	\ir						
	2-position	single	0.15 to 0.7							
Internal pilot	2-position	double	0.1 to 0.7	0.1 to 0.7 (High pressure type: 0.1 to 1)						
operating pressure range [MPa]	3-position	l	0.2 to 0.7							
lmraj	4-position	dual 3-port valve	0.15 to 0.7	_						
	Operating	pressure range	-100 kPa to 0.7 (4-position: -100 kPa to 0.6)	-100 kPa to 0.7 (High pressure type: -100 kPa to 1)						
External pilot		2-position single								
operating pressure range	Pilot	2-position double	0.25 to 0.7	0.1 to 0.7 (High pressure type: 0.1 to 1)						
[MPa]	pressure range	3-position								
	range	4-position dual 3-port valve	Operating pressure + 0.1 or more (Min. 0.25) to 0.7	_						
Ambient and fluid tempera	atures [°C]		-10 to 50 (No freezing)						
		2-position single/double	F	00*1						
	SY3000 SY5000	4-position dual 3-port valve	5 20*1							
Max. operating frequency	515000	3-position	3	10*1						
[Hz]		2-position single/double	5	10*1						
	SY7000	4-position dual 3-port valve	3	_						
		3-position	3	10*1						
			Non-lockin	g push type						
Manual override			Push-turn locking slotted type							
Manual Overnue			Push-turn locking lever type							
			Slide loc	king type						
Pilot exhaust type	Internal pi	lot	Main/Pilot valve common exhaust	Main/Pilot valve individual exhaust						
Filot exhaust type	External p	oilot	Pilot valve ind	ividual exhaust						
Lubrication			Not re	quired						
Mounting orientation*2			Unrestricted	Single: Unrestricted Double/3-position: Main valve is horizontal.						
Impact/Vibration resistance	e*2 [m/s2]		150)/30						
Enclosure			IP67 (Based o	on IEC60529)* ³						
Coil rated voltage [DC]			24,	12 V						
Allowable voltage fluctuation [V]			±10 % of ra	ted voltage*4						
	Standard		0.35 (With indi	cator light: 0.4)						
Power consumption [W]	High pressure type, Quick response typ	e type 0.9 (With indicator light: 0.95)								
With power saving circuit			Standard: 0.1*5 (With indicator light only) [Inrush 0.4, Holding High pressure type: 0.4*5 (With indicator light only) [Inrush 0.95, H							
Surge voltage suppressor			Diode (Varistor fo	or non-polar type)						
Indicator light			LI	ED						

*1 Use below 5 Hz for with the power saving circuit.

*2 Impact resistance: No malfunction occurred when it is tested in the axial direction and at the right angles to the main valve and armature in both energised and de-energised states every once for each condition. (Values at the initial period)

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. The test was performed at both energised and de-energised states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

Refer to page 319 for the fixation of DIN rail mounting type manifold. *3 In the case of a metal seal, there are restrictions in the operating environment. Refer to the "Specific Product Precautions" on page 314.

*4 Due to voltage drops by the internal circuit in S/Z type and T type (with power saving circuit), use within the allowable voltage fluctuation as follows.

 $S/Z \text{ type} \begin{cases} 24 \text{ VDC: } -7 \text{ \% to } +10 \text{ \%} \\ 12 \text{ VDC: } -4 \text{ \% to } +10 \text{ \%} \end{cases} T \text{ type} \begin{cases} 24 \text{ VDC: } -8 \text{ \% to } +10 \text{ \%} \\ 12 \text{ VDC: } -6 \text{ \% to } +10 \text{ \%} \end{cases}$

*5 For details, refer to page 316.

Valve Specifications **SY3000/5000/7000 Series**

Response Time

					Resp	onse time [n	ns] (at 0.5 MPa) [;]	¥1	
			Type of actuation		Standard		Quick	response ty	ре
Series	Seal type	Model		Without light/ surge voltage		nt/surge uppressor	Without light/ surge voltage		
				suppressor	S/Z type	R/U type	suppressor	Quick response type Quick light/ ovoltage With light/ voltage sup pressor S/Z type I pressor 15 or less 1 pressor 15 or less 1 pressor 13 or less 1 pressor 13 or less 1 pressor 18 or less 1 press 18 or less 1 press 19 or less 1 press 13 or less 1 press 25 or less 1 press 13 or less 1 press 25 or less 1 press 28 or less 2 press 52 or less 2 press 52 or less 3 press 52 or less 1 press 52 or less 1 press 17 or less 1 press 16 or less 1 press 38 or less 3	R/U type
	Rubber seal	SY31⊡0	2-position single	15 or less	20 or less	15 or less	12 or less	15 or less	12 or less
	Metal seal	SY31⊡1	2-position single	15 or less	20 or less	15 or less	12 or less	15 or less	12 or less
	Rubber seal	SY32⊡0	2-position double	12 or less	15 or less	12 or less	10 or less	13 or less	10 or less
SY3000	Metal seal	SY32⊡1	2-position double	12 or less	15 or less	12 or less	10 or less	13 or less	10 or less
	Rubber seal	SY33/4/5⊡0	3-position	18 or less	22 or less	18 or less	14 or less	18 or less	14 or less
	Metal seal	SY33/4/5⊡1	3-розшон	18 or less	22 or less	18 or less	14 or less	18 or less	14 or less
	Rubber seal	SY3A/B/C□0	4-position dual 3-port valve	18 or less	22 or less	18 or less	15 or less	19 or less	15 or less
	Rubber seal	SY51⊡0	2-position single	24 or less	31 or less	24 or less	18 or less	25 or less	18 or less
	Metal seal	SY51⊡1		24 or less	31 or less	24 or less	18 or less	25 or less	18 or less
	Rubber seal	SY52⊡0	2-nosition double	12 or less	15 or less	12 or less	10 or less	13 or less	10 or less
SY5000	Metal seal	SY52⊡1	2-position single	12 or less	15 or less	12 or less	10 or less	13 or less	10 or less
	Rubber seal	SY53/4/5⊡0	3-position	30 or less	34 or less	30 or less	24 or less	28 or less	24 or less
	Metal seal	SY53/4/5⊡1	0-00311011	28 or less	30 or less	28 or less	23 or less	25 or less	23 or less
	Rubber seal	SY5A/B/C□0	4-position dual 3-port valve	35 or less	42 or less	35 or less	28 or less	35 or less	28 or less
	Rubber seal	SY71⊡0	2-position single	47 or less	58 or less	53 or less	42 or less	52 or less	44 or less
	Metal seal	SY71⊡1	2-position single	39 or less	48 or less	39 or less	34 or less	43 or less	34 or less
	Rubber seal	SY72⊡0	2-position double	18 or less	19 or less	19 or less	18 or less	17 or less	17 or less
SY7000	Metal seal	SY72⊡1		17 or less	17 or less	16 or less	16 or less	16 or less	16 or less
	Rubber seal	SY73/4/5⊡0	3-position	52 or less	54 or less	47 or less	42 or less	46 or less	40 or less
	Metal seal	SY73/4/5□1	3-position	38 or less	45 or less	39 or less	33 or less	38 or less	34 or less
	Rubber seal	SY7A/B/C□0	4-position dual 3-port valve	52 or less	60 or less	54 or less	49 or less	53 or less	48 or less

*1 Based on dynamic performance test, JIS B 8419-2010 (Coil temperature: 20 °C, at rated voltage)

Since the response time of the external pilot type of the 4-position dual 3-port valve differs from the above table, please contact SMC.

Valve Weight

SY3000 series

Valve model	Seal type	Type of actuation		Weight [g]
		2 position	Single	74
		2-0051001	Double	83
SY3⊟00	Rubber seal		Closed centre	
51300	nubber sear	3-position	Double Closed centre	87
			Pressure centre	
		4-position	Dual 3-port valve	83

Valve model	Seal	Turn	a of actuation	Port size	Weight	
valve model	type	тур	Appendix Appendix n Single Double 1 Double 1 Closed centre n Exhaust centre 1 Double 1 Closed centre 1 Double 1 Single 1 Double 1 Single 1 Double 2 Closed centre 1 Double	4, 2 (A, B)	[g]	
		2-position	Single		74	
		2-розноп	Double		83	
SY3⊟30-M5			Closed centre	MEVOR		
313L30-1013		3-position	Exhaust centre	IVI3 X 0.0	87	
			Pressure centre			
		4-position	Dual 3-port valve		83	
		2-position	Single	4	82	
		2-розшон		C2	91	
SY3□30-C2			Closed centre	Ø 2 One-touch		
5130-02		3-position	Exhaust centre		95	
			Pressure centre	СЗ		
		4-position	Dual 3-port valve		91	
		2-position	Single		85	
	Rubber	2 poolaon		C3	94	
SY3□30-C3		3-position	Closed centre			
515-55	seal				98	
			Pressure centre	inturig		
		4-position			94	
		2-position			77	
		2-розшон		C4	86	
SY3□30-C4				•		
0100004		3-position	Exhaust centre		90	
				inturig		
		4-position			86	
		2-position			80	
		- position		C6	89	
SY3⊡30-C6				Ø 6 One-touch		
		3-position			93	
			Pressure centre	inturing .		
		4-position	Dual 3-port valve		89	

Valve model	Seal type	Тур	Weight [g]	
		2-position	Single	76
		2-00511011	Double	86
SY3⊟01	Metal seal	3-position	Closed centre	
			Exhaust centre	90
			Pressure centre	

Valve model	Seal	Tvpe	of actuation	Port size	Weight
	type	71	1	4, 2 (A, B)	[g]
		2-position	Single		76
		- pooliion	Double		86
SY3□31-M5			Closed centre	M5 x 0.8	
		3-position	Exhaust centre		90
			Pressure centre		
		2-position	Single		84
		2-розшон	Double	C2	94
SY3□31-C2			Closed centre	Ø 2 One-touch	
		3-position	Exhaust centre	fitting	98
			Pressure centre]	
		2-position	Single		87
	Metal seal	2-position	Double	C3	97
SY3□31-C3			Closed centre	Ø 3.2 One-touch	
	Seal	3-position	Exhaust centre	fitting	101
			Pressure centre		
		0 nasition	Single		79
		2-position	Double	C4	89
SY3□31-C4			Closed centre	Ø 4 One-touch	
		3-position	Exhaust centre	fitting	93
			Pressure centre]	
		0 nasitian	Single		82
		2-position	Double	C6	92
SY3□31-C6			Closed centre	Ø 6 One-touch	
		3-position	Exhaust centre		
			Pressure centre		

SY5000 series

Valve model	Seal type	Type of actuation		Weight [g]
		2-position	Single	82
		2-position	Double	90
SY5⊡00 F	Rubber seal	Closed centre 3-position Exhaust centre	Closed centre	
51500	Rubber sear		100	
			Pressure centre	
		4-position	Dual 3-port valve	90

	Seal	_		Port size	Weight
Valve model	type	Тур	e of actuation	4, 2 (A, B)	[g]
		0 nosition	Single		102
	2-p	2-position	Double]	110
SY5⊡30-01			Closed centre	1/8	
515030-01		3-position	Exhaust centre] 1/0	120
			Pressure centre		
		4-position	Dual 3-port valve	C4 Ø 4 One-touch fitting	110
		2-position	Single		115
		2-розшон	Double	Ø 4 One-touch	123
SY5⊟30-C4			Closed centre		
315-54		3-position	Exhaust centre		133
			Pressure centre		
	Rubber	4-position	Dual 3-port valve		123
	seal	2-position	Single		110
		2-розноп	Double	Ce	118
SY5⊡30-C6			Closed centre		
515-50-60		3-position	Exhaust centre		128
			Pressure centre	C6 Ø 6 One-touch fitting	
		4-position	Dual 3-port valve		118
		2-position	Single		99
		2-розшон	Double	C8	107
SY5⊡30-C8			Closed centre	Ø 8 One-touch	
		3-position	Exhaust centre	fitting	117
			Pressure centre	inting	
		4-position	Dual 3-port valve		107

Valve model	Seal type	Ту	Weight [g]		
SY5⊡01		0 nosition	Single	91	
		2-position	Double	101	
	Metal seal		Closed centre		
		3-position	Exhaust centre	111	
			Pressure centre		

Valve model	Seal type	Туре	of actuation	Port size 4, 2 (A, B)	Weight [g]
		2-position	Single		111
		2-position	Double		121
SY5□31-01			Closed centre	1/8	
		3-position	Exhaust centre]	131
			Pressure centre		
		2-position	Single		124
	2-position	Double	C4	134	
SY5□31-C4		3-position	Closed centre	Ø 4 One-touch	
	3-posit		Exhaust centre	fitting	144
	Metal		Pressure centre		
	seal	2-position	Single		120
		2-розшон	Double	C6	130
SY5□31-C6			Closed centre	Ø 6 One-touch	
		3-position	Exhaust centre	fitting	140
			Pressure centre		
		2-position	Single]	108
SY5⊡31-C8			Double	C8	118
			Closed centre	Ø 8 One-touch	
		3-position	Exhaust centre	fitting	128
			Pressure centre		

Valve Specifications **SY3000/5000/7000** Series

Valve Weight

SY7000 series


Valve model	Seal ty	/pe		Typ	be of actuation	า	Weigh	nt [g]
			0		Single		11	
			2-po	sition	Double		11	8
	Dut	1			Closed cent	re		
SY7⊡00	Rubber	sear	3-po	sition	Exhaust cer		13	3
					Pressure ce			
			4-po	sition	Dual 3-port	valve	11-	4
Valve model	Seal		Tun	o of oo	tuation	Port	size	Weight
valve model	type		тур		tuation	4, 2 (/	А, B)	[g]
		2-no	sition	Singl				125
		2-p0	51001	Doub				133
SY7□30-02					ed centre	1/	4	
517 - 50-02		3-pos	sition	Exha	ust centre	1/1	1/4	
					sure centre	C6		
		4-pos	sition		3-port valve			129
		2-pos	sition	Singl		-		163
		2 po		Doub		C6		171
SY7⊡30-C6		3-position Exha		ed centre	Ø 6 One-touch fitting			
0	3-ро			ust centre			186	
				Pressure centre				
		4-pos	sition		3-port valve			167
		2-pos	sition	Singl		-		151
	B	-		Doub		C	8	159
SY7□30-C8	Rubber	0			ed centre	Ø 8 One	e-touch	174
	seal	3-pos	sition		ust centre	fitti	ng	174
		4	. 141		sure centre	C8 Ø 8 One-touch fitting	455	
		4-p0	sition		3-port valve			155 136
		2-pos	sition	Singl Doub		{		144
					ed centre	C1	-	144
SY7□30-C10		3-00	sition		ust centre	Ø 10 On	e-touch	159
			SILION		sure centre	fitti	ng	159
		4-pos	sition		3-port valve	1		140
				Singl				140
		2-pos	sition	Doub		1		154
					ed centre	C12 Ø 12 One-touch		
SY7□30-C12		3-pos	sition		ust centre			169
		- 000			sure centre	fitti	ng	
		4-pos	sition	Dual 3-port valve				150

Valve model	Seal type	Тур	Weight [g]	
		2-position	Single	122
		2-position	Double	133
SY7⊡01	Metal seal	3-position	Closed centre	
			Exhaust centre	150
			Pressure centre	


Valve model	Seal	Type	of actuation	Port size	Weight
	type	4, 2 (A, B)		[g]	
		2-position	Single		136
		2-розноп	Double		148
SY7□31-02			Closed centre	1/4	
		3-position	Exhaust centre		164
			Pressure centre		
		0 nosition	Single		174
		2-position	Double	C6	186
SY7□31-C6			Closed centre	Ø 6 One-touch	
		3-position	Exhaust centre	fitting	202
			Pressure centre		
		0 nosition	Single		162
	Metal	2-position	Double	C8	174
SY7□31-C8			Closed centre	Ø 8 One-touch	
	seal	3-position	Exhaust centre	fitting	190
			Pressure centre	1	
		0	Single		148
		2-position	Double	C10	159
SY7□31-C10			Closed centre	Ø 10 One-touch	
		3-position	Exhaust centre	fitting	176
			Pressure centre	1	
		0 nonitier	Single		157
		2-position	Double	C12	169
SY7□31-C12			Closed centre	Ø 12 One-touch	
		3-position	Exhaust centre	fitting	185
			Pressure centre	1	


SY3000/5000/7000 Series Valve Construction

Rubber Seal

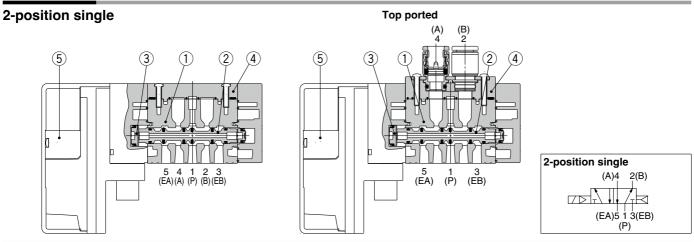


2-position double

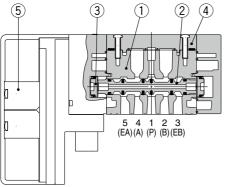



3-position closed centre/exhaust centre/pressure centre

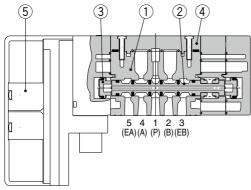


3-position closed centre (A)4 2(B) (A)4 2(B) (A)4 2(B) (A)5 1 3(EB) (P)	3-position exhaust centre (A)4 2(B) (EA)5 1 3(EB) (P)
3-position pressure centre (A)4 _ 2(B)	

Component Parts


No.	Description	Material	Note
INO.	Description	Ivialenai	NOLE
1	Body	SY3000: Zinc die-casted SY5000/SY7000: Aluminium die-casted	
2	Spool valve	Special resin/HNBR (3-position valve: (Aluminium/HNBR)	
3	Piston	Resin	
	Body cover assembly	Resin	For the side/bottom-ported type
4	Port block assembly	SY3000: Resin SY5000: Zinc die-casted (Thread piping) SY5000: Resin (Fitting) SY7000: Aluminium die-casted	For the top-ported type
5	Pilot valve assembly	—	Refer to page 25.




Rubber Seal

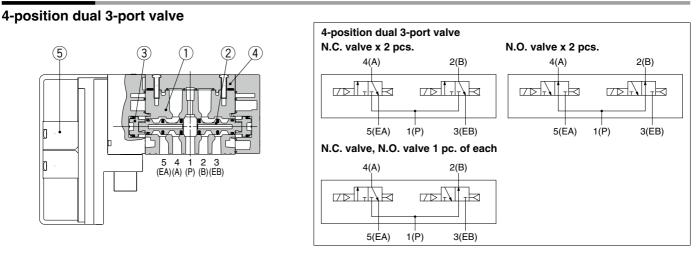


2-position double with back pressure check valve (Built-in valve type)

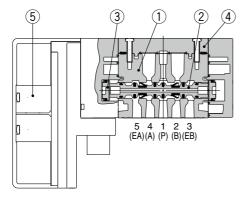




* The built-in valve type back pressure check valve is not available for the SY7000.


4-position dual 3-port valve with back pressure check valve (Built-in valve type)

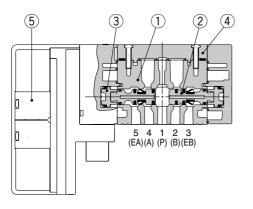

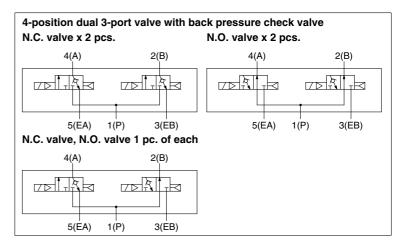



* The built-in valve type back pressure check valve is not available for the SY7000.

Metal Seal

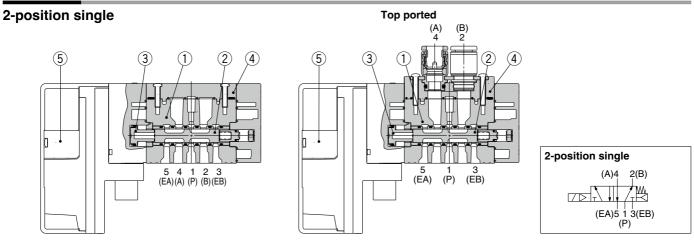


2-position double

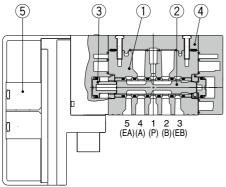



3-position closed centre/exhaust centre/pressure centre

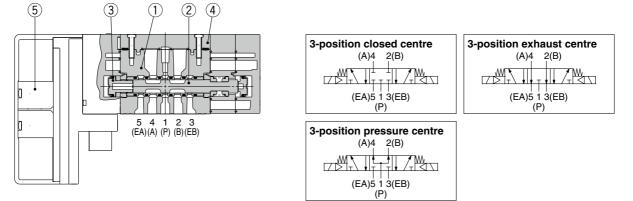


Component Parts

No.	Description	Material	Note
1	Body	SY3000: Zinc die-casted SY5000/7000: Aluminium die-casted	
2	Spool, Sleeve Stainless steel/HNBR		
3	Piston	Resin	
	Body cover assembly	Resin	For the side/bottom-ported type
4 Port block assembly		SY3000: Resin SY5000: Zinc die-casted (Thread piping) SY5000: Resin (Fitting) SY7000: Aluminium die-casted	For the top-ported type
5	Pilot valve assembly	—	Refer to page 25.




SY3000/5000/7000 Series **Valve Replacement Parts**

How to Order Port Block Assembly

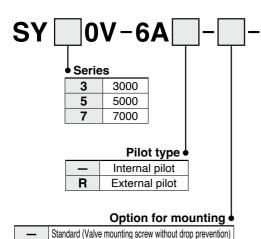

Drop prevention type valve mounting screw

1

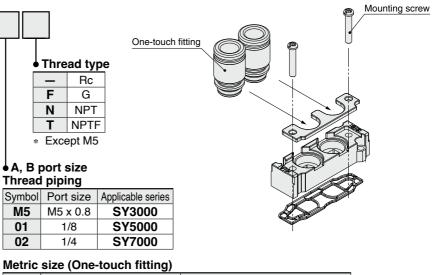

Symbol	Port size	Applicable series				
Symbol	Foll size	SY3000	SY5000	SY7000		
C2	Ø 2		—	—		
C3	Ø 3.2	•	—	_		
C4	Ø 4	•	•	_		
C6	Ø 6					
C8	Ø 8	_	۲			
C10	Ø 10	_	_	•		
C12	Ø 12	_	—	•		

Inch size (One-touch fitting)


Sumbol	Derteize	Applicable series			
Symbol	ymbol Port size		SY5000	SY7000	
N1	Ø 1/8"		—	_	
N3	Ø 5/32"		•	_	
N7	Ø 1/4"		•	•	
N9	Ø 5/16"	_			
N11	Ø 3/8"	_	_		

Possible to replace only the One-touch fitting

	Port size	SY3000	SY5000	SY7000
	Ø 2	VVQ1000-50A-C2	—	—
	Ø 3.2	VVQ1000-50A-C3	—	_
	Ø 4	VVQ1000-50A-C4	VVQ1000-51A-C4	—
Metric size	Ø 6	VVQ1000-50A-C6	VVQ1000-51A-C6	VVQ2000-51A-C6
	Ø 8	—	VVQ1000-51A-C8	VVQ2000-51A-C8
	Ø 10			VVQ2000-51A-C10
	Ø 12	—	—	KQ2H12-17-X224
	Ø 1/8"	VVQ1000-50A-N1	_	—
	Ø 5/32"	VVQ1000-50A-N3	VVQ1000-51A-N3	—
Inch size	Ø 1/4"	VVQ1000-50A-N7	VVQ1000-51A-N7	VVQ2000-51A-N7
	Ø 5/16"	—	VVQ1000-51A-N9	VVQ2000-51A-N9
	Ø 3/8"	_	_	VVQ2000-51A-N11

Body Cover Assembly


* Used when the top-ported type is changed to the side or bottom-ported type

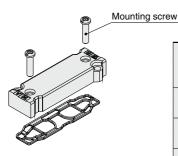

		Part no.			
Series		Standard (Valve mounting screw without drop prevention)	Drop prevention type		
SY3000	Internal pilot	SY30V-16A	SY30V-16A-1		
513000	External pilot	SY30V-16AR	SY30V-16AR-1		
SY5000	Internal pilot	SY50V-16A	SY50V-16A-1		
315000	External pilot	SY50V-16AR	SY50V-16AR-1		
SV7000	Internal pilot	SY70V-16A	SY70V-16A-1		
SY7000	External pilot	SY70V-16AR	SY70V-16AR-1		


* The part number is not indicated on the product.

How to Order Pilot Valve Assembly (With a gasket and two mounting screws)

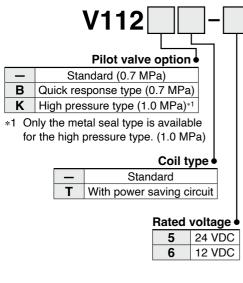


≜Caution


- The coil specification and voltage (including light/surge voltage suppressor) cannot be changed by changing the pilot valve assembly.
- When selecting the coil type with power saving circuit, it is not possible to change to high pressure/power saving circuit type.

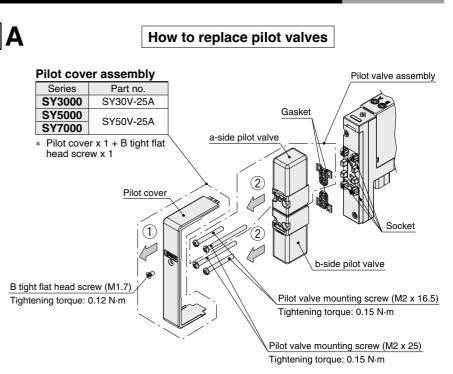

- Loosen B tight flat head screw to remove the pilot cover in the direction indicated by the arrow ①.
- · Remove the pilot valve mounting screws.
- \bullet Remove the pilot valve in the direction indicated by the arrow 2.
- * Assemble by following the removal procedure in reverse.
- Ensure the gasket is mounted, and take care not to bend the socket.
- * Be noted for mounting that there are two types of lengths for the pilot valve mounting screws.




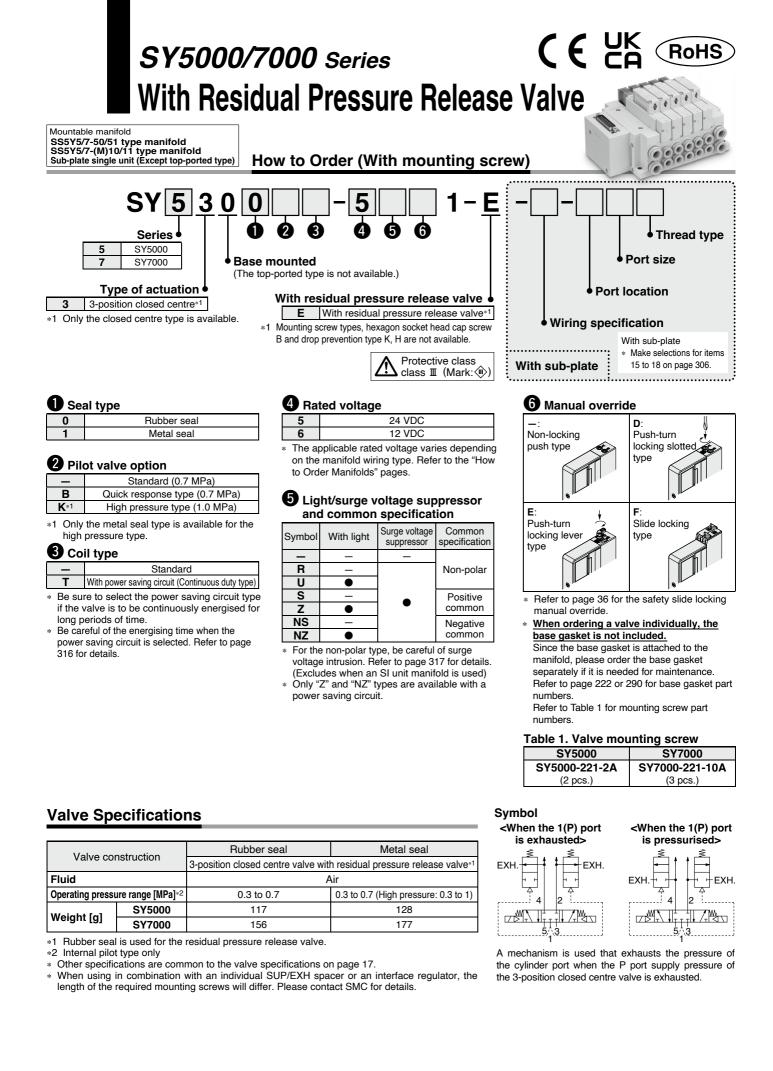

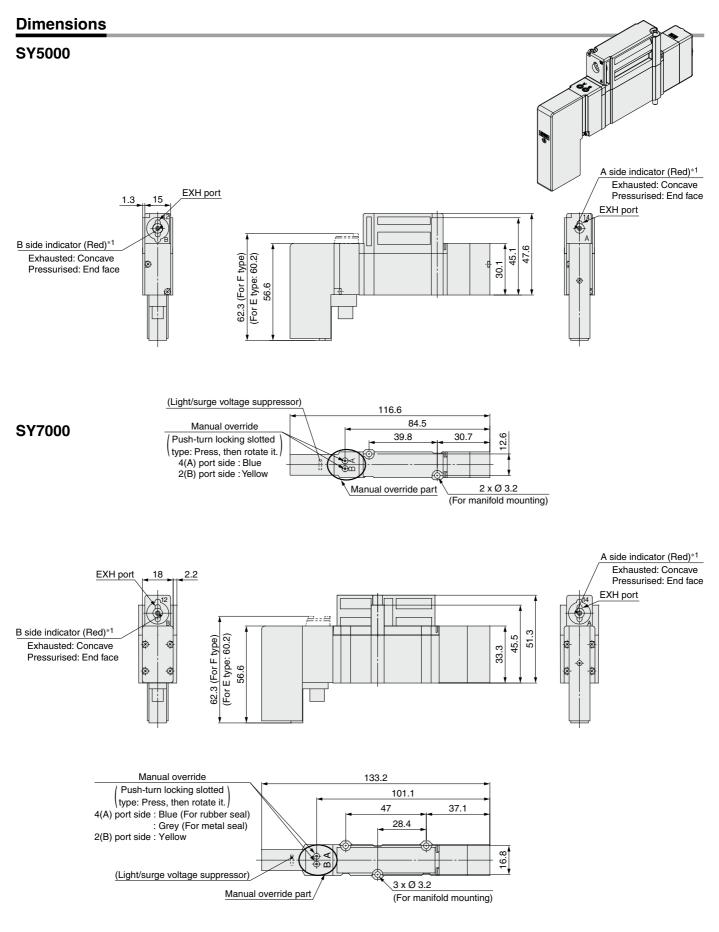

*1 The indicator shows the pressurization status. Do not push it.



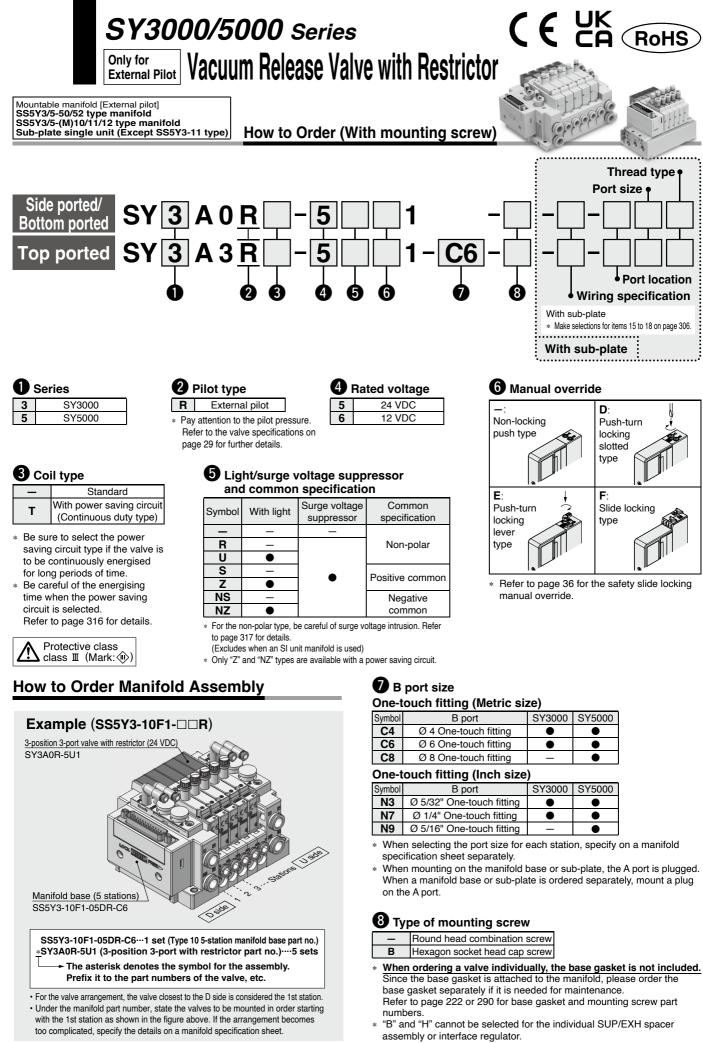

SY3000/5000 Series



Valve Specifications

Valve construction		3-position 3-port valve with restrictor
Seal		Rubber seal
Fluid		Air
Type of actuation		Normally closed
	Release pressure port 1(P)	0 to 0.6
Operating pressure range [MPa]	Vacuum pressure port 3(EB), 3/5(E)	-100 kPa to 0.7*1
range [MPa]	Pilot X port	Release pressure + 0.1 or more (Min. 0.25) to 0.7
Restrictor operation		Manual

*1 Can be used with positive pressure to suit the application

* Other specifications are common to the valve specifications on page 17.

* Quick response type is not available.

Weight

Weight [g]	
90	
Port size	
	Weight [g]
C4	91
C6	93
Weight [g]	
94	
Port size	
2(B) port	Weight [g]
C4	118
C6	115
C8	121
	90 Port size 2(B) port C4 C6 Weight [g] 94 Port size 2(B) port C4 C6

Response Time

Value medel	Without light/surge	With light/surge voltage suppressor				
Valve model	voltage suppressor	S/Z type	R/U type			
SY3AR 18		26	18			
SY5A⊟R	27	32	27			

P = 0.1 MPa X = 0.5 MPa

Manifold Flow Rate Characteristics^{*1}

Flow Rate Characteristics (When restrictor is fully open) ① Plug-in Metal Base

	Port	size	Valve flow rate ch		characteristics			
Manifold type	fold type 1, 3 2 1→2 (P→B)		2 (P→B) 2→3 (B			3)		
	(P, EB)	(B)	C [dm ³ /(s·bar)]	b	Q [l/min (ANR)]*2	C [dm ³ /(s·bar)]	b	Q [l/min (ANR)]*2
SS5Y3-50R (Side ported)	1/8	C6	0.7	0.24	172	1.0	0.16	234
SS5Y3-52R (Top ported)	1/8	C6	1.0	0.25	247	1.1	0.25	271
SS5Y5-50R (Side ported)	1/4	C8	1.0	0.30	254	2.3	0.10	522
SS5Y5-52R (Top ported)	1/4	C8	1.4	0.16	328	2.4	0.14	556


2 Plug-in Connector Connecting Base

	Port	size	Valve flow rate characteristics					
Manifold type	1, 3	2	1	→2 (P→B)	2	→3 (B→EE	3)
	(P, EB)	(B)	C [dm ³ /(s·bar)]	b	Q [l/min (ANR)]*2	C [dm ³ /(s·bar)]	b	Q [l/min (ANR)]*2
SS5Y3-10R (Side ported)	C8	C6	0.7	0.36	145	1.2	0.22	291
SS5Y3-12R (Top ported)	C8	C6	1.0	0.26	248	1.2	0.20	287
SS5Y5-10R (Side ported)	C10	C8	1.0	0.20	240	2.9	0.17	683
SS5Y5-11R (Bottom ported)	C10	C8	1.0	0.30	354	3.3	0.24	809
SS5Y5-12R (Top ported)	C10	C8	1.4	0.15	326	2.6	0.24	637


*1 The value is for manifold base with 5 stations.


* Calculation of effective area S and sonic conductance C: S = 5.0 x C

*2 These values have been calculated according to ISO 6358 and indicate the fl ow rate under standard conditions with an inlet pressure of 0.6 MPa (relative pressure) and a pressure drop of 0.1 MPa.

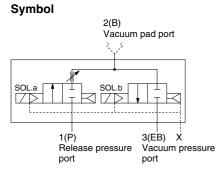


Restrictor Flow Rate Characteristics [Fluid passage: 1(P)→2(B)]

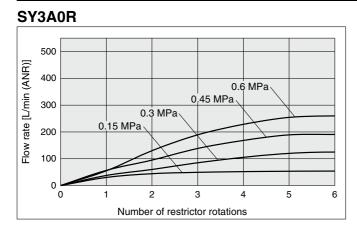


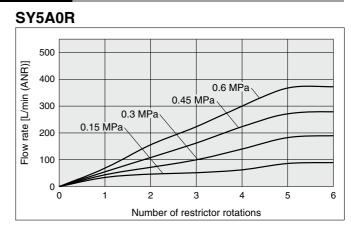




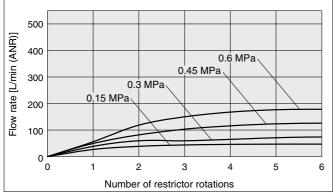


SY3A3R-C6

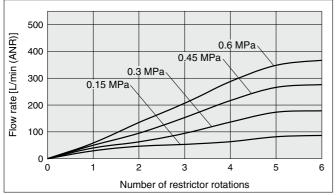




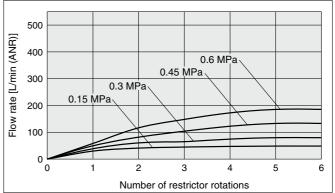



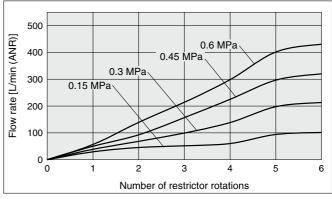




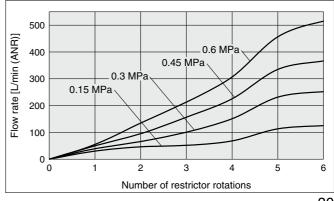


SY3000/5000 Series

Circuit Example

<Example 1: When the 2-position double solenoid valve is combined with the individual EXH spacer>

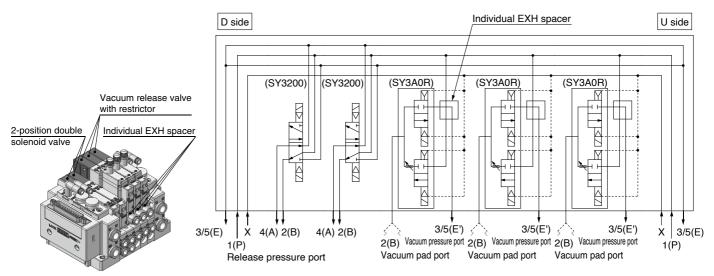


<Example 2: When the 2-position double solenoid valve is combined with the individual EXH block and blocking disk>

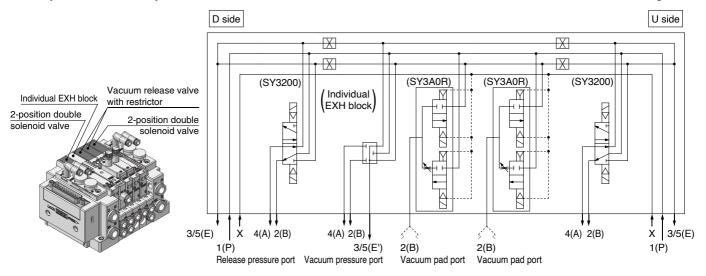


* For standard valve to be combined, both the internal pilot and external pilot can be selected. If the pressure drop may occur when the 1(P) port releases the vacuum, use the external pilot type.

Only for External Pilot Vacuum Release Valve with Restrictor SY3000/5000 Series

Dimensions: SY3000

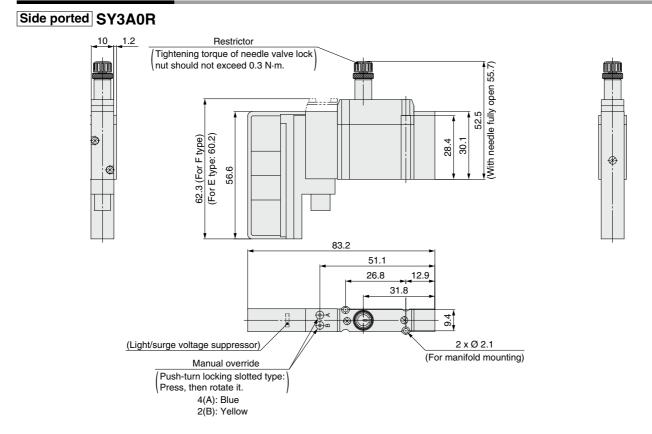


Top ported SY3A3R

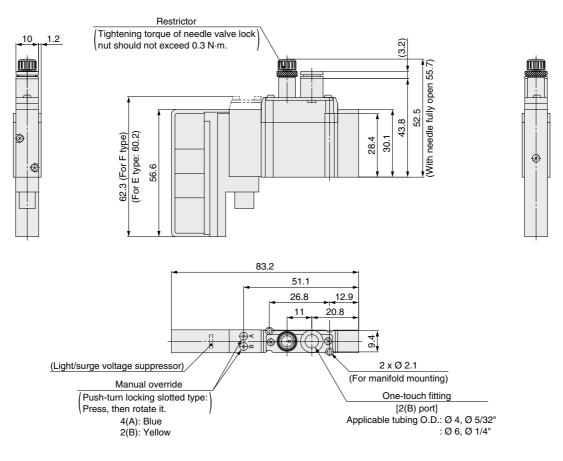



SY3000/5000 Series

Dimensions: SY5000

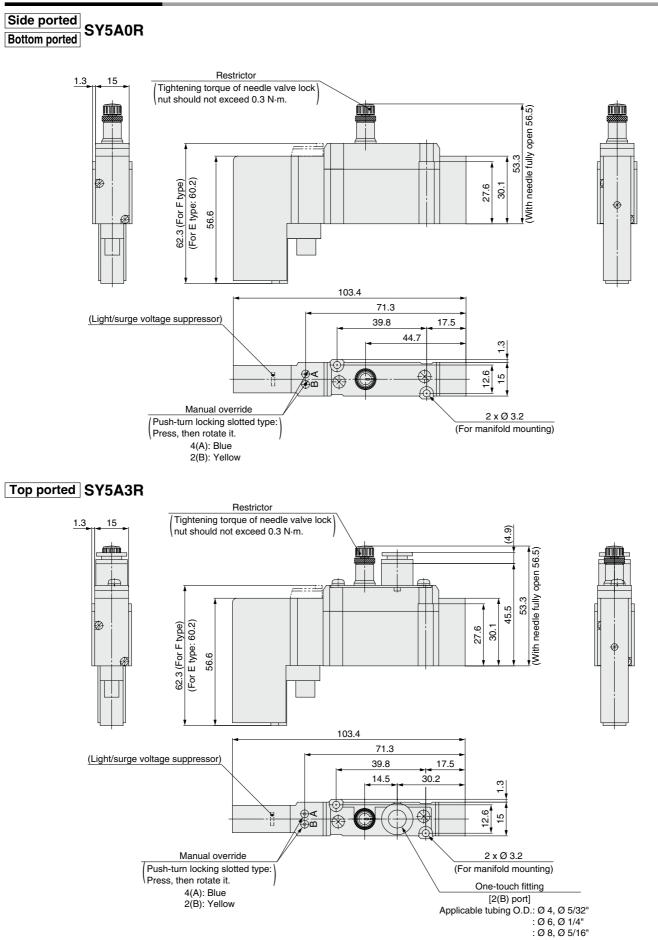



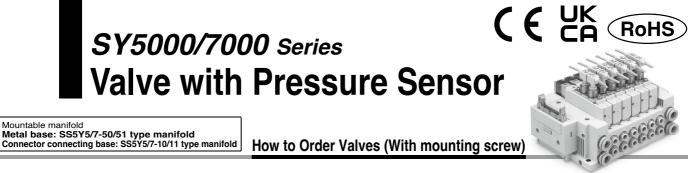





Series

5	SY5000
7	SY7000

2 Type of actuation

1	2-position	Single	
2		Double	
3		Closed centre	
4	3-position	Exhaust centre	
5		Pressure centre	
A *1		N.C./N.C.	
B *1		N.O./N.O.	
C *1		N.C./N.O.	

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

B Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

-	
_	Internal pilot
R	External pilot

 When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure.

Back pressure check valve (Built-in valve type)

– None		None		
	Н	Built-in		
,	* Only the rubber seal type is available. A manifold installed			
	type is available if a back pressure check valve with a metal			

- type is available if a back pressure check valve with a metal seal is required. Refer to page 2 3 6 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

_	Standard (0.7 MPa)		
В	Quick response type (0.7 MPa)		
K *1	High pressure type (1.0 MPa)		

*1 Only the metal seal type is available for the high pressure type.

Coil type

T With power saving circuit	_	Standard
(Continuous duty type)	Т	With power saving circuit (Continuous duty type)


- * Be sure to select the power saving circuit type if the valve is to be continuously energised for long periods of time.
- Be careful of the energising time when the power saving circuit is selected. Refer to page 316 for details.

8 Rated voltage

	<u> </u>	······································		
5		24 VDC		
	6	12 VDC		
* The applicable rated voltage varies dans				

* The applicable rated voltage varies depending on the manifold wiring type.


Light/surge voltage suppressor and common specification



- For the non-polar type, be careful of surge voltage intrusion. Refer to page 317 for details.
- (Excludes when an SI unit manifold is used)
- Only "Z" and "NZ" are available with a power saving circuit.
 Select "R," "U," "S," or "Z" for the valve when the SI unit output polarity is positive common.

Select "R," "U," "NS," or "NZ" for the valve when the SI unit output polarity is negative common.

Manual override

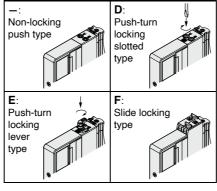

D A, B port size

One-touch fitting (Metric)						
Symbol	A, B port	SY5000	SY7000			
C6	Ø 6	•	•			

Type of mounting screw

_	Round head combination screw
В	Hexagon socket head cap screw
к	Round head combination screw (Drop prevention type)
н	Hexagon socket head cap screw (Drop prevention type)

- * For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included.
 Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 222 for base gasket and mounting screw part numbers
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

B Pressure sensor


Symbol	Included quantity				
P1	1 pc.				
P2	2 pcs.				

- $\ast\,$ The top-ported type valve and the C6 (Ø 6) One-touch fitting are used.
- * The PSE 5 4 0 -R 0 6 pressure sensor is included in the product package.
- When "P1" is selected, one plug (KQ2P-06) is included in the product package.

How to Order Manifold Assembly

Example (SS5Y5-10F1-

- SS5Y5-10F1-05D-C8 …1 set (Type 10 5-station manifold base part no.)
- *SY5130-5U1-C6-P1
- ···2 sets (2-position single part no.)
- * SY5130-5U1-C6-P2 ...1 set (2-position double
- ···1 set (2-position double part no.) * SY5230-5U1-C6-P2 ···1 set (2-position double part no.)
- * SY5330-5U1-C6-P2
- 1 set (3-position closed centre part no.)
 The asterisk denotes the symbol for the assembly.
 Prefix it to the part numbers of the valve, etc.

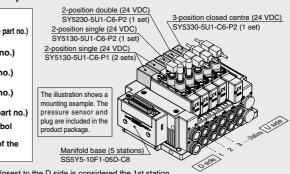

• For the valve arrangement, the valve closest to the D side is considered the 1st station. • Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

SY5000/7000 Series

Pressure Sensor Specifications

Madal		DOEC 40
Model		PSE540
Rated pressure range		0 to 1 MPa*1
Power supply voltage		12 to 24 VDC ±10 %, Ripple (p-p) 10 % or less (with reverse connection protection)
Current consumption		15 mA or less
Output specifications		Analogue output 1 to 5 V (within rated pressure range), 0.6 to 1 V (within extension analogue output range), Output impedance: Approx. 1 kΩ
Linearity		±0.7 % F.S. or less
Environment	Enclosure*2	IP40
Temperature characteristics		±2 % F.S. (25 °C reference)
Sensor cable		Oilproof heavy-duty vinyl cable (ellipse), 3 cores, 2.7 x 3.2, 3 m, Conductor area: 0.15 mm ² , Insulator O.D.: 0.9 mm

*1 Set the pressure within the operating pressure range of the valve.

*2 Please note that even if the manifold is IP67, the product will remain IP40.


Symbol

Internal pilot

2-position single 2-position double 3-position closed centre 3-position exhaust centre 3-position pressure centre 2 (B \mathbb{N} -20 \mathbb{N} R \mathbb{N} -20 \mathbb{N} -20 \mathbb{N} \mathbb{N} $\mathbb{M}^{\mathbb{Z}}$ гĦ (EA) 5 1 3 (EB) 3 (EB) (EA) 5 1 3 (EB) 3 (EB) (EA) 5 3 (EB) (EA) 5 (EA) 5 1 (P) (P (P (P) (P) 4-Position Dual 3-Port Valve N.C. valve x 2 pcs N.O. valve x 2 pcs N.C. valve, N.O. valve 1 pc. of each (A) 4 (B (A) 4 2 (B) (A) 4 (B) \mathbb{Z} R \mathbb{Z} R \sim R -4 $[7 \triangleright$ Þ $|7 \rangle$ $\overline{}$ $\Box D$ 3 (EB) . 3 (EB) 5 (EA) 1 (P) 3 (EB) 5 (EA) 1 (P) 5 (EA) 1 (P) **External pilot** 2-position single 2-position double 3-position closed centre 3-position exhaust centre 3-position pressure centre (A) 4 2 (B) Ŵ R -20 N R M -M 1/P $\mathbb{W}^{\mathbb{N}}$ ₩,\ ΜŴ WW -F⊲ ŻΥ 1 3 (EB) (P) 1 3 (EB) (EA) 5 3 (EB) (EA) 5 (EA) 5 (EA) 5 1 3 (EB) (EA) 5 1 3 (EB) (P) (P) (P) (P) Y 4-Position Dual 3-Port Valve N.C. valve x 2 pcs N.O. valve x 2 pcs N.C. valve, N.O. valve 1 pc. of each (A) 4 2 (B (A) 4 2 (B) (A) 4 2 (B) \mathbb{Z} - 🛛 🗴 \mathbb{N} \mathbb{Z} -12 × Ζ $\overline{}$ - 27 $\overline{}$ ⊤R

5 (EA) 1 (P)

3 (EB)






. 1 (P)

3 (EB)

5 (EA)

Valve with Pressure Sensor SY5000/7000 Series

Dimensions

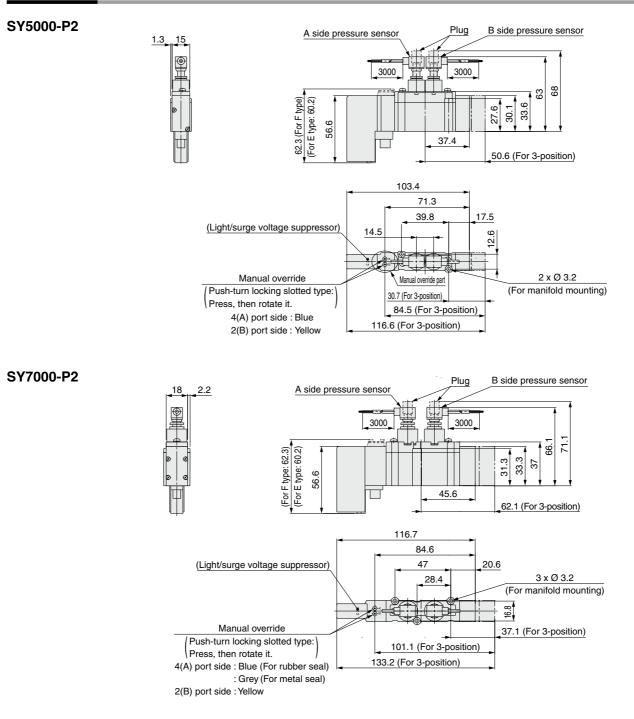

SY3000/5000/7000 Series Made to Order

Please contact SMC for detailed dimensions, specifications, and lead times.




	Symbol
1 Main Valve Fluororubber Specification	-X90

Fluororubber is used for rubber parts of the main valve to allow use in applications such as the following.


· When using a lubricant other than the recommended turbine oil, and there is a possibility of malfunction due to swelling of the spool valve seals.

Applicable valves series SY3 \square_3^0 0, SY5 \square_3^0 0, SY7 \square_3^0 0 (Only rubber seal type)



Entry is the same as standard products.

Specifications and performance are the same as standard products.

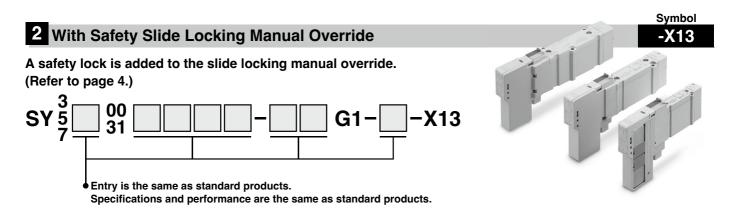



Symbol 3 2-Position Single Solenoid Valve with Built-in Return Spring (Only rubber seal type) -X350 A 2-position single solenoid valve with a spring built into the main valve The main valve returns to origin (the OFF position) via the spring when it is not pressurised. SY 5 1 X350 Rubber seal Entry is the same as standard products. Specifications and performance are the type same as standard products. Internal pilot type External pilot type 4(A) 2(B) 4(A) 2(B)

 For the external pilot type, exhaust the external pilot (X) port and the main pressure simultaneously.
 If the main pressure cannot be exhausted due to the system specifications,

please contact SMC separately.


* The manual option is only applicable to the non-locking push type.





⊘SMC

Plug-in Connector Connecting Base

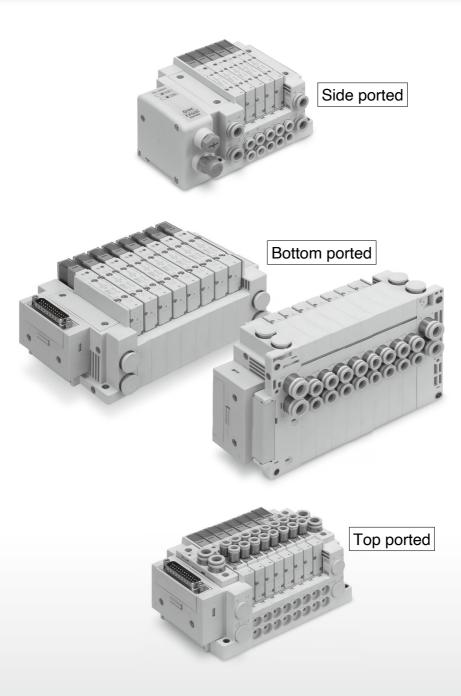

SY3000/5000/7000 Series Type 10, 11, 12 Plug-in Connector Connecting Base

Manifold Specifications

				sub iector	Flat	ribbon c	able	Terminal block box (Spring type)	Terminal block box	Lead wire	Circular connector		S	erial wirir	ng	
	Model		F type	FW type	P type	PG type	PH type	TC type	T type	L type	M type	S6⊟ type (EX600)	SA⊟ type (EX245)		(EA300)	S3□ type (EX120) S8□ type (EX180)
Manifol	d type			Plug-in connector connecting base												
SUP/EX	(H port type			Common SUP/EXH (Common for 3/5 port)												
Valve stations			2 to	o 24 stati	ons	2 to 18 stations	2 to 8 stations	2 to 24 stations			2 to 24	stations			2 to 24 stations	2 to 16 stations (EX120) 2 to 24 stations (EX180)
Applicable connector			D-sub connector Conforming to MIL-C-24308 JIS-X-5101 (Refer to page 57.)	Dedicated connector (Refer to page 57.)	wit Conform (Ref Socket: 26 pins	h strain re ing to MIL er to page Socket: 20 pins	-C-83503 e 60.) Socket:					_				
Internal	l wiring				F	Positive o	common,	Negative	e commo	n			Negative common		tive com ative com	'
		SY3000		Ø 8 One-touch fitting Ø 5/16" One-touch fitting												
	1(P), 3/5(E) port	SY5000		Ø 10 One-touch fitting Ø 3/8" One-touch fitting												
Port		SY7000								touch fitti -touch fitt	U U					
size		SY3000		Ø			ing, Ø 3.2 e-touch fit					•			g	
	4(A), 2(B) SY5000				-		ne-touch	•					Ũ			
port			~			e-touch fi							•			
SY7000				Ø			ng, Ø 8 C e-touch fit		•			0			ıg	
Enclosure (Based on IEC60529)		IP40	IP67*1		IP40			IP6	37* ¹		IP67*1 I/O Unit: partially IP40	IP65	IP67*1	IP67*1 (EX260 D-sub communication connector: IP40) (EX500 GW Unit: IP65)	IP20	

*1 In the case of a metal seal, there are restrictions in the operating environment. Refer to the "Specific Product Precautions" on page 314.

Type 10, 11, 12 Plug-in Connector Connecting Base SY3000/5000/7000 Series

Manifold Flow Rate Characteristics*1/Manifold Weight

Valve Seal Type: Rubber Seal Side Ported (Type 10)

Manifald	Mahua	Port	size			Flow rate ch	aracteristics			NAV 1 1 NAVE 1#2	
Manifold model	Valve model	1, 3/5	4, 2	1 → 4	4/2 (P →	· A/B)	4/2 →	3/5 (A/E	3 → E)	Weight: W [g]* ² (n: stations)	
moder	moder	(P, E)	(A, B)	C [dm³/(s·bar)]	b	Q [l/min (ANR)]*3	C [dm³/(s·bar)]	b	Q [l/min (ANR)]*3	(11. 314110113)	
	SY3100 SY3200			1.4	0.30	356	1.6	0.19	381		
	SY3300			1.3	0.28	326	1.2	0.40	326	28.0	
COEVO	SY3400	C8	C6	1.2	0.27	299	1.6	0.29	404		
SS5Y3	SY3500	08		1.4	0.31	358	1.1	0.36	291	28.9 n + 293	
	SY3A00			1.3	0.26	322	1.5	0.27	324		
	SY3B00			1.3	0.26	322	1.5	0.27	324		
	SY3C00			1.3	0.26	322	1.5	0.27	324		
	SY5100 SY5200		C8	3.3	0.30	839	3.6	0.17	848		
	SY5300			3.1	0.32	793	2.9	0.31	742	- 74.7 n + 398	
00575	SY5400			3.1	0.32	798	3.7	0.23	902		
SS5Y5	SY5500	C10		3.4	0.32	876	2.9	0.31	742		
	SY5A00			2.9	0.32	747	3.2	0.25	789		
	SY5B00			2.8	0.31	717	2.9	0.26	719		
	SY5C00			2.9	0.32	747	3.1	0.25	671		
	SY7100 SY7200			6.2	0.23	1511	5.9	0.20	1413		
	SY7300			4.8	0.25	1184	4.4	0.36	1164		
CCEV7	SY7400	C12	C12	4.8	0.25	1184	6.6	0.27	1647	106 6 p + 406	
SS5Y7	SY7500		012	7.1	0.25	1751	4.4	0.36	1164	106.6 n + 496	
	SY7A00			5.4	0.25	1332	5.1	0.29	1289		
	SY7B00			5.4	0.24	1324	5.1	0.31	1305		
	SY7C00			5.4	0.25	1332	5.1	0.29	1289		

Valve Seal Type: Rubber Seal Bottom Ported (Type 11)

		Port size								
Manifold model	Valve model	1, 3/5	4, 2	1 →	4/2 (P →	· A/B)	4/2 →	3/5 (A/E	3 → E)	Weight: W[g]* ² (n: stations)
moder	Inodei	(P, E)	(A, B)	C [dm³/(s·bar)]	b	Q [l/min (ANR)]*3	C [dm³/(s·bar)]	b	Q [l/min (ANR)]*3	(11. 5(41)(115)
SS5Y5	SY5100 SY5200	C10	C8	3.3	0.29	834	4.2	0.26	1042	76.8 n + 445
SS5Y7	SY7100 SY7200	C12	C12	6.2	0.25	1529	6.6	0.21	1428	117.9 n + 532

Valve Seal Type: Rubber Seal Top Ported (Type 12)

Top I offed (· / · · · · · /									
		Port size								
Manifold model	Valve model	1, 3/5	4, 2	1 → 4	4/2 (P →	· A/B)	4/2 →	3/5 (A/E	3 → E)	Weight: W [g]* ² (n: stations)
moder	moder	(P, E)	(A, B)	C [dm³/(s·bar)]	b	Q [l/min (ANR)]*3	C [dm³/(s·bar)]	b	Q [l/min (ANR)]*3	(II. stations)
SS5Y3	SY3130 SY3230	C8	C6	1.2	0.29	303	1.3	0.19	310	25.1 n + 314
SS5Y5	SY5130 SY5230	C10	C8	2.8	0.27	699	3.8	0.23	926	66.3 n + 417
SS5Y7	SY7130 SY7230	C12	C12	5.6	0.31	1433	5.7	0.24	1397	84.1 n + 519

*1 The value is for manifold base with 5 stations and individually operated 2-position type.

*2 Weight: W is the value of the internal pilot, and D-sub connector manifold with One-touch fitting straight piping type.

To obtain the weight with valves attached, add the valve weights given on page 19 for the appropriate number of stations.

*3 These values have been calculated according to ISO 6358 and indicate the fl ow rate under standard conditions with an inlet pressure of 0.6 MPa (relative pressure) and a pressure drop of 0.1 MPa.

* Calculation of effective area S and sonic conductance C: S = 5.0 x C



Manifold Flow Rate Characteristics*1/Manifold Weight

Valve Seal Type: Metal Seal

Side Ported (Type 10)

		Port	size		Flow rate characteristics																					
Manifold model	Valve model	1, 3/5	4, 2	1 → 4	4/2 (P →	A/B)	4/2 →	3/5 (A/E	3 → E)	Weight: W [g]* ² (n: stations)																
moder	model	(P, E)	(A, B)	C [dm³/(s·bar)]	b	Q [l/min (ANR)]*3	C [dm³/(s·bar)]	b	Q [l/min (ANR)]*3	(11. 312110113)																
	SY3101 SY3201			1.2	0.19	286	1.3	0.18	308																	
SS5Y3	SY3301	C8	C6	0.8	0.19	191	0.8	0.35	210	28.9 n + 293																
	SY3401			0.8	0.19	191	1.1	0.26	273																	
	SY3501			0.9	0.21	195	0.7	0.32	151																	
	SY5101 SY5201				2.7	0.24	662	3.1	0.17	730																
SS5Y5	SY5301	C10	C8	C8	C8	C8	C8	C8	C8	C8	C8	C8	C8	C8	C8	C8	C8	C8	C8	2.3	0.21	554	2.0	0.24	490	74.7 n + 398
	SY5401																								2.3	0.21
	SY5501			2.5	0.21	541	2.0	0.24	433																	
	SY7101 SY7201			4.4	0.14	1020	4.4	0.17	1073																	
SS5Y7	SY7301	C12	C12	3.4	0.12	780	3.3	0.24	800	106.6 n + 496																
	SY7401								3.4	0.12	780	4.9	0.18	1161												
	SY7501			5.0	0.12	1082	3.3	0.24	714																	

Valve Seal Type: Metal Seal Bottom Ported (Type 11)

		Port	sizo			Flow rate ch	aractoristics			
Manifold model	Valve model	1, 3/5	4, 2	1 →	4/2 (P →			3/5 (A/E	3 → E)	Weight: W [g]* ² (n: stations)
moder	moder	(P, E) (A, B)		C [dm³/(s·bar)]	b	Q [l/min (ANR)]*3	C [dm³/(s·bar)]	b	Q [l/min (ANR)]*3	(11. Stations)
SS5Y5	SY5101 SY5201	C10	C8	2.8	0.25	690	3.5	0.15	816	76.8 n + 445
SS5Y7	SY7101 SY7201	C12	C12	4.6	0.16	1078	4.7	0.18	1017	117.9 n + 532

Valve Seal Type: Metal Seal Top Ported (Type 12)

Manifold	Mahua	Port size			147 · 1 · 147 · 1*2					
Manifold model	Valve model	1, 3/5	4, 2	1 → 4	4/2 (P1 -	→ A/B)	4/21 →	3/5 (A/E	31 → E)	Weight: W [g]* ² (n: stations)
moder	moder	(P, E)	(A, B)	C [dm³/(s·bar)]	b	Q [l/min (ANR)]*3	C [dm³/(s·bar)]	b	Q [l/min (ANR)]*3	(III otationo)
SS5Y3	SY3131 SY3231	C8	C6	1.2	0.16	281	1.3	0.18	308	25.1 n + 314
SS5Y5	SY5131 SY5231	C10	C8	2.6	0.18	616	3.0	0.16	703	66.3 n + 417
SS5Y7	SY7131 SY7231	C12	C12	3.9	0.21	844	4.1	0.14	887	84.1 n + 519

*1 The value is for manifold base with 5 stations and individually operated 2-position type.

*2 Weight: W is the value of the internal pilot, and D-sub connector manifold with One-touch fitting straight piping type.

To obtain the weight with valves attached, add the valve weights given on page 19 for the appropriate number of stations.

*3 These values have been calculated according to ISO 6358 and indicate the flow rate under standard conditions with an inlet pressure of 0.6 MPa (relative pressure) and a pressure drop of 0.1 MPa.

* Calculation of effective area S and sonic conductance C: S = 5.0 x C

Type 10, 11, 12 Pugein Connector Connecting Base SY3000/5000/7000 Series

Connector Wiring Layout

Double solenoid

Station 3

For both serial and parallel wiring, additional valves are sequentially assigned pins on the connector. This makes it completely unnecessary to disassemble the connector unit.

■ Single solenoid valve is installed to all double wiring. (in the case of all double wiring) (Manifold specification sheet is not necessary.) Connector side Solenoid (D-sub connector, etc.) ······ Common (+, –) SOL.a -0 Station 1 SOL.b ·----O -0 SOL.a Station 2 0 Unused terminal 0 SOL.a Station 3 -----C SOL.b Double solenoid Single solenoid Double solenoid Station 3 (Double wiring) Station 1 Station 2 ■ Single/double wiring are mixed. (Manifold specification sheet is necessary.) Connector side Solenoid (D-sub connector, etc.) Common (+, -) ·····O -0-SOL.a Station 1 -----SOL.b Ō SOL.a Station 2 SOL.a ····· -Station 3 Ō SOL.b

Double solenoid

Station 1

* These diagrams are for the purpose of explanation, and differ from the connector wiring used for testing.

Single solenoid

Station 2

Plug-in Connector Connecting Base

D-sub Connector Flat Ribbon Cable

SY3000/5000/7000 Series

05**U**

How to Order Manifolds

Refer to pages 180 (SY5000) and 181 (SY7000) for the dimensions of Type 11/Bottom-ported type.

🚺 Sei	Series						
3	SY3000						
5	SY5000						
7	SY7000						

Type 10

Type 11 Bottom Ported

Side Ported

2 Туре

SS5Y


- 10 Side ported
- 11
 Bottom ported*1

 *1
 The SY5000 manifold base is used for the bottom-ported SY3000.

 When ordering, refer to the "Plug-in Manifold Mixed Mounting Type" (from page 185).


3

4 Connector entry direction




The connector entry direction for connector type "FW" D-sub connector <IP67> cannot be rotated. If it is necessary to change, order the connector block assembly (page 227) separately.

How to Order Manifold Assembly

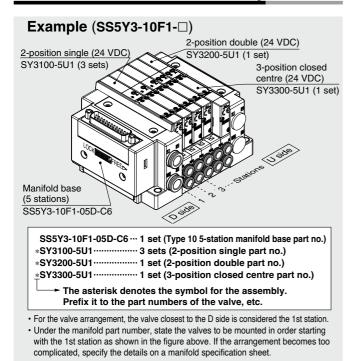

When mixing top-ported configurations, select from those listed on page 56. In such cases, use caution as there is also output on the A and B ports on the base side. Specify on the manifold specification sheet if plugs are required for the A and B ports on the base side.

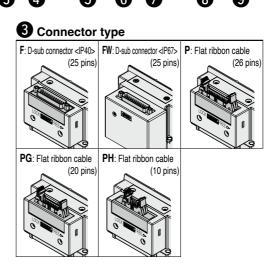

C6

5 Valve stations

F/FV	V:D-s	ub connector (25 pins)	P : F	at ribb	oon cable (26 pins)		
Symbol	Stations	Note	Symbol	Stations	Note		
02	2 stations		02	2 stations			
:	÷	Double wiring*1	:	:	Double wiring*1		
12	12 stations		12	12 stations	-		
02	2 stations	Specified layout*2	02	2 stations	Specified layout*2		
:	:	(Up to 24 solenoids	:	:	(Up to 24 solenoids		
24	24 stations	available)	24	24 stations	available)		
PG:	Flat ri	bbon cable (20 pins)	PH:	Flat ril	obon cable (10 pins)		
Symbol	Stations	Note	Symbol	Stations	Note		
02	2 stations		02	2 stations			
:	:	Double wiring ^{*1}	:	:	Double wiring*1		
09	9 stations		04	4 stations			
02	2 stations	Specified layout*2	02	2 stations	Specified layout*2		
:	÷	(Up to 18 solenoids	:	:	(Up to 8 solenoids		
18	18 stations	available)	08	8 stations	available)		
	*1 Double wiring: 2-position single, double, 3-position, and 4-position values can be used on all manifold stations						

* I Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4position valves cannot be used where single wiring has been specified.)
 This also includes the number of the blanking plate assembly.



6 P, E port entry					
U	U side (2 to 10 stations)				
D	D side (2 to 10 stations)				
В	Both sides (2 to 24 stations)				



—	Internal pilot		
s	Internal pilot,		
3	Built-in silencer		
R	External pilot		
* 3/5(E) port is plugged for the			

built-in silencer type.

9 Mounting and Option

Symbol	Mounting	Opt	tion	DIN Rail	Option	
Symbol	wounting	Name plate	tion Station number	—	Dire	ct mounting
_		—	—	0	Without D	IN rail (with bracket)
AA	Direct mounting			3	For 3 stations	Specify a longer rail
BA	mounting	•	—	:	:	than the total length
D	DIN	—	—	24	For 24 stations	of specified stations.
A	DIN rail mounting	•	•			
B	mounting		_			

∗ Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" above.)

* Only direct mounting is available for the type 11 bottom-ported type.

* Refer to page 319 for the fixation of DIN rail mounting type manifold.


8	A , I	Вp	ort size	(Metri	c/One	-touch	fitting	3)	
Symbol			B port	Type ⁻	10/Side	ported	Type 11/Bo	ttom ported	
Oymbol		А,	D poit	SY3000	SY5000	SY7000	SY5000	SY7000	
C2			Ø 2		—	—	—	—	
C3			Ø 3.2		—	—	—	—	08
C4			Ø 4		•	—	•	—	K
C6	ight		Ø 6	•	•	•	•	•	
C8	Straight		Ø 8	-	•	•	•	•	Sec. 10
C10			Ø 10	-	_	•	_	•	Constant of the second
C12			Ø 12	-	—	•	—	•	- Ver
CM∗1		Straig	ht port, mixed sizes			•		•	
L4			Ø 4			—	_	—	
L6		Ð	Ø 6				—	—	K CAR
L8		Upward	Ø 8	-			-	—	
L10		5	Ø 10	-	_		-	—	
L12	~		Ø 12	-	—		-	—	C Lalber
B 4	Elbow*2		Ø 4			—	—	—	
B6	IP III	Downward	Ø 6				-	—	
B 8	-	N L	Ø 8	-			-	—	
B10		ð	Ø 10	-	—		-	—	
B12			Ø 12	—	—		—	—	Terr
LM∗1		(Incl	w port, mixed sizes uding upward and ownward piping)	•	•	•	_	—	
			rt size h fittings)	Ø8	Ø 10	Ø 12	Ø 10	Ø 12	


A, B port size (Inch/One-touch fitting)

		•		Type 1	10/Side	ported	Type 11/Bo	ttom ported	
Symbol		А,	B port	SY3000	SY5000	SY7000	SY5000	SY7000	
N1			Ø 1/8"		—	—	—	-	
N3	-	9	Ø 5/32"		\bullet	—	\bullet	_	
N7	Straight		Ø 1/4"				•	•	
N9	Stra	1	Ø 5/16"	—	•	•	•	•	
N11			Ø 3/8"	-	—		—	•	el Bassie
CM∗1		Straig	ht port, mixed sizes		\bullet	\bullet	\bullet	•	
LN3		-	Ø 5/32"		—	—	—	_	
LN7		/arc	Ø 1/4"		•	—	—	—	
LN9		Upward	Ø 5/16"	-	•	—	—	—	
LN11			Ø 3/8"	_	—		—	-	del Bassie
BN3	Elbow*2	rd	Ø 5/32"		—	—	—	_	
BN7	In I	Downward	Ø 1/4"			—	—	-	
BN9		owr	Ø 5/16"	-	•	—	—	-	
BN11		Õ	Ø 3/8"	—	—	•	—	_	Teles
LM* ¹		(Incl	v port, mixed sizes uding upward and wnward piping)	•	•	•	_	_	
			rt size h fittings)	Ø 5/16"	Ø 3/8"	Ø 1/2"	Ø 3/8"	Ø 1/2"	


*1 Indicate the sizes on the manifold specification sheet in the case of "CM" or "LM." The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting direction.

*2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 228 to 230).



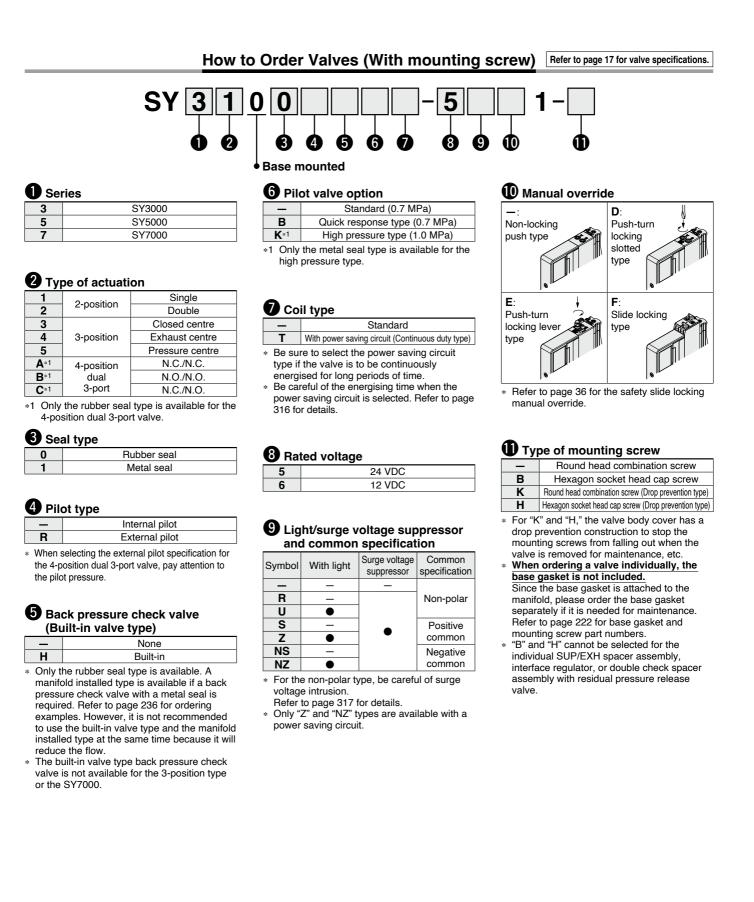

SMC

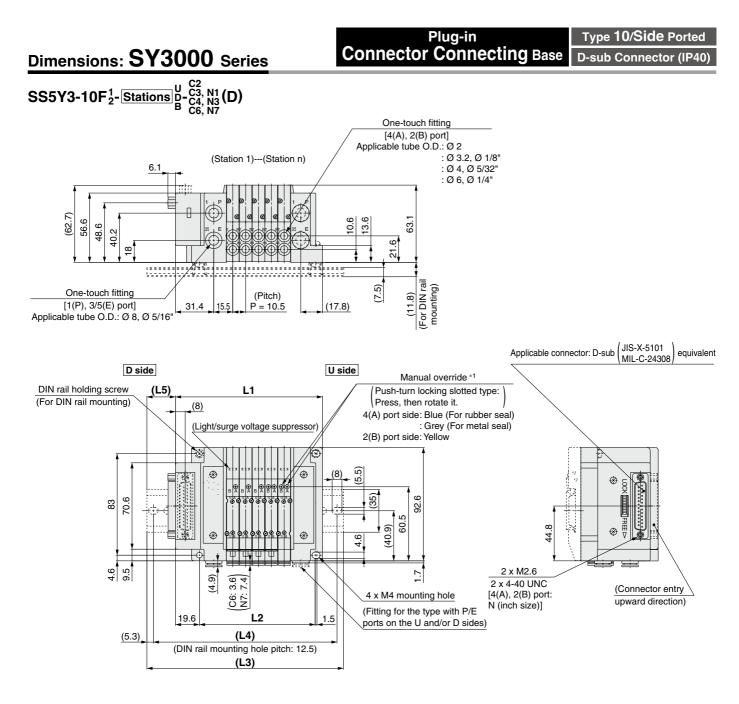


*1 Refer to page 177 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.

* These figures show the "SS5Y3-10F2-05D-C6."

* Refer to page 182 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	88.6	99.1	109.6	120.1	130.6	141.1	151.6	162.1	172.6	183.1	193.6	204.1	214.6	225.1	235.6	246.1	256.6	267.1	277.6	288.1	298.6	309.1	319.6
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	123	135.5	148	160.5	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	298	298	310.5	323	335.5	348	360.5
L4	112.5	125	137.5	150	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275	287.5	287.5	300	312.5	325	337.5	350
L5	20.5	21.5	22.5	23.5	18	19	20	21	22	23	18	19	20	21	22	23	23.5	18.5	19.5	20.5	21.5	22.5	23.5

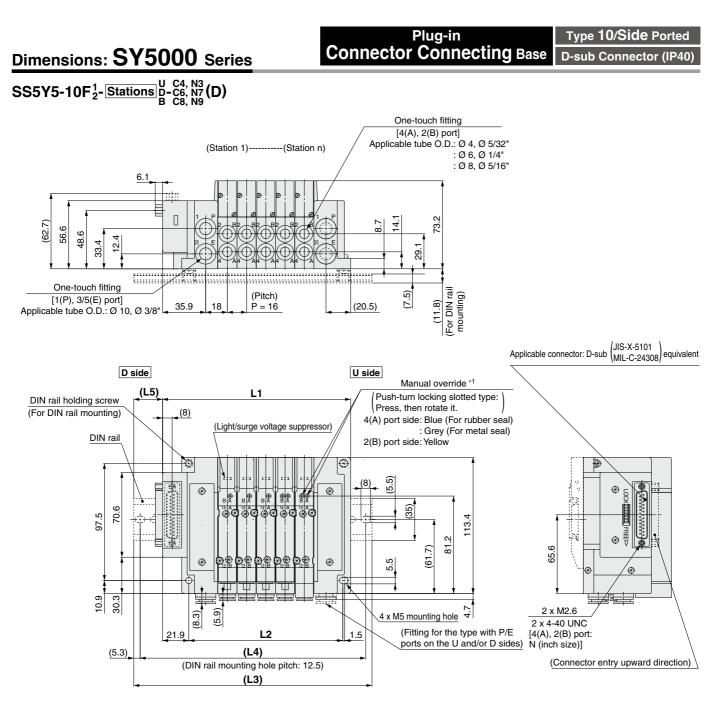


*1 Refer to page 178 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.

* These figures show the "SS5Y5-10F2-05D-C8."

* Refer to page 183 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	108.4	124.4	140.4	156.4	172.4	188.4	204.4	220.4	236.4	252.4	268.4	284.4	300.4	316.4	332.4	348.4	364.4	380.4	396.4	412.4	428.4	444.4	460.4
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	148	160.5	173	198	210.5	223	235.5	260.5	273	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	485.5	498
L4	137.5	150	162.5	187.5	200	212.5	225	250	262.5	275	287.5	312.5	325	337.5	362.5	375	387.5	400	425	437.5	450	475	487.5
L5	23	21	19.5	24	22	20.5	18.5	23	21.5	19.5	18	22.5	20.5	19	23.5	21.5	20	18	22.5	21	19	23.5	22



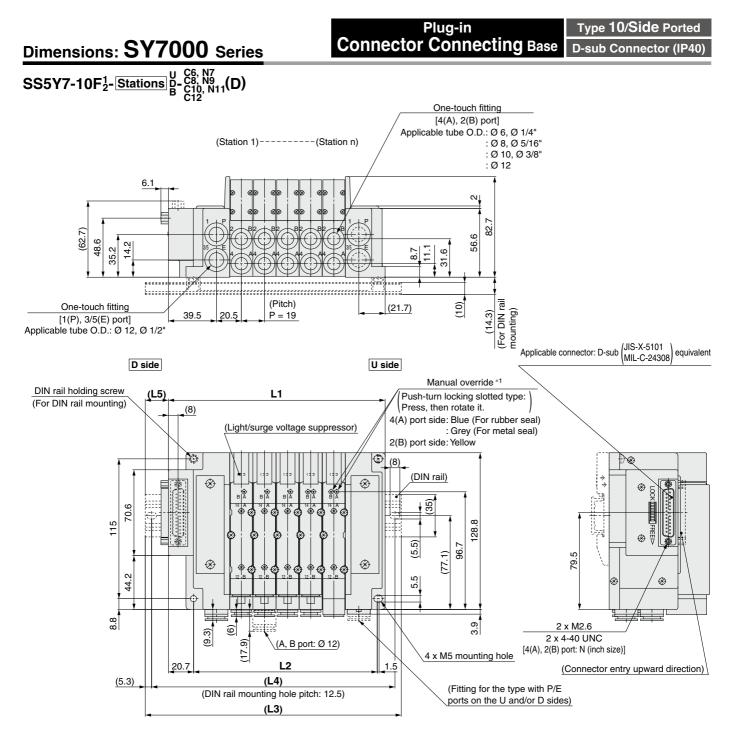


*1 Refer to page 179 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.

* These figures show the "SS5Y7-10F2-05D-C10."

* Refer to page 184 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	121.2	140.2	159.2	178.2	197.2	216.2	235.2	254.2	273.2	292.2	311.2	330.2	349.2	368.2	387.2	406.2	425.2	444.2	463.2	482.2	501.2	520.2	539.2
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	160.5	173	198	210.5	235.5	248	273	285.5	310.5	323	348	360.5	385.5	398	423	435.5	460.5	485.5	498	523	535.5	560.5	573
L4	150	162.5	187.5	200	225	237.5	262.5	275	300	312.5	337.5	350	375	387.5	412.5	425	450	475	487.5	512.5	525	550	562.5
L5	22.5	19.5	22.5	19	22	19	22	18.5	21.5	18.5	21.5	18	21	18	21	17.5	20.5	23.5	20.5	23.5	20	23	20

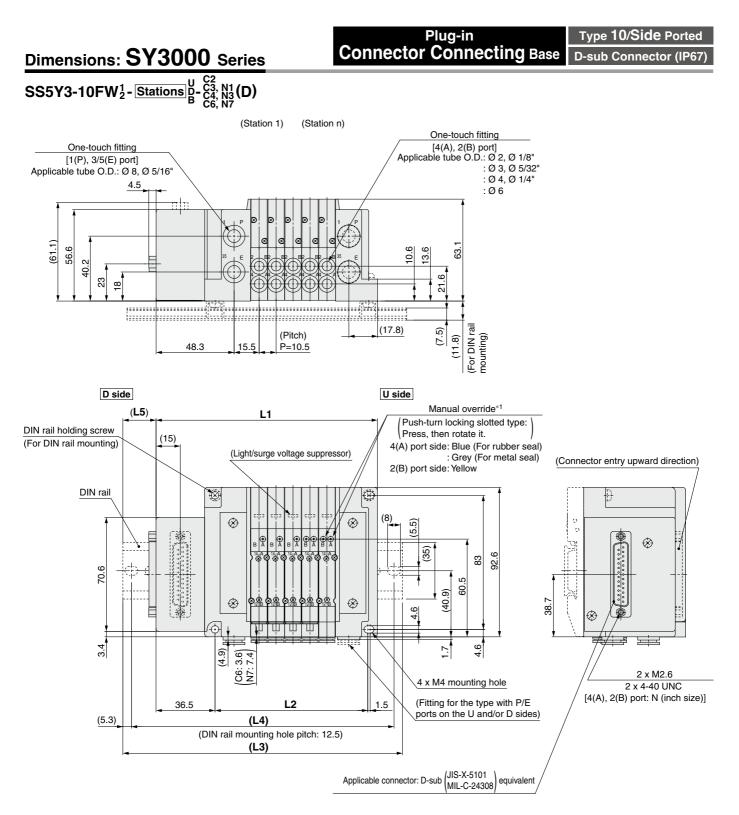


*1 Refer to page 177 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.

- * These figures show the "SS5Y3-10FW2-05D-C6."
- * Refer to page 182 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	105.5	116	126.5	137	147.5	158	168.5	179	189.5	200	210.5	221	231.5	242	252.5	263	273.5	284	294.5	305	315.5	326	336.5
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298	310.5	323	323	335.5	348	360.5	373
L4	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5	275	287.5	300	312.5	312.5	325	337.5	350	362.5
L5	17.5	18.5	19.5	20.5	21.5	22.5	17	18	19	20	21	22	17	18	19	20	21	22	16.5	17.5	18.5	19.5	20.5

SMC

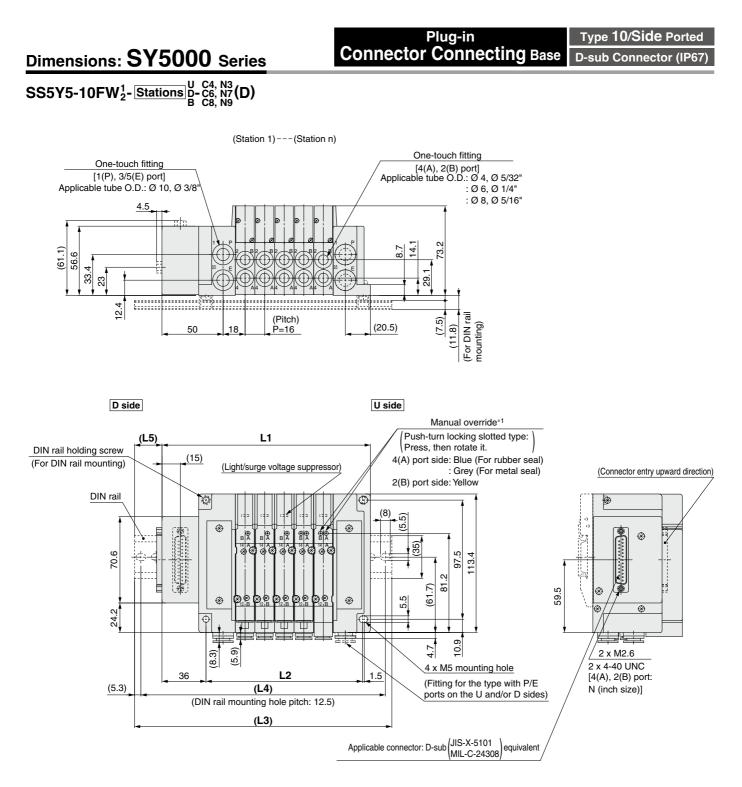


*1 Refer to page 178 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.

* These figures show the "SS5Y5-10FW2-05D-C8."

* Refer to page 183 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	122.5	138.5	154.5	170.5	186.5	202.5	218.5	234.5	250.5	266.5	282.5	298.5	314.5	330.5	346.5	362.5	378.5	394.5	410.5	426.5	442.5	458.5	474.5
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	160.5	173	185.5	210.5	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	385.5	398	410.5	423	448	460.5	473	498	510.5
L4	150	162.5	175	200	212.5	225	237.5	262.5	275	287.5	300	325	337.5	350	375	387.5	400	412.5	437.5	450	462.5	487.5	500
L5	21.5	19.5	18	22.5	20.5	19	17	21.5	20	18	16.5	21	19	17.5	22	20	18.5	16.5	21	19.5	17.5	22	20.5

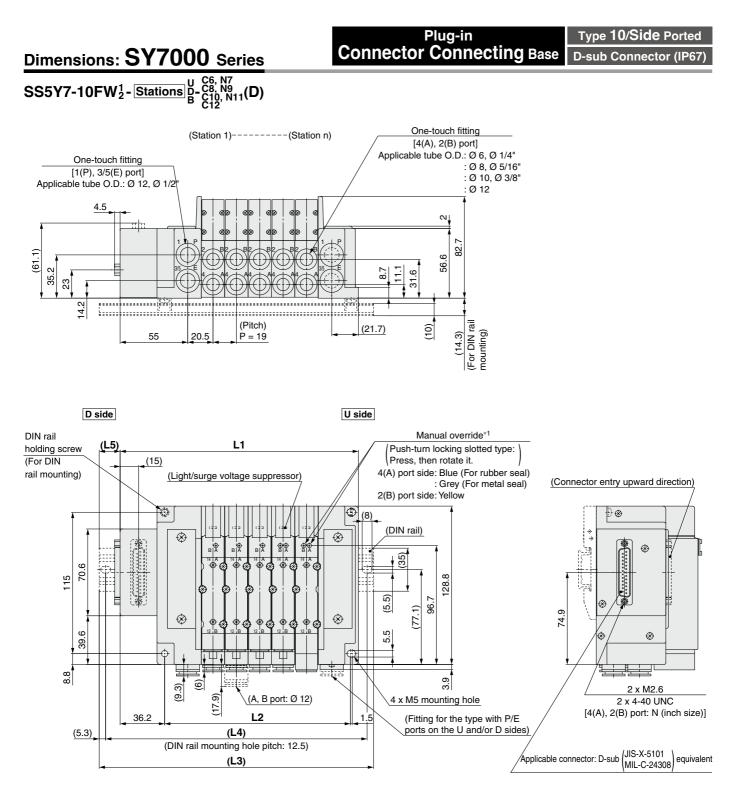


*1 Refer to page 179 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.


* These figures show the "SS5Y7-10FW2-05D-C10."

* Refer to page 184 for dimensions of A or B port top-ported type.


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	136.7	155.7	174.7	193.7	212.7	231.7	250.7	269.7	288.7	307.7	326.7	345.7	364.7	383.7	402.7	421.7	440.7	459.7	478.7	497.7	516.7	535.7	554.7
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	173	185.5	210.5	223	248	260.5	285.5	298	323	335.5	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5
L4	162.5	175	200	212.5	237.5	250	275	287.5	312.5	325	350	375	387.5	412.5	425	450	462.5	487.5	500	525	537.5	562.5	575
L5	20.5	17	20	17	20	16.5	19.5	16.5	19.5	16	19	22	19	22	18.5	21.5	18.5	21.5	18	21	18	21	17.5

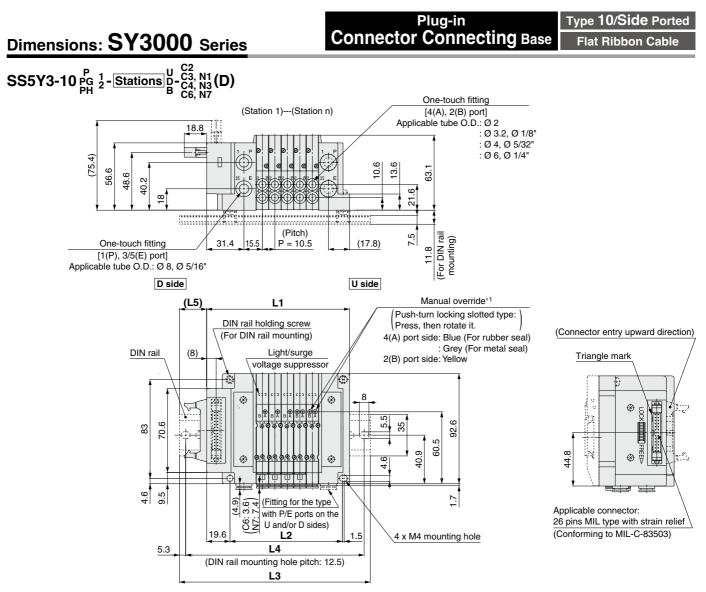

- *1 Refer to page 177 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.
- * These figures show the "SS5Y3-10P2-05D-C6."
- * Refer to page 182 for dimensions of A or B port top-ported type.
- * Only connectors are different for 10PG and 10PH. L1 to L5 dimensions are the same as 10P type.

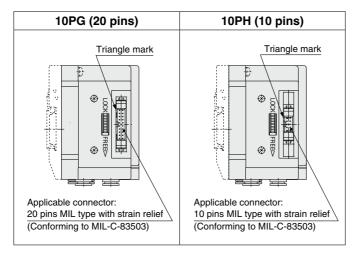


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	88.6	99.1	109.6	120.1	130.6	141.1	151.6	162.1	172.6	183.1	193.6	204.1	214.6	225.1	235.6	246.1	256.6	267.1	277.6	288.1	298.6	309.1	319.6
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	123	135.5	148	160.5	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	298	298	310.5	323	335.5	348	360.5
L4	112.5	125	137.5	150	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275	287.5	287.5	300	312.5	325	337.5	350
L5	20.5	21.5	22.5	23.5	18	19	20	21	22	23	18	19	20	21	22	23	23.5	18.5	19.5	20.5	21.5	22.5	23.5

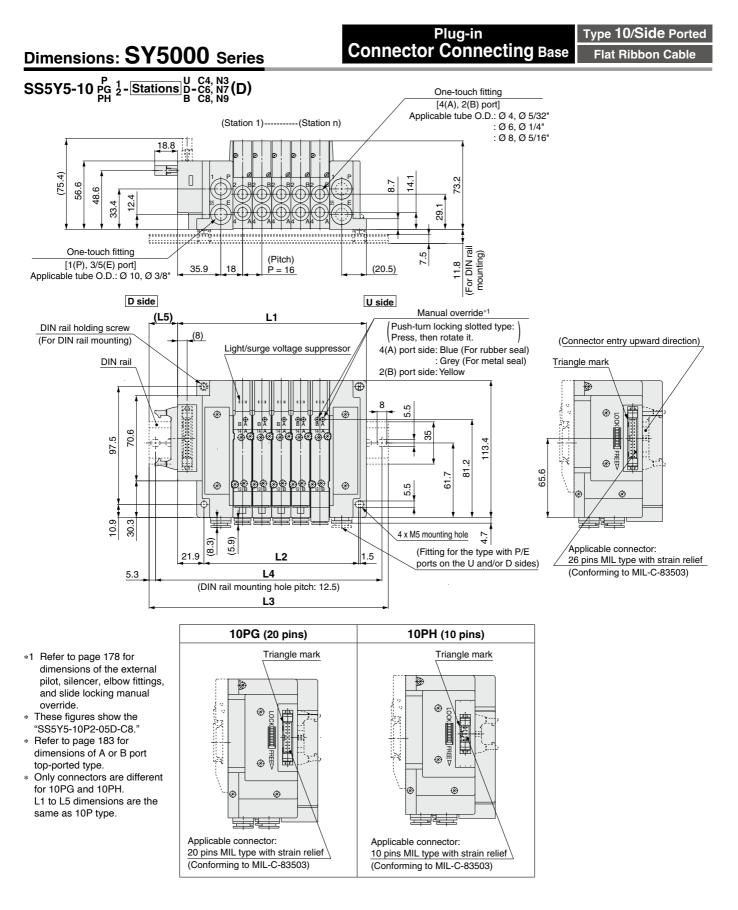

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	108.4	124.4	140.4	156.4	172.4	188.4	204.4	220.4	236.4	252.4	268.4	284.4	300.4	316.4	332.4	348.4	364.4	380.4	396.4	412.4	428.4	444.4	460.4
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	148	160.5	173	198	210.5	223	235.5	260.5	273	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	485.5	498
L4	137.5	150	162.5	187.5	200	212.5	225	250	262.5	275	287.5	312.5	325	337.5	362.5	375	387.5	400	425	437.5	450	475	487.5
L5	23	21	19.5	24	22	20.5	18.5	23	21.5	19.5	18	22.5	20.5	19	23.5	21.5	20	18	22.5	21	19	23.5	22

SMC

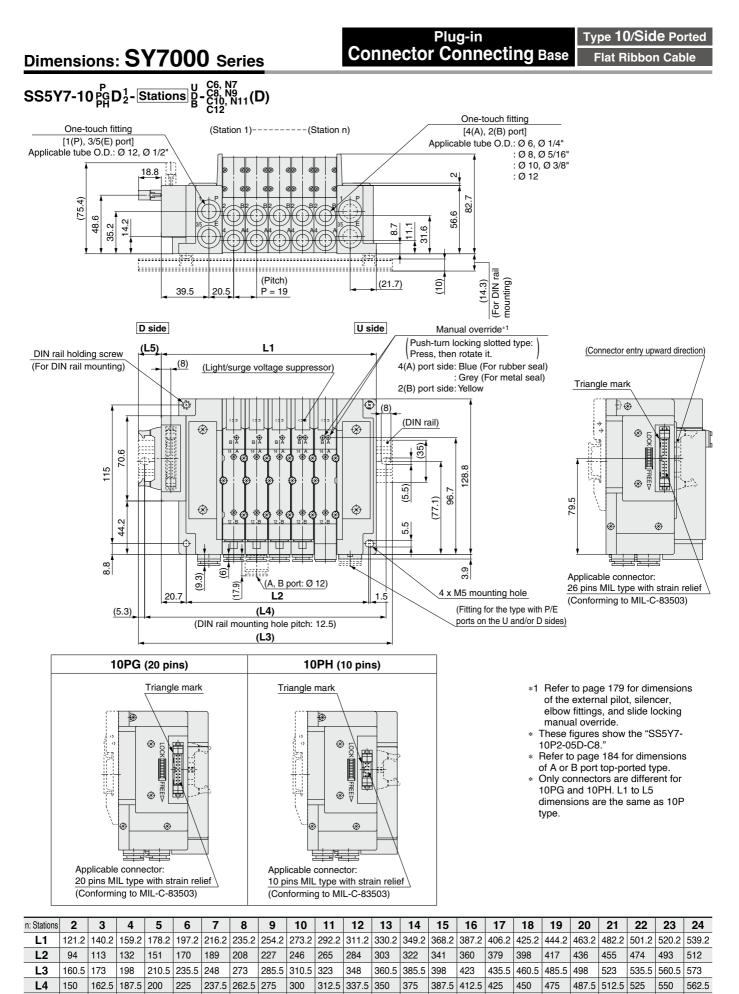

SMC	SMC
------------	-----

18

21

21

20.5

17.5

23.5

20.5

23.5 20

21.5 18

L5

22.5

19.5

22.5 19

22

19

22


18.5

21.5


18.5

20

23

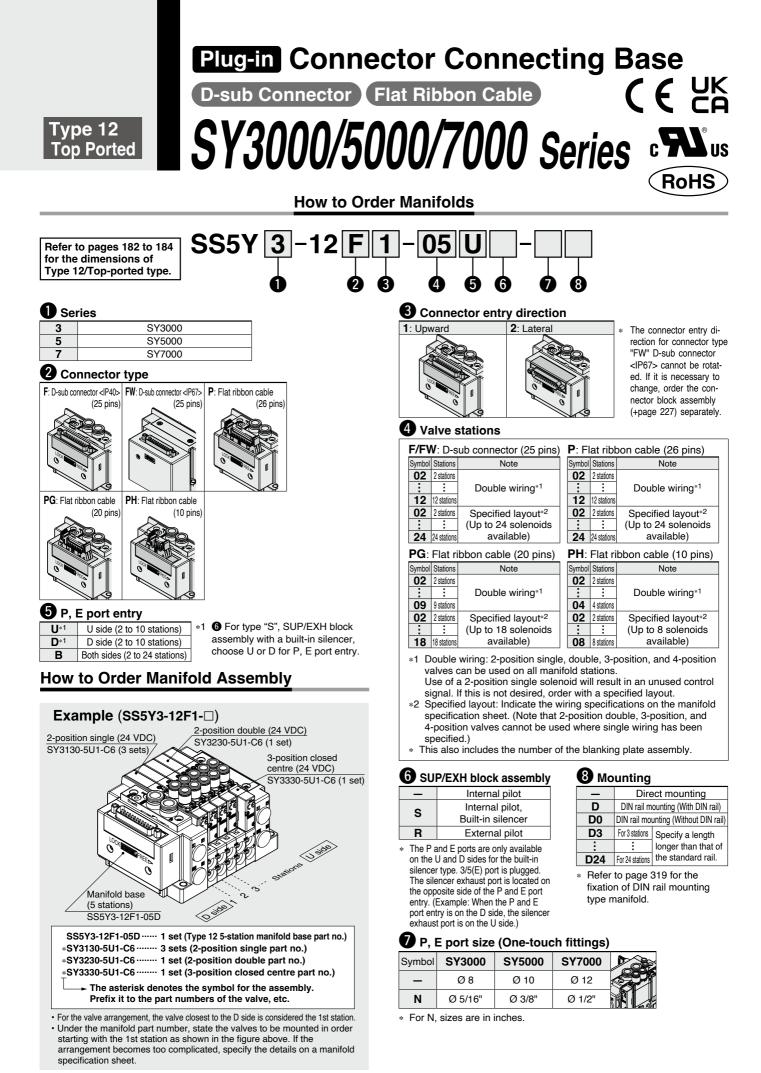

SMC

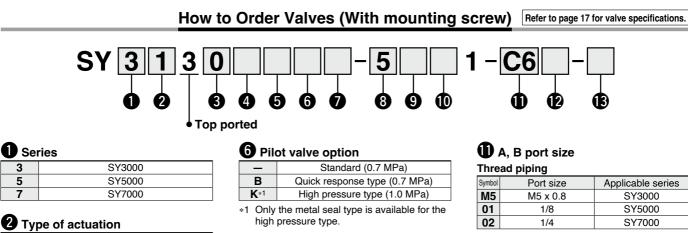

🕖 Coil type

Single

Double

Closed centre

Exhaust centre

Pressure centre

N.C./N.C.

N.O./N.O

N.C./N.O.

2-position

3-position

4-position

dual

3-port

4-position dual 3-port valve

Only the rubber seal type is available for the

Rubber seal

Metal seal

Internal pilot

External pilot When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to

None

Built-in

2

3

4

5

A*1

B∗1

C*1

0

R

н

3 Seal type

Pilot type

the pilot pressure.

reduce the flow

or the SY7000.

5 Back pressure check valve

Only the rubber seal type is available. A

required. Refer to page 236 for ordering examples. However, it is not recommended

manifold installed type is available if a back pressure check valve with a metal seal is

to use the built-in valve type and the manifold

installed type at the same time because it will

The built-in valve type back pressure check

valve is not available for the 3-position type

(Built-in valve type)

*1

- Standard т With power saving circuit (Continuous duty type)
- Be sure to select the power saving circuit type if the valve is to be continuously
- energised for long periods of time. Be careful of the energising time when the power saving circuit is selected. Refer to page 316 for details.

8 Rated voltage

	04.V/D0
5	24 VDC
6	12 VDC

Uight/surge voltage suppressor and common specification


Symbol	With light	Surge voltage suppressor	Common specification	
_	—	—		
R	_		Non-polar	
U	•			
S	_		Positive	
Z	•	•	common	
NS	_]	Negative	
NZ	•		common	
Fourth a second				

* For the non-polar type, be careful of surge voltage intrusion.

Refer to page 317 for details. Only "Z" and "NZ" types are available with a

power saving circuit.

D Manual override

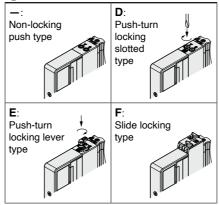

Refer to page 36 for the safety slide locking manual override.

多SMC

Thread piping					
Symbol	Port size	Applicable series			
M5	M5 x 0.8	SY3000			
01	1/8	SY5000			
02	1/4	SY7000			

One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	Ø 2	•	_	_
C3	Ø 3.2	•	—	_
C4	Ø 4			—
C6	Ø 6	•		
C8	Ø 8	_		
C10	Ø 10	_	_	
C12	Ø 12	—	—	

One-touch fitting (Inch)

Symbol	A, B port	SY3000	SY5000	SY7000
N1	Ø 1/8"	•	—	_
N3	Ø 5/32"			—
N7	Ø 1/4"	•		
N9	Ø 5/16"	_		
N11	Ø 3/8"	_	_	

Thread type


_	Rc
F	G
N	NPT
Т	NPTF

* Only - is available for M5.


B Type of mounting screw

_	Round head combination screw
В	Hexagon socket head cap screw
Κ	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 222 for base gasket and mounting screw part numbers.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.



Electrical Wiring Specifications

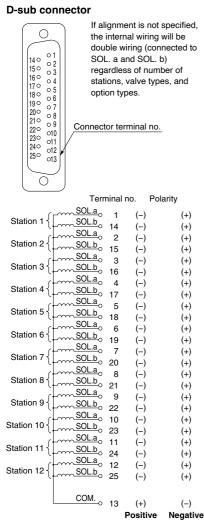


common common

* When using a valve with no polarity, either positive common or negative common can be used.

Terminal	Lead wire	Dot
no.	colour	marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Grey	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black
16	Blue	White
17	Purple	None
18	Grey	None
19	Orange	Black
20	Red	White
21	Brown	White
22	Pink	Red
23	Grey	Red
24	Black	White
25	White	None

* Connector made in conformity with MIL-C-24308

Cable Assembly

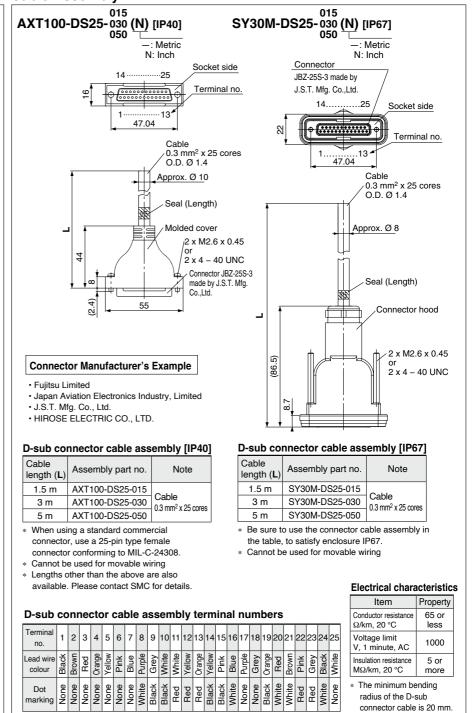

Specified Layout

(25 pins)

0

o 5

06 07

 \cap

1404

150 0 3 160 0 4

A mixture of single and double wiring can be specified on the manifold specification sheet. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 24 or less. 1 solenoid is required for the 2-position single, and 2 solenoids for the 2-position, and 4-position.

<u>COM.</u>

Electrical Wiring Specifications

0 140 01 150 02 160 03 160 04 170 05	,	wiring (connect	not specified, t ed to SOL. a a ons, valve and	and SOL. b)) regardless	
18 0 0 6 19 0 0 7 20 0 8 21 0 0 8 22 0 010 23 0 011 24 0 012 25 0 013	Connec	ctor ter	minal no	<u>.</u> -			
		wire no.	Pola	arity	Terminal no.	Lead wire colour	Dot marking
Station 1	SOL. a	1	(-)	(+)	1	White	None
	<u>SOL.b</u>	14	(–)	(+)	2	Brown	None
Station 2	<u></u> SOL. b	2	(-)	(+)	3	Green	None
	<u>SOL. a</u>	15	(-)	(+)	4	Yellow	None
Station 3	<u>SOL. b</u>	3 16	(-) (-)	(+) (+)	5	Grey	None
(Lm	<u>SOL. a</u>	4	(-) (-)	(+) (+)	6	Pink	None
Station 4	<u>SOL. b</u>	17	(-)	(+)	7	Blue	None
	SOL. a	5	(-)	(+)	8	Red	None
Station 5 {	SOL. b	18	(-)	(+)	9	Black	None
Station 6	SOL. a	6	(-)	(+)	10	Purple	None
	<u>SOL.b</u> SOL.a	19	(–)	(+)	11	Grey	Pink
Station 7		7	(-)	(+)	12	Red	Blue
	SOL. a		(-)	(+)	13	White	Green
Station 8	SOL. b	8 21	(-) (-)	(+) (+)	14	Brown	Green
L	SOL. a	 Q	(-) (-)	(+) (+)	15	White	Yellow
Station 9	SOL. b	22	(-)	(+)	16	Yellow	Brown
Station 10	<u>SOL. a</u>	10	(-)	(+)	17	White	Grey
Station 10 2	SOL. b	23	(-)	(+)	18	Grey	Brown
Station 11	SOL. a	11	(–)	(+)	19	White	Pink
	<u></u> SOL. 0		(-)	(+)	20	Pink	Brown
Station 12	<u></u>	12 25	(-)	(+)	21	White	Blue
	0	25	(–)	(+)	22	Brown	Blue
	COM.		()		23	White	Red
		13	(+)	(-)		_	
	0		sitive	Negative	24	Brown	Red

Connector Cable


GVVZS3000-21A-[] [IP40]

D-sub connector/cable

Cable length (L)	Assembly part no.	Note
1 m	GVVZS3000-21A-160	60°angled
3 m	GVVZS3000-21A-260	60°angled
5 m	GVVZS3000-21A-360	60°angled
8 m	GVVZS3000-21A-460	60°angled
3 m	GVVZS3000-21A-2	Standard
5 m	GVVZS3000-21A-3	Standard
8 m	GVVZS3000-21A-4	Standard

Shielded cable

Cable length (L)	Assembly part no.	Note
1 m	GVVZS3000-21A-1S	Shieled
3 m	GVVZS3000-21A-2S	Shieled
5 m	GVVZS3000-21A-3S	Shieled
8 m	GVVZS3000-21A-4S	Shieled
20 m	GVVZS3000-21A-5S	Made to order

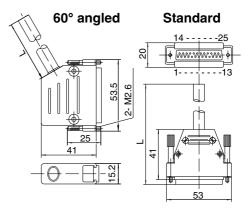


Electrical characteristics

Item	Property
Conductor resistance $\Omega/km,$ 20 $^{\circ}\text{C}$	Max. 57
Voltage limit V, 5 minute, AC	1500
Insulation resistance M Ω /km, 20 °C	20

Standard D-Sub connector cable assembly (option) AXT100-DS25- 010 050 (According to MIL-C24308)


^{*} Please contact SMC for details.

Electrical Wiring Specifications

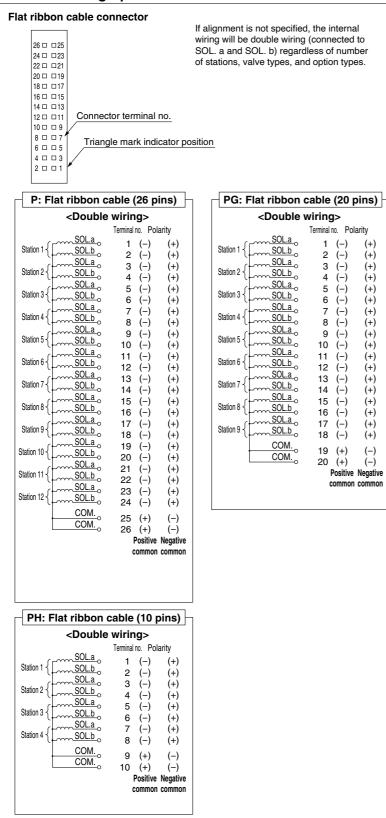


When using a valve with no polarity, either positive common or negative common can be used.

Flat Ribbon Cable Assembly

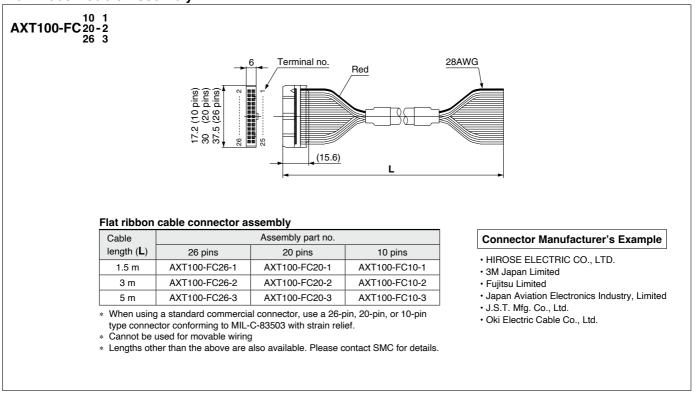

Specified Layout

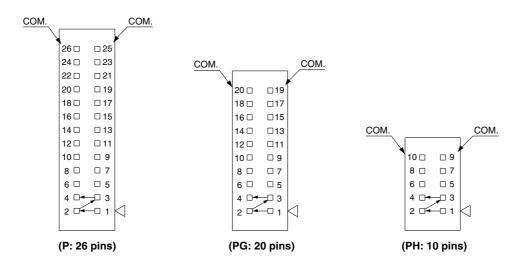

A mixture of single and double wiring can be specified on the manifold specification. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 24 or less for P, 18 or less for PG, and 8 or less for PH. 1 solenoid is required for the 2-position single, and 2 solenoids for the 2-position double, 3-position, and 4-position.



Plug-in Connector Connecting Base

Terminal Block Box (Spring Type)

SY3000/5000/7000 Series

05

How to Order Manifolds

10

Refer to pages 180 (SY5000) and 181 (SY7000) for the dimensions of Type 11/Bottom-ported type.

Series

	-	
	3	SY3000
	5	SY5000
	7	SY7000

Giype					
10	Side ported				
11	Bottom ported *1				

*1 The SY5000 manifold base is used for the bottom-ported SY3000. When ordering, refer to the "Plug-in Manifold Mixed Mounting Type" (from page 185).

P. E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

5 SUP/EXH block assembly

_	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot


- * 3/5(E) port is plugged for the built-in silencer type.
- * When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

3 Valve stations

SS5Y


TC: Spring type terminal block box

3



- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations.
 - Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- *2 Specified layout: Indicate the wiring specifications with the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- * This also includes the number of the blanking plate assembly.

How to Order Manifold Assembly

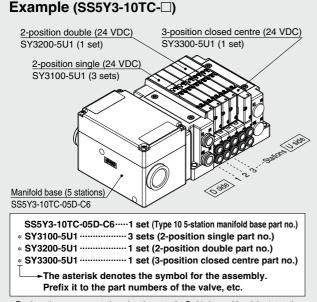

• For the valve arrangement, the valve closest to the D side is considered the 1st station. · Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

Mounting and Option

<u> </u>					
Symbol	Mounting	Option			
_	Direct	None			
AA		Name plate (with station number)			
BA	mounting	Name plate (without station number)			
D	DIN rail	Without name plate			
A□	mounting	Name plate (with station number)			
B	mounting	Name plate (without station number)			
F inter	Enter the number of stations inside				

D

DIN Rail Option

C6

_	DIN rail mounting (with DIN rail)					
0	DIN rail mounting (without DIN rail)					
3	For 3 stations Specify a length					
:	i longer than that of					
24	For 24 stations	the standard rail.				

- Enter the number of stations inside . (Refer to "DIN Rail Option" above.)
- Only direct mounting is available for the type 11 bottom-ported type. *

6 A, B port size (Metric/One-touch fitting)

0			Durant	Type '	10/Side	ported	Type 11/Bo	ttom ported		
Symbol		A, B port		SY3000	SY5000	SY7000	SY5000	SY7000		
C2			Ø2		_	—	-	-		
C3			Ø 3.2		-	_	_	-	08	
C3 C4 C6 C8 C10 C12	ŧ		Ø 4			_		-	KI	
C6	Straight		Ø 6					•		
C8	itra		Ø 8	-					Ser	
C10	0		Ø 10	—	—		_		Sal Sala	
C12			Ø 12	-	-		—		~	
CM*1		Strai	ght port, mixed sizes							
L4			Ø 4			—	_	_		
L6		Jpward	Ø 6				—	—	K	
L8			Ø 8	—			—	—		
L10	*2		15	Ø 10				-	-	O A M
L12				Ø 12	-	-		—	—	Jelsen
B 4	Elbow	≥ p	Ø 4			_	—	—		
B6	<u>e</u>	var	Ø 6				_	_		
B 8	ш	NUN	Ø 8	_			—	—		
B10	-	Downward	Ø 10	—	—		_	—		
B12			Ø 12				_	_	U	
LM*1		Elbow upwa	port, mixed sizes (Including ard and downward piping)			•	—	—		
P, E po	ort si	ze (C	ne-touch fittings)	Ø8	Ø 10	Ø 12	Ø 10	Ø 12		


A. B port size (Inch/One-touch fitting)

, =	P .									
Symbol	A, B port		Bnort		0/Side					
Oyinbur			SY3000	SY5000	SY7000	SY5000	SY7000			
N1			Ø 1/8"		_	_	_	_		
N3	÷		Ø 5/32"			_		_		
N7	įģ		Ø 1/4"							
N9	Straight		Ø 5/16"	_					XM	
N11	S		Ø 3/8"	-	_		_		element	
CM*1		Strai	ght port, mixed sizes							
LN3		-	Ø 5/32"		_	_	_	_		
LN7		Upward	Ø 1/4"			_	_	—		
LN9		a	Ø 5/16"	_	•	_	_	_		
LN11	*2	*2	_	Ø 3/8"	-	_	•	_	_	del Sansa
BN3	Š	ownward	Ø 5/32"		_	_	_	_		
BN7	Elbow		Ø 1/4"			_	_	—		
BN9	Ш	Ň	Ø 5/16"	-		_	_	_		
BN11		å	Ø 3/8"	_	_		_	_	U debu	
LM*1			port, mixed sizes (Including ard and downward piping)	•	•	•	_	_		
P, E po	ort si	ze (C	One-touch fittings)	Ø 5/16"	Ø 3/8"	Ø 1/2"	Ø 3/8"	Ø 1/2"		

*1 Indicate the sizes on the manifold specification sheet in the case of "CM" or "LM." The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting direction.

*2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly.

How to Order Valves (With mounting screw) Refer to page 17 for valve specifications.



1 Series				
3	SY3000			
5	SY5000			
7	SY7000			

2 Type of actuation

1	2-position	Single			
2	2-position	Double			
3		Closed centre			
4	3-position	Exhaust centre			
5		Pressure centre			
A *1	4	N.C./N.C.			
B *1	4-position dual 3-port	N.O./N.O.			
C *1	uuai 3-port	N.C./N.O.			

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal				
1	Metal seal				

4 Pilot type

	21
—	Internal pilot
R	External pilot

 When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure.

Back pressure check valve (Built-in valve type)

	—	None
	Н	Built-in
*		he rubber seal type is available. A
	manite	netalled type is available it a back

- manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 236 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

_	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K *1	High pressure type (1.0 MPa)
1 Only	the metal seal type is available for the

*1 Only the metal seal type is available for the high pressure type.



- Standard
 T With power saving circuit (Continuous duty type)
- Be sure to select the power saving circuit type if the valve is to be continuously
- energised for long periods of time.
 * Be careful of the energising time when the power saving circuit is selected. Refer to page 316 for details.

8 Rated voltage

5	24 VDC
6	12 VDC


9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification			
-	—	—				
R	—		Non-polar			
U	•					
S	_		Positive			
Z	•	•	common			
NS	_		Negative			
NZ	•		common			
E a su Ala			1 - 6			

 For the non-polar type, be careful of surge voltage intrusion.

Refer to page 317 for details. Only "Z" and "NZ" types are available with a power saving circuit.

Manual override

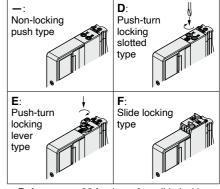



* Refer to page 36 for the safety slide locking manual override.

Type of mounting screw

_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)


- For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 222 for base gasket and mounting screw part numbers.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.



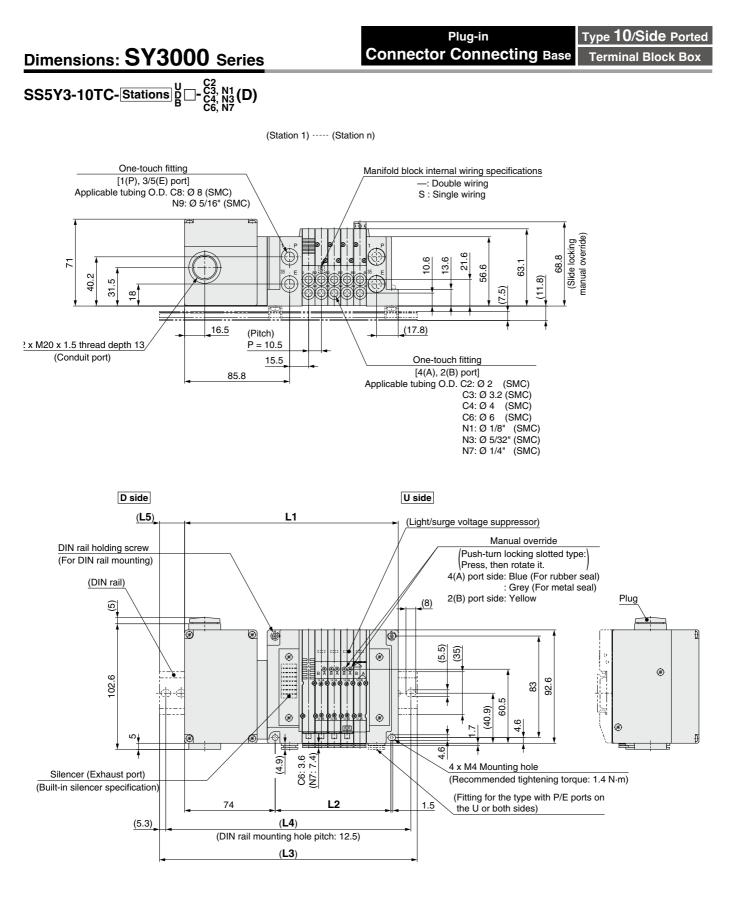


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	143	153.5	164	174.5	185	195.5	206	216.5	227	237.5	248	258.5	269	279.5	290	300.5	311	321.5	332	342.5	353	363.5	374
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	173	185.5	198	210.5	223	235.5	235.5	248	260.5	273	285.5	298	298	310.5	323	335.5	348	360.5	360.5	373	385.5	398	410.5
L4	162.5	175	187.5	200	212.5	225	225	237.5	250	262.5	275	287.5	287.5	300	312.5	325	337.5	350	350	362.5	375	387.5	400
L5	17.5	18.5	19.5	20.5	21.5	22.5	17	18	19	20	21	22	17	18	19	20	21	22	16.5	17.5	18.5	19.5	20.5

SMC

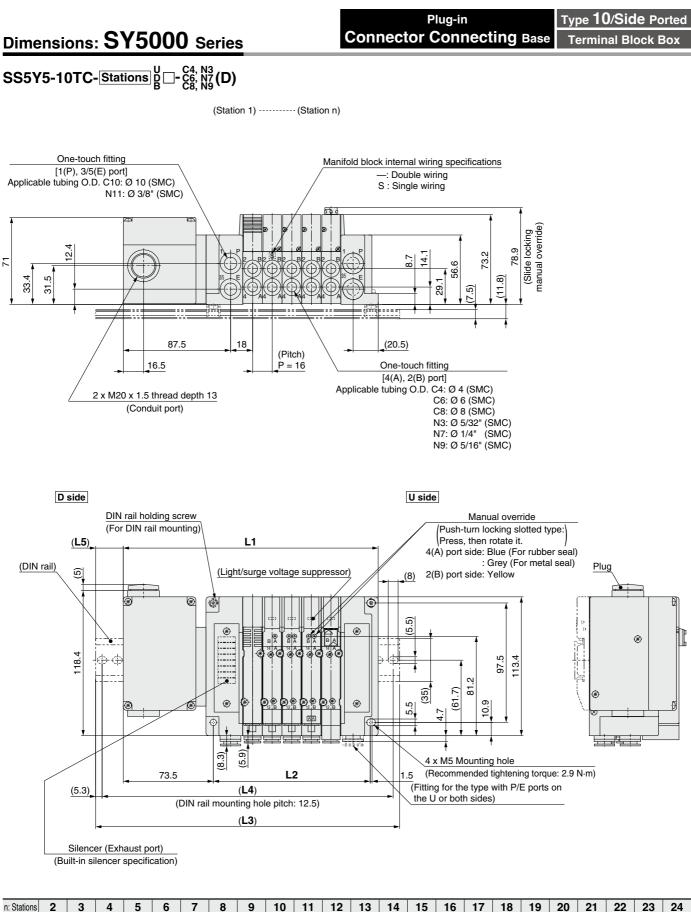

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432	448	464	480	496	512
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	198	210.5	223	248	260.5	273	285.5	310.5	323	335.5	348	373	385.5	398	423	435.5	448	460.5	485.5	498	510.5	535.5	548
L4	187.5	200	212.5	237.5	250	262.5	275	300	312.5	325	337.5	362.5	375	387.5	412.5	425	437.5	450	475	487.5	500	525	537.5
L5	21.5	19.5	18	22.5	20.5	19	17	21.5	20	18	16.5	21	19	17.5	22	20	18.5	16.5	21	19.5	17.5	22	20.5

537.5

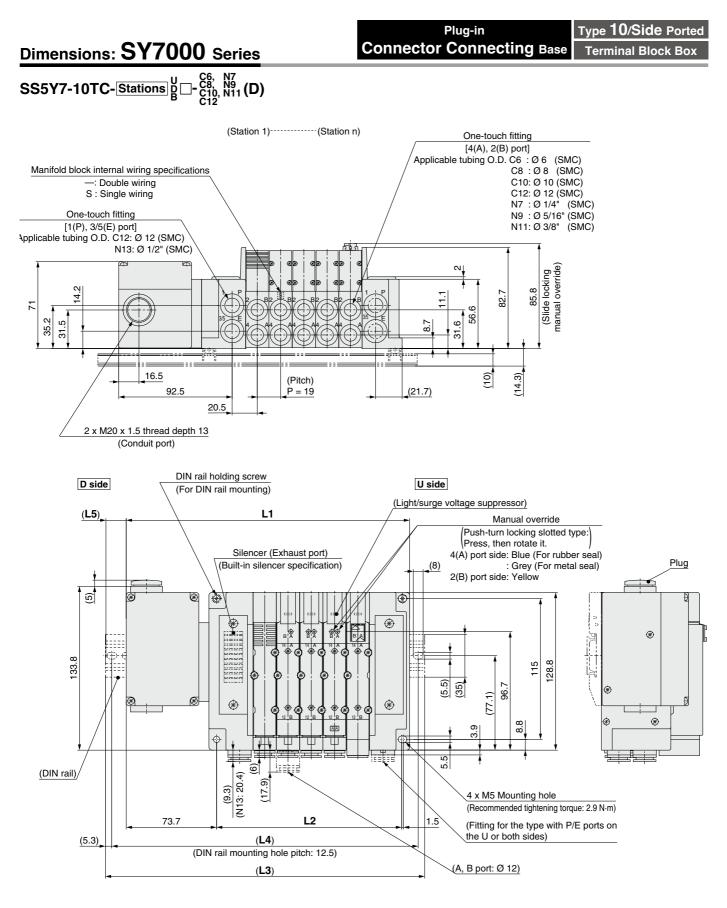

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	174.2	193.2	212.2	231.2	250.2	269.2	288.2	307.2	326.2	345.2	364.2	383.2	402.2	421.2	440.2	459.2	478.2	497.2	516.2	535.2	554.2	573.2	592.2
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	210.5	223	248	260.5	285.5	298	323	335.5	360.5	373	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5	610.5	623
L4	200	212.5	237.5	250	275	287.5	312.5	325	350	362.5	387.5	412.5	425	450	462.5	487.5	500	525	537.5	562.5	575	600	612.5
L5	20.5	17	20	17	20	16.5	19.5	16.5	19.5	16	19	22	19	22	18.5	21.5	18.5	21.5	18	21	18	21	17.5

SMC

Plug-in Connector Connecting Base

Terminal Block Box (Spring Type)

SY3000/5000/7000 Series С Є ЦК сЯХиз Понз

How to Order Manifolds

Refer to pages 182 to 184 for the dimensions of Type 12/Top-ported type.

Sei	ries
3	SY3000
5	SY5000
7	SY7000

2 ту	be
12	Top ported

3	Valve	e sta	itio	ns

SS5Y 3 - 12 TC - 05

FC:	Spring	type	terminal	block	box

ŝ	Symbol	Stations	Note
	02	2 stations	
	:	÷	Double wiring *1
	16	16 stations	
ſ	02	2 stations	
	:	:	Specified layout *2 (Up to 32 solenoids available)
	24	24 stations	

*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations.

Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

- *2 Specified layout: Indicate the wiring specifications with the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of the blanking plate assembly.

P, E port entry


U U side (2 to 10 stations)			
D	D side (2 to 10 stations)		
В	Both sides (2 to 24 stations)		

5 SUP/EXH block assembly

—	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- The P and E ports are only available on the U and D sides for the built-in silencer type. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of the P and E port entry. (Example: When the P and E port entry is on the D side, the silencer exhaust port is on the U side.)
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

How to Order Manifold Assembly

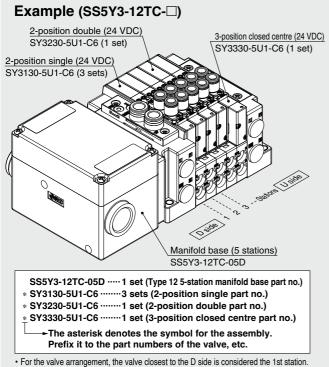

For the valve arrangement, the valve closest to the D side is considered the 1st station.
Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

	E port size ne-touch fi				

Symbol	SY3000	SY5000	SY7000	
_	Ø 8	Ø 10	Ø 12	
Ν	Ø 5/16"	Ø 3/8"	Ø 1/2"	


^{*} For N, sizes are in inches.

Mounting

Widdining				
_	Direct mounting			
D	DIN rail mounting (with DIN rail)			
D0	DIN rail mounting (without DIN rail)			
D3	For 3 stations Specify a length longer			
:	i than that of the standard			
D24	For 24 stations rail.			

 Refer to page 319 (SY3000/5000/7000 series: Specific product precautions 6) for instructions on fastening the DIN rail mounting type manifold.



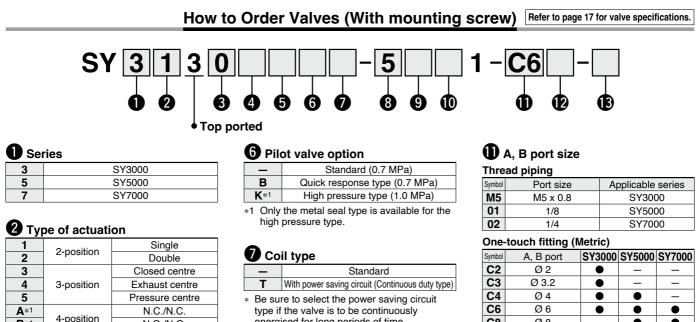

C*1 N.C./N.O. *1 Only the rubber seal type is available for the 4-position dual 3-port valve.

dual 3-port

N.O./N.O

Seal type

B*1

-	
0	Rubber seal
1	Metal seal

4 Pilot type

_	Internal pilot
R	External pilot

* When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure.

5 Back pressure check valve (Built-in valve type)

_	None
Н	Built-in

- * Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 236 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

- energised for long periods of time. Be careful of the energising time when the power saving circuit is selected. Refer to page 316 for details.

8 Rated voltage

5	24 VDC
6	12 VDC


9 Light/surge voltage suppressor and common specification

Symbol With light		Surge voltage suppressor	Common specification	
-	—	—		
R	_		Non-polar	
U	•			
S	_		Positive	
Z	•	-	common	
NS	_		Negative	
NZ	•		common	

- * For the non-polar type, be careful of surge voltage intrusion.
- Refer to page 317 for details. Only "Z" and "NZ" types are available with a

power saving circuit.

Manual override

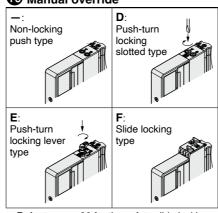

Refer to page 36 for the safety slide locking manual override.

Symbol	A, B port	SY3000	SY5000	SY7000
C2	Ø 2		—	—
C3	Ø 3.2		—	—
C4	Ø 4		•	—
C6	Ø 6		•	
C 8	Ø 8	_	•	
C10	Ø 10	—	—	
C12	Ø 12	—	—	

One-touch fitting (Inch)

Symbol	A, B port	SY3000	SY5000	SY7000
N1	Ø 1/8"		—	—
N3	Ø 5/32"			_
N7	Ø 1/4"		•	•
N9	Ø 5/16"	_		•
N11	Ø 3/8"	_	_	•

Thread type


_	Rc	
F	G	
N	NPT	
Т	NPTF	

Only — is available for M5.

B Type of mounting screw


_	Round head combination screw
В	Hexagon socket head cap screw
Κ	Round head combination screw (Drop prevention type)
н	Hexagon socket head cap screw (Drop prevention type)

- For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 222 for base gasket and mounting screw part numbers.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.





Terminal Block Connection

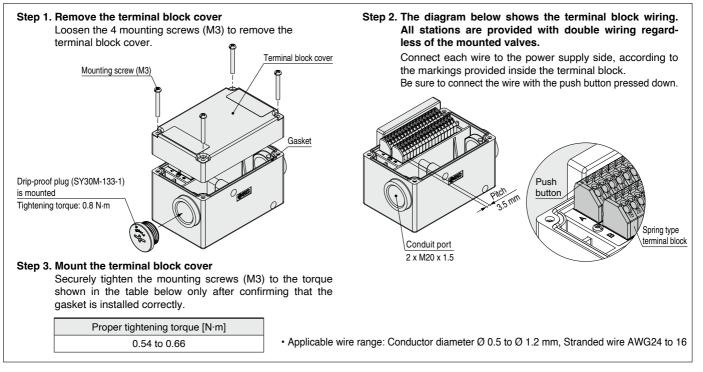

Electrical Wiring Specifications (IP67 compatible)

3		
	Standard wiring	
	Terminal no. Polarity	
	outing (<mark>SOL.a</mark> ∩ 1A (−) (+)	
	Station 1 $\left \underbrace{SOL.b}_{0} \right = 1B \left(- \right) \left(+ \right)$	
	(- SOL.a) 2A (-) (+)	
	Station 2 $SOL.b$ 2B (-) (+)	
	(-) $(+)$	
	Station 3 $\left\{ \underbrace{SOL.b}_{OB} 3B (-) (+) \right\}$	
	Obsting $4 = \frac{\text{SOL.a}}{\text{SOL.a}} = 4A$ (-) (+)	
	Station 4 $\left\{ \underbrace{SOL.b}_{OC} \circ 4B (-) (+) \right\}$	
	Station 5 $SOL.a$ $SA (-) (+)$	
	(-) $(+)$	
	Station 6 $SOL.a$ 6A (-) (+)	
	(-) $(+)$	
0	Station 7	
	Station 8	
If alignment is not specified, the internal wiring will be double wiring	(1111 SOL 20 8B (-) (+)	
(connected to SOL. a and SOL. b)	Station 9	
regardless of number of stations,		
valve types, and option types.		
 When using a valve with no 		
polarity, either positive common or negative common	Station 123 SOLD	
can be used.		
	30L.10 + 13B (-) (+)	
	Station 14 $\left\{ \underbrace{\text{SOL.b}}_{\text{OCL}} \circ 14B \left(- \right) \right\}$	
	Solution of $(-)$ $(+)$	
	Station 15 $SOL.b$ 15B (-) (+)	
	(-164) (+)	
	Station 16 $\left\{ \underbrace{SOL.b}_{-} 16B (-) (+) \right\}$	

Specified Layout

A mixture of single and double wiring can be specified on the manifold specification sheet. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 32 or less. 1 solenoid is required for the 2-position single, and 2 solenoids for the 2-position double, 3-position, and 4-position.

#((D)	×(D)
4 () 4	
#(D)	5 (D
	\$(D)
	7 (D
#(D)	\mathbb{A}
#(D)	% (D \\
14BCD	
	ÍS (D
C)

(-)Positive Negative common common

(+)

---- COM.

Plug-in Connector Connecting Base

Terminal Block Box

SY3000/5000/7000 Series

05

How to Order Manifolds

Refer to pages 180 (SY5000) and 181 (SY7000) for the dimensions of Type 11/Bottom-ported type.

Series

Type 10

Type 11 Bottom Ported

Side Ported

<u> </u>		
3	3 SY3000	
5	SY5000	
7	SY7000	

2 Type

÷ 71		
10	Side ported	
11	Bottom ported*1	

*1 The SY5000 manifold base is used for the bottom-ported SY3000. When ordering, refer to the "Plug-in Manifold Mixed Mounting Type" (from page 185).


3 Valve stations

SS5Y

_			
Symbol	Stations	Note	
02	2 stations		
:	÷	Double wiring*1	
10	10 stations		
02	2 stations	Creatified lawsut*2	
:		 Specified layout*² (Up to 20 solenoids available) 	
20	20 stations		

- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- *2 Specified layout: Indicate the wiring specifications with the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of the blanking plate assembly.

How to Order Manifold Assembly

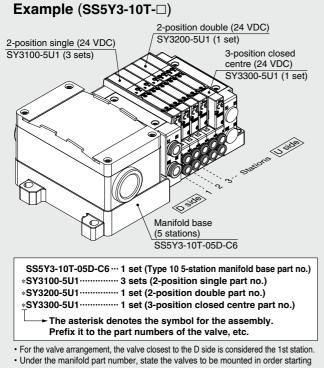

with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

When mixing top-ported configurations, select from those listed on page 76. In such cases, use caution as there is also output on the A and B ports on the base side. Specify on the manifold specification sheet if plugs are required for the A and B ports on the base side.

P, E port entry

C6

U	U U side (2 to 10 stations)	
D	D side (2 to 10 stations)	
B Both sides (2 to 20 stations)		

5 SUP/EXH block assembly

_	Internal pilot		
S	Internal pilot, Built-in silencer		
R	External pilot		

 3/5(E) port is plugged for the built-in silencer type.

When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

Refer to the page on the right for 6.

Mounting and Option

Symbol	Mounting	Option	
Symbol	wounting	Name plate	Station number
—	Diverset	—	—
AA	Direct mounting		
BA	mounting		—
D	DINL	_	
A	DIN rail mounting		
B	mounting		_

 * Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)

- Only direct mounting is available for the type
 11 bottom-ported type.
- Refer to page 319 for the fixation of DIN rail mounting type manifold.

DIN Rail Option

_	Standard length		
0	Without DIN rail (with bracket)		
3	For 3 stations	Specify a longer rail than the	
:	1		
20	For 20 stations		




6	A , I	Вр	ort size	(Metri	c/One	-touch	fitting	3)	
Cumbal		A, B port		Type 1	10/Side	ported	Type 11/Bo	ttom ported	
Symbol		А,	в роп	SY3000	SY5000	SY7000	SY5000	SY7000	
C2			Ø 2		—	—	—	—	_
C3			Ø 3.2		—	_	—	_	08
C 4			Ø 4		•	_	•	-	KI
C6	igh		Ø 6		•		•	•	
C 8	Straight		Ø 8	-	•		•	•	SK DO
C10			Ø 10	_	_	•	_	•	San San San
C12			Ø 12	-	—		-	•	N.
CM *1		Straig	ht port, mixed sizes						
L4			Ø 4			—	—	—	
L6		2	Ø 6				—	—	K
L8		Upward	Ø 8	-			_	_	
L10		5	Ø 10	—	—		—	—	
L12			Ø 12	—	—		—	—	Jel ⁹⁰⁰
B 4	Elbow*2		Ø 4			—	-	—	
B6	I A	Downward	Ø 6				-	—	
B 8	-	NUN	Ø 8	—			—	—	
B10		ß	Ø 10	—	—		—	—	
B12			Ø 12	—	—		_	—	Jee
LM*1	Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_		
	P, E port size (One-touch fittings)			Ø8	Ø 10	Ø 12	Ø 10	Ø 12	

<u>A, D</u>	<u> </u>	port size (incluone-touch inting)							
Symbol		A, B port		<u> </u>		ported			
				SY3000	SY5000	SY7000	SY5000	SY/000	
N1			Ø 1/8"		—	—	—	—	
N3		9	Ø 5/32"			—	•	—	
N7	igh		Ø 1/4"	•	•	•	•	•	
N9	Straight	9	Ø 5/16"	-	•	•	•	•	
N11	0,		Ø 3/8"	_	_	•	_	•	el Bassie
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•	
LN3			Ø 5/32"	•	_	_	_	_	
LN7		Jpward	Ø 1/4"	•	•	_	_		
LN9			Ø 5/16"	_	•	_	_		
LN11			Ø 3/8"	_	_	•	_	_	Constant of the second se
BN3	Elbow*2	ď	Ø 5/32"	•	_	_	_	_	
BN7	lbc	wa	Ø 1/4"	•	•	_	_	—	
BN9	ш	Downward	Ø 5/16"	_	•	_	_	—	
BN11		ŏ	Ø 3/8"	—	—	•	—	—	A data
LM∗1		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_	
P, E port size (One-touch fittings)		Ø 5/16"	Ø 3/8"	Ø 1/2"	Ø 3/8"	Ø 1/2"			


A, B port size (Inch/One-touch fitting)

*1 Indicate the sizes on the manifold specification sheet in the case of "CM" or "LM." The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting direction.

*2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 228 to 230).







Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

1	0 position	Single		
2	2-position	Double		
3		Closed centre		
4	3-position	Exhaust centre		
5		Pressure centre		
A *1	4	N.C./N.C.		
B *1	4-position dual 3-port	N.O./N.O.		
C *1	uuai 3-port	N C /N O		

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

000	u type
0	Rubber seal
1	Metal seal

4 Pilot type

	21
—	Internal pilot
R	External pilot

 When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure.

5 Back pressure check valve (Built-in valve type)

—		None
Н		Built-in
*	manifo pressu	he rubber seal type is available. A old installed type is available if a back ure check valve with a metal seal is

required. Refer to page 236 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.

 The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

_	Standard (0.7 MPa)		
B Quick response type (0.7 MPa)			
K *1	High pressure type (1.0 MPa)		
1 Only	Only the metal seal type is available for the		

high pressure type.



- Standard
 With power saving circuit (Continuous de
- T With power saving circuit (Continuous duty type) Be sure to select the power saving circuit type if the valve is to be continuously
- energised for long periods of time.
 * Be careful of the energising time when the power saving circuit is selected. Refer to page 316 for details.

8 Rated voltage

5	24 VDC
6	12 VDC


9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification		
-	—	—			
R	—		Non-polar		
U	•				
S	_		Positive		
Z	•	•	common		
NS	_		Negative		
NZ	•		common		
. For the	Ear the near polar turns, he correctul of ourses				

 For the non-polar type, be careful of surge voltage intrusion.

Refer to page 317 for details. Only "Z" and "NZ" types are available with a power saving circuit.

Manual override

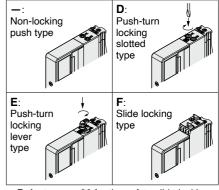



* Refer to page 36 for the safety slide locking manual override.

Type of mounting screw

 Round head combination screw 	
B Hexagon socket head cap screw	
K Round head combination screw (Falling-out-prevention t	
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
 When ordering a valve individually, the
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 222 for base gasket and mounting screw part numbers.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.



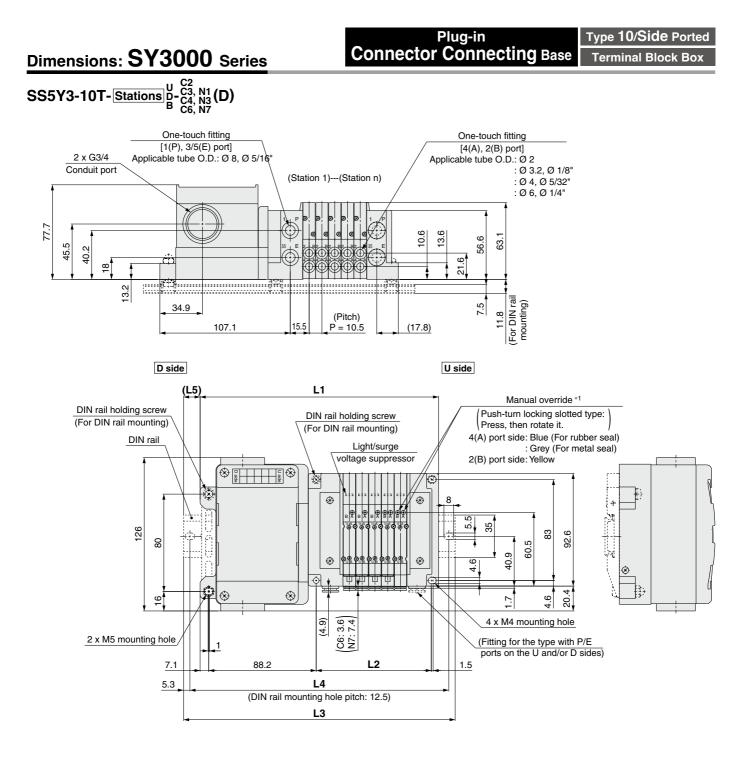


*1 Refer to page 177 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.

* These figures show the "SS5Y3-10T-05D-C6."

* Refer to page 182 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	164.3	174.8	185.3	195.8	206.3	216.8	227.3	237.8	248.3	258.8	269.3	279.8	290.3	300.8	311.3	321.8	332.3	342.8	353.3
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252
L3	198	198	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373	385.5
L4	187.5	187.5	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325	337.5	350	362.5	375
L5	17	11.5	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15	16

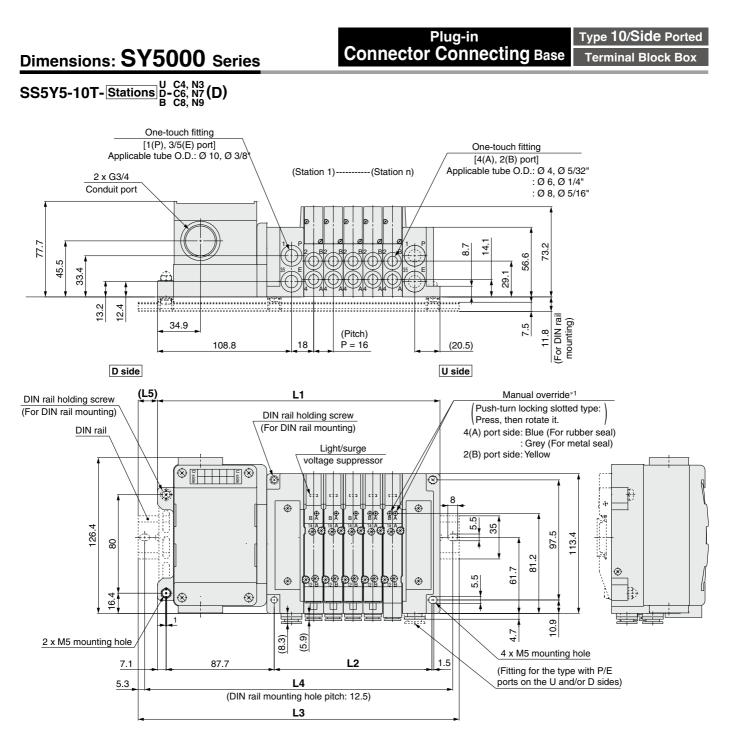


*1 Refer to page 178 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.

* These figures show the "SS5Y5-10T-05D-C8."

* Refer to page 183 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	181.3	197.3	213.3	229.3	245.3	261.3	277.3	293.3	309.3	325.3	341.3	357.3	373.3	389.3	405.3	421.3	437.3	453.3	469.3
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368
L3	210.5	223	248	260.5	273	285.5	310.5	323	335.5	360.5	373	385.5	398	423	435.5	448	460.5	485.5	498
L4	200	212.5	237.5	250	262.5	275	300	312.5	325	350	362.5	375	387.5	412.5	425	437.5	450	475	487.5
L5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14	12.5	17	15	13.5	11.5	16	14.5



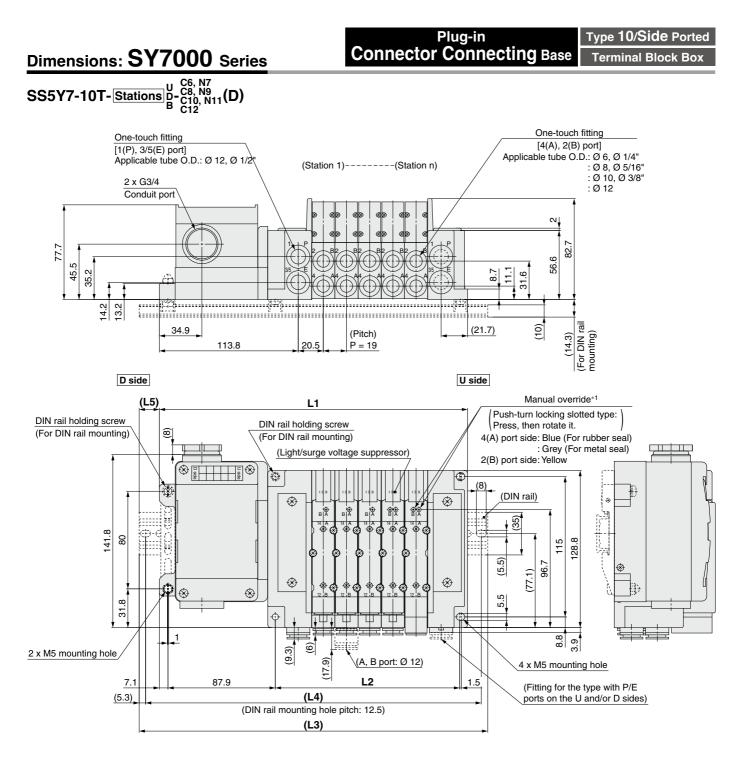

*1 Refer to page 179 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.

* These figures show the "SS5Y7-10T-05D-C10."

* Refer to page 184 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	195.5	214.5	233.5	252.5	271.5	290.5	309.5	328.5	347.5	366.5	385.5	404.5	423.5	442.5	461.5	480.5	499.5	518.5	537.5
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436
L3	223	248	260.5	285.5	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5	510.5	523	548	573
L4	212.5	237.5	250	275	287.5	312.5	325	350	362.5	387.5	400	425	437.5	462.5	475	500	512.5	537.5	562.5
L5	14	17	13.5	16.5	13.5	16.5	13	16	13	16	12.5	15.5	12.5	15.5	12	15	12	15	18

Plug-in Connector Connecting Base

Terminal Block Box

SS5Y 3 - 12T

SY3000/5000/7000 Series С Є ЦК сЯЦия Понз

How to Order Manifolds

Refer to pages 182 to 184 for the dimensions of Type 12/Top-ported type.

Series

<u> </u>	
3	SY3000
5	SY5000
7	SY7000

3 P, E port entry

<u> </u>	
U *1	U side (2 to 10 stations)
D *1	D side (2 to 10 stations)
В	Both sides (2 to 20 stations)

*1 For type "S", SUP/EXH block assembly with a built-in silencer, choose U or D for P, E port entry.

2	Valve	stations	

Symbol	Stations	Note
02	2 stations	
:	÷	Double wiring ^{*1}
10	10 stations	
02	2 stations	On a sifie of law sutta?
:	÷	Specified layout* ² (Up to 20 solenoids available)
20	20 stations	(Op to 20 soleriolds available)

- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- *2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of the blanking plate assembly.

4 SUP/EXH block assembly

—	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot


- The P and E ports are only available on the U and D sides for the built-in silencer type. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of the P and E port entry. (Example: When the P and E port entry is on the D side, the silencer exhaust port is on the U side.)
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

5 P, E port size

(One-touch hungs)								
Symbol	SY3000	SY5000	SY7000					
_	Ø 8	Ø 10	Ø 12					
N	Ø 5/16"	Ø 3/8"	Ø 1/2"					

* For N, sizes are in inches.

How to Order Manifold Assembly

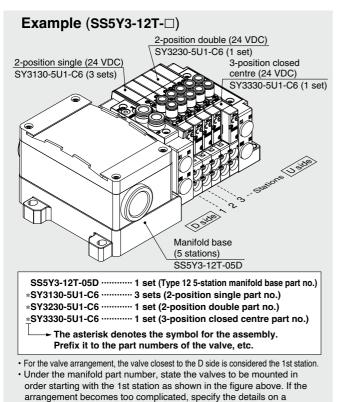


6 Mounting

• Mounting						
_	Direct mounting					
D		DIN rail mounting				
		(With DIN rail)				
DO	DIN rail mounting					
D0		(Without DIN rail)				
D3	For 3 stations	Specify a length longer				
:	÷	than that of the standard				
D20	For 20 stations	rail.				

 Refer to page 319 for the fixation of DIN rail mounting type manifold.

manifold specification sheet.

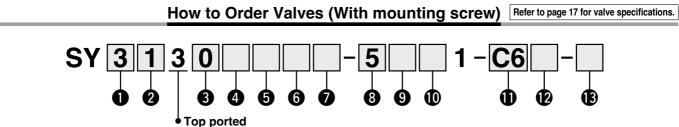

0	Series
---	--------

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

1	2-position	Single	
2	2-position	Double	
3		Closed centre	
4	3-position	Exhaust centre	
5		Pressure centre	
A *1	4-position dual 3-port	N.C./N.C.	
B *1		N.O./N.O.	
C *1	uuai 3-port	N.C./N.O.	

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

<u> </u>	
0	Rubber seal
1	Metal seal

4 Pilot type

—	Internal pilot
R	External pilot
	· · · · · · · · · · · · · · · · · · ·

 When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure.

Back pressure check valve (Built-in valve type)

—	None
Н	Built-in

- Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 236 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

Ι	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K *1	High pressure type (1.0 MPa)
Only the metal seal type is available for the	

*1 Only the metal seal type is available for the high pressure type.

Coil type

- Standard
 With power saving circuit (Continuous duty type)
- Be sure to select the power saving circuit type if the valve is to be continuously
- energised for long periods of time.
 Be careful of the energising time when the power saving circuit is selected. Refer to page 316 for details.

8 Rated voltage


5	24 VDC
6	12 VDC

9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
-	—	—	
R	—		Non-polar
U	•		
S	—		Positive
Z	•	•	common
NS	—		Negative
NZ	•		common

- For the non-polar type, be careful of surge voltage intrusion.
- Refer to page 317 for details. Only "Z" and "NZ" types are available with a
- power saving circuit.

Manual override

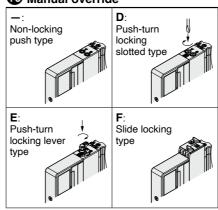

* Refer to page 36 for the safety slide locking manual override.

() A, B port size

Thread piping		
Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	Ø 2		—	—
C3	Ø 3.2		_	_
C4	Ø 4		•	_
C6	Ø 6			
C8	Ø 8	_		
C10	Ø 10	_	_	•
C12	Ø 12	—	—	

One-touch fitting (Inch)

Symbol	A, B port	SY3000	SY5000	SY7000
N1	Ø 1/8"		—	-
N3	Ø 5/32"			_
N7	Ø 1/4"		•	
N9	Ø 5/16"	_		•
N11	Ø 3/8"	_	_	

Thread type

_	Rc	
F	G	
N	NPT	
Т	NPTF	

* Only - is available for M5.


Type of mounting screw

_	Round head combination screw
В	Hexagon socket head cap screw
Κ	Round head combination screw (Drop prevention type)
н	Hexagon socket head cap screw (Drop prevention type)

- For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 222 for base gasket and mounting screw part numbers.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

٨	Protec	ctiv	e class
<u> </u>	class	Ш	re class (Mark:⋘)

Terminal Block Connection

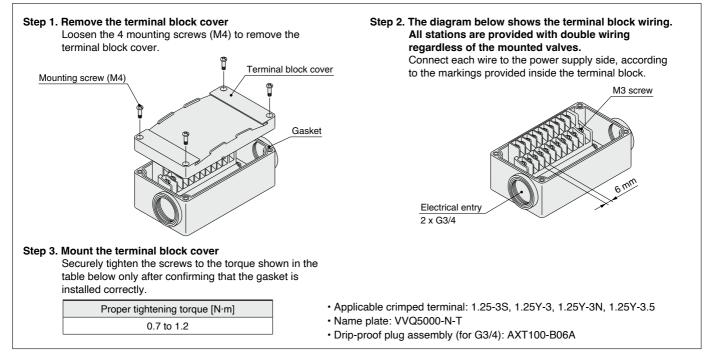


Electrical Wiring Specifications (IP67 compatible)

J J J J J J J J J J		-7
	Standard wir	ing
		al no. Polarity
	Station 1 { SOL.a SOL.b Station 1	() ()
	SOL.a SOL.a	B (-) (+)
	Station 2	· (-) (+)
	SOL.a SOL.a	3 (-) (+)
	Station 3	() ()
	SOL a SE	() ()
	Station 4	() ()
	SOL a 4E	() ()
	Station 5	() ()
	SOL a SE	
	Station 6	
	G SOL a GE	() ()
	Station 7	() ()
	SOL a 7E	() ()
If alignment is not specified, the	Station 8	
internal wiring will be double wiring	Solution of Contraction of SOLia SOLia	() ()
(connected to SOL. a and SOL. b)	Station 9 { Sol.b 94	
regardless of number of stations,	SOL.a JOE	() ()
valve types, and option types.	Station 10 1 SOL h	() ()
	0 10E	3 (-) (+)
* When using a valve with no	└────○ COM	() ()
polarity, either positive common or negative common can be used.		Positive Negative common common

Specified Layout

A mixture of single and double wiring can be specified on the manifold specification sheet. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 20 or less. 1 solenoid is required for the 2-position single, and 2 solenoids for the 2-position double, 3-position, and 4-position.

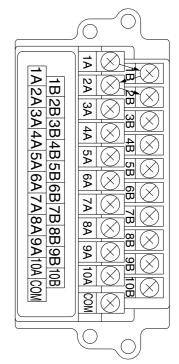



Plug-in Connector Connecting Base

Lead Wire

SS5Y

S Number of cores (Lead wire)

4 Lead wire length

11

L2

L3

2

3

3

34 cores

17 cores

9 cores

0.6 m

1.5 m

3 m

SY3000/5000/7000 Series

How to Order Manifolds

Refer to pages 180 (SY5000) and 181 (SY7000) for the dimensions of Type 11/Bottom-ported type.

0	Series
---	--------

Type 10

Type 11 **Bottom Ported**

Side Ported


3	SY3000
5	SY5000
7	SY7000

2 Type

Side ported		
Bottom ported*1		

11 *1 The SY5000 manifold base is used for the bottom-ported SY3000. When ordering, refer to the "Plug-in Manifold Mixed Mounting Type" (from page 185)


How to Order Manifold Assembly

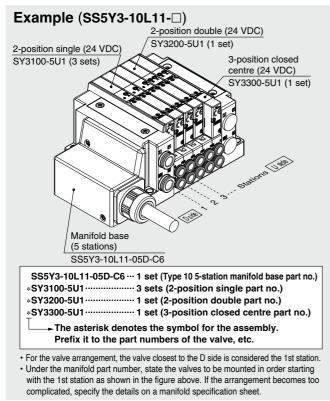

When mixing top-ported configurations, select from those listed on page 86. In such cases, use caution as there is also output on the A and B ports on the base side. Specify on the manifold specification sheet if plugs are required for the A and B ports on the base side

5 Valve stations

Symbol	Stations	Note			
02	2 stations				
:	÷	Double wiring*1			
16	16 stations				
02	2 stations	Specified layout*2			
:	÷	(Up to 32 solenoids			
24 24 stations		available)			
(L2	⊐)	,			
(L2) Symbol	□) Stations	Note			
(L2	⊐)	,			
(L2) Symbol	□) Stations	Note			
(L2 Symbol 02 :	Stations 2 stations :	Note			
(L2 Symbol 02 : 08	Stations 2 stations : 8 stations	Note Double wiring*1			



C6

ymbol	Stations	Note			
02	2 stations				
:	÷	Double wiring*1			
80	8 stations				
02	2 stations	Specified layout*2			
	:	(Up to 16 solenoids			
16	16 stations	available)			

05

*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations Use of a 2-position single solenoid will result in an unused control

- signal. If this is not desired, order with a specified layout. *2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and
- 4-position valves cannot be used where single wiring has been specified.)
- * This also includes the number of the blanking plate assembly.

6 P, E port entry


U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

SUP/EXH block assembly

_	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- * 3/5(E) port is plugged for the built-in silencer type.
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.



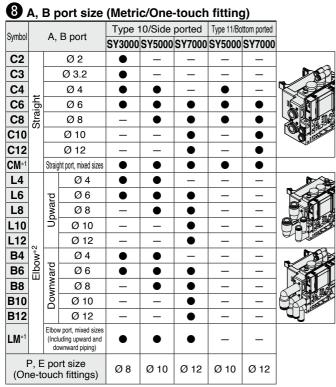

A, B port size (Inch/One-touch fitting)									
Symbol	A, B port		Type 1	0/Side	ported	Type 11/Bo	ttom ported		
Oymbol		,	Dipon	SY3000	SY5000	SY7000	SY5000	SY7000	
N1			Ø 1/8"		—	—	—	—	
N3			Ø 5/32"		•	—	•	—	
N7	ight		Ø 1/4"	•	•	•	•	•	
N9	Straight		Ø 5/16"	-	•	•	•	•	
N11			Ø 3/8"	-	—	•	—	•	el Bassier
CM *1		Straig	ht port, mixed sizes	•	•	•	•	•	
LN3		_	Ø 5/32"	•	_	_	_	—	
LN7		/arc	Ø 1/4"	•	•	—	—	—	
LN9		Jpward	Ø 5/16"	_		—	—	—	
LN11	~		Ø 3/8"	—	—	•	—	—	elens.
BN3	Elbow*2	Ð	Ø 5/32"		—	—	—	—	
BN7	ğ	Downward	Ø 1/4"		•	—	—	—	
BN9	-	N N	Ø 5/16"	—	•	—	—	—	
BN11		صّ Ø 3/8"		—	—	•	—	—	Take
LM*1		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_	
P, E port size (One-touch fittings)			Ø 5/16"	Ø 3/8"	Ø 1/2"	Ø 3/8"	Ø 1/2"		

Indicate the sizes on the manifold specification sheet in the case of "CM" or "LM." *1 The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting direction

*2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 228 to 230).

9 Mounting and Option


B

Symbol	Mounting	Option		DIN Rail Option			
Symbol	Mounting	Name plate	Station number	 Standard length 			
_	D: .	_	_	0	Withou	t DIN rail (with bracket)	
AA	Direct mounting	•	•	3	For 3 stations	Specify a longer rail than the	
BA	mounting	•	_	:	÷	total length of specified	
D	DIN	_	—	24	For 24 stations	stations.	
A	DIN rail mounting		•				
	mounting						

Enter the number of stations inside \Box when it is larger than the number of valve stations. (Refer to "DIN Rail Option" above.)

Only direct mounting is available for the type 11 bottom-ported type.
 Refer to page 319 for the fixation of DIN rail mounting type manifold.





1 Sei	ries
3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

1	2-position	Single								
2	2-position	Double								
3		Closed centre								
4	3-position	Exhaust centre								
5		Pressure centre								
A *1	4	N.C./N.C.								
B *1	4-position dual 3-port	N.O./N.O.								
C *1	uuai 5-port	N.C./N.O.								

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

	- 71 **
0	Rubber seal
1	Metal seal

4 Pilot type

<u> </u>	
_	Internal pilot
R	External pilot

* When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure.

Back pressure check valve (Built-in valve type)

None
Built-in

- * Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 236 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

_	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K ∗1	High pressure type (1.0 MPa)

*1 Only the metal seal type is available for the high pressure type.

Coil type

- Standard

- With power saving circuit (Continuous duty type)
 Be sure to select the power saving circuit type if the valve is to be continuously energised for long periods of time.
- Be careful of the energising time when the power saving circuit is selected. Refer to page 316 for details.

8 Rated voltage

5

6


	<u> </u>
5	24 VDC
;	12 VDC

9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification					
_	—	—						
R	_		Non-polar					
U	•							
S	—	-						
Z	•		common					
NS	—	Negative						
NZ	•		common					

- * For the non-polar type, be careful of surge voltage intrusion.
 - Refer to page 317 for details.
- Only "Z" and "NZ" types are available with a power saving circuit.

Manual override

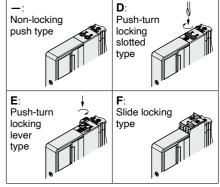



 Refer to page 36 for the safety slide locking manual override.

Type of mounting screw

_	Round head combination screw
В	Hexagon socket head cap screw
Κ	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included.
 Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance.
 Refer to page 222 for base gasket and mounting screw part numbers.
 * "B" and "H" cannot be selected for the
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.



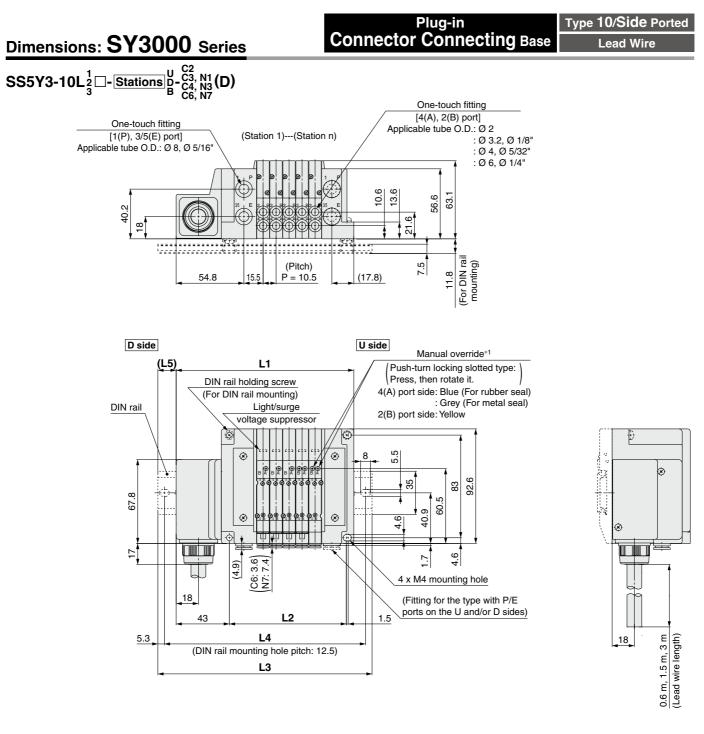


*1 Refer to page 177 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.

* These figures show the "SS5Y3-10L1 \square -05D-C6."

* Refer to page 182 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	112	122.5	133	143.5	154	164.5	175	185.5	196	206.5	217	227.5	238	248.5	259	269.5	280	290.5	301	311.5	322	332.5	343
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	135.5	148	160.5	173	185.5	198	210.5	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373
L4	125	137.5	150	162.5	175	187.5	200	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325	337.5	350	362.5
L5	12	13	14	15	16	17	18	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15

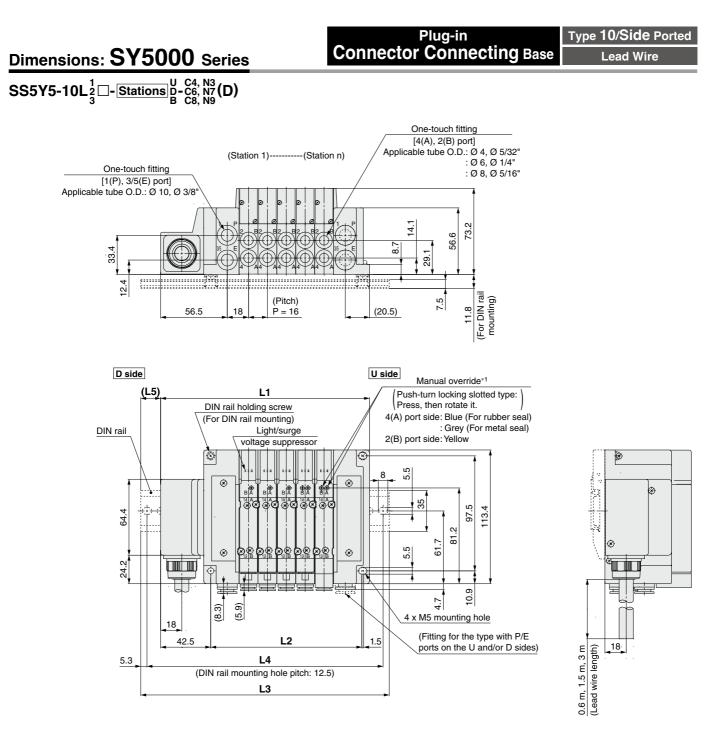


*1 Refer to page 178 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.

∗ These figures show the "SS5Y5-10L1□-05D-C8."

* Refer to page 183 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	129	145	161	177	193	209	225	241	257	273	289	305	321	337	353	369	385	401	417	433	449	465	481
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	160.5	173	185.5	210.5	223	235.5	260.5	273	285.5	298	323	335.5	348	360.5	385.5	398	410.5	435.5	448	460.5	473	498	510.5
L4	150	162.5	175	200	212.5	225	250	262.5	275	287.5	312.5	325	337.5	350	375	387.5	400	425	437.5	450	462.5	487.5	500
L5	16	14	12.5	17	15	13.5	18	16	14.5	12.5	17	15.5	13.5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15

SMC

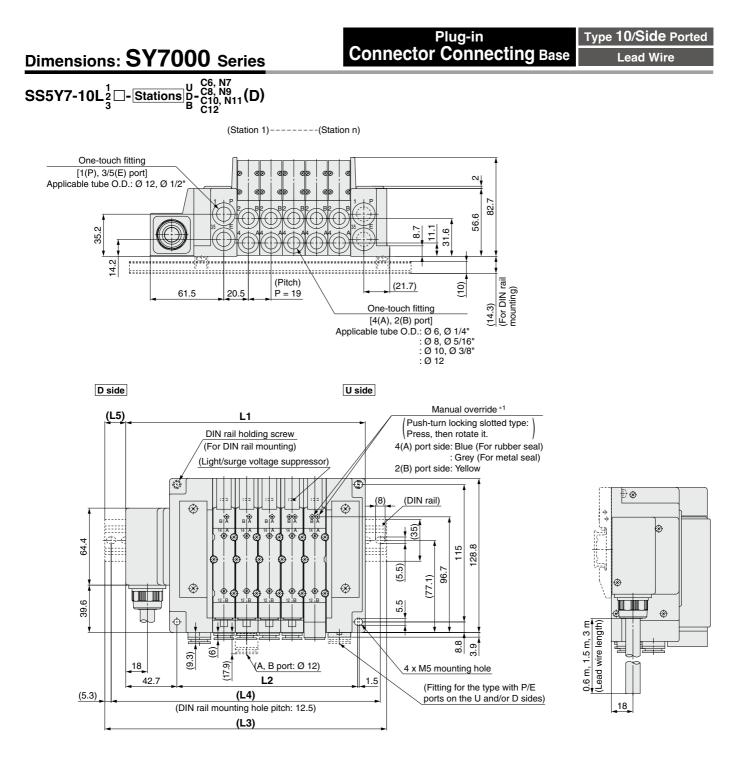

*1 Refer to page 179 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.

∗ These figures show the "SS5Y7-10L1□-05D-C10."

* Refer to page 184 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	143.2	162.2	181.2	200.2	219.2	238.2	257.2	276.2	295.2	314.2	333.2	352.2	371.2	390.2	409.2	428.2	447.2	466.2	485.2	504.2	523.2	542.2	561.2
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	173	185.5	210.5	235.5	248	273	285.5	310.5	323	348	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5
L4	162.5	175	200	225	237.5	262.5	275	300	312.5	337.5	350	375	387.5	412.5	425	450	462.5	487.5	500	525	537.5	562.5	575
L5	15	11.5	14.5	17.5	14.5	17.5	14	17	14	17	13.5	16.5	13.5	16.5	13	16	13	16	12.5	15.5	12.5	15.5	12

Plug-in Connector Connecting Base

Lead Wire

SY3000/5000/7000 Series

How to Order Manifolds

12



Series

-	
3	SY3000
5	SY5000
7	SY7000

2 Number of cores


(Lead wire)		🕑 Lea	ad wire length	
	L1	34 cores	1	0.6 m
	L2	17 cores	2	1.5 m
	L3	9 cores	3	3 m

5 P. E port entry

U *1	U side (2 to 10 stations)
D *1	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

*1 6 For type "S", SUP/EXH block assembly with a built-in silencer, choose U or D for P, E port entry.

How to Order Manifold Assembly

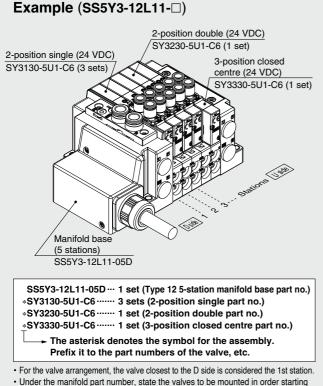

· Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

S

05

(L1	⊐)		(L3	⊐)	
Symbol	Stations	Note	Symbol	Stations	Note
02	2 stations		02	2 stations	
:	:	Double wiring*1	:	:	Double wiring*1
16	16 stations		04	4 stations	
02	2 stations	Specified layout*2	02	2 stations	Specified layout*2
:	:	(Up to 32 solenoids	:	:	(Up to 8 solenoids
24	24 stations	available)	08	8 stations	available)
(L2	(۲				

Symbol	Stations	Note
02	2 stations	
:	÷	Double wiring ^{*1}
08	8 stations	
02	2 stations	Specified layout*2
	:	(Up to 16 solenoids
16	16 stations	available)

- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control
- signal. If this is not desired, order with a specified layout. *2 Specified layout: Indicate the wiring specifications on the manifold
- specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- * This also includes the number of the blanking plate assembly.

6 SUP/EXH block assembly

-	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot
	1

- The P and E ports are only available on the U and D sides for the built-in silencer type. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of the P and E port entry. (Example: When the P and E port entry is on the D side, the silencer exhaust port is on the U side.)
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

P, E port size (One-touch fittings)


Symbol	SY3000	SY5000	SY7000	
-	Ø 8	Ø 10	Ø 12	
Ν	Ø 5/16"	Ø 3/8"	Ø 1/2"	

For N, sizes are in inches

A Mounting

_	Direct mounting			
D	DIN rail mounting (With DIN rail)			
D0	DIN rail mounting (Without DIN rail)			
D3	For 3 stations	Specify a length longer		
:	:	than that of the standard		
D24	For 24 stations	rail.		

* Refer to page 319 for the fixation of DIN rail mounting type manifold.

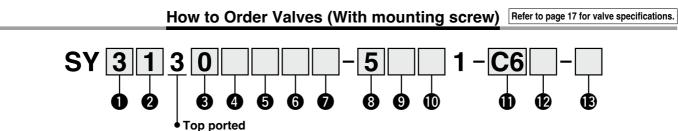

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

1	0 position	Single
2	2-position	Double
3		Closed centre
4	3-position	Exhaust centre
5		Pressure centre
A *1	4-position dual 3-port	N.C./N.C.
B *1		N.O./N.O.
C *1	uuai 5-port	N.C./N.O.

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

000	
0	Rubber seal
1	Metal seal

4 Pilot type

-	71
—	Internal pilot
R	External pilot

 When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure.

Back pressure check valve (Built-in valve type)

—	None
Н	Built-in

- * Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 236 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

-	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
K *1	High pressure type (1.0 MPa)	
Only the metal seal type is available for the		

*1 Only the metal seal type is available for the high pressure type.

Coil type

- Standard
- T With power saving circuit (Continuous duty type) Be sure to select the power saving circuit type if the valve is to be continuously
- energised for long periods of time. Be careful of the energising time when the
- power saving circuit is selected. Refer to page 316 for details.

8 Rated voltage


5	24 VDC
6	12 VDC

9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
-	—	—	
R	—		Non-polar
U	•		
S	_		Positive
Z	•		common
NS	_		Negative
NZ	•		common
. For the	o non nolar ti	no bo oorofi	l of ourgo

- For the non-polar type, be careful of surge voltage intrusion.
- Refer to page 317 for details. Only "Z" and "NZ" types are available with a
- power saving circuit.

Manual override

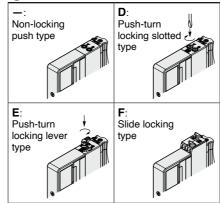

* Refer to page 36 for the safety slide locking manual override.

A, B port size

Thread piping				
Symbol	Port size	Applicable series		
M5	M5 x 0.8	SY3000		
01	1/8	SY5000		
02	1/4	SY7000		

One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	Ø 2		—	—
C3	Ø 3.2		—	—
C4	Ø 4	•	•	_
C6	Ø 6			
C8	Ø 8	_		
C10	Ø 10	_	_	•
C12	Ø 12	_	—	

One-touch fitting (Inch)

Symbol	A, B port	SY3000	SY5000	SY7000
N1	Ø 1/8"		—	_
N3	Ø 5/32"			_
N7	Ø 1/4"			
N9	Ø 5/16"	_		
N11	Ø 3/8"	_	—	

Thread type

_	Rc	
F	G	
N	NPT	
Т	NPTF	

* Only — is available for M5.

B Type of mounting screw


_	Round head combination screw
В	Hexagon socket head cap screw
Κ	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.

- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 222 for base gasket and mounting screw part numbers.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

\wedge	Prote	cti∖	/e class
	class	Ⅲ	(Mark:⋘)
			86

Electrical Wiring Specifications

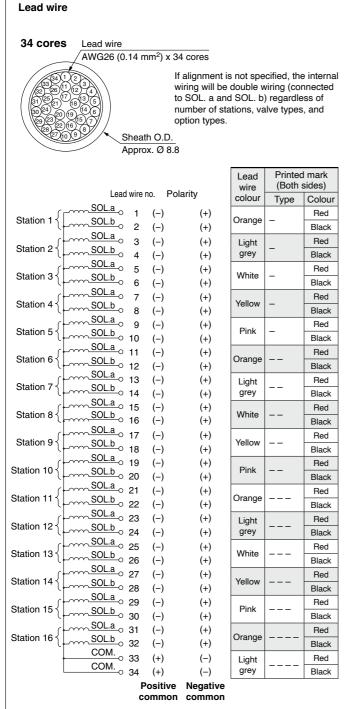

* For negative common specification, a valve for negative common or a valve without polarity should be used.

Specified Layout


A mixture of single and double wiring can be specified on the manifold specification. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 32 or less. 1 solenoid is required for the 2-position single, and 2 solenoids for the 2-position double, 3-position, and 4-position.

Electrical characteristics

Item	Property	
Conductor resistance Ω/km, 20 °C	143 or less	
Voltage limit V, 1 minute, AC	2000	
Insulation resistance MΩ/km, 20 °C	10 or more	

Cannot be used for movable wiring The minimum bending radius of the cable is 55 mm.

Electrical Wiring Specifications

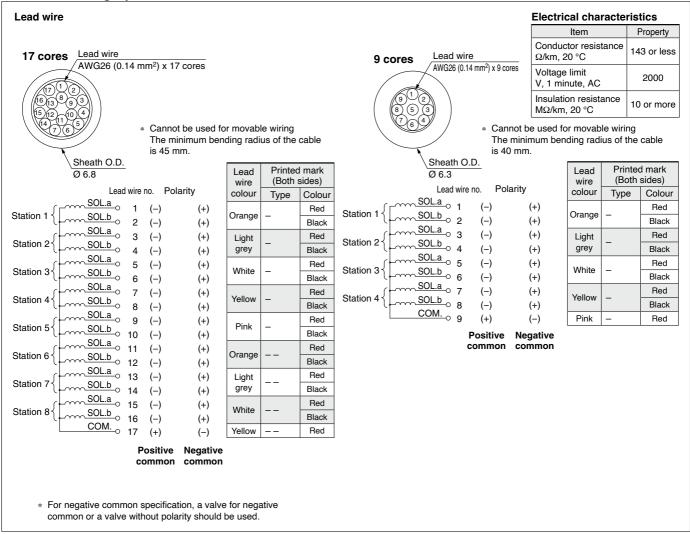

Plug-in Connector Connecting Base

Circular Connector

SY3000/5000/7000 Series

05

How to Order Manifolds

10 M -

Refer to pages 180 (SY5000) and 181 (SY7000) for the dimensions of Type 11/Bottom-ported type.

Series

Type 10

Type 11 Bottom Ported

Side Ported

3	SY3000
5	SY5000
7	SY7000

2 Type

10 Otale menteral	
10 Side ported	
11 Bottom ported*1	

*1 The SY5000 manifold base is used for the bottom-ported SY3000. When ordering, refer to the "Plug-in Manifold Mixed Mounting Type" (from page 185).

3 Valve station	1
------------------------	---


SS5Y

Symbol	Stations	Note			
02	2 stations				
		Double wiring*1			
12	12 stations				
02	2 stations	Cracified lavouts?			
:	÷	Specified layout* ² (Up to 24 solenoids available)			
24	24 stations	(Op to 24 soleriblus available)			

5

- 1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- *2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of the blanking plate assembly.

How to Order Manifold Assembly

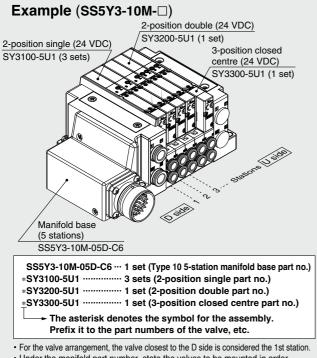

• Under the waive analgement, use varie closes to the D side is considered the 'is statuti'. Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

When mixing top-ported configurations, select from those listed on page 96. In such cases, use caution as there is also output on the A and B ports on the base side. Specify on the manifold specification sheet if plugs are required for the A and B ports on the base side.

P, E port entry

C6

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

5 SUP/EXH block assembly

_	Internal pilot			
S	Internal pilot, Built-in silencer			
R	External pilot			

- 3/5(E) port is plugged for the built-in silencer type.
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

Refer to the page on the right for **6**.

Mounting and Option

Symbol	Mounting	Option			
Symbol	wounting	Name plate	Station number		
—	Discot	—	—		
AA	Direct mounting	•	•		
BA	mounting	•	_		
D	DINUS	—	—		
A	DIN rail mounting	•	•		
B	mounting	•	—		


- Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)
- * Only direct mounting is available for the type 11 bottom-ported type.
- Refer to page 319 for the fixation of DIN rail mounting type manifold.

DIN Rail Option

	- opnon				
_	Standard length				
0	Without DIN rail (with bracket)				
3	For 3 stations				
1	÷	Specify a longer rail than the total length of specified stations.			
24	For 24 stations	total length of specified stations.			




6 A, B port size (Metric/One-touch fitting)									
Oumhal	A D mont		Type ⁻	10/Side	ported	Type 11/Bo	ttom ported		
Symbol		А,	B port	SY3000	SY5000	SY7000	SY5000	SY7000	
C2			Ø 2	•	_	_	—	—	_
C3			Ø 3.2	•	_	_	—	—	08
C 4	_		Ø 4	•	•	_	•	_	K
C 6	ight		Ø 6	•	•	•	•	•	
C8	Straight		Ø 8	-	•		•	•	
C10			Ø 10	_	_	•	—	•	CON SHEER
C12			Ø 12	-	_	•	—	•	- Or
CM∗1		Straight port, mixed sizes		•	•		•	•	
L4			Ø 4			—	—	—	
L6		2	Ø 6				—	—	K
L8		Upward	Ø 8	-			_	_	
L10		5	Ø 10	—	—		—	—	
L12			Ø 12	-	—		—	—	Jel ⁹⁰
B 4	Elbow*2		Ø 4			—	—	—	
B6	I A	Downward	Ø 6				—	—	
B8	-	Nu N	Ø 8	—			—	—	
B10		6	Ø 10	-	—		—	—	
B12			Ø 12	-	—		—	—	Tel
LM*1	Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	-		
	P, E port size (One-touch fittings)		Ø8	Ø 10	Ø 12	Ø 10	Ø 12		

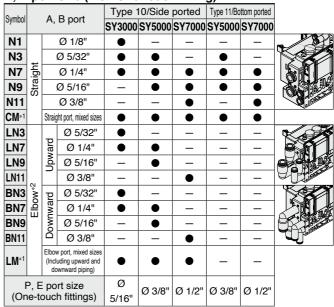


A, B port size (Inch/One-touch fitting)

*1 Indicate the sizes on the manifold specification sheet in the case of "CM" or "LM." The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting direction.

*2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 228 to 230).







O Series				
3	SY3000			
5	SY5000			
7	SY7000			

2 Type of actuation

1	2-position	Single
2	2-position	Double
3		Closed centre
4	3-position	Exhaust centre
5		Pressure centre
A *1	4-position dual 3-port	N.C./N.C.
B *1		N.O./N.O.
C *1	uuai o-port	N.C./N.O.

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal							
1	Metal seal							

4 Pilot type

_	Internal pilot						
R	External pilot						

 When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure.

Back pressure check valve (Built-in valve type)

-	None
Н	Built-in

- Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 236 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

_	Standard (0.7 MPa)										
В	Quick response type (0.7 MPa)										
K *1	High pressure type (1.0 MPa)										

*1 Only the metal seal type is available for the high pressure type.

Coil type

Standard

- T With power saving circuit (Continuous duty type) Be sure to select the power saving circuit type if the valve is to be continuously
- energised for long periods of time.
 Be careful of the energising time when the power saving circuit is selected. Refer to page 316 for details.

8 Rated voltage

5	24 VDC
6	12 VDC


Dight/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification				
-	—	—					
R	—		Non-polar				
U	•						
S	—		Positive				
Z	•		common				
NS	—]	Negative				
NZ	•		common				

For the non-polar type, be careful of surge voltage intrusion.

Refer to page 317 for details. Only "Z" and "NZ" types are available with a power saving circuit.

Manual override

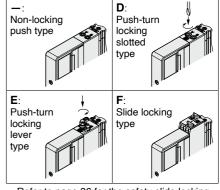



 Refer to page 36 for the safety slide locking manual override.

① Type of mounting screw

—	Round head combination screw
В	Hexagon socket head cap screw
Κ	Round head combination screw (Drop prevention type)
н	Hexagon socket head can screw (Drop prevention type)

- For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 222 for base gasket and mounting screw part numbers.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.



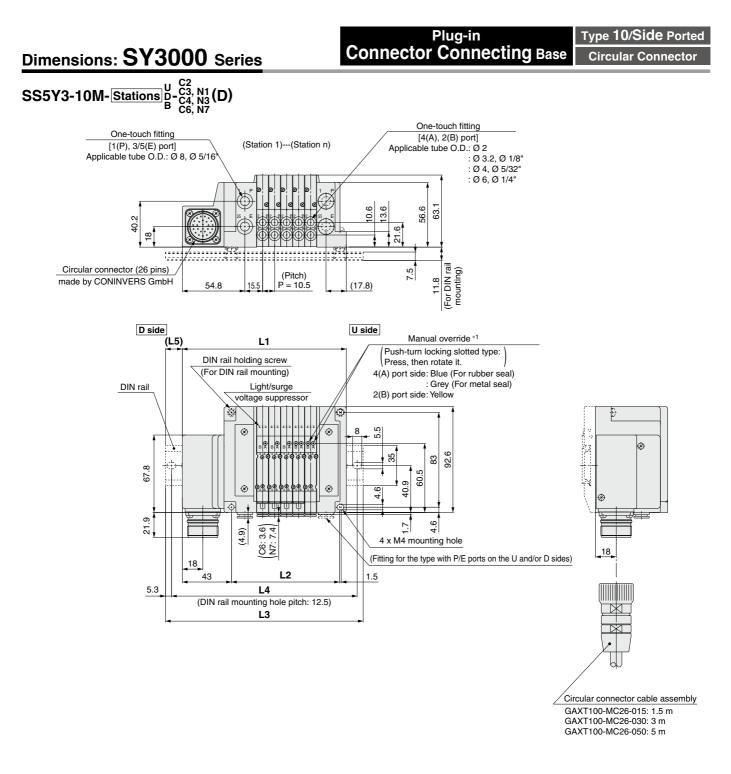


*1 Refer to page 177 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.

* These figures show the "SS5Y3-10M-05D-C6."

* Refer to page 182 for dimensions of A or B port top-ported type.


n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	112	122.5	133	143.5	154	164.5	175	185.5	196	206.5	217	227.5	238	248.5	259	269.5	280	290.5	301	311.5	322	332.5	343
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	135.5	148	160.5	173	185.5	198	210.5	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373
L4	125	137.5	150	162.5	175	187.5	200	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325	337.5	350	362.5
L5	12	13	14	15	16	17	18	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15

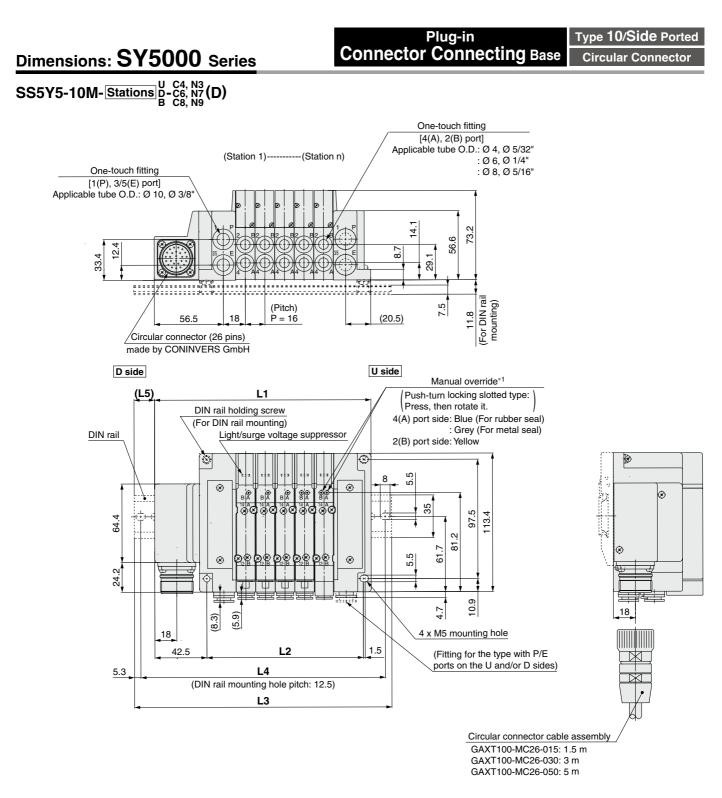

*1 Refer to page 178 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.

* These figures show the "SS5Y5-10M-05D-C8."

* Refer to page 183 for dimensions of A or B port top-ported type.

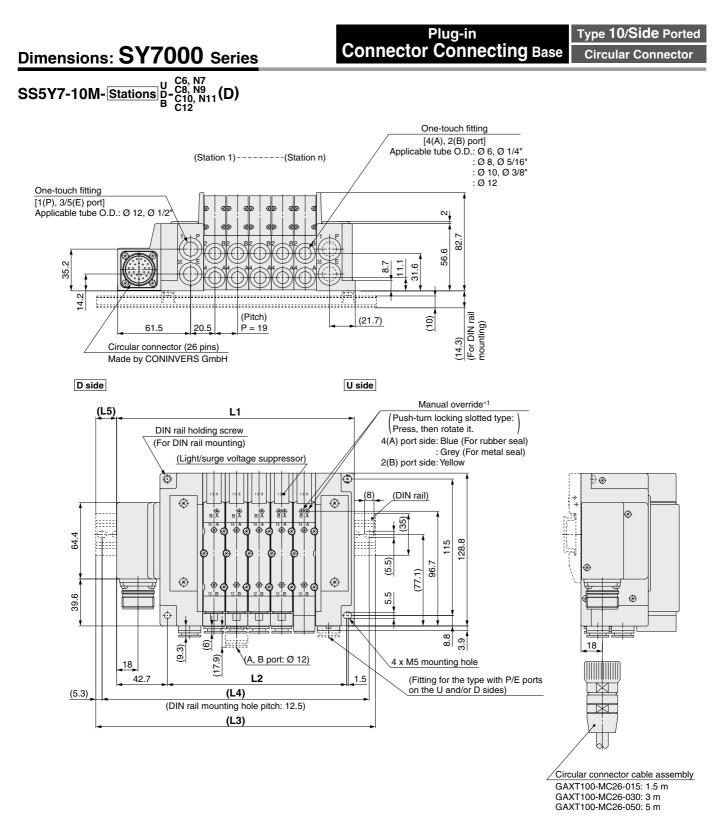

*1 Refer to page 179 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.

* These figures show the "SS5Y7-10M-05D-C10."

* Refer to page 184 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	143.2	162.2	181.2	200.2	219.2	238.2	257.2	276.2	295.2	314.2	333.2	352.2	371.2	390.2	409.2	428.2	447.2	466.2	485.2	504.2	523.2	542.2	561.2
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	173	185.5	210.5	235.5	248	273	285.5	310.5	323	348	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5
L4	162.5	175	200	225	237.5	262.5	275	300	312.5	337.5	350	375	387.5	412.5	425	450	462.5	487.5	500	525	537.5	562.5	575
L5	15	11.5	14.5	17.5	14.5	17.5	14	17	14	17	13.5	16.5	13.5	16.5	13	16	13	16	12.5	15.5	12.5	15.5	12

Plug-in Connector Connecting Base

Circular Connector

Type 12 Top Ported

SY3000/5000/7000 Series (Є ЦК сЯЦ IS Понз

How to Order Manifolds



Refer to pages 182 to 184 for the dimensions of Type 12/Top-ported type.

U Series							
3	SY3000						
5	SY5000						
7	SY7000						

2 Valve stations

Symbol	Stations	Note
02	2 stations	
:	÷	Double wiring ^{*1}
12	12 stations	
02	2 stations	Our a sifile of law set *2
:	:	Specified layout* ² (Up to 24 solenoids available)
24	24 stations	(Op to 24 soleholds available)

*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

- *2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- * This also includes the number of the blanking plate assembly.

B P, E port entry

U *1	U side (2 to 10 stations)
D *1	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)


*1 For type "S", SUP/EXH block assembly with a built-in silencer, choose U or D for P, E port entry.

4 SUP/EXH block assembly

_	Internal pilot	
S	Internal pilot, Built-in silencer	
R	External pilot	

- The P and E ports are only available on the U and D sides for the built-in silencer type. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of the P and E port entry. (Example: When the P and E port entry is on the D side, the silencer exhaust port is on the U side.)
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

How to Order Manifold Assembly

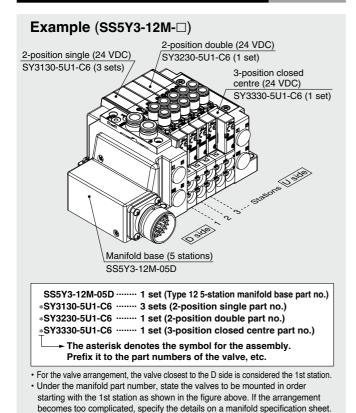

5 P, E port size (One-touch fittings)


Symb	SY3000	SY5000	SY7000	
-	Ø 8	Ø 10	Ø 12	
Ν	Ø 5/16"	Ø 3/8"	Ø 1/2"	

* For N, sizes are in inches.

6 Mounting

_	Direct mounting		
D	DIN rail mounting (With DIN rail)		
D0	DIN rail mounting (Without DIN rail)		
D3	For 3 stations	Specify a length longer	
1	:	than that of the standard	
D24	For 24 stations	rail.	

* Refer to page 319 for the fixation of DIN rail mounting type manifold.

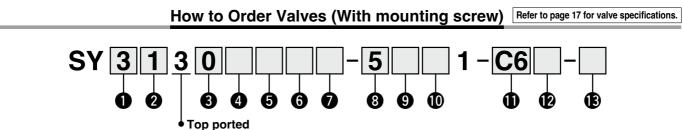

O	Series
----------	--------

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

1	2-position	Single
2		Double
3		Closed centre
4	3-position	Exhaust centre
5		Pressure centre
A *1	4-position dual 3-port	N.C./N.C.
B *1		N.O./N.O.
C *1		N.C./N.O.

*1 Only the rubber seal is available for the 4-position dual 3-port valve.

3 Seal type

O bear type		
0	Rubber seal	
1	Metal seal	

4 Pilot type

	_	Internal pilot
	R	External pilot
* \	When	selecting the external pilot specification

for the 4-position dual 3-port valve, pay attention to the pilot pressure.

Back pressure check valve (Built-in valve type)

_	None
Н	Built-in
	Duit-III

- * Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 236 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

Ι	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
K *1	High pressure type (1.0 MPa)	
Only	Only the metal seal type is available for the	

*1 Only the metal seal type is available for the high pressure type.

Coil type

_	Standard
T	With a second second second to (O section second second second

- T With power saving circuit (Continuous duty type) Be sure to select the power saving circuit type if the valve is to be continuously
- energised for long periods of time.
 Be careful of the energising time when the power saving circuit is selected. Refer to page 316 for details.

8 Rated voltage


5	24 VDC
6	12 VDC
	l

9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
—	_	—		
R	_		Non-polar	
U	•			
S	-		Positive	
Ζ	•	•	common	
NS	-		Negative	
NZ	•		common	

- * For the non-polar type, be careful of surge voltage intrusion.
- Refer to page 317 for details. Only "Z" and "NZ" types are available with a
- power saving circuit.

Manual override

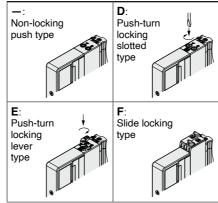

* Refer to page 36 for the safety slide locking manual override.

A, B port size

Thread piping			
Symbol	Port size	Applicable series	
M5	M5 x 0.8	SY3000	
01	1/8	SY5000	
02	1/4	SY7000	

One-touch fitting (Metric)

	<u> </u>			
Symbol	A, B port	SY3000	SY5000	SY7000
C2	Ø 2		—	—
C3	Ø 3.2		—	—
C4	Ø 4		•	—
C6	Ø 6		•	
C8	Ø 8	_	•	
C10	Ø 10	_	—	
C12	Ø 12	_	_	

One-touch fitting (Inch)

Symbol	A, B port	SY3000	SY5000	SY7000
N1	Ø 1/8"		—	_
N3	Ø 5/32"			_
N7	Ø 1/4"			
N9	Ø 5/16"	_		
N11	Ø 3/8"	_	—	

Thread type

_	Rc	
F	G	
N	NPT	
Т	NPTF	

* Only - is available for M5.

B Type of mounting screw

_	Round head combination screw
В	Hexagon socket head cap screw
Κ	Round head combination screw (Falling-out-prevention type)
н	Hexagon socket head cap screw (Falling-out-prevention type)

For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.

- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 222 for base gasket and mounting screw part numbers.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.

\wedge	Prote	cti∖	/e class
	class	Ⅲ	(Mark:⋘)
			96

Electrical Wiring Specifications

Circular connector



If alignment is not specified, the internal wiring will be double wiring (connected to SOL. a and SOL. b) regardless of number of stations, valve types, and option types.


		ninal	no. Pol	arity
	SOL.a	1	(-)	(+)
Station 1 {	SOL.b	2	(-)	(+)
	SOL.a	3	(-)	(+)
Station 2	SOL.b	4	(-)	(+)
	SOL.a	5	(-)	(+)
Station 3 {	SOL.b	6	(-)	(+)
	SOL.a	7	(-)	(+)
Station 4	SOL.b	8	(-)	(+)
Station 5	SOL.a	9	(-)	(+)
Station 5	SOL.b	10	(–)	(+)
Station 6	SOL.a	11	(–)	(+)
Station 6 1	SOL.b	12	(-)	(+)
Station 7	SOL.a	13	(-)	(+)
	SOL.b	14	(–)	(+)
Station 8	SOL.a	15	(–)	(+)
Station o (SOL.b	16	(–)	(+)
Station 9	SOL.a	17	(–)	(+)
	SOL.b	18	(–)	(+)
Station 10	SOL.a SOL.b	19	(–)	(+)
	SOL.D O	20	(–)	(+)
Station 11	SOL.a	21	(–)	(+)
	SOL.a	22	(–)	(+)
Station 12	SOL.b	23	(–)	(+)
	-	24	(–)	(+)
	COM.	25	(+)	(-)
	COM.	26	(+)	(-)
				Newsters
			ositive ommon	Negative common
using a valve with no	polarity,	eithe	er positi	ve common or
ive common can be u	sed			

* When negative common can be used.

Specified Layout

A mixture of single and double wiring can be specified on the manifold specification sheet. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 24 or less. 1 solenoid is required for the 2-position single, and 2 solenoids for the 2-position double, 3-position, and 4-position.

Cable Assembly

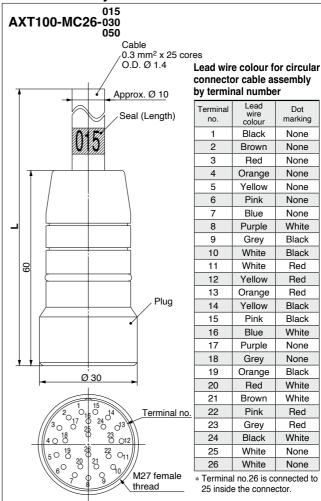

Circular connector cable assembly

en calai connector cabie acconner,		
Cable	Assembly part no.	
length (L)	26 pins	
1.5 m	AXT100-MC26-015	
3 m	AXT100-MC26-030	
5 m	AXT100-MC26-050	

* Cannot be used for movable wiring

* Lengths other than the above is also available. Please contact SMC for details.

Electrical	chara	acteristics

Dot

marking

None

None

None

None

None

None

None

White

Black

Black

Red

Red

Red

Black

Black

White

None

None

Black

White

White

Red

Red

White

None

None

Item	Property
Conductor resistance Ω/km, 20 °C	65 or less
Voltage limit V, 1 minute, AC	1000
Insulation resistance MΩ/km, 20 °C	5 or more

* The minimum bending radius of the circular connector cable is 20 mm.



Type 10 Side Ported Type 11 Bottom Ported

Plug-in Connector Connecting Base

EX500 Gateway Decentralised System 2 (128 Points)

10 S A3N - 05 U

SY3000/5000/7000 Series

How to Order Manifolds

3

SS5Y

Refer to pages 180 (SY5000) and 181 (SY7000) for the dimensions of Type 11/Bottom-ported type.

Series

3	SY3000
5	SY5000
7	SY7000


For mixed mounting, refer to page 185 and later.

2 Туре


10	Side ported		
11	Bottom ported ^{*1}		

- *1 The SY5000 manifold base is used for the bottom-ported SY3000. When ordering, refer to the "Plug-in Manifold Mixed Mounting Type" (from page 185).
- When mixing top-ported configurations, select from those listed on +page 114. In such cases, use caution as there is also output on the A and B ports on the base side. Specify on the manifold specification sheet if plugs are required for the A and B ports on the base side.

How to Order Manifold Assembly

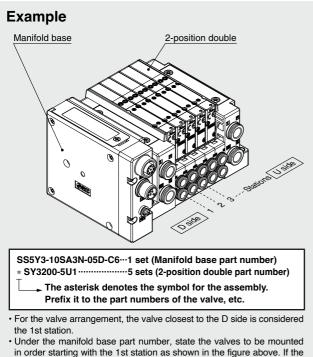

Under the manifold base part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.




0	Without SI unit
A3N	32 outputs ^{*1*4} , 2 to 16 stations (24 stations ^{*3}), Negative common ^{*2}

- *1 16 outputs can be set by switching the built-in setting switch.
- *2 Ensure a match with the common specification of the valve.
- *3 (): Maximum number of stations for mixed single and double wiring
- *4 When using the SI unit with 32 outputs, use the GW unit compatible with the EX500 Gateway Decentralised System 2 (128 points).

4 Valve stations

6



C6

- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- *2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- When the product without the SI unit (S0) is selected, note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.
- This also includes the number of the blanking plate assembly.

9 P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)


6 SUP/EXH block assembly

_	Internal pilot	
S	Internal pilot, Built-in silencer*1*2	
R	External pilot	

- *1 3/5(E) port is plugged for the built-in silencer type.
- *2 When built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

* A separate GW unit and communication cable are required.

For details on the EX500 Gateway Type Serial Transmission System, refer to the **Web Catalogue** and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 208. Please download the Operation Manual via the SMC website, https://www.smc.eu

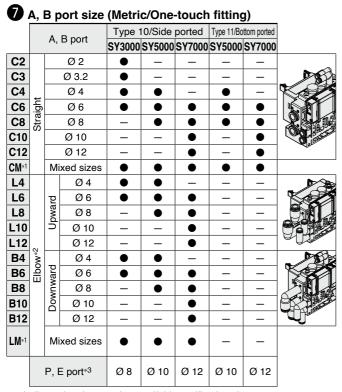

А, В	po	JΓL	port size (Inch/One-touch fitting)								
	A, B port		B port		0/Side	<u> </u>	Type 11/Bo				
		,		SY3000	SY5000	SY7000	SY5000	SY7000			
N1			Ø 1/8"		—	_	—	—			
N3		9	Ø 5/32"	•	•	—	•	—			
N7	Straight		Ø 1/4"	•	•	•	•	•			
N9		9	Ø 5/16"	_	•	•					
N11	0,		Ø 3/8"	_	_	•	_	•	e Bass		
CM∗1		Mi	xed sizes	•	•	•	•	•			
LN3			Ø 5/32"	•	_	_	_	_			
LN7		Upward	Ø 1/4"	•	•	_	—	—			
LN9		<u>a</u> Ø 5/16	Ø 5/16"	_	•	_	_	_			
LN11	W*2	W*2	Elbow* ²		Ø 3/8"	_	_	•	—	—	el Bassar
BN3				rd	Ø 5/32"	•	—	—	—	—	
BN7	lbc	Downward	Ø 1/4"	•	•	—	—	—			
BN9		NMC	Ø 5/16"	_	•	_	—	—			
BN11		ŏ	Ø 3/8"	_	_		—	—	Jan Bar		
LM∗1		Mi	xed sizes	•	•	•	_	_			
	P, E port ^{*3}		Ø 5/16"	Ø 3/8"	Ø 1/2"	Ø 3/8"	Ø 1/2"				

nort size (Inch/One-touch fitting)

*1 Indicate the sizes on the manifold specification sheet.

- *2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 228 to 230).
- *3 The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting direction.

8 Mounting and Option

	Mounting	Option		
	Mounting	Name plate	Station number	
—	Direct mounting	_	—	
AA		•	•	
BA		•	—	
D □*1	DIN rail mounting	-	—	
A □*1		•	•	
B □* ¹			_	

*1 Refer to "DIN Rail Option" below.

* Select the direct mounting type for Type 11 (Bottom ported).


DIN Rail Option


_	With DIN bracket, DIN rail with standard length		
0	With DIN bracket, without DIN rail		
3 *1	With DIN bracket, DIN rail for 3 stations		
9/ *1	With DIN brooket, DIN roll for 24 stations		

24*1 With DIN bracket, DIN rail for 24 stations

*1 Specify a longer rail than the length of valve stations.

- * If the DIN rail must be mounted without an SI unit, select "D0" and order the DIN rail separately. Refer to L3 of the dimensions for the DIN rail length. Refer to page 227 for the DIN rail part number.
- * Refer to page 319 for the fixation of DIN rail mounting type manifold.



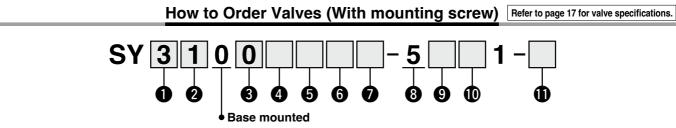

1 Series			
3	SY3000		
5	SY5000		
7	SY7000		

2 Type of actuation

1	2-position	Single
2	2-position	Double
3		Closed centre
4	3-position	Exhaust centre
5		Pressure centre
A *1	4-position dual 3-port valve	N.C./N.C.
B *1		N.O./N.O.
C *1		N.C./N.O.

*1 Select the rubber seal type for the 4-position dual 3-port valve.

3 Seal type

-	71
0	Rubber seal
1	Metal seal

4 Pilot type

-	21
—	Internal pilot
R	External pilot

* When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure.

5 Back pressure check valve

-	
-	None
H ∗1	Built-in
4 0.1.	

- *1 Select the rubber seal type when the back pressure check valve is built-in. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 236 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * Select "—" for the 3-position type or the SY7000.

6 Pilot valve option

_	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K *1	High pressure type (1.0 MPa)
Color	t the motel and type for the high

 Select the metal seal type for the high pressure type.

Coil type

_	Standard
т	With power saving circuit (Continuous duty type)*1*2

- *1 Be sure to select the power saving circuit type if the valve is to be continuously energised for long periods of time.
- *2 Be careful of the energising time when the power saving circuit is selected. For details, refer to page 316.


8 Rated voltage

9 Light/surge voltage suppressor and common specification

	With light	Surge voltage suppressor	Common specification
R	—		Non polor
U	•		Non-polar
NS	—		Negative
NZ	•		common
* Select	"NZ" for mo	dels with a r	ower saving

 Select "NZ" for models with a power saving circuit.

Manual override

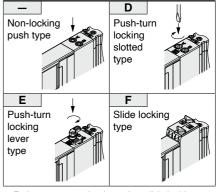



* Refer to page 36 for the safety slide locking manual override.

Type of mounting screw

_	Round head combination screw
В	Hexagon socket head cap screw
к	Round head combination screw (Drop prevention type)*1
н	Hexagon socket head cap screw (Drop prevention type)*1

- *1 For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if its needed for maintenance. Refer to page 222 for base gasket and mounting screw part numbers.
- Select "—" or "K" for the optional individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.



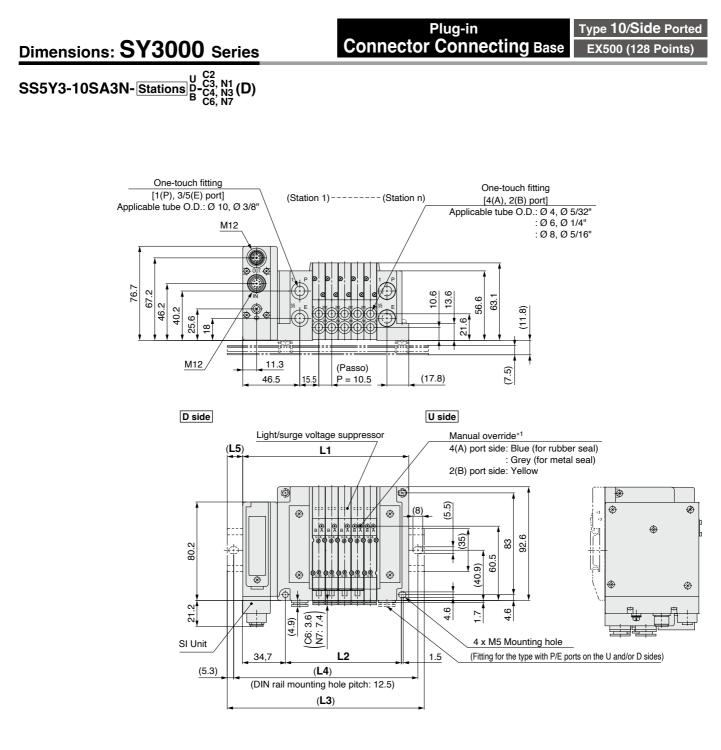



*1 Refer to page 177 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override. * These figures show the "SS5Y3-10SA3N-05D-C6."

* Refer to page 182 for dimensions of A or B port top-ported type.

L: Dime	ensions	;												r	n: Stations
L _ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	103.7	114.2	124.7	135.2	145.7	156.2	166.7	177.2	187.7	198.2	208.7	219.2	229.7	240.2	250.7
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210
L3	135.5	148	148	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5
L4	125	137.5	137.5	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275
₹ L5		17	11.5	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5
L n	17	18	19	20	21	22	23	24							
L1	261.2	271.7	282.2	292.7	303.2	313.7	324.2	334.7							
L2	220.5	231	241.5	252	262.5	273	283.5	294							
L3	285.5	298	310.5	323	335.5	348	348	360.5							
L4	275	287.5	300	312.5	325	337.5	337.5	350							
L5	12	13	14	15	16	17	12	13							
						*									100

SMC

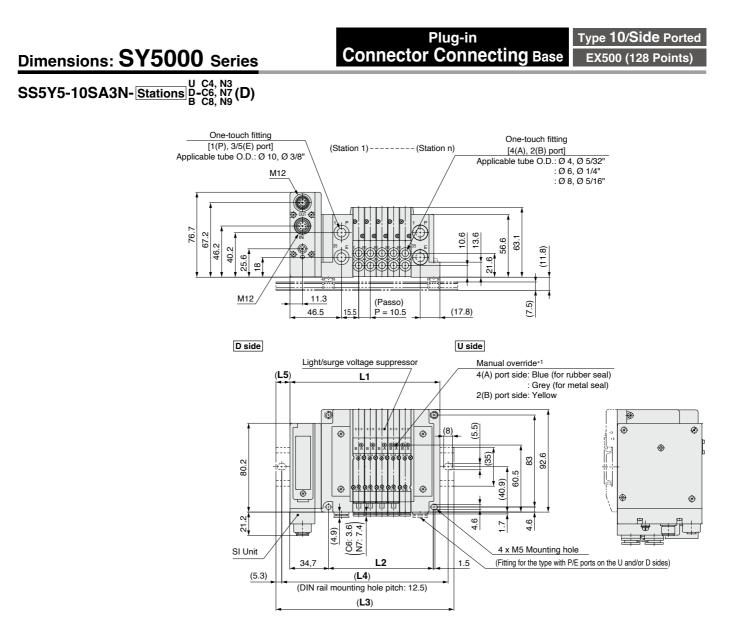




*1 Refer to page 178 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override. * These figures show the "SS5Y5-10SA3N-05D-C8."

* Refer to page 183 for dimensions of A or B port top-ported type.

L: Dime	ensions	i												r	n: Stations
L	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	120.7	136.7	152.7	168.7	184.7	200.7	216.7	232.7	248.7	264.7	280.7	296.7	312.7	328.7	344.7
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304
L3	148	160.5	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373
L4	137.5	150	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5
L5	13.5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14
∖_ n			10					•							
				1 <u>90</u>	- 21	່ງງ	99								
	17	18	19	20	21	22	23	24							
L	17 360.7	18 376.7	19 392.7	20 408.7	21 424.7	22 440.7	23 456.7	24 472.7							
		-	-	-			-								
L1	360.7	376.7	392.7	408.7	424.7	440.7	456.7	472.7							
L1 L2	360.7 320	376.7 336	392.7 352	408.7 368	424.7 384	440.7 400	456.7 416	472.7 432							
L1 L2 L3	360.7 320 385.5	376.7 336 410.5	392.7 352 423	408.7 368 435.5	424.7 384 448	440.7 400 473	456.7 416 485.5	472.7 432 498							

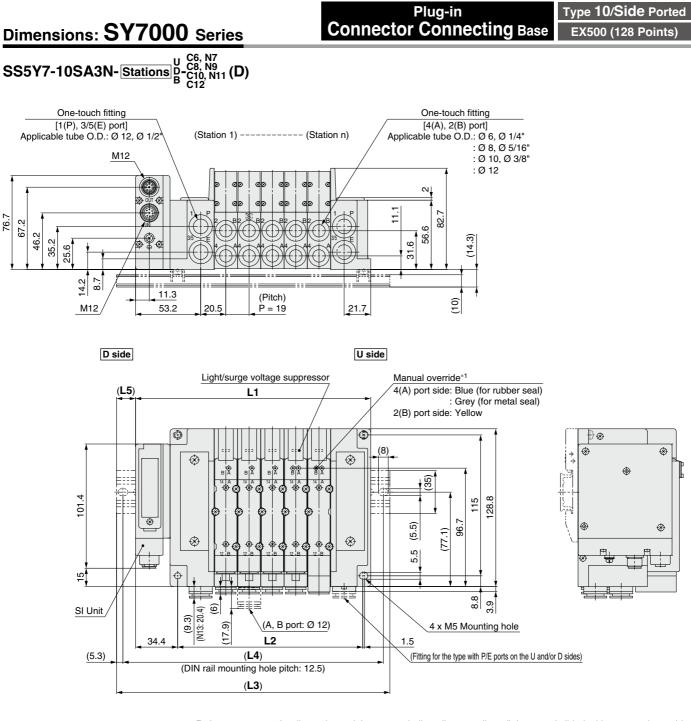

*1 Refer to page 179 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override. * These figures show the "SS5Y7-10SA3N-05D-C10."

* Refer to page 184 for dimensions of A or B port top-ported type.

L: Dime	ensions	;												r	n: Stations
L /	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	134.9	153.9	172.9	191.9	210.9	229.9	248.9	267.9	286.9	305.9	324.9	343.9	362.9	381.9	400.9
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360
L3	160.5	185.5	198	223	235.5	260.5	273	298	310.5	335.5	348	373	398	410.5	435.5
L4	150	175	187.5	212.5	225	250	262.5	287.5	300	325	337.5	362.5	387.5	400	425
L5	13	16	12.5	15.5	12.5	15.5	12	15	12	15	11.5	14.5	17.5	14.5	17.5
∕_ n	17	18	19	20	21	22	23	24							
L1	419.9	438.9	457.9	476.9	495.9	514.9	533.9	552.9							
L2	379	398	417	436	455	474	493	512							
L3	448	473	485.5	510.5	523	548	560.5	585.5	-						
L4	437.5	462.5	475	500	512.5	537.5	550	575							
L5	14	17	14	17	13.5	16.5	13.5	16.5	-						
				1					-						

Plug-in Connector Connecting Base

EX600

SS5Y

SY3000/5000/7000 Series С Є ЦК с П из Понз

4

2

05

How to Order Manifolds

2

10 S6 Q

Refer to pages 180 (SY5000) and 181 (SY7000) for the dimensions of Type 11/Bottom-ported type.

Series

Type 10

Type 11 Bottom Ported

Side Ported

3	SY3000
5	SY5000
7	SY7000

2 Type

<u> </u>	
10	Side ported
11	Bottom ported*1

*1 The SY5000 manifold base is used for the bottom-ported SY3000. When ordering, refer to the "Plug-in Manifold Mixed Mounting Type" (from page 185).

3 SI unit

0	Without SI unit
Q	DeviceNet [®]
N	PROFIBUS DP
V	CC-Link
EA	EtherNet/IP™
EB	EtherNet/IP™ (IO-Link unit)
DA	EtherCAT (IO-Link unit)
F	PROFINET
FA	PROFINET (IO-Link unit)
WE	EtherNet/IP™ compatible wireless base*1
WF	PROFINET compatible wireless base*1
WS	Wireless remote*1

*1 The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country.

 I/O unit cannot be mounted without SI unit.
 Valve plate which connects manifold and SI unit is included, but it is not mounted to a valve without SI unit. For mounting, refer to the EX600 series in the Web Catalogue.

I unit output polarity, end plate type

SI unit output polarity	M12 power supply connector B-coded (EX600-ED2)	7/8 inch power supply connector (EX600-ED3)		pply connector A-coded Pin arrangement 2 (EX600-ED5)
Without SI unit		-	_	
SI unit positive common	2	3	6	8
SI unit negative common	4	5	7	9

* Ensure a match with the common specification of the valve to be used.

* When not selecting an SI unit, the symbol will be "-.

5 I/O unit stations

3

	_	None			
	1	1 station			
	:				
	9	9 stations			

- When not selecting an SI unit, the symbol will be "-."
 SI unit is not included in I/O unit stations.
- SI unit is not included in I/O unit stations.
 When I/O unit is selected, it is shipped
- separately, and assembled by users. Refer to the attached operation manual for mounting.


6 Valve stations

Symbol	Stations	Note				
02	2 stations					
:	:	Double wiring ^{*1}				
16	16 stations					
02	2 stations	Creatified lawsut*2				
:	:	Specified layout* ² (Up to 32 solenoids available)				
24	24 stations					
4 Devilate substance O seculations alreads advected						

- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- 2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of the blanking plate assembly.

9 Mounting and Option

U



C6

- Enter the number of stations inside
 when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)
- Only direct mounting is available for the type
 11 bottom-ported type.
- Refer to page 319 for the fixation of DIN rail mounting type manifold.

DIN Rail Option

—	Standard length					
0	Without DIN rail (with bracket)					
3	For 3 stations	Chapity a langer roll than the				
1	:	Specify a longer rail than the				
24	For 24 stations	total length of specified stations.				

If the DIN rail must be mounted without an SI unit, select D0. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 227 for the DIN rail part number.)


P, E port entry, SUP/EXH block assembly

P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot
U side (2 to 10 stations)	U	С	G
D side (2 to 10 stations)	D	E	Н
Both sides (2 to 24 stations)	В	F	J

- * 3/5(E) port is plugged for the built-in silencer type.
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

Refer to the page on the right for (8).

For details on the EX 6 0 0 Integrated Type (For Input/Output) Serial Transmission System, refer to the **Web Catalogue** and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 211. (IP 40 specifications may be required according to the I/O unit to be selected.) Please download the Operation Manual via the SMC website, https://www.smc.eu

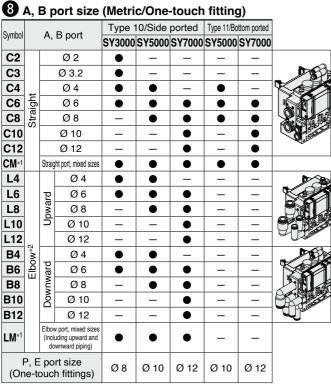


<u>A, B</u>	B port size (Inch/One-touch fitting)									
Symbol	A, B port		Type 1	0/Side	ported	Type 11/Bo	ttom ported			
Symbol		А,	B port	SY3000	SY5000	SY7000	SY5000	SY7000		
N1			Ø 1/8"		_	—	—	—		
N3	÷	9	Ø 5/32"		•	—		—		
N7	Straight		Ø 1/4"		•	\bullet		•		
N9	Stra	9	Ø 5/16"	—	•	•		•		
N11	•,		Ø 3/8"	-	—		-		el Same	
CM*1		Straig	ht port, mixed sizes		•					
LN3		_	Ø 5/32"		—	—	—	—		
LN7		Jpward	Ø 1/4"		•	—	—	—		
LN9		νdΓ	Ø 5/16"	—	•	—	—	—		
LN11	01		Ø 3/8"	-	—		-	—	alons and	
BN3	w.	p	Ø 5/32"		—	—	—	—		
BN7	⊣ш∣а	입	wa	Ø 1/4"		\bullet	—	—	—	
BN9		JWC	Ø 5/16"	—	•	—	—	—		
BN11		Õ	Ø 3/8"	-	—	\bullet	—	—	Total Server	
LM∗1		(Incl	v port, mixed sizes uding upward and wnward piping)	•	•	•	_	_		
P, E port size (One-touch fittings)		Ø 5/16"	Ø 3/8"	Ø 1/2"	Ø 3/8"	Ø 1/2"				

Indicate the sizes on the manifold specification sheet in the case of "CM" or "LM." *1 The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting direction

*2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 228 to 230).

How to Order Manifold Assembly

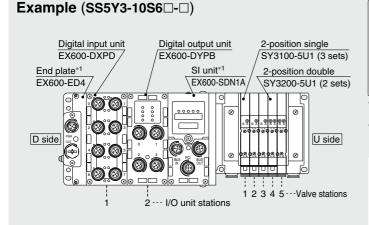



SS5Y3-10S6Q72-05B-C6… 1 set (Type 10 5-station manifold base part no.) *SY3100-5U1 ····································
 For the valve arrangement, the valve closest to the D side is considered the 1st station. Under the manifold part number, state the valves to be mounted, then the I/O units in

order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

- *1 Do not enter the SI unit part number and the end plate part number together.
- When mixing top-ported configurations, select from those listed on page 126. In such cases, use caution as there is also output on the A and B ports on the base side.

Specify on the manifold specification sheet if plugs are required for the A and B ports on the base side.



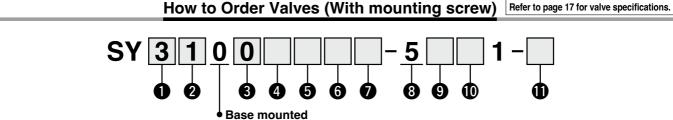

0	Sei	ries	

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

1	0 position	Single	
2	2-position	Double	
3		Closed centre	
4	3-position	Exhaust centre	
5		Pressure centre	
A *1	4	N.C./N.C.	
B *1	4-position dual 3-port	N.O./N.O.	
C *1	uuai 3-port	N.C./N.O.	

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

000	
0	Rubber seal
1	Metal seal

4 Pilot type

-	21
—	Internal pilot
R	External pilot

 When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure.

Back pressure check valve (Built-in valve type)

-	None
Н	Built-in

- * Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 236 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Bilot valve option

Phot valve option		
-	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
K *1	High pressure type (1.0 MPa)	
1 Only	the metal seal type is available for the	

high pressure type.

Coil type

- Standard
- T With power saving circuit (Continuous duty type) ▹ Be sure to select the power saving circuit type if the valve is to be continuously
- energised for long periods of time.
 Be careful of the energising time when the power saving circuit is selected. Refer to page 316 for details.

8 Rated voltage

5




9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R			Non-polar
U	•		Νοπ-ροιαί
S	—		Positive
Z	•	•	common
NS	—		Negative
NZ	•		common
Colort	"D""II""C"	or "7" for the	welve when

- Select "R," "U," "S," or "Z" for the valve when the SI unit output polarity is positive common. Select "R," "U," "NS," or "NZ" for the valve when the SI unit output polarity is negative common.
- Only "Z" and "NZ" types are available with a power saving circuit.

Manual override

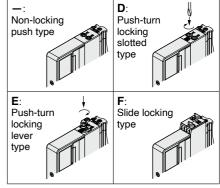



* Refer to page 36 for the safety slide locking manual override.

Type of mounting screw

_	 Round head combination screw 	
В	Hexagon socket head cap screw	
K	Round head combination screw (Drop prevention type)	
Н	Hexagon socket head cap screw (Drop prevention type)	

- For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 222 for base gasket and mounting screw part numbers.
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.



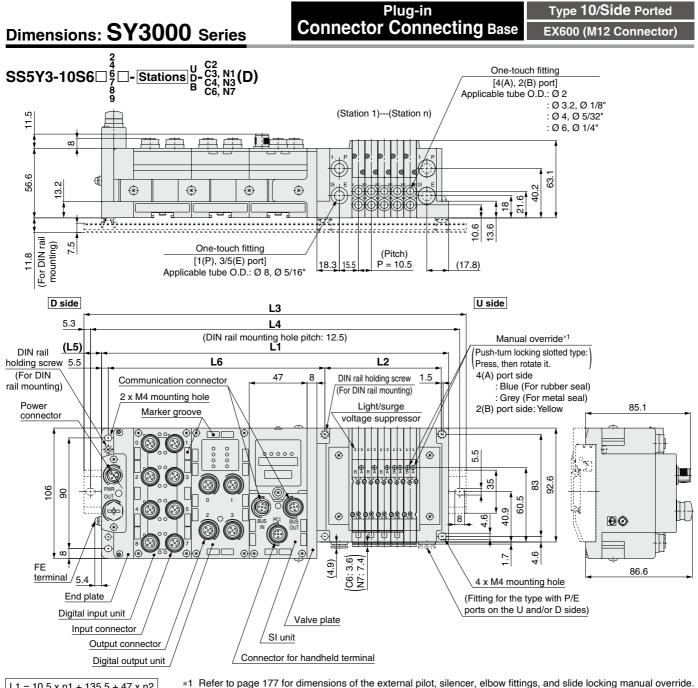


 $L1 = 10.5 \times n1 + 135.5 + 47 \times n2$ $L2 = 10.5 \times n1 + 42$ L4 = L3 - 10.5 L5 = (L3 - L1)/2 $L6 = 47 \times n2 + 82$

These figures show the "SS5Y3-10S6Q22-05D-C6."
Refer to page 182 for dimensions of A or B port top-ported type.

n1: Valve stations
n2: I/O unit stations

LO: DIN HO																							
Valve I/O stations unit stations (n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423
1	235.5	248	248	260.5	273	285.5	298	310.5	323	323	335.5	348	360.5	373	385.5	385.5	398	410.5	423	435.5	448	448	460.5
2	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	410.5	423	435.5	448	460.5	473	485.5	485.5	498	510.5
3	323	335.5	348	360.5	373	385.5	385.5	398	410.5	423	435.5	448	448	460.5	473	485.5	498	510.5	510.5	523	535.5	548	560.5
4	373	385.5	398	410.5	410.5	423	435.5	448	460.5	473	473	485.5	498	510.5	523	535.5	548	548	560.5	573	585.5	598	610.5
5	423	435.5	448	448	460.5	473	485.5	498	510.5	510.5	523	535.5	548	560.5	573	573	585.5	598	610.5	623	635.5	635.5	648
6	473	473	485.5	498	510.5	523	535.5	535.5	548	560.5	573	585.5	598	610.5	610.5	623	635.5	648	660.5	673	673	685.5	698
7	510.5	523	535.5	548	560.5	573	573	585.5	598	610.5	623	635.5	635.5	648	660.5	673	685.5	698	698	710.5	723	735.5	748
8	560.5	573	585.5	598	598	610.5	623	635.5	648	660.5	673	673	685.5	698	710.5	723	735.5	735.5	748	760.5	773	785.5	798
9	610.5	623	635.5	635.5	648	660.5	673	685.5	698	698	710.5	723	735.5	748	760.5	760.5	773	785.5	798	810.5	823	835.5	835.5



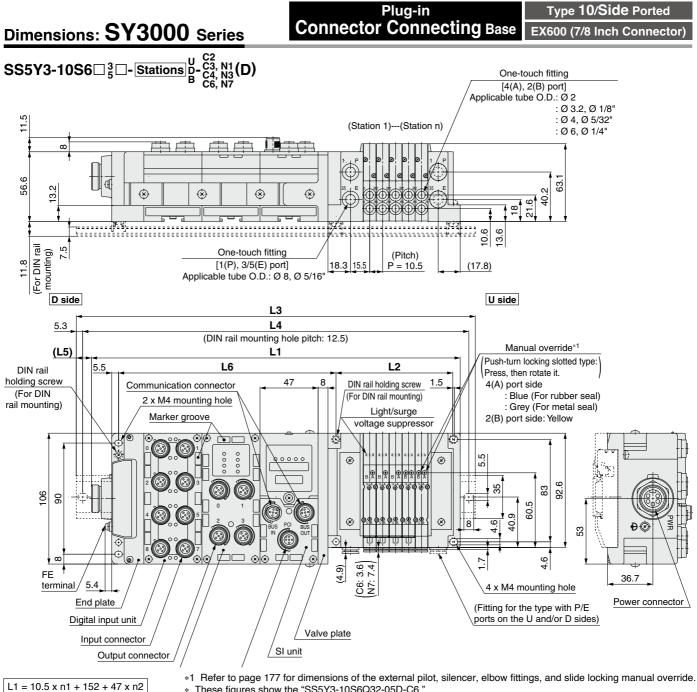

* These figures show the "SS5Y3-10S6Q32-05D-C6."
 * Refer to page 182 for dimensions of A or B port top-ported type.

- L2 = 10.5 x n1 + 42 L4 = L3 – 10.5
 - L5 = (L3 L1)/2


L6 = 47 x n2 + 82

n1: Valve stations

n2: I/O unit stations

Valve stations unit stations (n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298	310.5	323	323	335.5	348	360.5	373	385.5	385.5	398	410.5	423	435.5
1	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	360.5	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5
2	298	310.5	323	323	335.5	348	360.5	373	385.5	385.5	398	410.5	423	435.5	448	448	460.5	473	485.5	498	510.5	523	523
3	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	548	560.5	573
4	385.5	398	410.5	423	435.5	448	448	460.5	473	485.5	498	510.5	510.5	523	535.5	548	560.5	573	585.5	585.5	598	610.5	623
5	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	548	560.5	573	585.5	598	610.5	610.5	623	635.5	648	660.5	673
6	485.5	498	510.5	510.5	523	535.5	548	560.5	573	573	585.5	598	610.5	623	635.5	648	648	660.5	673	685.5	698	710.5	710.5
7	535.5	548	548	560.5	573	585.5	598	610.5	610.5	623	635.5	648	660.5	673	673	685.5	698	710.5	723	735.5	735.5	748	760.5
8	573	585.5	598	610.5	623	635.5	635.5	648	660.5	673	685.5	698	710.5	710.5	723	735.5	748	760.5	773	773	785.5	798	810.5
9	623	635.5	648	660.5	673	673	685.5	698	710.5	723	735.5	735.5	748	760.5	773	785.5	798	798	810.5	823	835.5	848	860.5



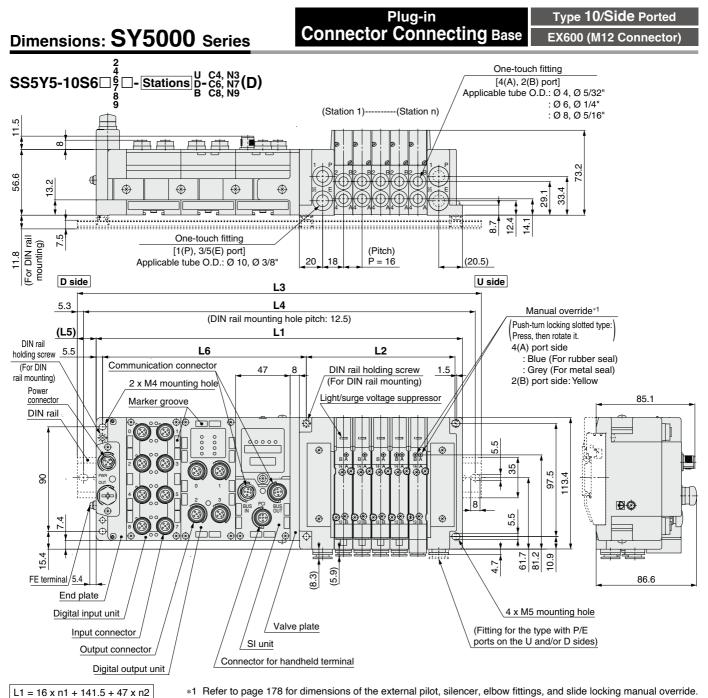

*1 Refer to page 178 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override. * These figures show the "SS5Y5-10S6Q22-05D-C8." type.

*	Refer to	page 183	for dimens	sions of A or	r B port top	-ported ty
		1				

L6	=	4	7	х	n2	+	81.5	,

 $L2 = 16 \times n1 + 48$


L4 = L3 - 10.5

L5 = (L3 - L1)/2

n1: Valve stations n2: I/O unit stations

Valve stations unit stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	198	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	560.5
1	248	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598
2	298	310.5	323	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	623	635.5	648
3	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	498	523	535.5	548	573	585.5	598	610.5	635.5	648	660.5	685.5	698
4	385.5	410.5	423	435.5	460.5	473	485.5	498	523	535.5	548	573	585.5	598	610.5	635.5	648	660.5	673	698	710.5	723	748
5	435.5	448	473	485.5	498	523	535.5	548	560.5	585.5	598	610.5	635.5	648	660.5	673	698	710.5	723	748	760.5	773	785.5
6	485.5	498	523	535.5	548	560.5	585.5	598	610.5	623	648	660.5	673	698	710.5	723	735.5	760.5	773	785.5	810.5	823	835.5
7	535.5	548	560.5	585.5	598	610.5	623	648	660.5	673	698	710.5	723	735.5	760.5	773	785.5	798	823	835.5	848	873	885.5
8	573	598	610.5	623	648	660.5	673	685.5	710.5	723	735.5	760.5	773	785.5	798	823	835.5	848	873	885.5	898	910.5	935.5
9	623	648	660.5	673	685.5	710.5	723	735.5	748	773	785.5	798	823	835.5	848	860.5	885.5	898	910.5	935.5	948	960.5	973



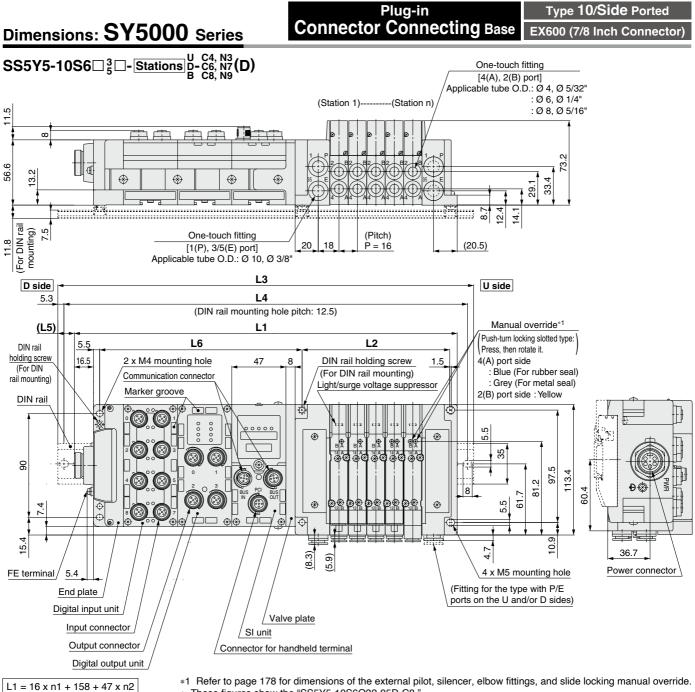


 $L2 = 16 \times n1 + 48$ L4 = L3 - 10.5L5 = (L3 - L1)/2L6 = 47 x n2 + 81.5 * These figures show the "SS5Y5-10S6Q32-05D-C8."

* Refer to page 183 for dimensions of A or B port top-ported type.

n1: Valve stations n2: I/O unit stations

Valve stations unit stations (n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	385.5	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	560.5	573
1	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	560.5	573	585.5	598	623
2	310.5	335.5	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	623	635.5	648	660.5
3	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	610.5	635.5	648	660.5	685.5	698	710.5
4	410.5	423	435.5	460.5	473	485.5	498	523	535.5	548	573	585.5	598	610.5	635.5	648	660.5	685.5	698	710.5	723	748	760.5
5	460.5	473	485.5	498	523	535.5	548	560.5	585.5	598	610.5	635.5	648	660.5	673	698	710.5	723	748	760.5	773	785.5	810.5
6	498	523	535.5	548	560.5	585.5	598	610.5	635.5	648	660.5	673	698	710.5	723	735.5	760.5	773	785.5	810.5	823	835.5	848
7	548	560.5	585.5	598	610.5	623	648	660.5	673	698	710.5	723	735.5	760.5	773	785.5	810.5	823	835.5	848	873	885.5	898
8	598	610.5	623	648	660.5	673	685.5	710.5	723	735.5	760.5	773	785.5	798	823	835.5	848	873	885.5	898	910.5	935.5	948
9	648	660.5	673	685.5	710.5	723	735.5	760.5	773	785.5	798	823	835.5	848	860.5	885.5	898	910.5	935.5	948	960.5	973	—



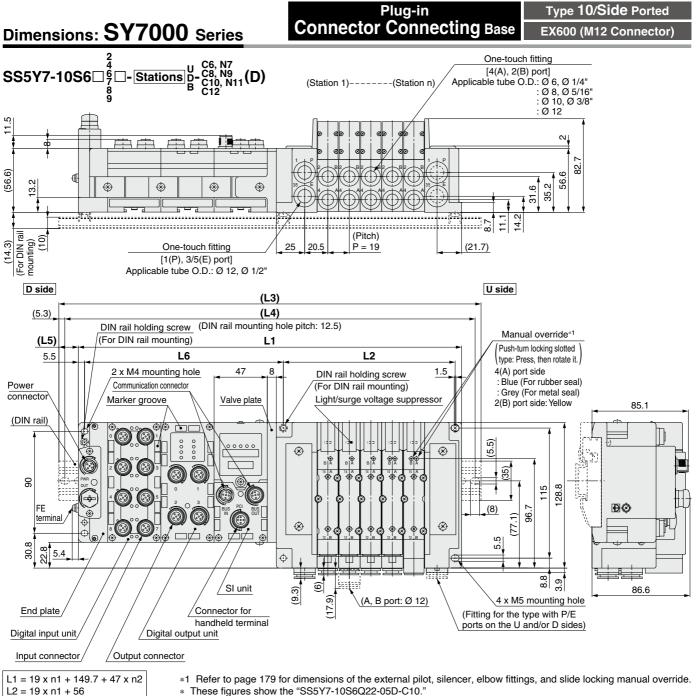

* These figures show the "SS5Y7-10S6Q22-05D-C10."

* Refer to page 184 for dimensions of A or B port top-ported type.


L3 = DIN rail dimension
L4 = L3 – 10.5
L5 = (L3 - L1)/2

L6 = 47 x n2 + 81.7

n1: Valve stations n2: I/O unit stations

Valve I/O stations unit (n1) stations (n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	223	235.5	260.5	273	298	310.5	335.5	348	373	385.5	410.5	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5
1	260.5	285.5	298	323	335.5	360.5	373	398	410.5	435.5	448	473	498	510.5	535.5	548	573	585.5	610.5	623	648	660.5	685.5
2	310.5	335.5	348	373	385.5	410.5	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723
3	360.5	373	398	410.5	435.5	448	473	485.5	510.5	523	548	573	585.5	610.5	623	648	660.5	685.5	698	723	735.5	760.5	773
4	410.5	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798	823
5	448	473	485.5	510.5	523	548	560.5	585.5	598	623	648	660.5	685.5	698	723	735.5	760.5	773	798	810.5	835.5	848	873
6	498	523	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798	823	835.5	860.5	873	898	923
7	548	560.5	585.5	598	623	635.5	660.5	673	698	723	735.5	760.5	773	798	810.5	835.5	848	873	885.5	910.5	923	948	960.5
8	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798	823	835.5	860.5	873	898	910.5	935.5	948	973	_	_
9	635.5	660.5	673	698	710.5	735.5	748	773	798	810.5	835.5	848	873	885.5	910.5	923	948	960.5	985.5	—	—	_	—



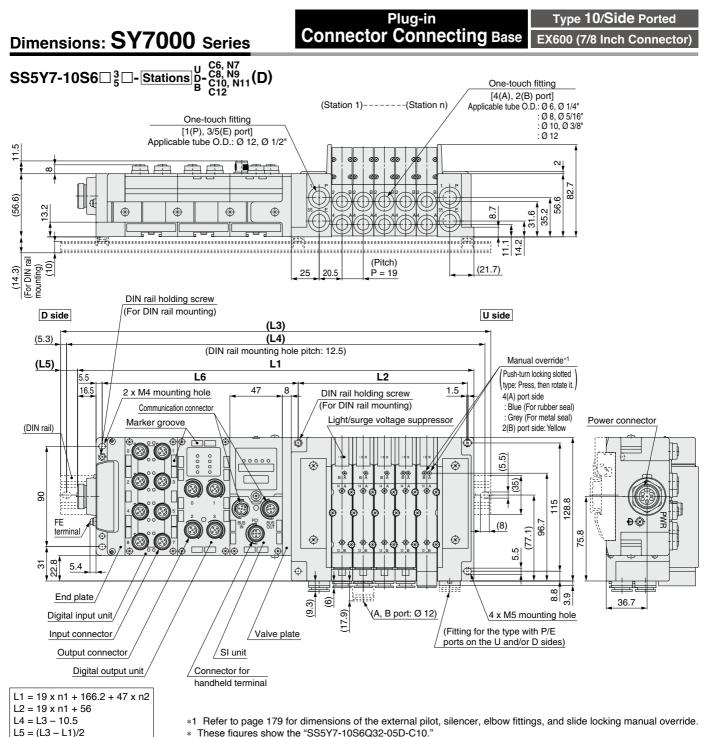

L6 = 47 x n2 + 81.7

n1: Valve stations

n2: I/O unit stations

L3: DIN Rail Overall Length

Valve I/O stations unit (n1) stations (n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	235.5	248	273	285.5	310.5	323	348	360.5	385.5	410.5	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5	648
1	285.5	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	685.5	698
2	323	348	360.5	385.5	398	423	435.5	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723	748
3	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	673	698	710.5	735.5	760.5	773	798
4	423	435.5	460.5	473	498	510.5	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798	823	835.5
5	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	673	698	710.5	735.5	748	773	785.5	810.5	835.5	848	873	885.5
6	510.5	535.5	548	573	585.5	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798	823	835.5	860.5	873	898	910.5	935.5
7	560.5	585.5	598	623	635.5	660.5	673	698	710.5	735.5	748	773	785.5	810.5	823	848	860.5	885.5	910.5	923	948	960.5	985.5
8	610.5	623	648	660.5	685.5	710.5	723	748	760.5	785.5	798	823	835.5	860.5	873	898	910.5	935.5	948	973	985.5	-	_
9	660.5	673	698	710.5	735.5	748	773	785.5	810.5	823	848	860.5	885.5	898	923	935.5	960.5	985.5	_	—	_	—	—

* Refer to page 184 for dimensions of A or B port top-ported type.







EX600

Type 12 Top Ported

SY3000/5000/7000 Series

2

05

How to Order Manifolds

Refer to pages 182 to 184 for the dimensions of Type 12/Top-ported type.

1 Sei	ries
3	SY3000
5	SY5000
7	SY7000

3 SI unit output polarity, end plate type

SS5Y 3 - 12S6 Q

	M12 power supply	7/8 inch power supply	M12 power su IN/OUT,	pply connector A-coded
SI unit output polarity	connector B-coded (EX600-ED2)	connector (EX600-ED3)	Pin arrangement 1 (EX600-ED4)	Pin arrangement 2 (EX600-ED5)
Without SI unit		_	_	
SI unit positive common	2	3	6	8
SI unit negative common	4	5	7	9

When not selecting an SI unit, the symbol will be "-."

I/O unit stations

1

9

Ensure a match with the common specification of the valve to be used.

None

1 station

9 stations

When not selecting an SI unit, the symbol will be "-.

the attached operation manual for mounting.

SI unit is not included in I/O unit stations.

When I/O unit is selected, it is shipped separately, and assembled by users. Refer to


2 SI unit

Without SI unit
DeviceNet [®] (Version A)
PROFIBUS DP (Version A)
CC-Link
EtherNet/IP™
PROFINET
PROFINET (IO-Link unit)
EtherNet/IP [™] compatible wireless base ^{∗1}
PROFINET compatible wireless base*1
Wireless remote*1

*1 The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country.

- * I/O unit cannot be mounted without SI unit.
- * Valve plate which connects manifold and SI unit is included, but it is not mounted to a valve without SI unit. For mounting, refer to the EX600 series in the Web Catalogue.

How to Order Manifold Assembly

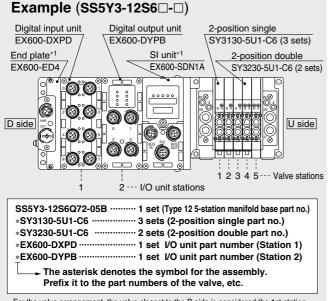

For the valve arrangement, the valve closest to the D side is considered the 1st station.
 Under the manifold part number, state the valves to be mounted, then the I/O units in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.
 *1 Do not enter the SI unit part number and the end plate part number together.

5 Valve stations

Symbol	Stations	Note	
02	2 stations		
:	:	Double wiring*1	
16	16 stations		
02	2 stations		
:	:	Specified layout*2	
24	24 stations	(Up to 32 solenoids available)	

- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- *2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of the blanking plate assembly.

6 P, E port entry, SUP/EXH block assembly

• • • • • • • • • • • •	,		
P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot
U side (2 to 10 stations)	U	C *1	G
D side (2 to 10 stations)	D	E *1	Н
Both sides (2 to 24 stations)	В	_	J

- *1 For SUP/EXH block assembly specifications, built-in silencer types will have P port entry stipulated.
- The P and E ports are only available on the U and D sides for the built-in silencer type. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of the P and E port entry. (Example: When the P and E port entry is on the D side, the silencer exhaust port is on the U side.)
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

P, E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000	
-	Ø 8	Ø 10	Ø 12	697
Ν	Ø 5/16"	Ø 3/8"	Ø 1/2"	

* For N, sizes are in inches.

8 Mounting

—	Direct mounting		
D	DIN rail mounting (With DIN rail)		
D0	DIN rail mounting (Without DIN rail)		
D3	For 3 stations Specify a length longer		
:	: than that of the standard		
	-		


D24 For 24 stations rail.

- If the DIN rail must be mounted without an SI unit, select D0. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 227 for the DIN rail part number.)
- Refer to page 319 for the fixation of DIN rail mounting type manifold.

For details on the EX600 Integrated Type (For Input/Output) Serial Transmission System, refer to the **Web Catalogue** and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 211. (IP40 specifications may be required according to the I/O unit to be selected.) Please download the Operation Manual via the SMC website, https://www.smc.eu







Series				
3 SY3000				
5	SY5000			

2 Type of actuation

1	0 position	Single
2	2-position	Double
3		Closed centre
4	3-position	Exhaust centre
5		Pressure centre
A *1	4	N.C./N.C.
B *1	4-position dual 3-port	N.O./N.O.
C *1		N.C./N.O.

SY7000

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal	
1	Metal seal	

4 Pilot type

	Ji type
—	Internal pilot
R	External pilot

 When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure.

5 Back pressure check valve

	• • • • • • • • • • • • • • • • • • • •		
_	None		
Н	Built-in		

- * Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 236 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

-	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
K *1	High pressure type (1.0 MPa)	
Only the metal seal type is available for the		

*1 Only the metal seal type is available for the high pressure type.

Coil type

Standard

- With power saving circuit (Continuous duty type)
 * Be sure to select the power saving circuit type if the valve is to be continuously
- energised for long periods of time. * Be careful of the energising time when the
- be careful of the energising time when the power saving circuit is selected. Refer to page 316 for details.

24 VDC

8 Rated voltage

5


Sught/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	_		Non polor
U	•		Non-polar
S	—		Positive
Z	•	•	common
NS	—		Negative
NZ	•		common

* Select "R," "U," "S," or "Z" for the valve when the SI unit output polarity is positive common. Select "R," "U," "NS," or "NZ" for the valve when the SI unit output polarity is negative common.

 Only "Z" and "NZ" types are available with a power saving circuit.

Manual override

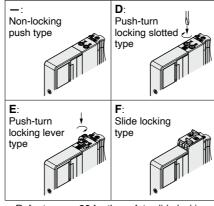

 Refer to page 36 for the safety slide locking manual override.

() A, B port size

Thread piping			
Symbol	Port size	Applicable series	
M5	M5 x 0.8	SY3000	
01	1/8	SY5000	
02	1/4	SY7000	

One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	Ø 2		_	—
C3	Ø 3.2	•	_	—
C4 C6	Ø 4		•	—
	Ø 6		•	•
C 8	Ø 8	—	•	•
C10	Ø 10	_	—	•
C12	Ø 12	_	_	•

One-touch fitting (Inch)

		,		
Symbol	A, B port	SY3000	SY5000	SY7000
N1	Ø 1/8"		—	—
N3	Ø 5/32"		•	_
N7	Ø 1/4"			
N9	Ø 5/16"	—	•	
N11	Ø 3/8"	—	—	

Thread type


_	Rc
F	G
Ν	NPT
Т	NPTF

* Only — is available for M5.

B Type of mounting screw

_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)


- For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 222 for base gasket and mounting screw part numbers.
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.



EX245

SY3000/5000/7000 Series

How to Order Manifold

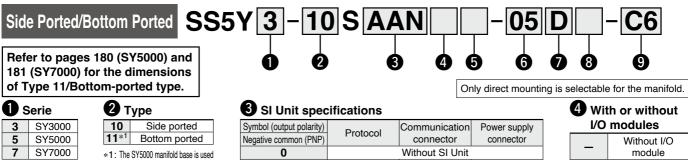

: The SY5000 manifold base is used for the bottom-ported SY3000. When ordering, refer to the "Plugin Mixed Mounting Type Manifold"

5 Number of I/O modules

Type 10

Type 11

Side Ported

Bottom Ported

	Without I/O module
-	(Without SI Unit)
1	1 station
:	:
8	8 stations

6 Valve stations (In the case of the 32-output SI Unit)

<u> </u>		
Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
16	16 stations	
02	2 stations	Specified layout*2
:	÷	(Available up to 32
24	24 stations	solenoids)

*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout

 *2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

*3: This also includes the number of blanking plate assembly.

P, E port entry


U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

8 SUP/EXH block assembly

_	Internal pilot
S	Internal pilot, Built-in silencer
-	
R	External pilot

- *: 3/5(E) port is plugged for the built-in silencer type.
- *: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

For details about the EX245 Integrated-type (For Input/Output) Serial Transmission System, refer to the **Web Catalogue** and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to pages 204 and 205. Please download the Operation Manual via SMC website, https://www.smc.eu

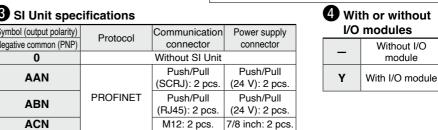

*: The valve output polarity for the SI unit is negative common (PNP).

9 A, B port size (Metric)

Symbol			A, B port	10 (Sid	de ported)	series	11 (Bottom p	orted) series	
Symbol			A, B port	SY3000	SY5000	SY7000	SY5000	SY7000	
C2			Ø 2		-	-	_	_	
C3			Ø 3.2		_	-	_	_	K
C4	ŧ		Ø 4		•	-		_	25
C6	Straight		Ø 6		•				
C8	itra		Ø 8	—	•				
C10	0		Ø 10	—	Ι		—		
C12			Ø 12	—	_		—		
CM *2		Stra	aight port, mixed sizes		•				
L4			Ø 4			—	—	—	K
L6		Ld	Ø 6		•		_	_	
L8		Upward	Ø 8	—	•		—	—	041
L10		٦	Ø 10	—			—	—	000
L12			Ø 12	_	-		—	_	
B4	*	q	Ø 4			—	—	—	K
B6	Elbow ±	var	Ø 6		•		—	—	
B8	Ξ	Š	Ø 8	_	•		_	_	
B10		Downward	Ø 10	_	_		_	_	
B12			Ø 12	_	-		_	_	
LM			ow port, mixed sizes uding upward and downward piping)	•	•	•	_	_	
P, E por	t siz	ze (One-touch fittings)	Ø8	Ø 10	Ø 12	Ø 10	Ø 12	


A, B port size (Inch)

				40.00			44 / 10 11		
Symbol			A, B port		de ported)			orted) series	
Symbol			A, B port	SY3000	SY5000	SY7000	SY5000	SY7000	
N1			Ø 1/8"		_	_	_	_	
N3	<u>+</u>		Ø 5/32"			_		_	K
N7	aight		Ø 1/4"						SU
N9	Stra		Ø 5/16"	_	•		•		A State
N11	N N		Ø 3/8"	_	I		_		
CM*2	1	Str	aight port, mixed sizes						
LN3		-	Ø 5/32"		I	_	_	_	
LN7	1	Upward	Ø 1/4"		•	_	_	_	
LN9	1	ð	Ø 5/16"	_		_	_	_	O Distant
LN11			Ø 3/8"	_	-		_	_	- U.s.
BN3	*1 ≥	Ð	Ø 5/32"		_	_	_	_	
BN7	Elbow	Downward	Ø 1/4"		•	_	_	_	M
BN9		Ň	Ø 5/16"	-	•	_	_	_	
BN11]	ă	Ø 3/8"	—	_		—	-	
LM			Dow port, mixed sizes uding upward and downward piping)	•	•	•	_	_	
P, E poi	rt si	ze (One-touch fittings)	Ø 5/16"	Ø 3/8"	Ø 1/2"	Ø 3/8"	Ø 1/2"	


*1: To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 228 to 231).



How to Order Manifold Assembly

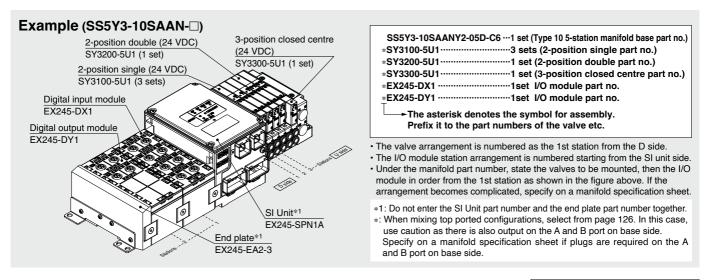

How to Order Valves (With mounting screw) Refer to page 17 for valve specifications.



U Serie

Jene					
3	SY3000				
5	SY5000				
7	SY7000				

2 Type of actuation

1	2-position	Single
2 2-position		Double
3		Closed centre
4	3-position	Exhaust centre
5	Pressure centre	
A *1	A*1 4-position B*1 dual 3-port	N.C./N.C.
		N.O./N.O.
C *1		N.C./N.O.

*1: Only rubber seal type is available for the 4-position dual 3-port valve.

B Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

—	Internal pilot
R	External pilot
* When selecting the external pilot specification for the	

4-position dual 3-port valve, pay attention to the pilot pressure.


Back pressure check valve (Built-in valve type)

_	inone	
Н	Built-in	
	abor anal turna. Manifold installed turna in	

- *: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 236 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- *: The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

Base mounted

6 Pilot valve option



- *1: Only metal seal type is available for the
- high pressure type.

Coil type

- —
 Standard

 T
 With power saving circuit (Continuous duty type)
- *: Be sure to select the power saving circuit type when the valve is continuously
- energised for long periods of time.
 *: Be careful of the energising time when the power saving circuit is selected. Refer to page 316 for details.

8 Rated voltage


3 24 VDC

Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	—		Non-polar
U	•		Non-polai
NS	—	•	Negative
NZ	•		common

 *: "R" and "U" are applicable for every SI Unit.
 *: Only "NZ" types are available for with the power saving circuit.

Manual override

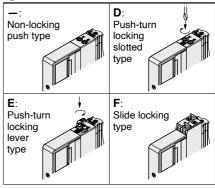



*: Refer to page 36 for with the safety slide locking manual override.

Type of mounting screw

_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)


- *: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- When ordering a valve individually, the base gasket is not included.
 Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
- Refer to page 222 for part numbers of the base gasket and mounting screw.
- *: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.



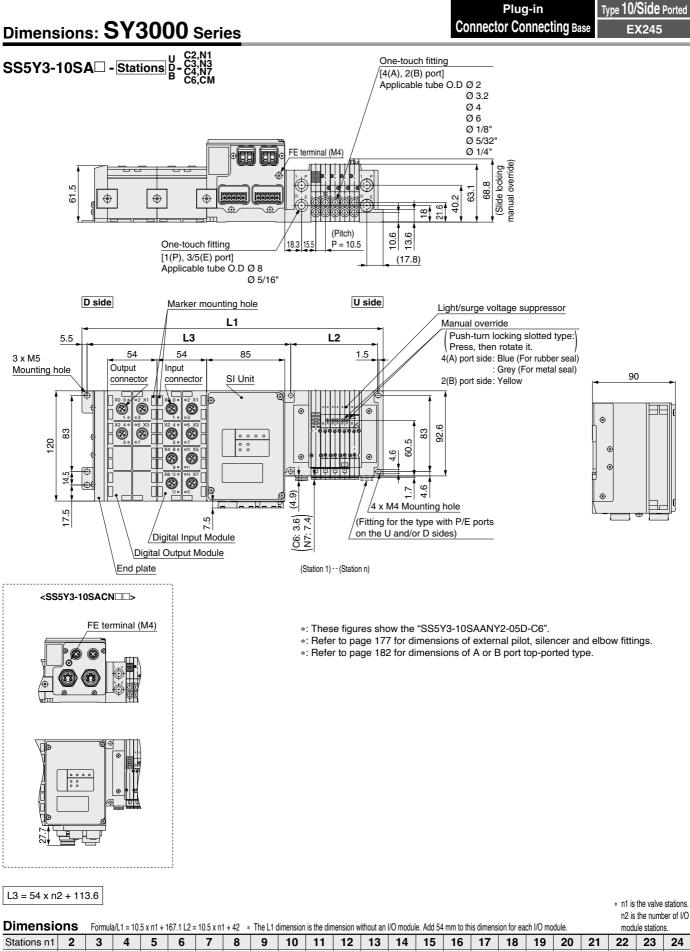


24 L1 198.6 209.1 219.6 230.1 240.6 251.1 261.6 272.1 282.6 293.1 303.6 314.1 324.6 335.1 345.6 356.1 188.1 366.6 377.1 387.6 398.1 408.6 419.1 220.5 231 283.5 294 L2 63 73.5 84 94.5 105 115.5 126 136.5 147 157.5 168 178.5 189 199.5 210 241.5 252 262.5 273

SMC

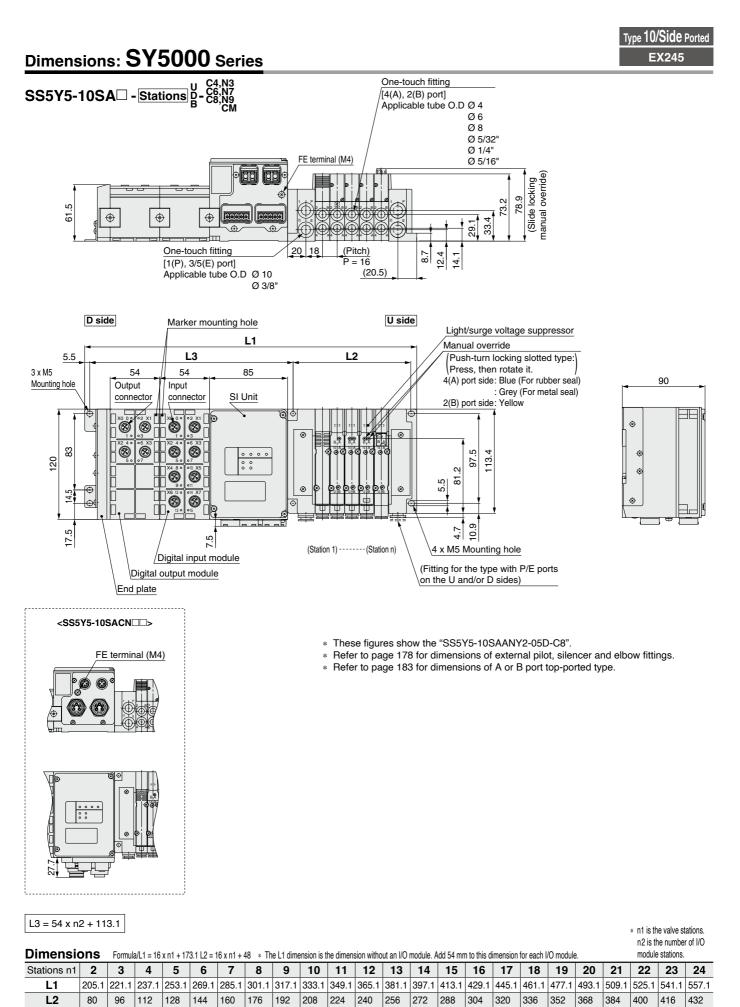

SI\	
-	


Type 10/Side Ported EX245

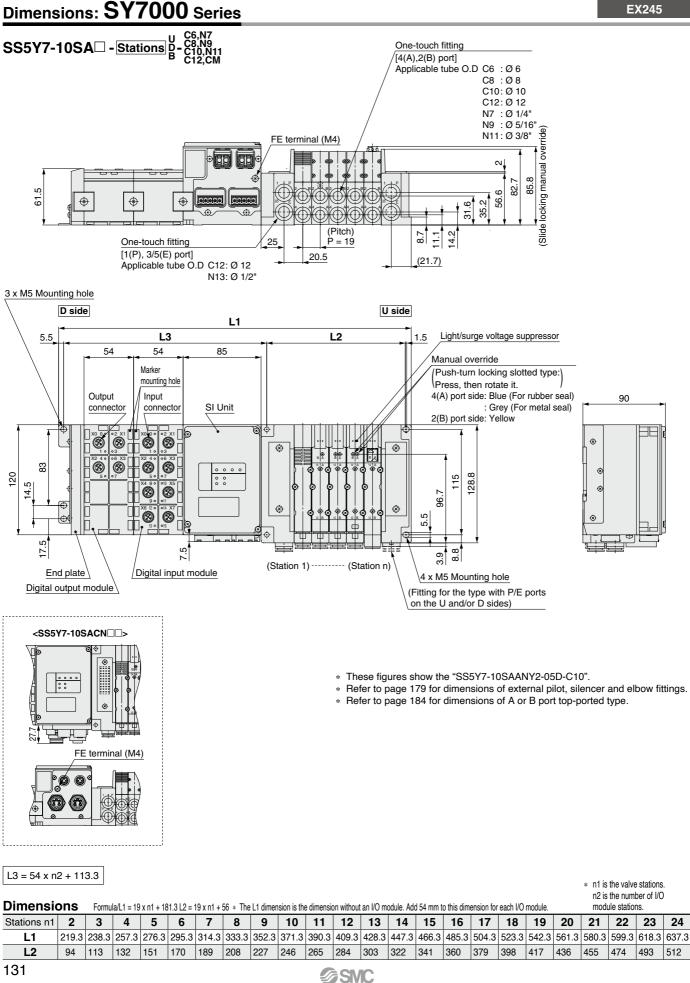

EX245

SY3000/5000/7000 Series (Є ЦК сЯЦ Rohs

How to Order Manifold



Series

Type 12 To<u>p ported</u>

3	SY3000
5	SY5000
7	SY7000

3 With or without I/O modules

_	Without I/O module	
Y	With I/O module	

4 Number of I/O modules

_	Without I/O module (Without SI Unit)
1	1 station
:	:
8	8 stations

6 P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

For details about the EX245 Integrated-type (For Input/Output) Serial Transmission System, refer to the **Web Catalogue** and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to pages 213 and 214. Please download the Operation Manual via SMC website, https://www.smc.eu

2 SI Unit specifications

Symbol (output polarity)	Protocol	Communication connector	Power supply connector	
Negative common (PNP)	FIOLOCOI	Communication connector	Fower supply connector	
0	Without SI Unit			
AAN		Push/Pull (SCRJ): 2 pcs.	Push/Pull (24 V): 2 pcs.	
ABN	PROFINET	Push/Pull (RJ45): 2 pcs.	Push/Pull (24 V): 2 pcs.	
ACN		M12: 2 pcs.	7/8 inch: 2 pcs.	

*: The valve output polarity for the SI unit is negative common (PNP).

5 Valve stations

(In the case of the 32-output SI Unit)

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring ^{*1}
16	16 stations	
02	2 stations	Specified layout*2
:		(Available up to 32
24	24 stations	solenoids)

*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout

*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and

4-position valves cannot be used where single wiring has been specified.)

*: This also includes the number of blanking plate assembly.

SUP/EXH block assembly


_	Internal pilot	
S	Internal pilot, Built-in silencer	
R	External pilot	

- *: 3/5(E) port is plugged for the built-in silencer type.The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- *: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

8 P, E port size (One-touch fittings)

			,	
Symbol	SY3000	SY5000	SY7000	
_	Ø8	Ø 10	Ø 12	
Ν	Ø 5/16"	Ø 3/8"	Ø 1/2"	

How to Order Manifold Assembly

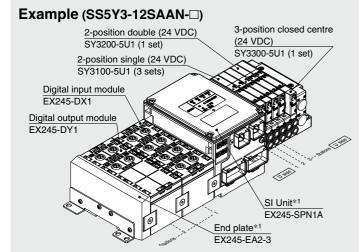

SS5Y3-12SAANY2-05DS-N·····1 set (Type 12 5-station manifold base part no.)	
*SY3130-5U1-C6 ························3 sets (2-position single part no.)	
*SY3220-5U1-C6 ··············1 set (2-position double part no.)	
*SY3330-5U1-C61 set (3-position closed centre part no.)	
*EX245-DX1·········1set I/O module part no.	


*EX245-DX1 Iset 1/O module part no.

The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.

- The valve arrangement is numbered as the 1st station from the D side.
- The I/O module station arrangement is numbered starting from the SI unit side.
- Under the manifold part number, state the valves to be mounted, then the I/O module in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.
- *1: Do not enter the SI Unit part number and the end plate part number together.
- *: When mixing top ported configurations, select from page 133. In this case, use caution as there is also output on the A and B port on base side.

Specify on a manifold specification sheet if plugs are required on the A and B port on base side.



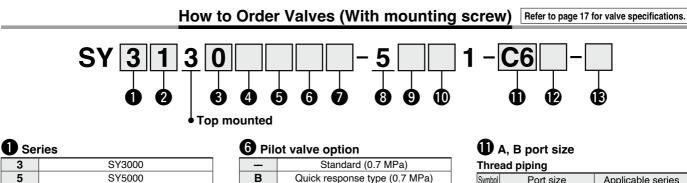

0	Type	of	acti	uati	۸n
	ivne	C) I	асн		on

2-position	Single
	Double
	Closed centre
3-position	Exhaust centre
	Pressure centre
A second to second	N.C./N.C.
	N.O./N.O.
o-port valve	N.C./N.O.

SY7000

*1: Select the rubber seal type for the 4-position dual 3-port valve.

Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

_	Internal pilot
R	External pilot

* When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure.

5 Back pressure check valve

—		Non	е		
H *1		Built-	in		

- *1: Select the rubber seal type when the back pressure check valve is built-in. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. For ordering example, refer to page 236. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- *: The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

_	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
K ∗1	High pressure type (1.0 MPa)	

*1: Select the metal seal type for high pressure type.

Coil type

—	Standard	
т	With power saving circuit (Continuous duty type)*1*2	

- *1: Be sure to select the power saving circuit type when the valve is continuously energised for long periods of time.
- *2: Be careful of the energising time when the power saving circuit is selected. For details, refer to page 316.

8 Rated voltage

5


04	
24	VDC

Light/surge voltage suppressor and common specification

	With light	Surge voltage suppressor	Common specification	
R	—		Non-polar	
U	•		Non-polar	
NS	—	•	Negative	
NZ	•		common	

*: Select "NZ" for with the power saving circuit.

Manual override

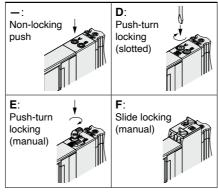

*: Refer to page 36 for with the safety slide locking manual override.

多SMC

Thread piping				
Symbol	Port size	Applicable series		
M5	M5 x 0.8	SY3000		
01	1/8	SY5000		
02	1/4	SY7000		

One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	Ø 2		—	—
C3 C4	Ø 3.2	•	_	—
C4	Ø 4			—
C6	Ø 6			
C 8	Ø 8	_		
C10	Ø 10	_	_	
C12	Ø 12	_	_	

One-touch fitting (Inch)

Symbol	A, B port	SY3000	SY5000	SY7000
N1	Ø 1/8"		—	—
N3	Ø 5/32"			—
N7	Ø 1/4"	•	•	•
N9	Ø 5/16"	_		
N11	Ø 3/8"	_	_	

D Thread type

Rc
G
NPT
NPTF

* Only — is available for M5


B Type of mounting screw

_	Round head combination screw
B Hexagon socket head cap scre	
к	Round head combination screw (Falling-out-prevention type)*1
н	Hexagon socket head cap screw (Falling-out-prevention type)*1

*1: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.

*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance

service. *: Select "--" or "K" for the optional individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.



EX250

SY3000/5000/7000 Series (Є ЦК с ЯЦ В ПОНБ)

How to Order Manifolds

Refer to pages 180 (SY5000) and 181 (SY7000) for the dimensions of Type 11/Bottom-ported type.

Series

Type 10

Type 11 Bottom Ported

Side Ported

-	
3	SY3000
5	SY5000
7	SY7000

2 Туре

<u> </u>				
10	10 Side ported		ed	
11		Bottom ported*1		


*1 The SY5000 manifold base is used for the bottom-ported SY3000. When ordering, refer to the "Plug-in Manifold Mixed Mounting Type" (from page 185).

4 Input block stations

_	None	
1	1 station	
:	:	
8	8 stations	


* When not selecting an SI unit, the symbol will be "-." The maximum number of stations is limited for the AS-Interface applicable SI unit.

How to Order Manifold Assembly

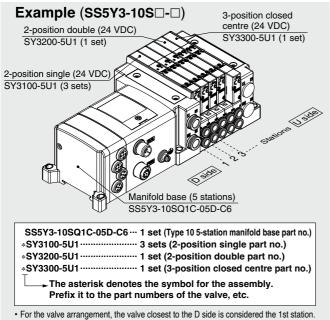

For the valve arrangement, the valve closest to the D side is considered the 1st station.
 Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

When mixing top-ported configurations, select from those listed on page 141. In such cases, use caution as there is also output on the A and B ports on the base side. Specify on the manifold specification sheet if plugs are required for the A and B ports on the base side.



3 SI unit

0	Without SI unit			
Q	DeviceNet [®] (Negative common)			
TA		2 power	8 in/8 out, 31 slave modes	
TB	AS-Interface (Negative	supply systems		4 in/4 out, 31 slave modes
TC	common)	1 power supply	8 in/8 out, 31 slave modes	
TD		system	4 in/4 out, 31 slave modes	
ZE	EtherNet/IP™ (Negative common)			

- * Ensure a match with the common
- specification of the valve to be used.
 Input block cannot be mounted without SI unit.
- The supply current from the SI unit of AS-Interface applicable 1 power supply system specification to the input block and valve is limited.

5 Input block type

	PNP sensor input	NPN sensor input
Without input block	-	-
M12, 2 inputs	Α	D
M12, 4 inputs	В	E
M8, 4 inputs	С	F

C6

 \ast When not selecting an SI unit, the symbol will be "-."

6 Valve stations

Symbol	Stations	Note			
02	2 stations				
:	:	Double wiring*1			
16	16 stations				
02	2 stations	Creative laws ut *?			
:	:	Specified layout* ² (Up to 32 solenoids available)			
24	24 stations	(Op to 32 soleriolds available)			

- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- *2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.) When determining the number of valve stations, note that the maximum number of solenoids for the AS-Interface applicable SI Unit specification is as follows.
 - 8 in/8 out specification: Max. 8 solenoids • 4 in/4 out specification: Max. 4 solenoids
- * This also includes the number of the blanking plate assembly.
- For the product without the SI unit (S0), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

P, E port entry, SUP/EXH block assembly

P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot
U side (2 to 10 stations)	U	С	G
D side (2 to 10 stations)	D	E	Н
Both sides (2 to 24 stations)	В	F	J

* 3/5(E) port is plugged for the built-in silencer type.

When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

For details on the EX250 Integrated Type (For Input/Output) Serial Transmission System, refer to the **Web Catalogue** and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 2 1 5 . Please download the Operation Manual via the SMC website, https://www.smc.eu



How to Order Manifolds

8	A , I	Вp	ort size	(Metri	c/One	-touch	fitting	3)							
Symbol			Type ⁻	10/Side	ported	Type 11/Bo SY5000	ttom ported								
C2			Ø2	515000	515000	517000	515000	517000							
C2			Ø 3.2												
			Ø 3.2 Ø 4		_		_								
C4	ц			•	•	_	•	-							
C6	Straight		Ø6	•	•	•	•	•							
C8	st		Ø 8	-	•	•	•	•							
C10			Ø 10	-	—	•	—	•	0.5						
C12			Ø 12	—	—	•	—	•	*						
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•							
L4			Ø 4	•	•	—	—	_							
L6		p	Ø 6	•	•	•	—	_	K						
L8		Upward	Ø 8	-	•	•	—	—							
L10		Ę	Ø 10	-	—	•	—	—							
L12	~		Ø 12	-	_	٠	—	_	Jel Sale						
B 4	Elbow*2		Ø 4	•	•	_	—	_							
B6	<u>e</u>	Downward	ard	ard	ard	ard	/arc	ard	Ø 6	•	•	•	—	_	
B 8	-		Ø 8	-	•	•	—	_							
B10			Ø 10	-	_	٠	—	_							
B12			Ø 12	_	—	٠	—	I	Tel Bar						
LM*1	M*1 Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_								
	P, E port size (One-touch fittings)			Ø 8	Ø 10	Ø 12	Ø 10	Ø 12							

Type 10/Side ported Type 11/Bottom ported Symbol A, B port SY3000 SY5000 SY7000 SY5000 SY7000 **N1** Ø 1/8" N3 Ø 5/32' • • Straight N7 Ø 1/4" • • • • 6 N9 Ø 5/16" • • • 6 N11 Ø 3/8" • 6 CM*1 Straight port, mixed sizes • • • • • LN3 Ø 5/32" • Upward LN7 Ø 1/4" • • LN9 Ø 5/16" • LN11 Ø 3/8" • Elbow*2 BN3 Ø 5/32' • Downward BN7 Ø 1/4" BN9 Ø 5/16" • BN11 Ø 3/8" • Elbow port, mixed sizes LM*1 (Including upward and downward piping) • • • _ _ Ø P, E port size Ø 3/8" Ø 1/2" Ø 3/8" Ø 1/2" (One-touch fittings) 5/16"

A, B port size (Inch/One-touch fitting)

*1 Indicate the sizes on the manifold specification sheet in the case of "CM" or "LM." The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting direction

*2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 228 to 230).


9 Mounting and Option

	unung	y and opt				
		Option		DIN Rail	Option	
Symbol	Mounting	Name plate	Station number	—	Standa	ard length
_	-	_	_	0		rail (with bracket)
AA	Direct			3	For 3 stations	Specify a longer
BA	mounting	•	_	:	:	rail than the total length of specified
D		_	_	24	For 24 stations	stations.
A	DIN rail mounting	•				
B			_			


Enter the number of stations inside \Box when it is larger than the number of valve stations. (Refer to "DIN Rail Option" above.)

Only direct mounting is available for the type 11 bottom-ported type. Refer to page 319 for the fixation of DIN rail mounting type manifold. If the DIN rail must be mounted without an SI unit, select D0. Then, * refer to L3 of the dimensions for the DIN rail length and order

separately. (Refer to page 227 for the DIN rail part number.)



How to Order Valves (With mounting screw) Refer to page 17 for valve specifications.



0	Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

1	2-position	Single	
2	2-position	Double	
3		Closed centre	
4	3-position	Exhaust centre	
5		Pressure centre	
A *1	4	N.C./N.C.	
B *1	4-position dual 3-port	N.O./N.O.	
C *1	uuai 3-port	N.C./N.O.	

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

Seal type				
0	Rubber seal			
1	Metal seal			

4 Pilot type

<u> </u>	
—	Internal pilot
R	External pilot
* When	selecting the external nilot specification

for the 4-position dual 3-port valve, pay attention to the pilot pressure.

Back pressure check valve (Built-in valve type)

	, , , , , , , , , , , , , , , , , , ,
—	None
Н	Built-in

- * Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 236 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

 Standard (0.7 MPa) 			
B Quick response type (0.7 MPa)			
K ∗1	High pressure type (1.0 MPa)		
1 Only the metal seal type is available for the			

high pressure type.

Coil type

- Standard
- T With power saving circuit (Continuous duty type) Be sure to select the power saving circuit type if the valve is to be continuously
- energised for long periods of time.
 * Be careful of the energising time when the power saving circuit is selected. Refer to page 316 for details.

8 Rated voltage


5 24 VDC

Sught/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R U			Non-polar
NS	_	•	Negative common
NZ	•		common

* Only "NZ" type is available with a power saving circuit.

Manual override

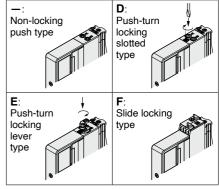



* Refer to page 36 for the safety slide locking manual override.

Type of mounting screw

_	Round head combination screw
В	Hexagon socket head cap screw
Κ	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- * For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included.
 Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance.
 Refer to page 222 for base gasket and mounting screw part numbers.
 * "B" and "H" cannot be selected for the
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.



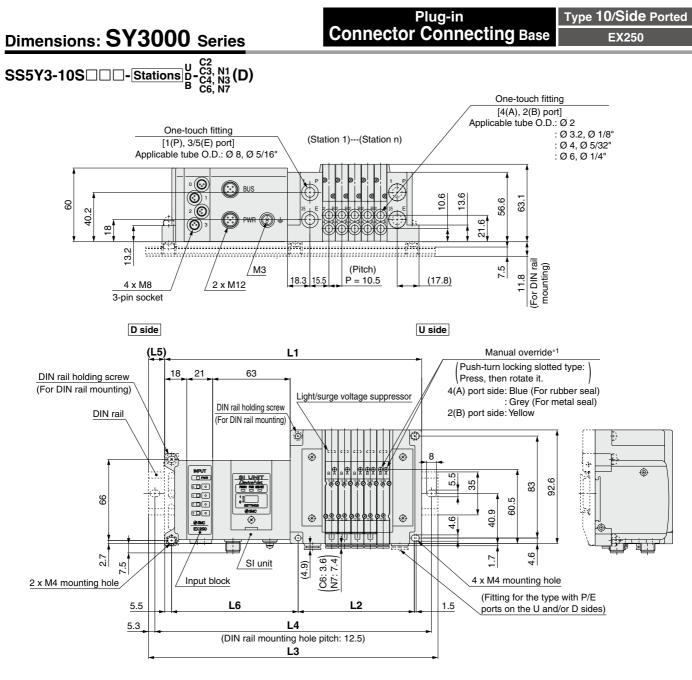

L1 = 10.5 x n1 + 135.5 + 21 x n2 $L2 = 10.5 \times n1 + 42$ L4 = L3 - 10.5L5 = (L3 - L1)/2

*1 Refer to page 177 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override. * These figures show the "SS5Y3-10SQ1A-05D-C6." * Refer to page 182 for dimensions of A or B port top-ported type.

 $L6 = 21 \times n2 + 82$


n1: Valve stations


n2: Input block stations

Valve stations Input block stations (n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423
1	210.5	223	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5
2	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5
3	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5
4	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498
5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523
6	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548
7	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	548	560.5
8	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	548	560.5	573	585.5





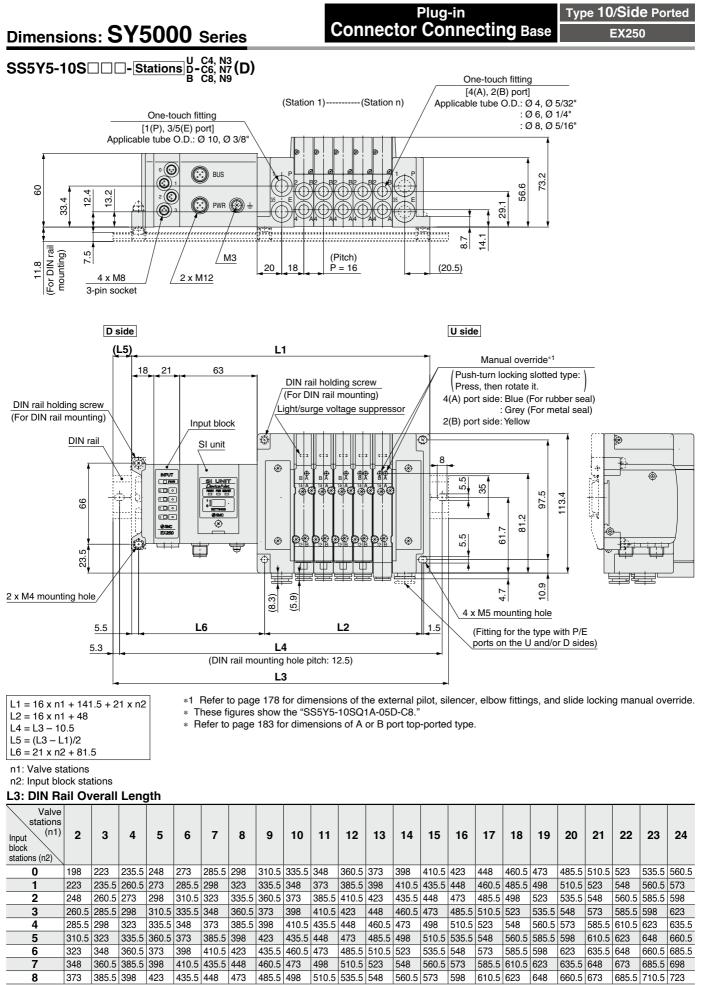

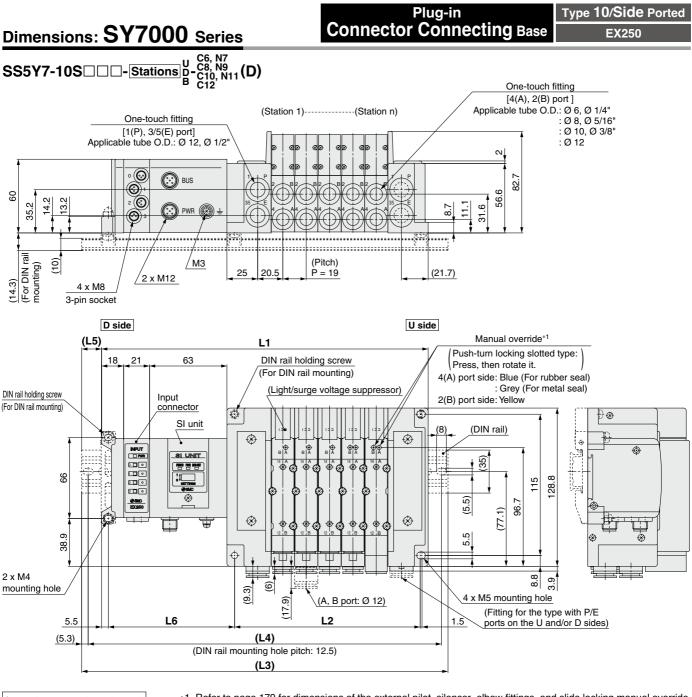

L1 = 19 x n1 + 149.7 + 21 x n2 $L2 = 19 \times n1 + 56$ L4 = L3 - 10.5

*1 Refer to page 179 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override. * These figures show the "SS5Y7-10SQ1A-05D-C10." * Refer to page 184 for dimensions of A or B port top-ported type.

L5 = (L3 – L1)/2

L6 = 21 x n2 + 81.7

n1: Valve stations

n2: Input block stations

Valve stations (n1) I/O Unit stations (n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	223	235.5	260.5	273	298	310.5	335.5	348	373	385.5	410.5	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5
1	235.5	260.5	273	298	310.5	335.5	348	373	385.5	410.5	423	448	460.5	485.5	498	523	548	560.5	585.5	598	623	635.5	660.5
2	260.5	273	298	310.5	335.5	348	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	673
3	285.5	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	673	698
4	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5	510.5	523	548	573	585.5	610.5	623	648	660.5	685.5	698	723
5	323	335.5	360.5	373	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5	610.5	623	648	660.5	685.5	698	723	735.5
6	348	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5	610.5	623	648	660.5	685.5	698	723	748	760.5
7	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5
8	385.5	398	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798



EX250

SY3000/5000/7000 Series



Refer to pages 182 to 184 for the dimensions of Type 12/Top-ported type.

Type 12

Top Ported

Series

3	SY3000
5	SY5000
7	SY7000

3 Input block stations

1 1 station	_	None				
	1	1 station				
	:	:				
8 8 stations	8	8 stations				


* When not selecting an SI unit, the symbol will be The maximum number of stations is limited for the AS-Interface applicable SI unit.

Input block type

	PNP sensor input	NPN sensor input
	•	
Without input block	-	-
M12, 2 inputs	Α	D
M12, 4 inputs	В	E
M8, 4 inputs	С	F

* When not selecting an SI unit, the symbol will be "-."

How to Order Manifold Assembly

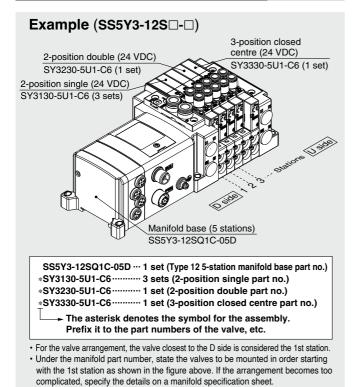

SS5Y 3 - 12S Q 05

2 SI unit

0	Without SI unit						
Q	DeviceNet [®] (Negative common)						
TA	AS-Interface (Negative	2 power	8 in/8 out, 31 slave modes				
		supply systems	4 in/4 out, 31 slave modes				
	ommon)	1 power	8 in/8 out, 31 slave modes				
TD		supply system	4 in/4 out, 31 slave modes				
ZE	EtherNet/IP™ (Negative common)						

- Ensure a match with the common specification of the valve to be used. Input block cannot be mounted without SI unit.
- The supply current from the SI unit of AS-
- Interface applicable 1 power supply system specification to the input block and valve is limited

5 Valve stations

-										
Symbol	Stations	Note								
02	2 stations	Double wiring*1								
:	:									
16	16 stations									
02	2 stations	Creatified lawsut*2								
:	:	Specified layout* ² (Up to 32 solenoids available)								
24	24 stations									

RoH₃

- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- *2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.) When determining the number of valve stations, note that the maximum number of solenoids for the AS-Interface applicable SI unit specification is as follows. · 8 in/8 out specification: Max. 8 solenoids
- 4 in/4 out specification: Max. 4 solenoids This also includes the number of the blanking
- plate assembly. For the product without the SI unit (S0), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

6 P, E port entry, SUP/EXH block assembly

P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot					
U side (2 to 10 stations)	U	C *1	G					
D side (2 to 10 stations)	D	E *1	Н					
Both sides (2 to 24 stations)	В	—	J					

*1 For SUP/EXH block assembly specifications, built-in silencer types will have P port entry stipulated.

The P and E ports are only available on the U and D sides for the built-in silencer type. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of the P and E port entry. (Example: When the P and E port entry is on the D side, the silencer exhaust port is on the U side.)

When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

P, E port size (One-touch fittings)

			• •	
Symbol	SY3000	SY5000	SY7000	
_	Ø 8	Ø 10	Ø 12	
N	Ø 5/16"	Ø 3/8"	Ø 1/2"	


For N, sizes are in inches

8 Mounting

<u> </u>										
_	Di	Direct mounting								
D	DIN rail mounting (With DIN rail)									
D0	DIN rail mounting (Without DIN rail)									
D3	For 3 stations	Specify a length								
:		longer than that of								
D24	For 24 stations	the standard rail.								

- * If the DIN rail must be mounted without an SI unit, select D0. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 227 for the DIN rail part number.)
- Refer to page 319 for the fixation of DIN rail mounting type manifold.

For details on the EX250 Integrated Type (For Input/Output) Serial Transmission System, refer to the **Web Catalogue** and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 215. Please download the Operation Manual via the SMC website, https:// www.smc.eu

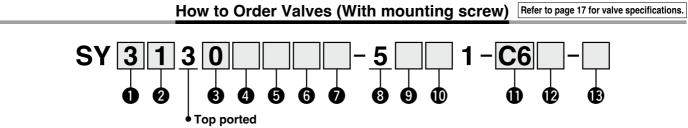

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

1	0 maaitian	Single
2	2-position	Double
3		Closed centre
4	3-position	Exhaust centre
5		Pressure centre
A *1	4-position dual 3-port	N.C./N.C.
B *1		N.O./N.O.
C *1	uuai 5-port	N.C./N.O.

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

U Sea	а туре
0	Rubber seal
1	Metal seal

Pilot type

Γ	_	Internal pilot
	R	External pilot
	Whon	selecting the external pilot specification

 When selecting the external pilot specificatio for the 4-position dual 3-port valve, pay attention to the pilot pressure.

5 Back pressure check valve (Built-in valve type)

Ι	None					
Н		Built-in				
<u> </u>						Ĩ

- Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 236 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

-	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
K ∗1	High pressure type (1.0 MPa)	
Only the metal seal type is available for the		

*1 Only the metal seal type is available for the high pressure type.



- Standard

- T With power saving circuit (Continuous duty type)
- Be sure to select the power saving circuit type if the valve is to be continuously energised for long periods of time.
- Be careful of the energising time when the power saving circuit is selected. Refer to page 316 for details.

8 Rated voltage


Sught/surge voltage suppressor and common specification

24 VDC

Symbol	With light	Surge voltage suppressor	Common specification
R	—		Non-polar
U	•		Non-polai
S	—		Positive
Z	•	•	common
NS	—		Negative
NZ	•		common
"D" I "I I (OI ')			

"R" and "U" are applicable for every SI unit.
 Only "Z" and "NZ" types are available with a power saving circuit.

Manual override

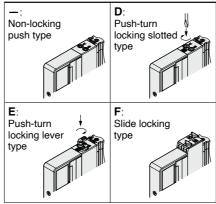

* Refer to page 36 for the safety slide locking manual override.

A, B port size

Thread piping				
Symbol	Port size	Applicable series		
M5	M5 x 0.8	SY3000		
01	1/8	SY5000		
02	1/4	SY7000		

One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	Ø 2	•	—	—
C3	Ø 3.2	•	_	_
C4 C6	Ø 4	•		_
C6	Ø 6			
C8	Ø 8	_	•	
C10	Ø 10	_	_	
C12	Ø 12	—	_	

One-touch fitting (Inch)

Symbol	A, B port	SY3000	SY5000	SY7000
N1	Ø 1/8"	•	—	_
N3	Ø 5/32"	•		_
N7	Ø 1/4"			
N9	Ø 5/16"	_		
N11	Ø 3/8"	_	_	

D Thread type

—	Rc	
F	G	
Ν	NPT	
Т	NPTF	

* Only — is available for M5.

B Type of mounting screw

_	Round head combination screw
В	Hexagon socket head cap screw
Κ	Round head combination screw (Drop prevention type)
н	Hexagon socket head cap screw (Drop prevention type)

For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.

- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance.
- Refer to page 222 for base gasket and mounting screw part numbers. • "B" and "H" cannot be selected for the individual SUP/CH spacer assembly or
- individual SUP/EXH spacer assembly or interface regulator.





EX260

SS5Y

10 S NAN - 05

3

Refer to page 145 for details on manifolds that support safety communication (PROFIsafe).

How to Order Manifolds

Refer to pages 180 (SY5000) and 181 (SY7000) for the dimensions of Type 11/Bottom-ported type.

Series

Type 10

Type 11 Bottom Ported

Side Ported

3	SY3000
5	SY5000
7	SY7000

2 Туре

<u> </u>	
10	Side ported
11	Bottom ported ^{*1}

*1 The SY5000 manifold base is used for the bottom-ported SY3000. When ordering, refer to the "Plug-in Mixed Type Manifold" (from page 185).

3 SI unit specifications

(Output polarity, Protocol, Number of outputs, Communication connector)

put polarity)		Number	Communication	
	Protocol	of	connector	
(PNP)		outputs	00.2100101	
*1	Without	SI unit		
QAN	DeviceNet [®]	32	M12	
QBN	Devicervel®	16	IVITZ	
NAN		32	M12	
NBN	PROFIBUS	16	IVITZ	
NCN	DP	32	*4 D-sub	
NDN		16	D-Sub	
VAN	CC Link	32	M12	
VBN	CC-LINK	16		
DAN	EthorCAT	32	M12	
DBN	EllierCAT	16		
FAN		32	M12	
FBN	FROFINET	16	IVI I Z	
EAN	EthorNot/IDTM	32	M12	
EBN		16		
GAN	Ethernet	32	M12	
GBN	POWERLINK	16		
KAN	IO-Link	32* ⁵	M12	
	Negative common (PNP) *1 QAN QBN NAN NBN NCN NDN VAN VAN VAN VBN DAN DAN DAN DAN DAN DAN CAN CAN FBN EAN EBN GAN GBN	Negative common (PNP) Protocol Verticely Protocol QBN DeviceNet® QBN DeviceNet® NAN PROFIBUS NCN DP NDN CC-Link VAN CC-Link VBN EtherCAT DBN PROFINET FAN PROFINET EAN EtherNet/IP™ GAN Ethernet GBN POWERLINK	Negative common (PNP) Protocol of outputs Image: Common of (PNP) Protocol of outputs Image: Common of (PNP) DeviceNet® 32 Image: Common of (PNP) DP 32 Image: Common of (PNP) DP 32 Image: Common of (PNP) CC-Link 16 Image: Common of (PNP) CC-Link 32 Image: Common of (PNP) PROFINET 32 Image: Common of (PNP) The (PNP) 16 Image: Common of (PNP) The (PNP) 32 Image: Common of (PNP) PROFINET 32 Image: Common of (PNP) The (PNP) 32 Image: Common of (PNP) PROFINET 32 Image: Common of (PNP) The (PNP) 32 Image: Common of (PNP) PROFINET 32 Image: Common of (PNP) The (PNP) 32 Image: Common of (PNP) The (PNP) <	

*1 Without SI unit, the output polarity is decided by the SI unit used. Ensure a match with the common specification of the valves to be used.

*2 DIN rail cannot be mounted without SI unit.
*3 Positive common (NPN) type is not

applicable.

*4 IP40 for the D-sub applicable

- communication connector specification
- *5 Only the 32 outputs type is available.

4 Valve stations

3

In	tho	0260	of t	ho	32-out	nut	SI	unit
	une	case	OI L	ne	JZ-0UL	put	31	um

(2

Symbol	Stations	Note		
02	2 stations			
1	:	Double wiring ^{*1}		
16	16 stations			
02	2 stations			
1	:	Specified layout*2 (Up to 32 solenoids available)		
24	24 stations	(Op to 32 soleriolds available)		

In the case of the 16-output SI unit

Symbo	Stations	Note						
02	2 stations							
:	:	Double wiring ^{*1}						
08	8 stations							
02	2 stations	0						
:	:	Specified layout*2 (Up to 16 solenoids available)						
16	16 stations	(Op to 10 solenoids available)						

- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout
- *2 Specified layout: Indicate the wiring specifications on the manifold specification sheet.

(Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)

- This also includes the number of the blanking plate assembly.
- For the model without the SI unit (S0), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

5 P, E port entry

4

<u> </u>	
U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

C6

6 SUP/EXH block assembly

Internal pilot					
S Internal pilot, Built-in silencer					
R External pilot					
· 2/E/E) port is plugged for the built in eileneer					

 3/5(E) port is plugged for the built-in silencer type.
 When the built in silencer type is used, keep

 When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

Refer to the page on the right for 7.

8 Mounting and Option

Symbol	Mounting	Option		
Symbol	wounting	Name plate	Station number	
—	Diversit	—	—	
AA	Direct mounting			
BA	mounting		_	
D		_	—	
A	DIN rail mounting			
B	mounting		—	

- Enter the number of stations inside
 when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)
- Only direct mounting is available for the type 11 bottom-ported type.
- Refer to page 319 for the fixation of DIN rail mounting type manifold.

DIN Rail Option

_	Standard length				
0	With	Without DIN rail (with bracket)			
3	For 3 stations	Creatify a langer roll than the			
:	÷	Specify a longer rail than the total length of specified statior			
24	For 24 stations	total length of specified stations.			

 If the DIN rail must be mounted without an SI unit, select D0. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 227 for the DIN rail part number.)

For details on the EX260 Integrated Type (For Output) Serial Transmission System, refer to the **Web Catalogue** and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 216. Please download the Operation Manual via the SMC website, https://www.smc.eu

How to Order Manifolds


	A , I	Вp	oort size	(Metri	c/One	-touch	fitting	g)	
Symbol		٨	B port				Type 11/Bo		
Symbol		А,	B port	SY3000	SY5000	SY7000	SY5000	SY7000	
C2			Ø 2	•	—	—	—	—	
C3			Ø 3.2	•	—	—	—	—	
C4			Ø 4	•	•	—	•	—	K
C6	Straight		Ø 6	•	•	•	•	•	
C8	Stra		Ø 8	-	•	•	•	•	
C10			Ø 10	-	—	•	—	•	Sector Sector
C12			Ø 12	-	_	•	_	•	- Var
CM *1		Straig	ht port, mixed sizes	•	•	•	•	•	
L4			Ø 4			—	—	—	
L6		p	Ø 6	•	•	•	—	—	See
L8		Upward	Ø 8	-	•	•	—	—	
L10		ž	Ø 10	—	—	•	—	—	
L12	~		Ø 12	—	—	•	—	—	Jel Sam
B 4	Elbow*2		Ø 4	•	•	—	—	—	
B 6	Ш	Downward	Ø 6		•	•	—	—	
B 8	_	NUN	Ø 8	—	•	•	—	—	
B10		Do	Ø 10	—	—	•	—	—	
B12			Ø 12	—	—	•	—	—	Tor and the second seco
LM*1		(Incl	v port, mixed sizes uding upward and wnward piping)	•	•	•	_	_	
(On	ie-to	ouc	rt size h fittings)	Ø 8	Ø 10	Ø 12	Ø 10	Ø 12	

A, B port size (Inch/One-touch fitting) Type 10/Side ported Type 11/Bottom ported A, B port Symbol SY3000 SY5000 SY7000 SY5000 SY7000 N1 Ø 1/8' N3 Ø 5/32' • Straight Ø 1/4" • • • • 6 Ø 5/16" • • • • N11 Ø 3/8" • CM*1 Straight port, mixed sizes • • • LN3 Ø 5/32" • Upward LN7 Ø 1/4" • • _ LN9 Ø 5/16" • LN11 Ø 3/8" • BN3 BN7 Ø 5/32" • Downward Ø 1/4" • • BN9 Ø 5/16" • BN11 Ø 3/8" • Elbow port, mixed sizes LM*1 • (Including upward and downward piping) Ø P, E port size Ø 3/8" Ø 1/2" Ø 3/8" Ø 1/2' (One-touch fittings) 5/16"

*1 Indicate the sizes on the manifold specification sheet in the case of "CM" or "LM." The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting direction.

*2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 228 to 230).


How to Order Manifold Assembly

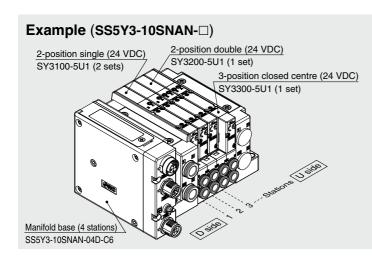


SS5Y3-10SNAN-04D-C6…1 set (Type 10 4-station manifold base part no.) ∗SY3100-5U12 sets (2-position single part no.) ∗SY3200-5U11 set (2-position double part no.) ∗SY3300-5U11 set (3-position closed centre part no.) ↓The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.	
• For the valve arrangement, the valve closest to the D side is considered the 1st station.	

 Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

* When mixing top-ported configurations, select from those listed on page 152. Specify on the manifold specification sheet if plugs are required for the A and B ports on the manifold.







Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

1	0 position	Single		
2	2-position	Double		
3		Closed centre		
4	3-position	Exhaust centre		
5		Pressure centre		
A *1	4	N.C./N.C.		
B *1	4-position dual 3-port	N.O./N.O.		
C *1	uuai 5-port	N.C./N.O.		

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

000	
0	Rubber seal
1	Metal seal

4 Pilot type

_		Inter	nal	pilc	ot		
R		Exter	mal	pilo	ot		

 When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure.

5 Back pressure check valve (Built-in valve type)

—	None
Н	Built-in

- * Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 236 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

Base mounted

_	Standard (0.7 MPa)				
B Quick response type (0.7 MP					
K ∗1	High pressure type (1.0 MPa)				
1 Only the metal seal type is available for the					

high pressure type.

Coil type

- Standard
- T With power saving circuit (Continuous duty type) Be sure to select the power saving circuit type if the valve is to be continuously
- energised for long periods of time. Be careful of the energising time when the
- be careful of the energising time when the power saving circuit is selected. Refer to page 316 for details.

8 Rated voltage

5

24 VDC


9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification				
R	—		Non polor				
U	•		Non-polar				
S	—	Positive					
Z	•	•	common				
NS	—		Negative				
NZ	•		common				

 Select "R," "U," "S," or "Z" for the valve when the SI unit output polarity is — (positive common). Select "R," "U," "NS," or "NZ" for the valve when the SI unit output polarity is N (negative common).

 Only "Z" and "NZ" types are available with a power saving circuit.

Manual override

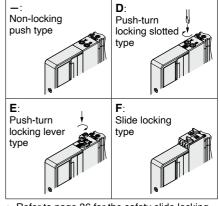


 Refer to page 36 for the safety slide locking manual override.

① Type of mounting screw

_	Round head combination screw				
В	Hexagon socket head cap screw				
к	Round head combination screw (Drop prevention type)				
н	Hexagon socket head cap screw (Drop prevention type)				

 For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.

- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 222 for base gasket and mounting screw part numbers.
 "B" and "H" cannot be selected for the
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.





EX260 Safety Communication Protocol (PROFIsafe)

SY3000/5000/7000 Series

PN

05

Using the safety communication protocol

Refer to the EX260 **Web Catalogue** for details on units that support the safety communication protocol. When using a manifold valve within an ISO 13849-compliant safety system, the device needs to be considered from both the pneumatic circuit and the electric side.

Devices (including valves) need to be selected based on whether their functions are in line with the safety level of the equipment as a whole.

The use of valves that have been validated as being compliant with ISO 13849-2 may be required. For details on valves that have been validated, please contact SMC.

SS5Y

In addition, refer to "Safety Instructions" for precautions on model selection.

How to Order Manifolds

Refer to for details on manifolds that support Fieldbus and Industrial Ethernet.

RoHS

Refer to pages 180 (SY5000) and 181 (SY7000) for the dimensions of Type 11/Bottom-ported type.

Series

3	SY3000
5	SY5000
7	SY7000

2 Туре

_	
10	Side ported
11	Bottom ported ^{*1}

*1 The SY5000 manifold base is used for the bottom-ported SY3000. When ordering, refer to the "Plug-in Mixed Type Manifold" (from page 185).

SI unit specifications (Output polarity, Protocol, Number of outputs, Communication connector)

Symbol (Ou	tput polarity)		Number	0
Positive common (NPN) (PNP)		Protocol	of outputs	Communication connector
0	*1	Without	SI unit	
_* ³	FPN	PROFIsafe	32*4	M12

- *1 Without SI unit, the output polarity is decided by the SI unit used. Ensure a match with the common specification of the valves to be used.
- *2 DIN rail cannot be mounted without SI unit.
 *3 Positive common (NPN) type is not
- *3 Positive common (NPN) type is not applicable.
- *4 Only the 32 outputs type is available.

4 Valve stations

3

-									
Symbol	Stations	Note							
02	2 stations								
:	:	Double wiring*1							
16	16 stations	-							
02	2 stations	On a sifi a d la sa sta?							
:	:	Specified layout* ² (Up to 32 solenoids available)							
24	24 stations	(Op to 32 sole lolds available)							
4 0	4. Develope anticipate Operativity a simple standal								

- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout
- *2 Specified layout: Indicate the wiring specifications on the manifold specification sheet.

(Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)

This also includes the number of the blanking plate assembly.

5 P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

6 SUP/EXH block assembly

_	Internal pilot					
S	Internal pilot, Built-in silencer					
R	External pilot					
* 3/5(E)	* 3/5(E) port is plugged for the built-in silencer					

- 3/5(E) port is plugged for the built-in silencer type.
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

Refer to the page on the right for 7.

8 Mounting and Option

Symbol	Mounting	Option						
Symbol	wounting	Name plate	Station number					
-	Diverset	_	-					
AA	Direct mounting		•					
BA	mounting	•	_					
D	DIN	_	_					
A	DIN rail mounting		•					
B	mounting		_					

- Enter the number of stations inside
 when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)
- Only direct mounting is available for the type 11 bottom-ported type.
- Refer to page 319 for the fixation of DIN rail mounting type manifold.


DIN Rail Option

	_	Standard length							
ſ	0	With	Without DIN rail (with bracket)						
ſ	3	For 3 stations	Creatify a langer roll than the						
	:	:	Specify a longer rail than the total length of specified stations.						
	24	For 24 stations	total length of specified stations.						

 If the DIN rail must be mounted without an SI unit, select D0. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 227 for the DIN rail part number.)


For details on the EX260 Integrated Type (For Output) Serial Transmission System, refer to the **Web Catalogue** and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 216. Please download the Operation Manual via the SMC website, https://www.smc.eu



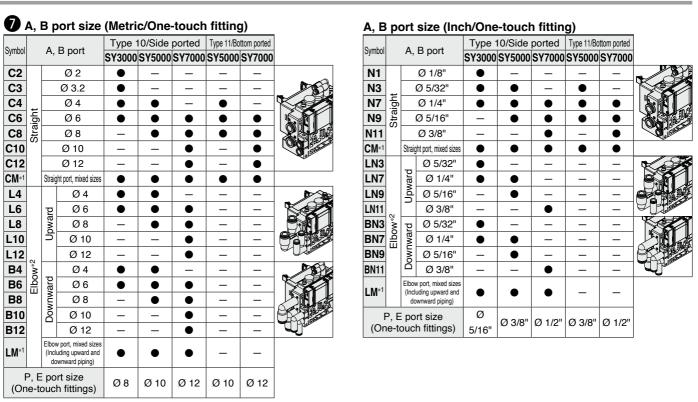


Indicate the sizes on the manifold specification sheet in the case of "CM" or "LM." The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting direction.

*2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 228 to 230).




[Validated product examples]

Please contact SMC for further details as supported variations are continually being added.

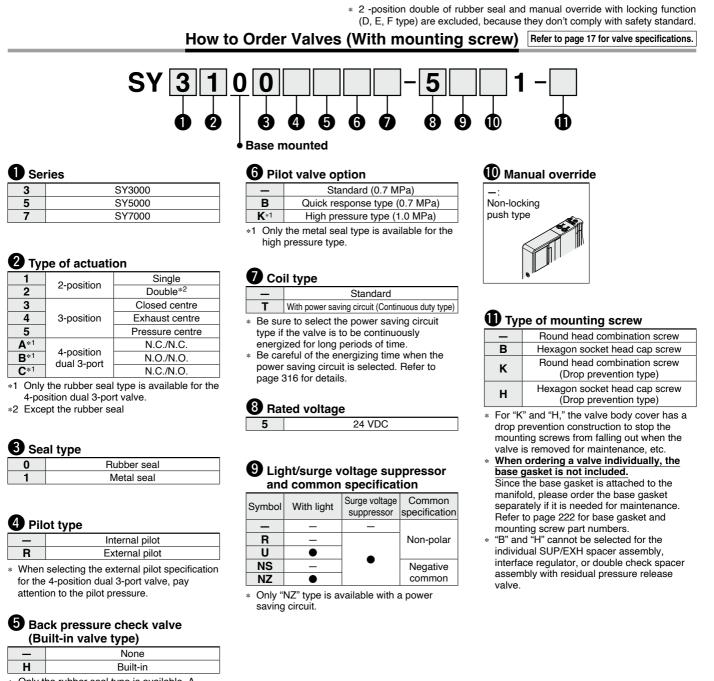

- * Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 236 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The back pressure check valve is not available for the 3-position type or the SY7000.

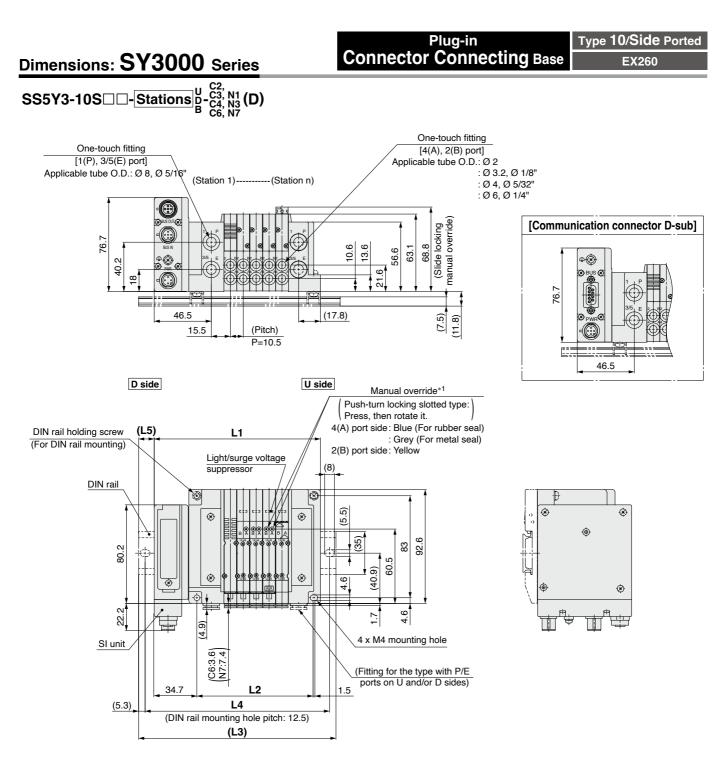


*1 Refer to page 177 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.

* These figures show the "SS5Y3-10SQA-05D-C6."

* Refer to page 182 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
L1	103.7	114.2	124.7	135.2	145.7	156.2	166.7	177.2	187.7	198.2	208.7	219.2	229.7	240.2	250.7	261.2
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5
L3	135.5	148	148	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	285.5
L4	125	137.5	137.5	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275	275
L5	16	17	11.5	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12
n: Stations	18	19	20	21	22	23	24									
L1	271.7	282.2	292.7	303.2	313.7	324.2	334.7									
L2	231	241.5	252	262.5	273	283.5	294									
L3	298	310.5	323	335.5	348	348	360.5									
	007 5	300	312.5	325	337.5	337.5	350									
L4	287.5	300	012.0	325	337.5	337.5	350									

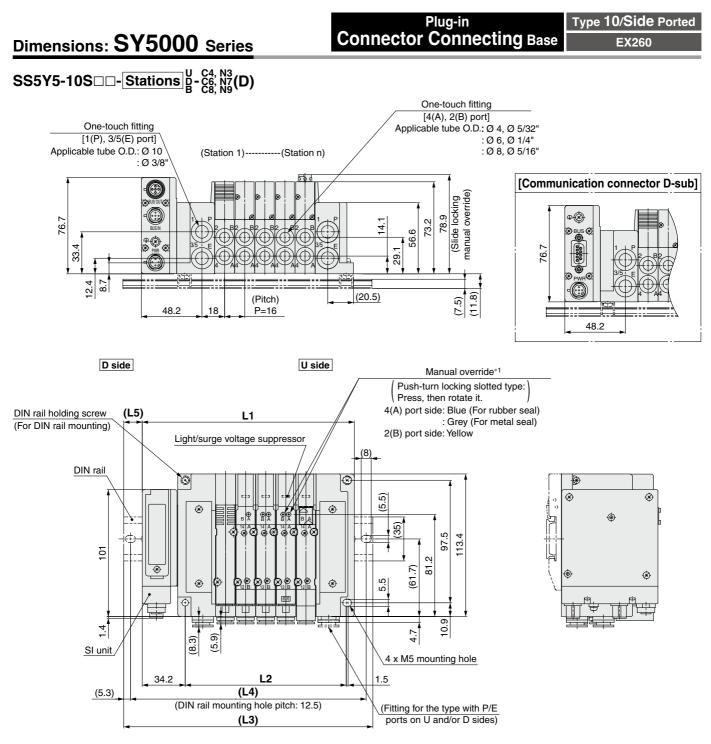


*1 Refer to page 178 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.

* These figures show the "SS5Y5-10SQA-05D-C8."

* Refer to page 183 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
L1	120.7	136.7	152.7	168.7	184.7	200.7	216.7	232.7	248.7	264.7	280.7	296.7	312.7	328.7	344.7	360.7
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320
L3	148	160.5	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373	385.5
L4	137.5	150	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5	375
L5	13.5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14	12.5
n: Stations	18	19	20	21	22	23	24									
	-	-	-			-		-								
L1	376.7	392.7	408.7	424.7	440.7	456.7	472.7									
L2	336	352	368	384	400	416	432									
L3	410.5	423	435.5	448	473	485.5	498									
L4	400	412.5	425	437.5	462.5	475	487.5									
L4																

SMC

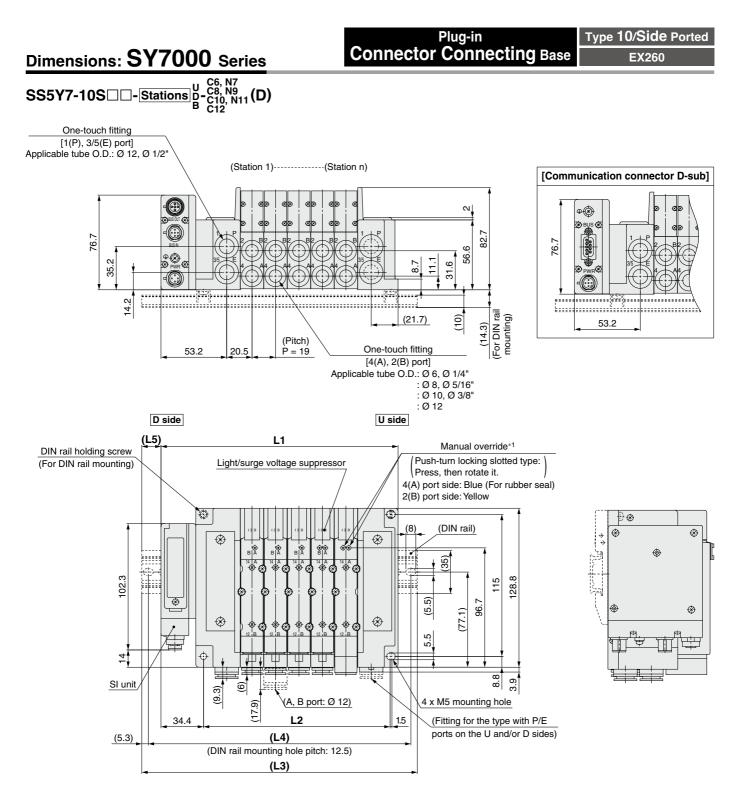

*1 Refer to page 179 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.

* These figures show the "SS5Y7-10SQA-05D-C10."

* Refer to page 184 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	134.9	153.9	172.9	191.9	210.9	229.9	248.9	267.9	286.9	305.9	324.9	343.9	362.9	381.9	400.9	419.9	438.9	457.9	476.9	495.9	514.9	533.9	552.9
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	160.5	185.5	198	223	235.5	260.5	273	298	310.5	335.5	348	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5
L4	150	175	187.5	212.5	225	250	262.5	287.5	300	325	337.5	362.5	387.5	400	425	437.5	462.5	475	500	512.5	537.5	550	575
L5	13	16	12.5	15.5	12.5	15.5	12	15	12	15	11.5	14.5	17.5	14.5	17.5	14	17	14	17	13.5	16.5	13.5	16.5

EX260

SS5Y3

SY3000/5000/7000 Series

NAN

05

3

How to Order Manifolds

Refer to pages 182 to 184 for the dimensions of Type 12/Top-ported type.

Type 12 Top Ported

3	SY3000
5	SY5000
7	SY7000

SI unit specifications

(Output polarity, Protocol, Number of outputs, Communication connector)

Symbol (Ou	tput polarity)		Number	Communication				
Positive common (NPN)	Negative common (PNP)	Protocol	of outputs	connector				
0	*1	Without SI unit						
QA	QAN	DeviceNet [®]	32	M12				
QB	QBN	Devicemet	16	IVITZ				
NA	NAN		32	M12				
NB	NBN	PROFIBUS	16	IVITZ				
NC	NCN	DP	32	*4 D-sub				
ND	NDN		16	D-Sub				
VA	VAN	CC-Link	32	M12				
VB	VBN	CC-LINK	16					
DA	DAN	EtherCAT	32	M12				
DB	DBN	EllierCAT	16	IVITZ				
FA	FAN	PROFINET	32	M12				
FB	FBN	FROFINET	16					
EA	EAN	EtherNet/IP™	32	M12				
EB	EBN		16	IVI I Z				
_*3	GAN	Ethernet	32	M12				
*3	GBN	POWERLINK	16					
_* ³	KAN	IO-Link	32* ⁵	M12				

Without SI unit, the output polarity is decided *1 by the SI unit used. Ensure a match with the common specification of the valves to be used.

- *2 DIN rail cannot be mounted without SI unit
- *3 Positive common (NPN) type is not applicable.
- IP40 for the D-sub applicable communication
- connector specification
- *5 Only the 32 outputs type is available.

3 Valve stations

12S

In the case of the 32-output SI unit

in the t	case of th	ne 32-output Si unit
Symbol	Stations	Note
02	2 stations	
:	÷	Double wiring ^{*1}
16	16 stations	
02	2 stations	
:	:	Specified layout* ² (Up to 32 solenoids available)
24	24 stations	
In the	case of tl	he 16-output SI unit
Symbol	Stations	Note
02	2 stations	
:	:	Double wiring ^{*1}
08	8 stations	
02	2 stations	Creatified laws #*?
:	:	Specified layout*2
	•	(Up to 16 solenoids available)

16 16 stations *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in

an unused control signal. If this is not desired, order with a specified layout. *2 Specified layout: Indicate the wiring

specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and

4-position valves cannot be used where single wiring has been specified.)

- This also includes the number of the blanking plate assembly.
- For the model without the SI unit (S0), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

P, E port entry

U *1	U side (2 to 10 stations)			
D *1	D side (2 to 10 stations)			
В	Both sides (2 to 24 stations)			
*1 6 For type "S" SUP/EXH block assembly with				

RoHS

5″, SUP/EXH block a built-in silencer, choose U or D for P, E port entry

5 SUP/EXH block assembly

-				
_	Internal pilot			
S	Internal pilot, Built-in silencer			
R	External pilot			
The D and E north are only evailable on the LL on				

- The P and E ports are only available on the U and D sides for the built-in silencer type. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of the P and E port entry. (Example: When the P and E port entry is on the D side, the silencer exhaust port is on the U side.)
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

O P, E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000	
_	Ø8	Ø 10	Ø 12	
N	Ø 5/16"	Ø 3/8"	Ø 1/2"	

For N. sizes are in inches

Mounting

—	Direct mounting			
D	DIN rail mounting (With DIN rail)			
D0	DIN rail mounting (Without DIN rail)			
D3	For 3 stations	Specify a length longer		
:	÷	than that of the standard		
D24	For 24 stations	rail.		


If the DIN rail must be mounted without an SI unit, select D0. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 227 for the DIN rail part number.) Refer to page 319 for the fixation of DIN rail

....

mounting type manifold.

216. Please download the Operation Manual via the SMC website, https://www.smc.eu How to Order Manifold Assembly

For details on the EX 2 6 0 Integrated Type (For Output) Serial Transmission System, refer to the **Web** Catalogue and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page

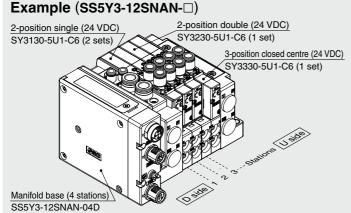


SS5Y3-12SNAN-04D ····· 1 set (Type 12 4-station manifold base part no.)			
*SY3130-5U1-C6 ·········· 2 sets (2-position single part no.)			
*SY3230-5U1-C6 ·········· 1 set (2-position double part no.)			
*SY3330-5U1-C6 1 set (3-position closed centre part no.)			
The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.			

· For the valve arrangement, the valve closest to the D side is considered the 1st station.

· Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.



Connector Connecting Base SY3000/5000/7000 Series

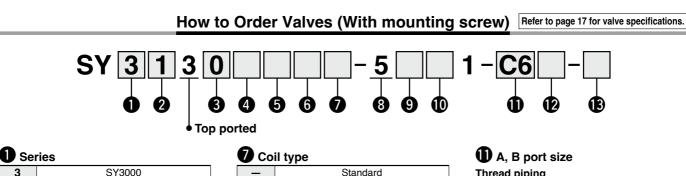

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

1	0 position	Single
2	2-position	Double
3		Closed centre
4	3-position	Exhaust centre
5		Pressure centre
A *1	A*1 4-position B*1 dual 3-port	N.C./N.C.
_		N.O./N.O.
C *1		N.C./N.O.

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

Pilot type

_	Ir	nterna	al p	oilot	
R	E	xtern	alı	oilot	

* When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure.

5 Back pressure check valve (Built-in valve type)

_	None	
Н	Built-in	
	ha rubbar agal tuna is available	۸

- Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 236 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

_	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K *1	High pressure type (1.0 MPa)

*1 Only the metal seal type is available for the high pressure type.

- Standard

 T
 With power saving circuit (Continuous duty type)
- Be sure to select the power saving circuit type if the valve is to be continuously
- energised for long periods of time.
 Be careful of the energising time when the power saving circuit is selected. Refer to page 316 for details.

8 Rated voltage



9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
R			Non-polar	
U	•		Non-polai	
S	—		Positive	
Z	•	•	common	
NS	_		Negative	
NZ	•		common	

 Select "R," "U," "S," or "Z" for the valve when the SI unit output polarity is — (positive common). Select "R," "U," "NS," or "NZ" for the valve when the SI unit output polarity is N (negative common).

 Only "Z" and "NZ" types are available with a power saving circuit.

Manual override Non-locking push type Push-turn locking slotted type F: Push-turn locking lever type F: Slide locking type type F: Slide locking F: Slide locking

* Refer to page 36 for the safety slide locking manual override.

Thread piping				
Symbol	Port size	Applicable series		
M5	M5 x 0.8	SY3000		
01	1/8	SY5000		
02	1/4	SY7000		

One-touch fitting (Metric)

J.			
A, B port	SY3000	SY5000	SY7000
Ø 2		—	—
Ø 3.2		—	—
Ø 4		•	—
Ø 6			
Ø 8	_	•	•
Ø 10	_	_	
Ø 12	_	_	
	A, B port Ø 2 Ø 3.2 Ø 4 Ø 6 Ø 8 Ø 10	A, B port SY3000 Ø 2 ● Ø 3.2 ● Ø 4 ● Ø 6 ● Ø 8 − Ø 10 −	A, B port SY3000 SY5000 Ø 2 ● − Ø 3.2 ● − Ø 4 ● ● Ø 6 ● ● Ø 8 − ● Ø 10 − −

One-touch fitting (Inch)

Symbol	A, B port	SY3000	SY5000	SY7000
N1	Ø 1/8"		—	—
N3	Ø 5/32"		•	—
N7	Ø 1/4"			•
N9	Ø 5/16"	_	•	•
N11	Ø 3/8"	—	_	•

Thread type

-	
_	Rc
F	G
Ν	NPT
Т	NPTF


* Only — is available for M5.

B Type of mounting screw

	U
_	Round head combination screw
В	Hexagon socket head cap screw
к	Round head combination screw (Drop prevention type)
н	Hexagon socket head cap screw (Drop prevention type)

* For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.

- When ordering a valve individually, the base gasket is not included.
 Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance.
 Refer to page 222 for base gasket and mounting screw part numbers.
 "B" and "H" cannot be selected for the
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.



Plug-in Connector Connecting Base

EX126

SS5Y

SY3000/5000/7000 Series CE UK (RoHS)

05||U

How to Order Manifolds

S4

Refer to pages 180 (SY5000) and 181 (SY7000) for the dimensions of Type 11/Bottom-ported type.

0	Series
---	--------

Type 10

Type 11 **Bottom Ported**

Side Ported

3	SY3000
5	SY5000
7	SY7000

2	Т	y	p

3

🖉 Тур	be				
10	Side ported				
11	11 Bottom ported*1				
botto	SY5000 manifold base is used for the m-ported SY3000. When ordering, to the "Plug-in Manifold Mixed				

Mounting Type" (from page 185).


3 SI unit

0 Without SI unit

ν CC-Link (Positive common NPN) Only a terminal block plate is mounted for the

valve without SI unit.

How to Order Manifold Assembly

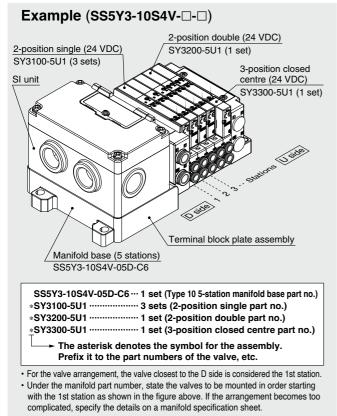

When mixing top-ported configurations, select from those listed on page 160. In such cases, use caution as there is also output on the A and B ports on the base side.

Specify on the manifold specification sheet if plugs are required for the A and B ports on the base side

4 Valve stations

6

C6

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring ^{*1}
08	8 stations	
02	2 stations	Creating lawayts?
:	÷	Specified layout*2 (Up to 16 solenoids available)
16	16 stations	

- Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is
- not desired, order with a specified layout. *2 Specified layout: Indicate the wiring specifications with the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of the blanking plate assembly.

9 P. F port entry

II li aida (2 ta 10 atationa)
U U side (2 to 10 stations)
D D side (2 to 10 stations)
B Both sides (2 to 16 stations)

6 SUP/EXH block assembly


_	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

3/5(E) port is plugged for the built-in silencer * type.

When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

For details on the EX126 Integrated Type (For Output) Serial Transmission System, refer to the Web Catalogue and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 217. Please download the Operation Manual via the SMC website, https://www. smc.eu



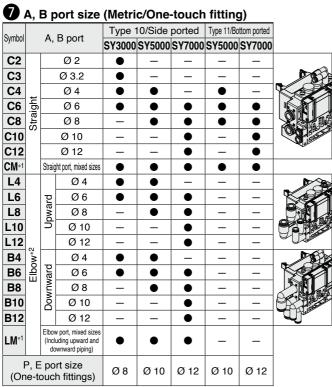

<u>A, B</u>	A, B port size (Inch/One-touch fitting)								
Symbol	A, B port			0/Side		Type 11/Bo			
Symbol		,	D poit	SY3000	SY5000	SY7000	SY5000	SY7000	
N1			Ø 1/8"		—	—	_	—	
N3	÷		Ø 5/32"		•	—	\bullet	—	
N7	igh		Ø 1/4"	•	•	•	•	•	
N9	Straight		Ø 5/16"	—	•	•	•	•	
N11	•,		Ø 3/8"	—	—	•	—	•	21995 M
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•	
LN3		_	Ø 5/32"	•	—	—	—	—	
LN7		Jpward	Ø 1/4"			—	—	—	
LN9		a A	Ø 5/16"	—	•	—	—	—	
LN11	~		Ø 3/8"	—	—	•	—	—	al Bassie
BN3	Elbow*2	p	Ø 5/32"	•	—	—	—	—	
BN7	gli	Downward	Ø 1/4"			—	—	—	
BN9		NC NC	Ø 5/16"	—	•	—	—	—	
BN11		ŏ	Ø 3/8"	—	—	•	—	—	date
LM∗1		(Incl	v port, mixed sizes uding upward and wnward piping)	•	•	•	_	_	
			rt size h fittings)	Ø 5/16"	Ø 3/8"	Ø 1/2"	Ø 3/8"	Ø 1/2"	

Indicate the sizes on the manifold specification sheet in the case of "CM" or "LM." *1 The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting direction

*2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 228 to 230).


Mounting and Option


Symbol	Mounting	Option	
Symbol	Symbol Mounting		Station number
_	Diverset	—	_
AA	Direct mounting	•	
BA	mounting		_
D	DINLard	—	_
A	DIN rail mounting		
B	mounting		—

- ∗ Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)
- * Only direct mounting is available for the type 11 bottom-ported type.
- * Refer to page 319 for the fixation of DIN rail mounting type manifold.

DIN Rail Option

-	Standard length		
0	Without DIN rail (with bracket)		
3	For 3 stations Specify a longer rail		
:	-	than the total length	
16	For 16 stations	of specified stations.	





() s	Series
-------------	--------

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

1	2-position	Single					
2	2-position	Double					
3		Closed centre					
4	3-position	Exhaust centre					
5		Pressure centre					
A *1	4	N.C./N.C.					
B *1	4-position dual 3-port	N.O./N.O.					
C *1	uuai 3-port	N.C./N.O.					

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

000	
0	Rubber seal
1	Metal seal

4 Pilot type

_		
	_	Internal pilot
	R	External pilot
*	When	selecting the external pilot specification

for the 4-position dual 3-port valve, pay attention to the pilot pressure.

Back pressure check valve (Built-in valve type)

—	None
Н	Built-in

- * Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 236 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

_	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K ∗1	High pressure type (1.0 MPa)
1 Only	the metal seal type is available for the

high pressure type.

Coil type

- Standard
- T With power saving circuit (Continuous duty type) Be sure to select the power saving circuit type if the valve is to be continuously
- Be careful of the energising time when the power saving circuit is selected. Refer to page 316 for details.

8 Rated voltage


24 VDC

9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification			
R	_		Non-polar			
U S	_	•	Positive			
Z	۲		common			

* Only "Z" type is available with a power saving circuit.

Manual override

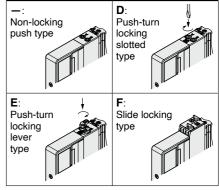


* Refer to page 36 for the safety slide locking manual override.


Type of mounting screw

_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- * For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included.
 Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance.
 Refer to page 222 for base gasket and mounting screw part numbers.
 "B" and "H" cannot be selected for the
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.



Connector Connecting Base SY3000/5000/7000 Series

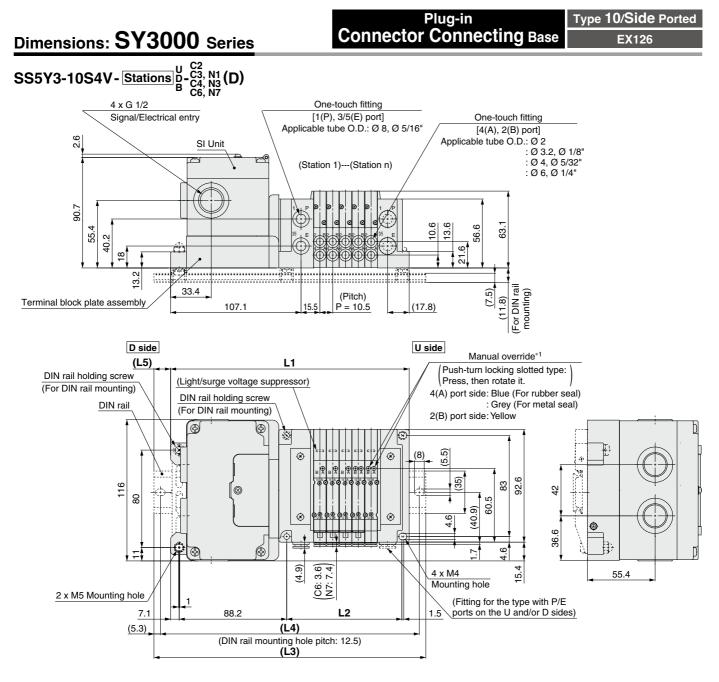


*1 Refer to page 177 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.

* These figures show the "SS5Y3-10S4V-05D-C6."

* Refer to page 182 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	164.3	174.8	185.3	195.8	206.3	216.8	227.3	237.8	248.3	258.8	269.3	279.8	290.3	300.8	311.3
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210
L3	198	198	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5
L4	187.5	187.5	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325
L5	17	11.5	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12

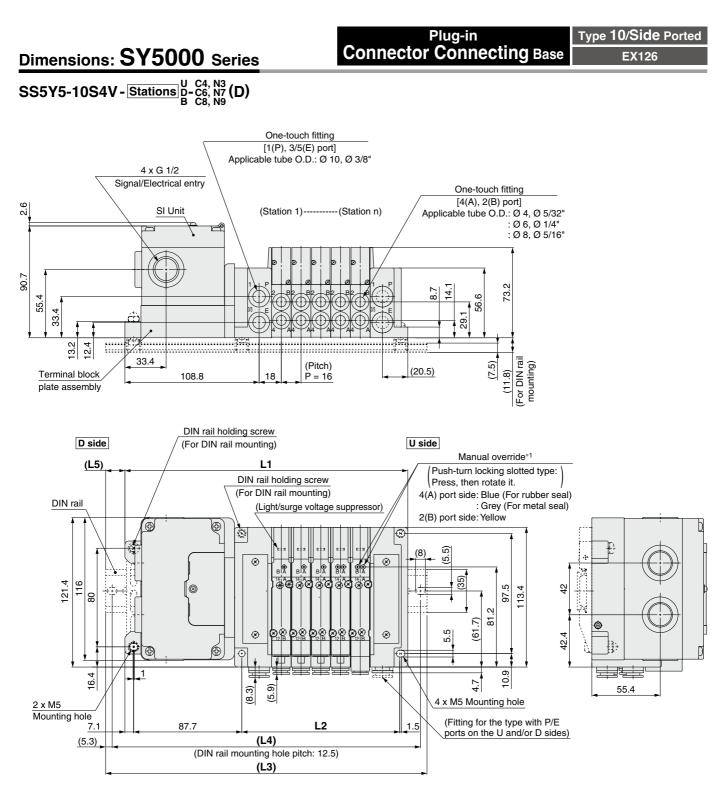

*1 Refer to page 178 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.


* These figures show the "SS5Y5-10S4V-05D-C8."

* Refer to page 183 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	181.3	197.3	213.3	229.3	245.3	261.3	277.3	293.3	309.3	325.3	341.3	357.3	373.3	389.3	405.3
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304
L3	210.5	223	248	260.5	273	285.5	310.5	323	335.5	360.5	373	385.5	398	423	435.5
L4	200	212.5	237.5	250	262.5	275	300	312.5	325	350	362.5	375	387.5	412.5	425
L5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14	12.5	17	15



Connector Connecting Base SY3000/5000/7000 Series

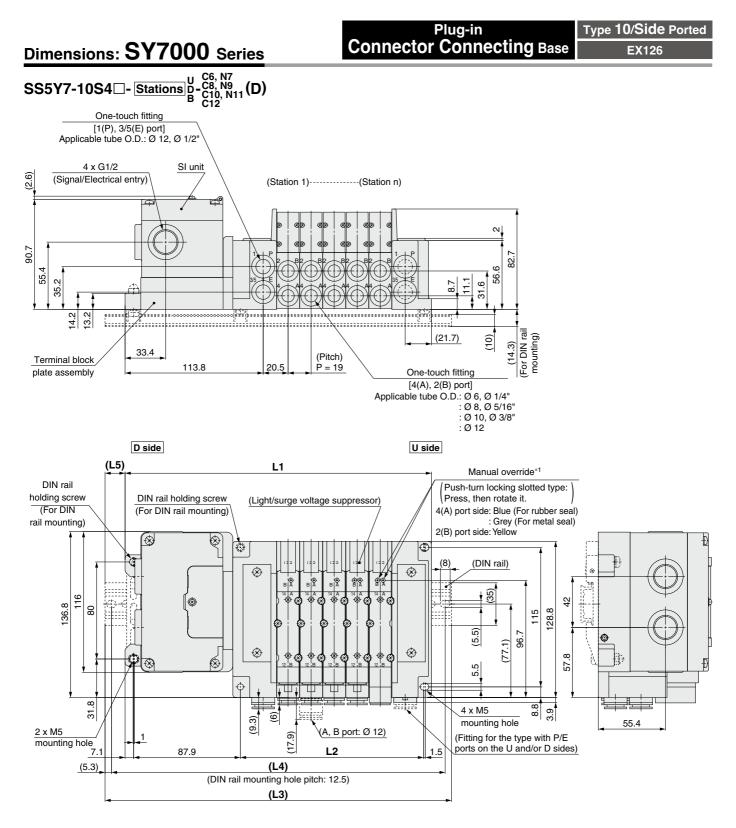

*1 Refer to page 179 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.

* These figures show the "SS5Y7-10S4V-05D-C10."

* Refer to page 184 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	195.5	214.5	233.5	252.5	271.5	290.5	309.5	328.5	347.5	366.5	385.5	404.5	423.5	442.5	461.5
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360
L3	223	248	260.5	285.5	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5
L4	212.5	237.5	250	275	287.5	312.5	325	350	362.5	387.5	400	425	437.5	462.5	475
L5	14	17	13.5	16.5	13.5	16.5	13	16	13	16	12.5	15.5	12.5	15.5	12

Plug-in Connector Connecting Base


EX126

Type 12 Top Ported

SY3000/5000/7000 Series

0

How to Order Manifolds



Series

-	
3	SY3000
5	SY5000
7	SY7000

2 SI unit

0	Without SI unit
V	CC-Link (Positive common NPN)
<u> </u>	

* Only a terminal block plate is mounted for the valve without SI unit.

3 Valve stations	;
-------------------------	---

SS5Y 3-12S4

Symbol	Stations	Note
02	2 stations	Double wiring ^{*1}
:	:	
08	8 stations	
02	2 stations	Creatified lawayts?
:	÷	Specified layout*2 (Up to 16 solenoids available)
16	16 stations	

- Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations.
- Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- *2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.) This also includes the number of the blanking
- plate assembly.

P, E port entry

U ∗1	U side (2 to 10 stations)		
D *1	D side (2 to 10 stations)		
В	Both sides (2 to 16 stations)		

*1 5 For type "S", SUP/EXH block assembly with a built-in silencer, choose U or D for P, E port entry.

5 SUP/EXH block assembly

_	Internal pilot	
S	Internal pilot, Built-in silencer	
R	External pilot	

- The P and E ports are only available on the U and D sides for the built-in silencer type. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of the P and E port entry. (Example: When the P and E port entry is on the D side, the silencer exhaust port is on the U side.)
- When the built-in silencer type is used, keep the exhaust port from coming into direct contact with water or other liquids.

6 P, E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000	
_	Ø 8	Ø 10	Ø 12	
Ν	Ø 5/16"	Ø 3/8"	Ø 1/2"	

* For N, sizes are in inches.


Mounting

_		Direct mounting		
D		DIN rail mounting (With DIN rail)		
D0		DIN rail mounting (Without DIN rail)		
D3		For 3 stations Specify a length		
:			longer than that of	
D16	3	For 16 stations the standard rail.		

Refer to page 319 for the fixation of DIN rail mounting type manifold.


For details on the EX126 Integrated Type (For Output) Serial Transmission System, refer to the Web Catalogue and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 217. Please download the Operation Manual via the SMC website, https://www.smc.eu

How to Order Manifold Assembly

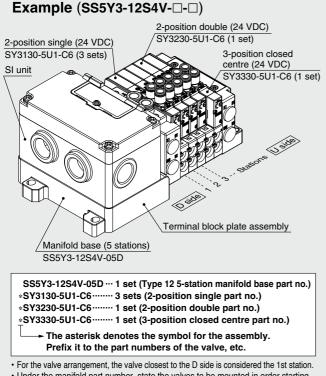

· Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

Connector Connecting Base SY3000/5000/7000 Series

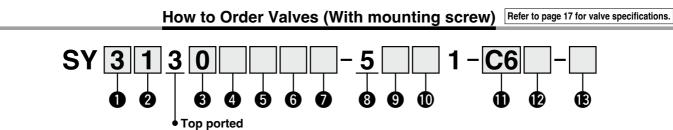

Series			
3	SY3000		
5	SY5000		
7	SY7000		

2 Type of actuation

<u> </u>			
1	2-position	Single	
2		Double	
3	3-position	Closed centre	
4		Exhaust centre	
5		Pressure centre	
A *1	4-position dual 3-port	N.C./N.C.	
B ∗1		N.O./N.O.	
C *1		N.C./N.O.	

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

Rubber seal		
Metal seal		

4 Pilot type

_	Internal pilot	
R	External pilot	

* When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure.

5 Back pressure check valve (Built-in valve type)

_	None
Н	Built-in

- * Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 236 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

- Standard (0.7 MPa)		
B Quick response type (0.7 MPa)		
K *1	High pressure type (1.0 MPa)	
1 Only the metal seal type is available for the		


high pressure type.

Coil type

- Standard

- With power saving circuit (Continuous duty type)
 Be sure to select the power saving circuit
 type if the valve is to be continuously
- energised for long periods of time. Be careful of the energising time when the
- be careful of the energising time when the power saving circuit is selected. Refer to page 316 for details.

8 Rated voltage




9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R U			Non-polar
S	_	•	Positive
Z	•		common

 Only "Z" type is available with a power saving circuit.

Manual override D:

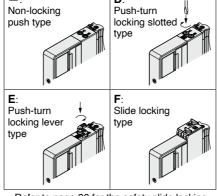

 Refer to page 36 for the safety slide locking manual override.

() A, B port size

Thread piping			
Symbol	Port size	Applicable series	
M5	M5 x 0.8	SY3000	
01	1/8	SY5000	
02	1/4	SY7000	

One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	Ø 2		—	—
C3	Ø 3.2		—	—
C4	Ø 4		•	—
C6	Ø 6			
C8	Ø 8	_	•	•
C10	Ø 10	_	_	
C12	Ø 12	_	_	

One-touch fitting (Inch)

Symbol	A, B port	SY3000	SY5000	SY7000
N1	Ø 1/8"		—	—
N3	Ø 5/32"			—
N7	Ø 1/4"			
N9	Ø 5/16"	_		•
N11	Ø 3/8"	_	—	

Thread type

_	Rc
F	G
N	NPT
Т	NPTF


* Only — is available for M5.

B Type of mounting screw

	V
_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.

- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 222 for base gasket and mounting screw part numbers.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.



Plug-in Connector Connecting Base

EX120

SS5Y

SY3000/5000/7000 Series С Є ЦК Понз

10 S3 R1 - 05 U

3

How to Order Manifolds

Refer to pages 180 (SY5000) and 181 (SY7000) for the dimensions of Type 11/Bottom-ported type.

1 Series

Type 10

Type 11 Bottom Ported

Side Ported

3	SY3000
5	SY5000
7	SY7000

2 Туре

10	Side ported
11	Bottom ported*1

*1 The SY5000 manifold base is used for the bottom-ported SY3000. When ordering, refer to the "Plug-in Manifold Mixed Mounting Type" (from page 185).

3 SI unit

3

0	Without SI unit		
Q	DeviceNet [®] (Positive common NPN)		
R1	OMRON CompoBus/S	16 outputs	
R2	(Positive common NPN)	8 outputs	
V	CC-Link (Positive common NPN)		
ZB *1	CompoNet®	Positive common NPN	
ZBN*1	Componet®	Negative common PNP	

- *1 The communication connector (for the opposite side) is not provided. Please order it separately.
- Ensure a match with the common specification of the valve to be used.

4 Valve stations

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
08	8 stations	
02	2 stations	Creating lawayts?
:	÷	Specified layout* ² (Up to 16 solenoids available)
16	16 stations	

C6

- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- *2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of the blanking plate assembly.
- Since R2 type SI unit has 8 outputs, note that up to 8 solenoids can be accommodated.

5 P, E port entry

• • • •	
U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 16 stations)


6 SUP/EXH block assembly

_	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

3/5(E) port is plugged for the built-in silencer type.

For details on the EX120 Integrated Type (For Output) Serial Transmission System, refer to the **Web Catalogue** and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 218. Please download the Operation Manual via the SMC website, https://www.smc.eu


How to Order Manifold Assembly Example (SS5Y3-10S3V-

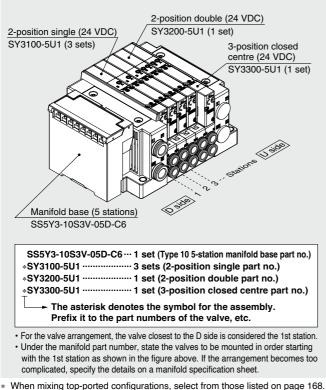

When mixing top-ported configurations, select from those listed on page 168. In such cases, use caution as there is also output on the A and B ports on the base side.



Specify on the manifold specification sheet if plugs are required for the A and B ports on the base side.

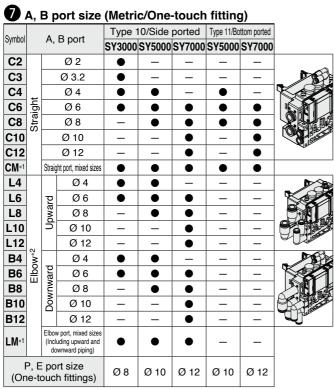

<u>A, B</u>	A, B port size (Inch/One-touch fitting)								
Symbol	A, B port		<u> </u>	0/Side	<u> </u>	Type 11/Bo			
Symbol		A, D port		SY3000	SY5000	SY7000	SY5000	SY7000	
N1			Ø 1/8"		_	_	—	—	
N3	÷		Ø 5/32"		•	—	\bullet	—	
N7	Straight		Ø 1/4"		•	•	•	•	
N9	Stra		Ø 5/16"	—	•	•	•	•	
N11	•,		Ø 3/8"	—	—	•	—	•	al Basses
CM*1		Straig	ht port, mixed sizes	•	•	•	•	•	
LN3			Ø 5/32"	•	_	_	—	—	
LN7	17	Jpward	Ø 1/4"	•	•	—	_	1	
LN9		đ	Ø 5/16"	—	•	—	—	-	
LN11			Ø 3/8"	_	_	•	—	—	a Bassie
BN3	Elbow*2	ā	Ø 5/32"	•	_	_	—	—	
BN7	g	Ma	Ø 1/4"	•	•	—	—	—	
BN9		Downward	Ø 5/16"	—	•	—	—	—	
BN11		ă	Ø 3/8"	_	_	•	_	—	delle
LM∗1		(Incl	v port, mixed sizes uding upward and wnward piping)	•	•	•	_	_	
	P, E port size (One-touch fittings)		Ø 5/16"	Ø 3/8"	Ø 1/2"	Ø 3/8"	Ø 1/2"		

Indicate the sizes on the manifold specification sheet in the case of "CM" or "LM." *1 The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting direction

*2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 228 to 230).

Mounting and Option


Symbol	Mounting	Option		
Symbol		Name plate	Station number	
_	D : .	_	_	
AA	Direct mounting	•		
BA	mounting	•	_	
D		_	_	
A	DIN rail mounting			
B			—	


- ∗ Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)
- * Only direct mounting is available for the type 11 bottom-ported type.
- * Refer to page 319 for the fixation of DIN rail mounting type manifold.

DIN Rail Option

_	Standard length			
0	Without DIN rail (with bracket)			
3	For 3 stations	Specify a longer rail than the total length		
:	-			
16	For 16 stations	of specified stations.		

* If the DIN rail must be mounted without an SI unit, select D0. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 227 for the DIN rail part number.)



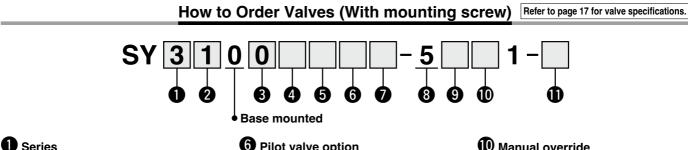

Jeries		165
	3	SY3000
	5	SY5000
ſ	7	SY7000

2 Type of actuation

1	2-position	Single
2	2-position	Double
3		Closed centre
4	3-position	Exhaust centre
5		Pressure centre
A *1	4	N.C./N.C.
B *1	4-position dual 3-port	N.O./N.O.
C *1	uuai 3-port	N.C./N.O.

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

Pilot type

-		
_	Internal pilot	
R	External pilot	

* When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure.

5 Back pressure check valve (Built-in valve type)

—	None
Н	Built-in

- * Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 236 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

-			
_	Standard (0.7 MPa)		
B Quick response type (0.7 MPa)			
K *1	High pressure type (1.0 MPa)		
1 Only the metal seal type is available for the			

high pressure type.

Coil type

Standard т With power saving circuit (Continuous duty type)

- Be sure to select the power saving circuit type if the valve is to be continuously energised for long periods of time.
- Be careful of the energising time when the power saving circuit is selected. Refer to page 316 for details.

8 Rated voltage

5


24 VDC

Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification		
R	—		Non polor		
U	•		Non-polar		
S	—		Positive		
Z	•	•	common		
NS	—		Negative		
NZ	•		common		
. Soloot	··· Soloot "D" "II" "S" or "7" for the velue when				

- ' "U,' "S," or "Z" for the valve when the SI unit specification is positive common. Select "R," "U," "NS," or "NZ" for the valve when the SI unit specification is ZBN (negative common).
- Only "Z" and "NZ" types are available with a power saving circuit.

Manual override

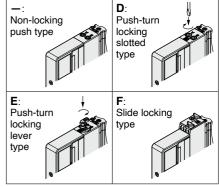


Refer to page 36 for the safety slide locking manual override.


D Type of mounting screw

_	Round head combination screw
В	Hexagon socket head cap screw
Κ	Round head combination screw (Drop prevention type)
н	Hexagon socket head cap screw (Drop prevention type)

- For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 222 for base gasket and mounting screw part numbers. "B" and "H" cannot be selected for the
- individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.



Connector Connecting Base SY3000/5000/7000 Series

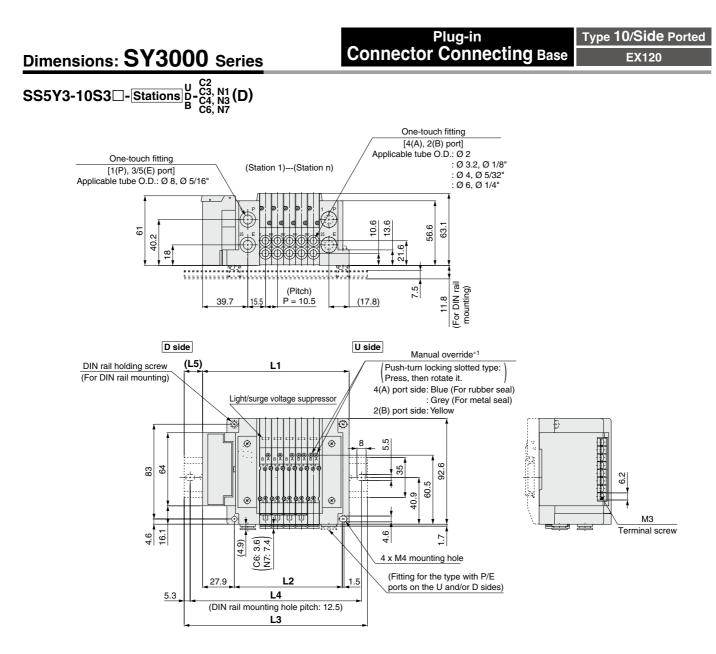


*1 Refer to page 177 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.

* These figures show the "SS5Y3-10S3V-05D-C6."

* Refer to page 182 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	96.9	107.4	117.9	128.4	138.9	149.4	159.9	170.4	180.9	191.4	201.9	212.4	222.9	233.4	243.9
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210
L3	123	135.5	148	160.5	173	173	185.5	198	210.5	223	235.5	235.5	248	260.5	273
L4	112.5	125	137.5	150	162.5	162.5	175	187.5	200	212.5	225	225	237.5	250	262.5
L5	13	14	15	16	17	12	13	14	15	16	17	11.5	12.5	13.5	14.5

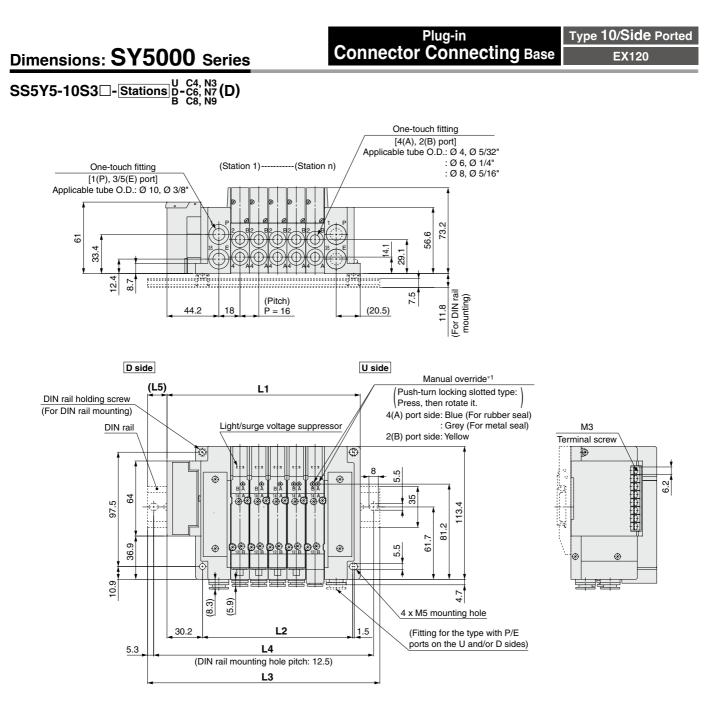

*1 Refer to page 178 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.


* These figures show the "SS5Y5-10S3V-05D-C8."

* Refer to page 183 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	116.7	132.7	148.7	164.7	180.7	196.7	212.7	228.7	244.7	260.7	276.7	292.7	308.7	324.7	340.7
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304
L3	148	160.5	173	198	210.5	223	248	260.5	273	285.5	310.5	323	335.5	348	373
L4	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5	275	300	312.5	325	337.5	362.5
L5	15.5	14	12	16.5	15	13	17.5	16	14	12.5	17	15	13.5	11.5	16



Connector Connecting Base SY3000/5000/7000 Series

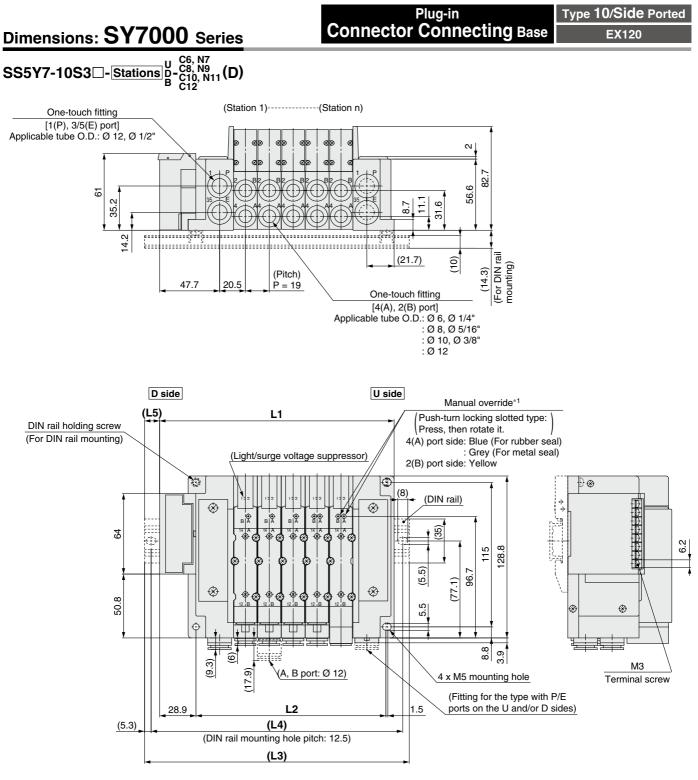

*1 Refer to page 179 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.

These figures show the "SS5Y7-10S3V-05D-C10."
 Refer to page 184 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	129.4	148.4	167.4	186.4	205.4	224.4	243.4	262.4	281.4	300.4	319.4	338.4	357.4	376.4	395.4
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360
L3	160.5	173	198	210.5	235.5	248	273	285.5	310.5	335.5	348	373	385.5	410.5	423
L4	150	162.5	187.5	200	225	237.5	262.5	275	300	325	337.5	362.5	375	400	412.5
L5	15.5	12.5	15.5	12	15	12	15	11.5	14.5	17.5	14.5	17.5	14	17	14


Plug-in Connector Connecting Base

EX120

Type 12 Top Ported

05

How to Order Manifolds



Series

3	SY3000
5	SY5000
7	SY7000

2 SI unit

0	Without	t SI unit				
Q	DeviceNet [®] (Positive common NPN)					
R1	OMRON CompoBus/S	16 outputs				
R2	(Positive common NPN)	8 outputs				
V	CC-Link (Positiv	e common NPN)				
ZB *1	CompoNet®	Positive common NPN				
ZBN*1	Componet®	Negative common PNP				

 *1 The communication connector (for the opposite side) is not provided. Please order it separately.

Ensure a match with the common

specification of the valve to be used.

3 Valve stations

SS5Y 3 - 12S3 R1

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring ^{*1}
08	8 stations	
02	2 stations	Creatified lawsut*?
÷	:	Specified layout*2 (Up to 16 solenoids available)
16	16 stations	(Op to 10 solenoids available)

*1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result

in an unused control signal. If this is not desired, order with a specified layout.

- *2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of the blanking plate assembly.
- * Since R2 type SI unit has 8 outputs, note that up to 8 solenoids can be accommodated.

4 P, E port entry

U *1	U side (2 to 10 stations)
D *1	D side (2 to 10 stations)
В	Both sides (2 to 16 stations)


*1 S For type "S", SUP/EXH block assembly with a built-in silencer, choose U or D for P, E port entry.

5 SUP/EXH block assembly

_	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

The P and E ports are only available on the U and D sides for the built-in silencer type. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of the P and E port entry. (Example: When the P and E port entry is on the D side, the silencer exhaust port is on the U side.)

How to Order Manifold Assembly

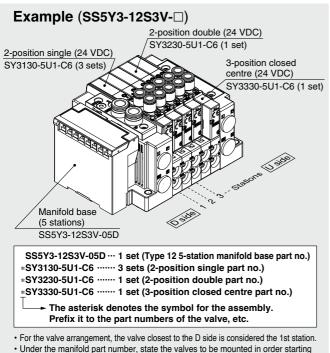

• Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

6 P, E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000	
_	Ø 8	Ø 10	Ø 12	
N	Ø 5/16"	Ø 3/8"	Ø 1/2"	

* For N, sizes are in inches.


Mounting

_	Direct mounting					
D	DIN rail mounting (With DIN rail)					
D0	DIN rail mounting (Without DIN rail)					
D3	For 3 stations	Specify a length				
:	÷	longer than that of				
D16	For 16 stations	the standard rail.				

- If the DIN rail must be mounted without an SI unit, select D0. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 227 for the DIN rail part number.)
- Refer to page 319 for the fixation of DIN rail mounting type manifold.

For details on the EX120 Integrated Type (For Output) Serial Transmission System, refer to the **Web Catalogue** and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 218. Please download the Operation Manual via the SMC website, https://www.smc.eu

Connector Connecting Base SY3000/5000/7000 Series

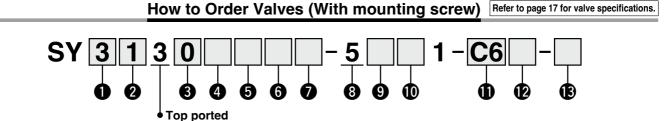

Series					
3	SY3000				
5	SY5000				
7	SY7000				

2 Type of actuation

1	2 position	Single
2	2-position	Double
3		Closed centre
4	3-position	Exhaust centre
5		Pressure centre
A *1	4-position dual 3-port	N.C./N.C.
B *1		N.O./N.O.
C *1	uuai 5-port	NC/NO

 *1 Only the rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal	
1	Metal seal	

4 Pilot type

-	,,,	
	Internal pilot	
R	External pilot	

* When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure.

Back pressure check valve (Built-in valve type)

	—	None
	Н	Built-in
*		he rubber seal type is available. A bld installed type is available if a back

- pressure check valve with a metal seal is required. Refer to page 236 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

—	Standard (0.7 MPa)
B Quick response type (0.7 MPa)	
K *1	High pressure type (1.0 MPa)
Only the metal seal type is available for the	

*1 Only the metal seal type is available for the high pressure type.



Standard

- T With power saving circuit (Continuous duty type)
- Be sure to select the power saving circuit type if the valve is to be continuously energised for long periods of time.
- Be careful of the energising time when the power saving circuit is selected. Refer to page 316 for details.

8 Rated voltage

	V
5	24 VDC


Sught/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
R	—		Non polor	
U	•		Non-polar	
S	—		Positive	
Z	•	•	common	
NS	—		Negative	
NZ	•		common	
0 - 1				

Select "R," "U," "S," or "Z" for the valve when the SI unit specification is positive common. Select "R," "U," "NS," or "NZ" for the valve when the SI unit specification is ZBN (negative common).

 Only "Z" and "NZ" types are available with a power saving circuit.

Manual override

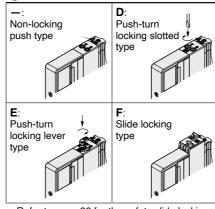

 Refer to page 36 for the safety slide locking manual override.

A, B port size

Thread piping		
Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

One-touch fitting (Metric)

Symbol	A, B port	SY3000	SY5000	SY7000
C2	Ø 2		—	—
C3	Ø 3.2		—	—
C4	Ø 4		•	—
C6	Ø 6			
C8	Ø 8	_	•	•
C10	Ø 10	_	_	
C12	Ø 12	—	—	

One-touch fitting (Inch)

Symbol	A, B port	SY3000	SY5000	SY7000
N1	Ø 1/8"		—	—
N3	Ø 5/32"		•	-
N7	Ø 1/4"			
N9	Ø 5/16"	_		•
N11	Ø 3/8"	_	_	•

Thread type

-	
_	Rc
F	G
N	NPT
Т	NPTF


* Only — is available for M5.

B Type of mounting screw

_	Round head combination screw
В	Hexagon socket head cap screw
Κ	Round head combination screw (Drop prevention type)
н	Hexagon socket head cap screw (Drop prevention type)

For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.

- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 222 for base gasket and mounting screw part numbers.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.





Plug-in Connector Connecting Base

EX180

SS5Y

3 -

SY3000/5000/7000 Series С Є ЦК с П из Понз

How to Order Manifolds

10|S8|Q

Refer to pages 180 (SY5000) and 181 (SY7000) for the dimensions of Type 11/Bottom-ported type.

Series

Type 10

Type 11 Bottom Ported

Side Ported

3	SY3000
5	SY5000
7	SY7000

2 Type

•••	1 1 1					
10		Side ported				
11		Bottom ported*1				


*1 The SY5000 manifold base is used for the bottom ported SY3000. When ordering, refer to the "Plug-in Manifold Mixed Mounting Type" (Refer to page 185).

SI unit

0	Without SI unit					
Q	DeviceNet [®]					
V	CC-Link					

* Only the connector block assembly is mounted for models without an SI unit.

How to Order Manifold Assembly

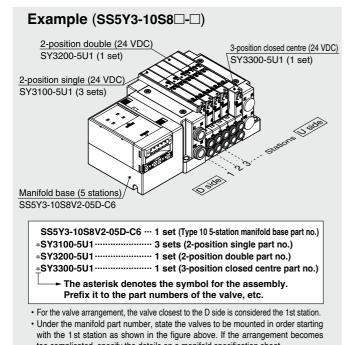

too complicated, specify the details on a manifold specification sheet. When mixing top-ported configurations, select from those listed on page 176. In such cases, use caution as there is also output on the A and B ports on the base side. Specify on the manifold specification sheet if plugs are required for the A and B ports on the base side.

4 SI unit output polarity, Number of outputs

	32 outputs	16 outputs
Without SI unit	-	-
Positive common (NPN)	2	3
Negative common (PNP)	4	5

* When "V" (CC-Link) is selected for the SI unit, only symbol "2" or "4" (32 outputs) can be selected.

* Ensure a match with the common specification of the valves to be used.

5 Communication connector

_	T-branch type						
Α	Straight type						
The	communication connector and new						

- The communication connector and power connector are shipped together with the manifold. The power connector is only available for the straight type.
- * When not selecting an SI unit, the symbol will be "--."

6 Valve stations

In the	In the case of the 32-output SI unit								
Symbol	Stations	Note							
02	2 stations	Double wiring*1							
:	:								
16	16 stations								
02	2 stations	On a sifile of the second #2							
:	:	Specified layout* ² (Up to 32 solenoids available)							
24	24 stations	(Op to 32 soleholds available)							

In the case of the 16-output SI unit

Symbol	Stations	Note				
02	2 stations					
:	:	Double wiring*1				
08	8 stations					
02	2 stations	Creatified laws w*?				
:	÷	Specified layout*2 (Up to 16 solenoids available)				
16	16 stations	(Op to To soleholds available)				

- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- *2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- * This also includes the number of the blanking plate assembly.
- For the product without the SI unit (S80), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

P, E port entry, SUP/EXH block assembly


P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot
U side (2 to 10 stations)	U	С	G
D side (2 to 10 stations)	D	E	Н
Both sides (2 to 24 stations)	В	F	J

S/5(E) port is plugged for the built-in silencer type.

When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

For details on the EX180 Integrated Type (For Output) Serial Transmission System, refer to the **Web Catalogue** and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 219. Please download the Operation Manual via the SMC website: https://www.smc.eu



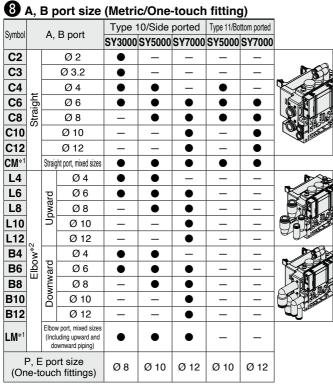

A , B	A, B port size (Inch/One-touch fitting)								
Symbol	Symbol A, B port		Type 10/Side ported Type 11/		Type 11/Bo	ttom ported			
Oymbol		л,	Dipon	SY3000	SY5000	SY7000	SY5000	SY7000	
N1			Ø 1/8"		_	—	—	—	
N3	<u>ب</u>		Ø 5/32"			_		—	
N7	ligh		Ø 1/4"		•	\bullet	•	\bullet	
N9	Straight	1	Ø 5/16"	-	•	\bullet	•	•	
N11	••		Ø 3/8"	-	_		—		el Bass
CM*1		Straig	ht port, mixed sizes				\bullet	\bullet	
LN3		_	Ø 5/32"		_	_	—	—	
LN7		Jpward	Ø 1/4"		•	—		-	
LN9	~	Νd	Ø 5/16"	-	•	_	_		
LN11			Ø 3/8"	-	—		—	—	a Brank
BN3	Elbow*2	p	Ø 5/32"	•		_		_	
BN7	g	Downward	Ø 1/4"	•		—	_	_	
BN9	-	owr	Ø 5/16"		•	_			
BN11			Ø 3/8"			•		_	Jul 1
LM*1		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_	
	P, E port size (One-touch fittings)			Ø 5/16"	Ø 3/8"	Ø 1/2"	Ø 3/8"	Ø 1/2"	

Indicate the sizes on the manifold specification sheet in the case of "CM" or "LM." *1 The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting direction


*2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 228 to 231).


9 Mounting and Option

Symbol Mounting		Option			DIN Rai	I Option	
		Name plate Station number			—	Standa	ard length
_			_		0		rail (with bracket)
AA	Direct				3	For 3 stations	Specify a longer
BA	mounting	•	_	1	:	1	rail than the total length of specified
D□	DIN rail mounting	_	_		24	For 24 stations	stations.
A							
B			_	1			

Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" above.)
 Nonly direct mounting is available for Type 11 (Bottom ported).

* Refer to page 319 for the fixation of DIN rail mounting type manifold.



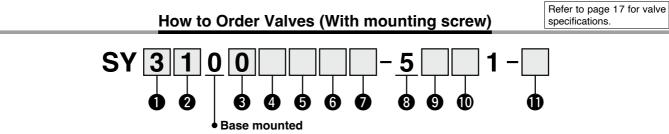

1 Series					
3	SY3000				
5	SY5000				
7	SY7000				

2 Type of actuation

1	0 position	Single		
2	2-position	Double		
3		Closed centre		
4	3-position	Exhaust centre		
5		Pressure centre		
A *1	4-position dual 3-port	N.C./N.C.		
B*1 C*1		N.O./N.O.		
C *1		N.C./N.O.		

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

A

U Sea	а туре
0	Rubber seal
1	Metal seal

4 Pilot type

—	Internal pilot					
R	External pilot					
* When	 When selecting the external pilot specification 					

for the 4-position dual 3-port valve, pay attention to the pilot pressure.

5 Back pressure check valve (Built-in valve type)

	2 1 2
_	None
Н	Built-in

- * Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 236 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

-	•
_	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K *1	High-pressure type (1.0 MPa)
1 Only	the metal seal type is available for the

high-pressure type.

Coil type

- Standard
- With power-saving circuit (Continuous duty type) Be sure to select the power-saving circuit type when the valve is to be continuously
- energised for long periods of time. Be careful of the energising time when the power-saving circuit is selected. Refer to page 316 for details.

8 Rated voltage

24 VDC


Uight/surge voltage suppressor and common specification

With light	Surge voltage suppressor	Common specification	
-		Non-polar	
•		Νοπ-ροιαί	
—		Positive	
•	•	common	
-		Negative	
•		common	

"U," "S," or "Z" for the valve when Select "R, the SI unit output polarity is positive common. Select "R," "U," "NS," or "NZ" for the valve when the SI unit output polarity is negative common.

Only "Z" and "NZ" are available with a power-saving circuit.

Manual override

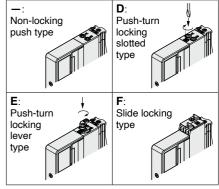


Refer to page 36 for the safety slide locking manual override.


Type of mounting screw

_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 222 for base gasket and mounting screw part numbers.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.




Electin Connector Connecting Base SY3000/5000/7000 Series

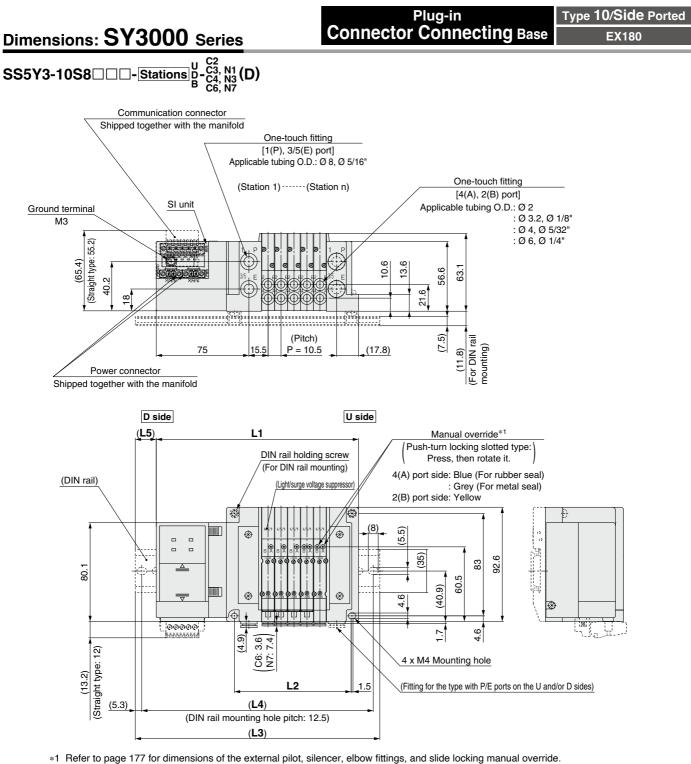

These figures show the "SS5Y3-10S8V2-05D-C6."

* Refer to page 182 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13
L1	132.3	142.8	153.3	163.8	174.3	184.8	195.3	205.8	216.3	226.8	237.3	247.8
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5
L3	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273
L4	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5
L5	14	15	16	17	12	13	14	15	16	17	11.5	12.5
n: Stations	1/	15	16	17	10	10	20	21	22	22	24	
n: Stations	14	15	16	17	18	19	20	21	22	23	24	[
n: Stations L1	14 258.3	15 268.8	16 279.3	17 289.8	18 300.3	19 310.8	20 321.3	21 331.8	22 342.3	23 352.8	24 363.3	
		-	-		-	-	-			-		
L1	258.3	268.8	279.3	289.8	300.3	310.8	321.3	331.8	342.3	352.8	363.3]
L1 L2	258.3 189	268.8 199.5	279.3 210	289.8 220.5	300.3 231	310.8 241.5	321.3 252	331.8 262.5	342.3 273	352.8 283.5	363.3 294	
L1 L2 L3	258.3 189 285.5	268.8 199.5 298	279.3 210 310.5	289.8 220.5 323	300.3 231 335.5	310.8 241.5 335.5	321.3 252 348	331.8 262.5 360.5	342.3 273 373	352.8 283.5 385.5	363.3 294 398	

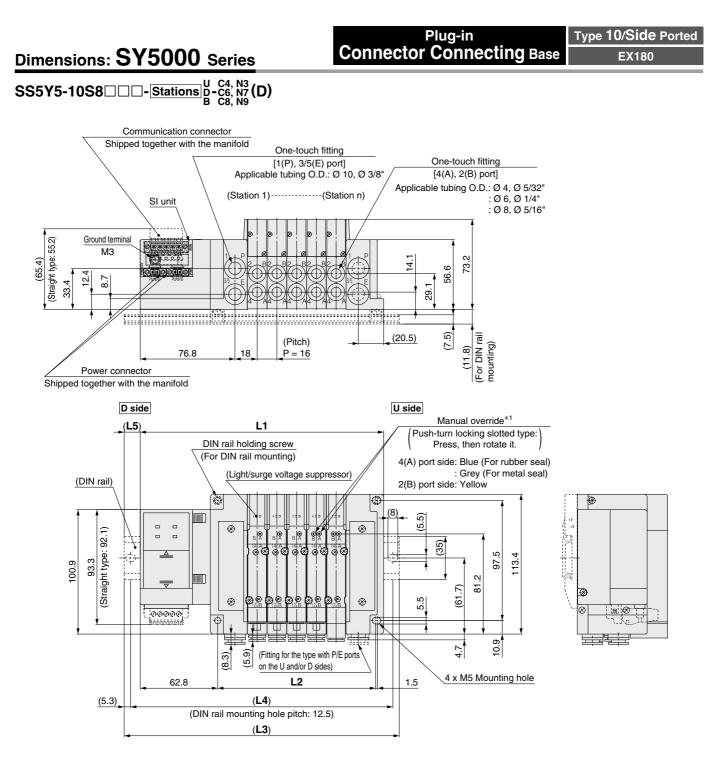


*1 Refer to page 178 for dimensions of the external pilot, silencer, elbow fittings, and slide locking manual override.

* These figures show the "SS5Y5-10S8V2-05D-C8."

* Refer to page 183 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13
L1	149.3	165.3	181.3	197.3	213.3	229.3	245.3	261.3	277.3	293.3	309.3	325.3
L2	80	96	112	128	144	160	176	192	208	224	240	256
L3	173	198	210.5	223	248	260.5	273	285.5	310.5	323	335.5	360.5
L4	162.5	187.5	200	212.5	237.5	250	262.5	275	300	312.5	325	350
L5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5
n: Stations	14	15	16	17	18	19	20	21	22	23	24	
L1	341.3	357.3	373.3	389.3	405.3	421.3	437.3	453.3	469.3	485.3	501.3	
L2	272	288	304	320	336	352	368	384	400	416	432	
L3	373	385.5	398	423	435.5	448	460.5	485.5	498	510.5	535.5	
L4	362.5	375	387.5	412.5	425	437.5	450	475	487.5	500	525	
L5	16	14	12.5	17	15	13.5	11.5	16	14.5	12.5	17	-
173								Ø	SMC			

Electin Connector Connecting Base SY3000/5000/7000 Series

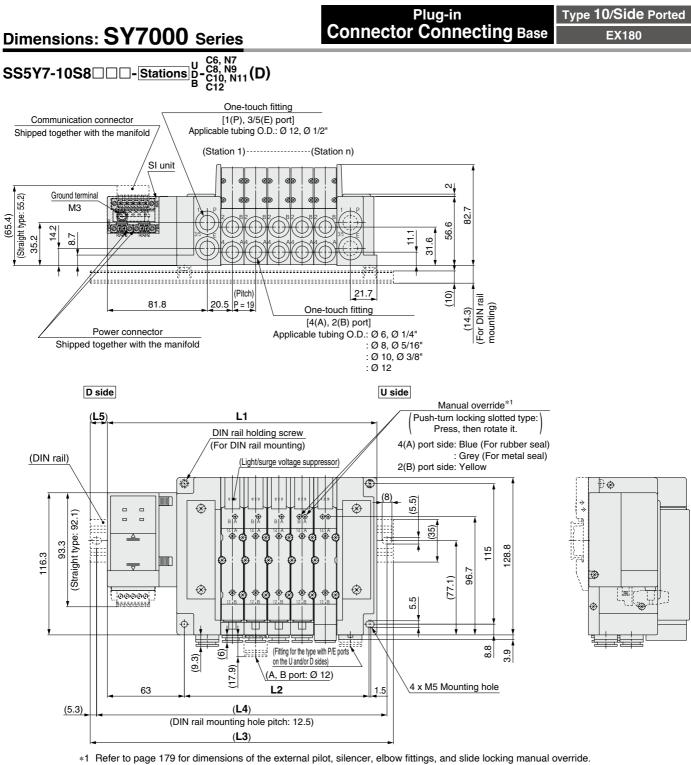

* These figures show the "SS5Y7-10S8V2-05D-C10."

* Refer to page 184 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13
L1	163.5	182.5	201.5	220.5	239.5	258.5	277.5	296.5	315.5	334.5	353.5	372.5
L2	94	113	132	151	170	189	208	227	246	265	284	303
L3	198	210.5	235.5	248	273	285.5	310.5	323	348	360.5	385.5	398
L4	187.5	200	225	237.5	262.5	275	300	312.5	337.5	350	375	387.5
L5	17.5	14	17	14	17	13.5	16.5	13.5	16.5	13	16	13
01.11	4.4	4 5	40	47	40	40	00	04	00	00	04	
n: Stations	14	15	16	17	18	19	20	21	22	23	24	
n: Stations L1	14 391.5	15 410.5	16 429.5	17 448.5	18 467.5	19 486.5	20 505.5	21 524.5	22 543.5	23 562.5	24 581.5	
		-	-		-	-	-			-		
L1	391.5	410.5	429.5	448.5	467.5	486.5	505.5	524.5	543.5	562.5	581.5	
L1 L2	391.5 322	410.5 341	429.5 360	448.5 379	467.5 398	486.5 417	505.5 436	524.5 455	543.5 474	562.5 493	581.5 512]
L1 L2 L3	391.5 322 423	410.5 341 435.5	429.5 360 460.5	448.5 379 473	467.5 398 498	486.5 417 510.5	505.5 436 535.5	524.5 455 548	543.5 474 573	562.5 493 598	581.5 512 610.5	

SMC


Plug-in Connector Connecting Base

EX180

SY3000/5000/7000 Series

05

How to Order Manifolds



U Sei	ries
3	SY3000
5	SY5000

7

Type 12 Top Ported

-			-	
-				
A	nit output po			
57 SI 11	nit outnut no	larity Nu	imher of oi	itnute
	mi ouipui po	14111		acputs

SY7000

	, ,	
	32 outputs	16 outputs
Without SI unit	-	_
Positive common (NPN)	2	3
Negative common (PNP)	4	5

- * When "V" (CC-Link) is selected for the SI unit, only symbol "2" or "4" (32 outputs) can be selected.
- Ensure a match with the common specification of the valves to be used.

unit				
Without SI unit				
DeviceNet [®]				
CC-Link				

Only the connector block assembly mounted for models without an SI unit.

4 Communication connector

- T-branch type Α Straight type The communication connector and power connector
- are shipped together with the manifold. The power connector is only available for the straight type When not selecting an SI unit, the symbol will be


O P, E port entry, SUP/EXH block assembly Internal pilot Internal pilot, Built-in silencer External pilot P, E port entry **C***1 U side (2 to 10 stations) U G **E***1 D side (2 to 10 stations) D Н В Both sides (2 to 24 stations)

*1 For SUP/EXH block assembly specifications, built-in silencer types will have P port entry stipulated. * For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E

0 Q

port entry is D side, the silencer exhaust port is U side.) When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

How to Order Manifold Assembly

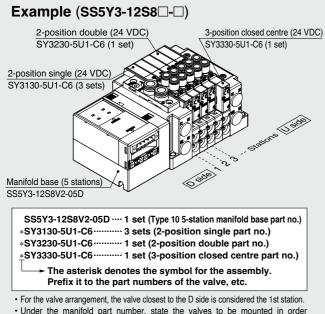

· Under the manifold part number, state the valves to be mounted in order starting with the 1 st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

5 Valve stations In the case of the 32-output SI unit					
Symbol	Stations	Note			
02	2 stations				
:	÷	Double wiring*1			
16	16 stations				
02	2 stations	Creatified laws w*?			
:	:	Specified layout* ² (Up to 32 solenoids available)			
24	24 stations				

In the case of the 16-output SI unit

Symbol	Stations	Note		
02	2 stations			
:	:	Double wiring*1		
08	8 stations			
02	2 stations	0		
:	:	Specified layout*2 (Up to 16 solenoids available)		
16	16 stations	(Op to To soleriolds available)		

- *1 Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- *2 Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of the blanking plate assembly.
- For the product without the SI unit (S80), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

P, E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000	
-	Ø 8	Ø 10	Ø 12	
Ν	Ø 5/16"	Ø 3/8"	Ø 1/2"	

For N, sizes are in inches

8 Mountina

Syr


_	Direct mounting				
D	DIN rail mounting (With DIN rail)				
D0	DIN rail mounting (Without DIN rail)				
D3	For 3 stations Specify a longer				
:	:	rail than the			
D24	For 24 stations	or 24 stations standard length.			

^{*} Refer to page 319 for the fixation of DIN rail mounting type manifold.

For details on the EX180 Integrated Type (For Output) Serial Transmission System, refer to the Web Catalogue and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 219. Please download the Operation Manual via the SMC website: https://www.smc.eu



Plug-in Connector Connecting Base SY3000/5000/7000 Series

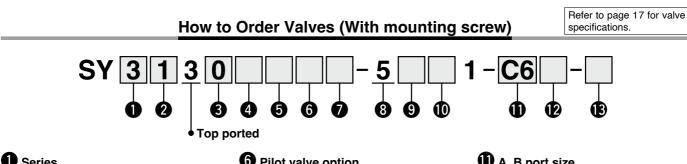

U Series				
3	SY3000			
5	SY5000			
7	SY7000			

2 Type of actuation

1	0 position	Single	
2	2-position	Double	
3	3-position	Closed centre	
4		Exhaust centre	
5		Pressure centre	
A *1	4-position dual 3-port	N.C./N.C.	
B *1		N.O./N.O.	
C * ¹	uuai 5-port	N.C./N.O.	

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

Seal type

• eeu type				
0	Rubber seal			
1	Metal seal			

Pilot type

_	Internal pilot		
R	External pilot		
3441 1 12 11 1 1 11 1 11 1			

* When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure.

5 Back pressure check valve (Built-in valve type)

_	1	None	
Н	В	uilt-in	

- Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 236 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

-	 Standard (0.7 MPa) 			
В	Quick response type (0.7 MPa)			
K *1	High-pressure type (1.0 MPa)			
Only the metal seal type is available for the				

*1 high-pressure type.

Coil type

Standard

- With power-saving circuit (Continuous duty type) Be sure to select the power-saving circuit type when the valve is to be continuously
- energised for long periods of time. Be careful of the energising time when the power-saving circuit is selected. Refer to page 316 for details.

Rated voltage

5

24 VDC


Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
R			Non-polar	
U	•			
S	—		Positive	
Z	•	•	common	
NS	—		Negative	
NZ	•		common	

* Select "R," "U," "S," or "Z" for the valve when the SI unit output polarity is positive common. Select "R," "U," "NS," or "NZ" for the valve when the SI unit output polarity is negative common.

Only "Z" and "NZ" are available with a power-saving circuit.

Manual override

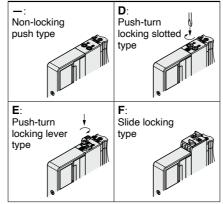

Refer to page 36 for the safety slide locking manual override

A, B port size

Thread piping			
Symbol	Port size	Applicable series	
M5	M5 x 0.8	SY3000	
01	1/8	SY5000	
02	1/4	SY7000	

One-touch fitting (Metric)

	j (
Symbol	A, B port	SY3000	SY5000	SY7000
C2	Ø 2		_	—
C3	Ø 3.2		—	—
C4	Ø 4		•	—
C 6	Ø 6		•	
C8	Ø 8	_	•	
C10	Ø 10	—	—	
C12	Ø 12	_	_	

One-touch fitting (Inch)

Symbol	A, B port	SY3000	SY5000	SY7000
N1	Ø 1/8"		—	—
N3	Ø 5/32"		•	—
N7	Ø 1/4"			
N9	Ø 5/16"	—		•
N11	Ø 3/8"	_	_	

Thread type

—	Rc	
F	G	
N	NPT	
Т	NPTF	

* Only - is available for M5.

B Type of mounting screw


_	Round head combination screw
В	Hexagon socket head cap screw
Κ	Round head combination screw (Drop prevention type)
н	Hexagon socket head cap screw (Drop prevention type)

For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.


When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket

separately if it is needed for maintenance. "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or


interface regulator.




SY3000/5000/7000 Series Common Dimensions

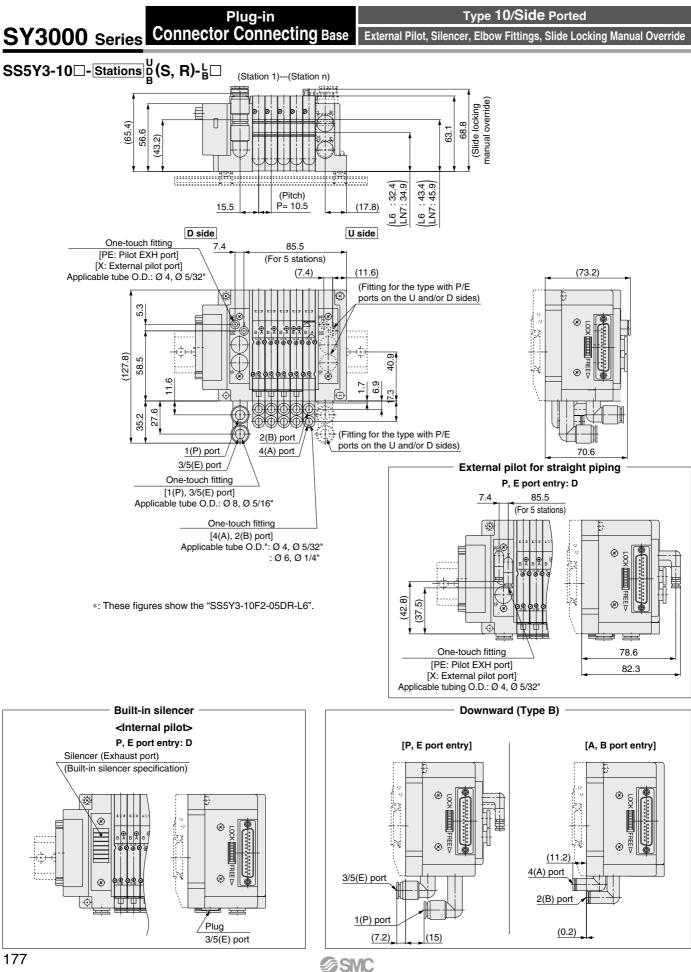


Common Dimensions SY3000/5000/7000 Series

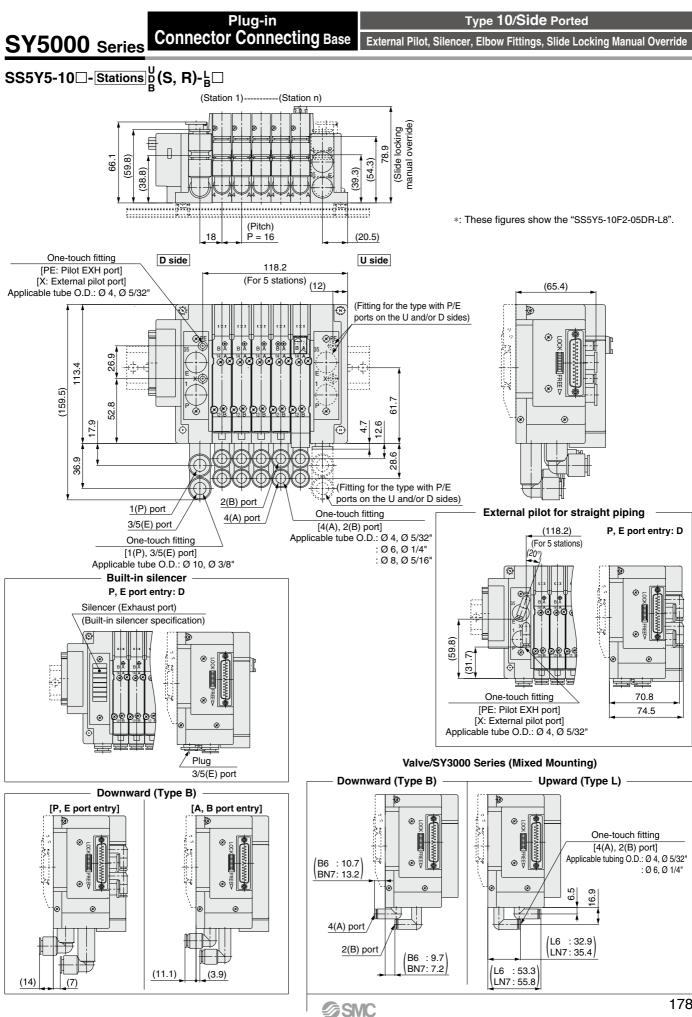


178

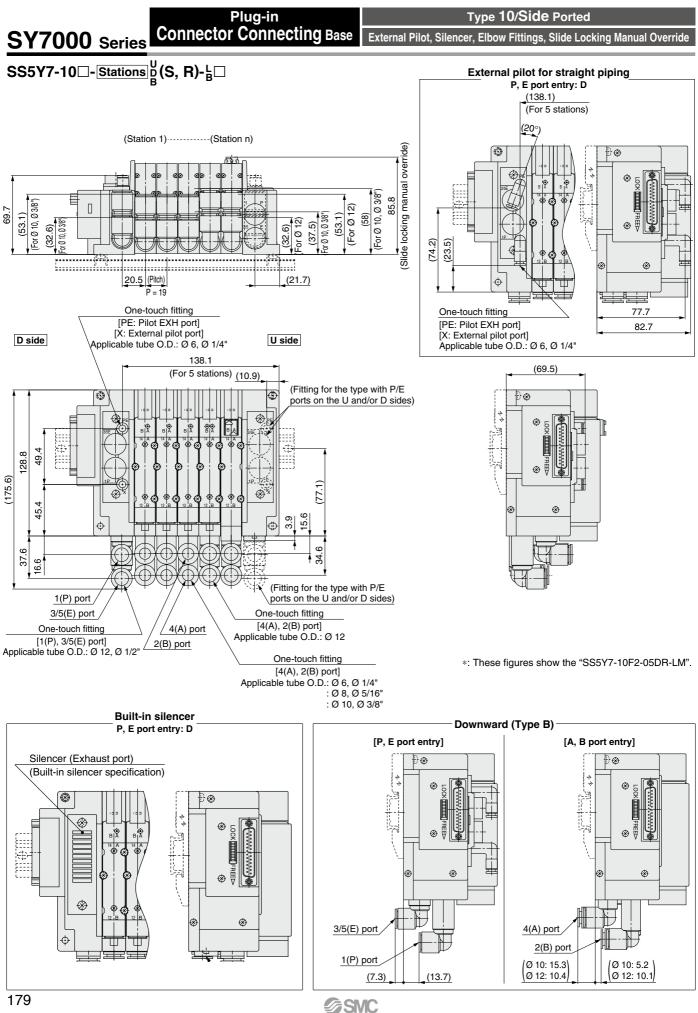

Common Dimensions SY3000/5000/7000 Series

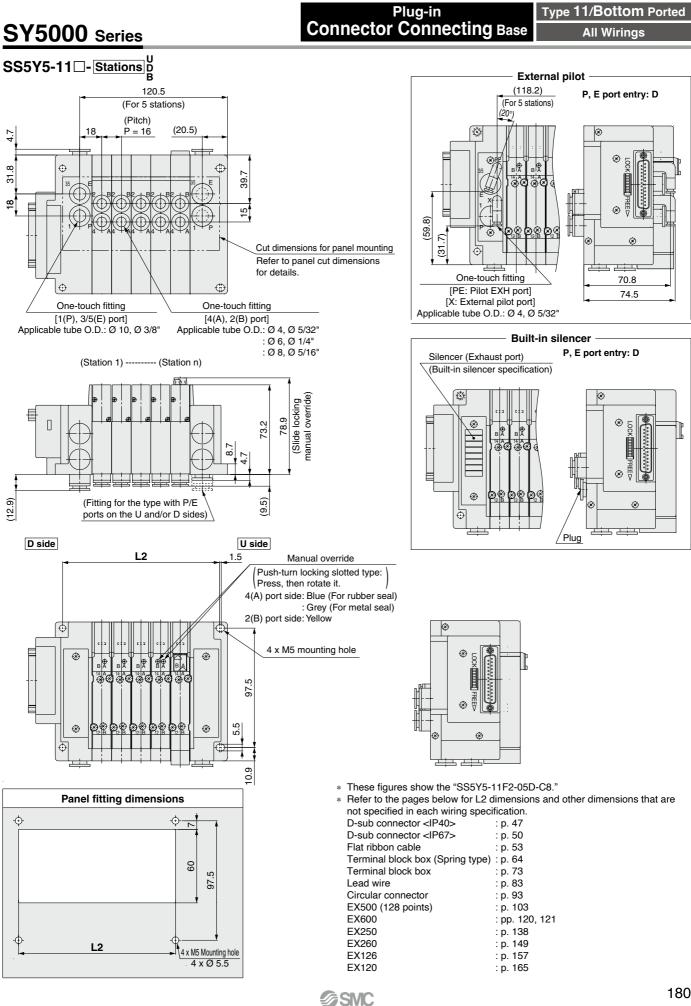


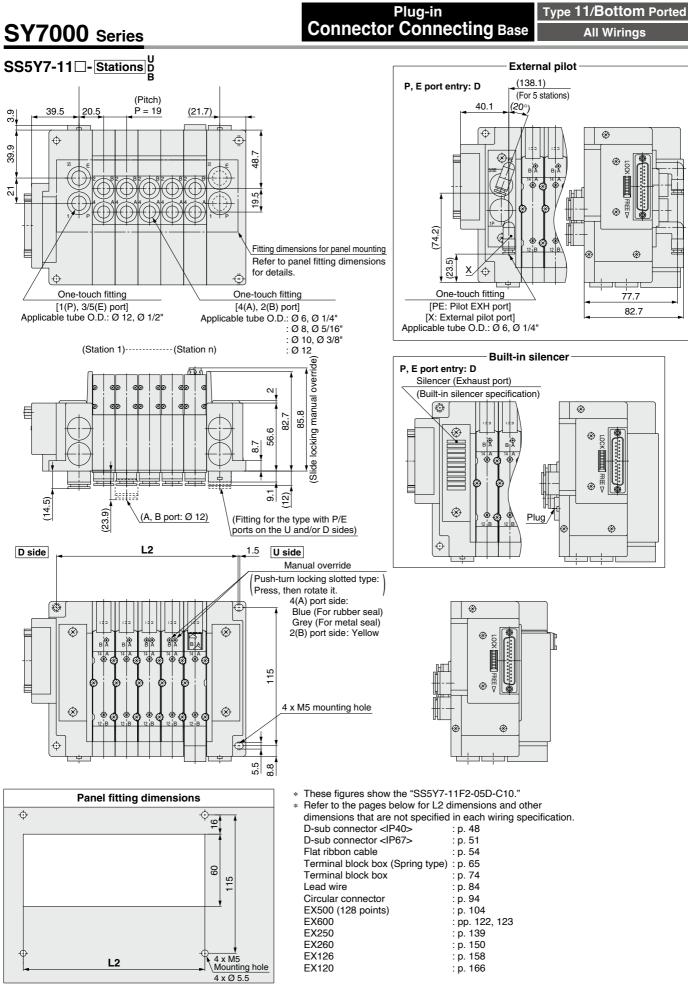

SMC

Type 11/Bottom Ported

Common Dimensions SY3000/5000/7000 Series

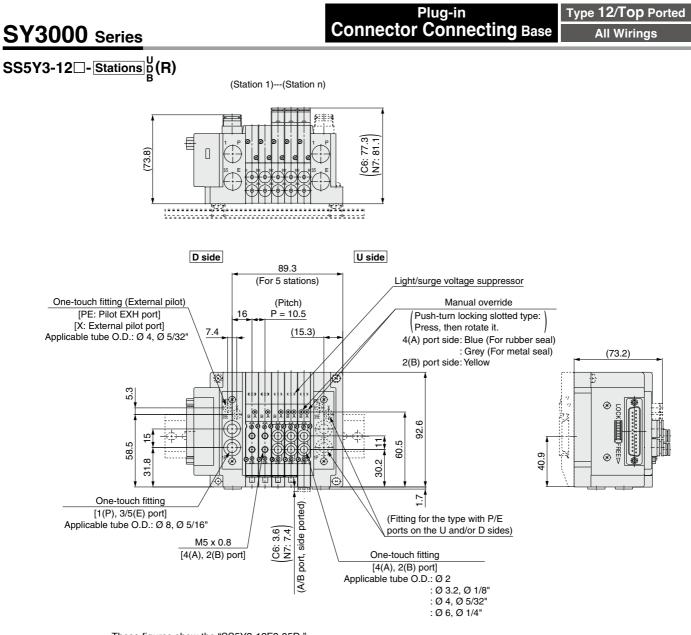


- * These figures show the "SS5Y3-12F2-05D."
- * For the built-in silencer type, a silencer is mounted on the opposite side of U or D side with P or E port. Refer to page 177 for dimensions of the silencer.
- * Refer to the pages below for dimensions that are not specified in each wiring specification.


D-sub connector <ip40></ip40>	: p. 46
D-sub connector <ip67></ip67>	: p. 49
Flat ribbon cable	: p. 52
Terminal block box (Spring type)	: p. 63
Terminal block box	: p. 72
Lead wire	: p. 82
Circular connector	: p. 92
EX500 (128 points)	: p. 102
EX600	: pp. 118, 119
EX250	: p. 137
EX260	: p. 148
EX126	: p. 156
EX120	: p. 164


SY5000 Series

Plug-in Connector Connecting Base

Type 12/Top Ported All Wirings



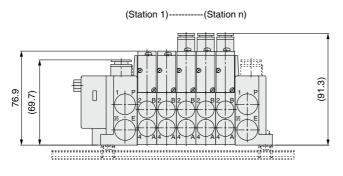


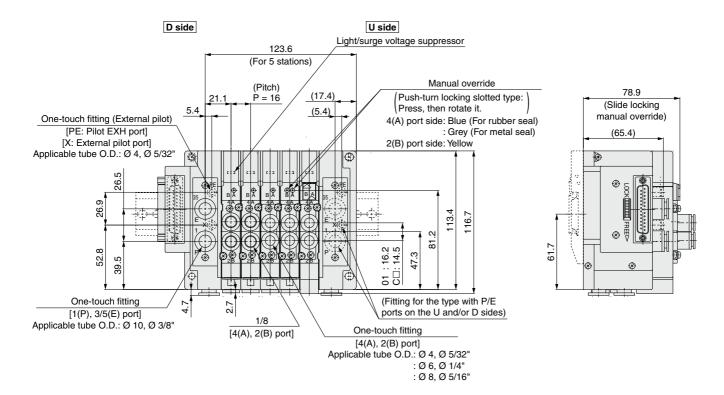

- * These figures show the "SS5Y5-12F2-05D."
- For the built-in silencer type, a silencer is mounted on the opposite side of U or D side with P or E port. Refer to page 178 for dimensions of the silencer.
 Refer to the pages below for dimensions that are not specified in each wiring specification.

Refer to the pages below for dim	ensions that ar
D-sub connector <ip40></ip40>	: p. 47
D-sub connector <ip67></ip67>	: p. 50
Flat ribbon cable	: p. 53
Terminal block box (Spring type)	: p. 64
Terminal block box	: p. 73
Lead wire	: p. 83
Circular connector	: p. 93
EX500 (128 points)	: p. 103
EX600	: pp. 120, 121
EX250	: p. 138
EX260	: p. 149
EX126	: p. 157
EX120	: p. 165


Common Dimensions SY3000/5000/7000 Series

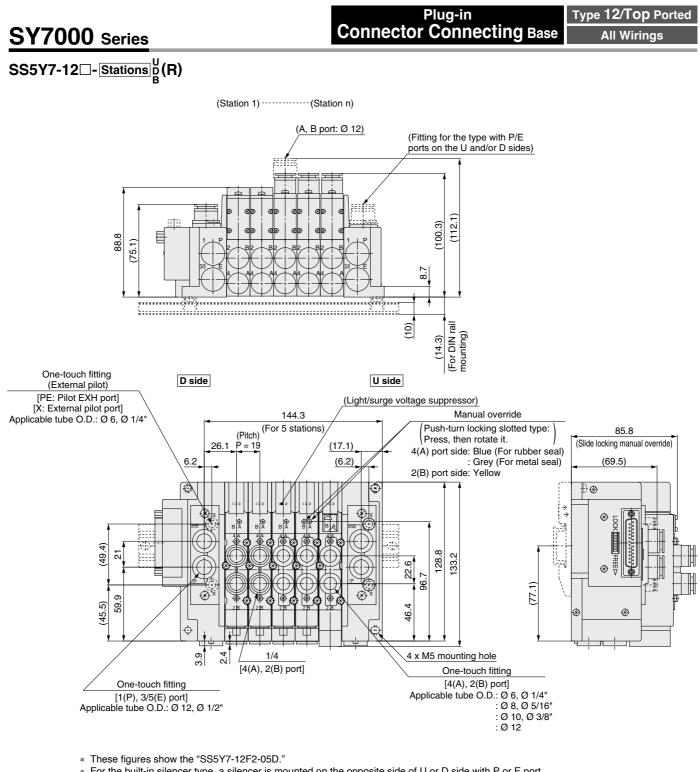

* For the built-in silencer type, a silencer is mounted on the opposite side of U or D side with P or E port. Refer to page 179 for dimensions of the silencer.

* Refer to the pages below for dimensions that are not specified in each wiring specification.

5	Refer to the pages below for dime	ensions that ar
	D-sub connector <ip40></ip40>	: p. 48
	D-sub connector <ip67></ip67>	: p. 51
	Flat ribbon cable	: p. 54
	Terminal block box (Spring type)	: p. 65
	Terminal block box	: p. 74
	Lead wire	: p. 84
	Circular connector	: p. 94
	EX500 (128 points)	: p. 104
	EX600	: pp. 122, 123
	EX250	: p. 139
	EX260	: p. 150
	EX126	: p. 158
	EX120	: p. 166

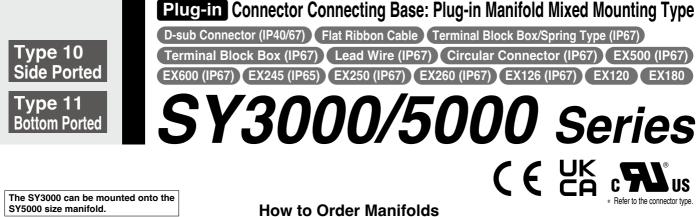

Refer to page 174 for the dimensions of Type 11/

Bottom-ported type.

Mixed Mounting Type It is possible to mount the SY3000 size valves on all stations. In this case, there is no need to fill in part (3) in the order code. However, the manifold block width should be 12.5 mm.

	U Type	
10	Side ported	
11	Bottom ported	

2 Connector type

Symbol	Туре		Page
F	D-sub connector	IP40	
FW	(25 pins)	IP67	
Р		26 pins	43
PG	Flat ribbon cable	20 pins	
PH		10 pins	
ТС	Terminal block box	(Spring type)	61
Т	Terminal blo	ock box	69
L1		34 cores	
L2	Lead wire	17 cores	79
L3		9 cores	
М	Circular connector		89
S□		EX500 Gateway Decentralised System 2 (128 points)	99
S6□	Carial	EX600	115
SA	Serial transmission	EX245	127
S□		EX250	133
S□		EX260	141
S4 □*1		EX126	153
S3 □∗1		EX120	161
S8□		EX180	169

*1 EX126, EX120 are not yet UL-compliant.

* Refer to the pages shown in the table above for details.

3

With Lead wire

Lead v	vire length
1	0.6 m
2	1.5 m
3	3 m

· With D-sub connector (IP40/67) and Flat ribbon cable

Connector entry direction

1	Upward
2	Lateral

It is not necessary to select the items above for the valve with terminal block box or with circular connector or the serial transmission type.

4 Valve stations

SS5Y5 – M

<u> </u>		
Symbol	Stations	Note
02	2 stations	Some connectors have a limitation
÷	:	on the number of stations. Refer to the pages shown in the table
24	24 stations	"Connector type" for details.

9 P. E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)
	_

* Refer to page 115 for the EX600 and 7 on page 127 for the EX250.

Fitting type: One-touch fitting

<u> </u>	371	J	
Symbol	A, B port		
С	Straight		
L	Metric size	Elbow	Upward* ²
В			Downward*2
Ν		Straight	
LN	Inch size	Elbow	Upward*2
BN		Elbow Downv	
CM *1	Mixed sizes	Stra	ight
LM*1	wixeu sizes	Elbow (Including upward	and downward piping)*2

05

*1 Select CM or LM if mixed port sizes are to be used for each series. (For example, if mixed sizes, such as C6 and C8, are to be used for the SY5000 series) In such cases, indicate the sizes on the manifold specification sheet.

The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting direction.

*2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 228 to 230). Elbow fittings are not available for Type 11 (Bottom ported).

Elbow fittings: Ø 2, Ø 3.2, and Ø 1.8" are not available for the SY3000 series. Ø 2, Ø 3.2, Ø 1.8", and Ø 5/32" are not available for the SY5000 series.

6 SUP/EXH block assembly

C

 Internal pilot 		
S	Internal pilot, Built-in silencer	
R	External pilot	

3/5(E) port is plugged for the built-in silencer type.

Refer to page 115 for the EX600 and 1 on page 127 for the EX250.

8 SY5000: A, B port size

(Metric/	One-touch fitting)	(Inch/O	ne-touch fitting)
Symbol Port size		Symbol	Port size
4 Ø 4		3	Ø 5/32"
6 Ø 6		7	Ø 1/4"
8	Ø 8	9	Ø 5/16"
—	For all stations of SY3000	—	For all stations of SY3000

No symbol needs to be specified when fitting type "CM" or "LM" is * selected.

9 SY3000: A, B port size


(Metric/One-touch fitting)

(Metric/	One-touch fitting)	(Inch/One-touch fitting)		
Symbol	Port size	Symbol	Port size	
2	Ø 2	1	Ø 1/8"	
3	Ø 3.2	3	Ø 5/32"	
4	Ø 4	7	Ø 1/4"	
6	Ø 6	9	Ø 5/16"* ¹	
8	Ø 8*1			

*1 The valve pitch is the same as that of the SY5000.

* No symbol needs to be specified when fitting type "CM" or "LM" is selected.

How to Order Manifold Assembly

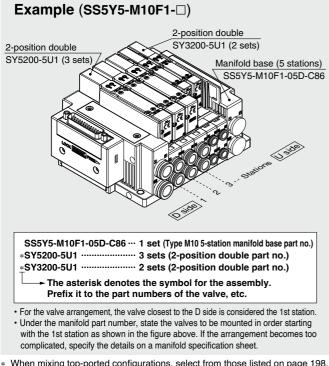

When mixing top-ported configurations, select from those listed on page 198. In such cases, use caution as there is also output on the A and B ports on the base side.


Specify on the manifold specification sheet if plugs are required for the A and B ports on the base side.

(D) Mounting


_	Direct mounting	
D	DIN rail mounting (With DIN rail)	
D0	DIN rail mounting (Without DIN rail)	
D3	For 3 stations Specify a length longer than that of the standar	
:	÷	[The SY5000 valve is now at a mountable length
D24 For 24 stations (man		(manifold block length of 16 mm).]
Only divert mean time is evaluable for the time 11 betters nexted time		

Only direct mounting is available for the type 11 bottom-ported type. * Refer to page 192 to determine the L3 using "Calculation formula" for the DIN rail length.

* Refer to page 319 for the fixation of DIN rail mounting type manifold.



SY3000/5000 Series

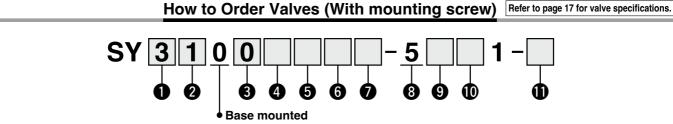

Sei	ries	
3		SY3000

5

2 Type of actuation

1	2-position	Single
2	2-position	Double
3		Closed centre
4	3-position	Exhaust centre
5		Pressure centre
A *1	A*1 B*1 dual 3-port	N.C./N.C.
B *1		N.O./N.O.
C *1	uuai 3-port	N.C./N.O.

SY5000

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

-	
0	Rubber seal
1	Metal seal

4 Pilot type

_	Internal pilot
R	External pilot

* When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure.

Back pressure check valve (Built-in valve type)

	—	None	
	Н	Built-in	
· Only the rybber and type is evailable. A			

- Only the rubber seal type is available. A manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 236 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type.

6 Pilot valve option

_	Standard (0.7 MPa)			
В	Quick response type (0.7 MPa)			
K ∗1	High pressure type (1.0 MPa)			
1 Only the metal seal type is available for the				

high pressure type.

Coil type

- Standard

 With power saving circuit (Continuous duty type)
- Be sure to select the power saving circuit type if the valve is to be continuously
- energised for long periods of time.
 * Be careful of the energising time when the power saving circuit is selected. Refer to page 316 for details.

8 Rated voltage

5	24 VDC	
6	12 VDC	
* Only 24 VDC is available for the serial		

transmission type.

9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
_	—	—	
R	—		Non-polar
U	•	•	
S	—		Positive
Z	•		common
NS	_		Negative
NZ	•		common


- * "--" is not available for the SI unit manifold.
- For the non-polar type, be careful of surge voltage intrusion.

Refer to page 317 for details.

 (Excludes when an SI unit manifold is used)
 * Only "Z" and "NZ" types are available with a power saving circuit. Select a valve which is suited to the SI unit output polarity or SI unit specification when the SI unit is selected.
 Befer to the pages below for details

ricici to the paget	bolow for dotallo.
EX500: pp. 101	EX600: p. 117
EX245: p. 127	EX250: p. 136
EX260: p. 144	EX126: p. 155
EX120: p. 163	EX180: p. 171

Manual override

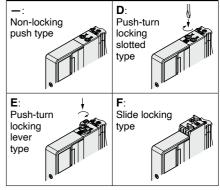


* Refer to page 36 for the safety slide locking manual override.


Type of mounting screw

_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 222 for base gasket and mounting screw part numbers.
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.





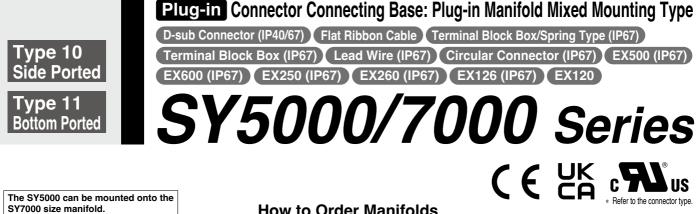

Refer to page 195 for the

How to Order Manifolds

05

SS5Y7-M dimensions of Type 11/ Bottom-ported type.

Mixed Mounting Type It is possible to mount the SY5000 size valves on all stations. In this case, there is no need to fill in part (3) in the order code. However, the manifold block width should be 19 mm.

Tvpe

<u> </u>	
10	Side ported
11	Bottom ported

Connector type

Symbol	Туре		Page	
F	D-sub connector	IP40		
FW	(25 pins)	IP67		
Р		26 pins	43	
PG	Flat ribbon cable	20 pins		
PH		10 pins		
TC	Terminal block box	(Spring type)	61	
Т	Terminal blo	ock box	69	
L1		34 cores		
L2	Lead wire	17 cores	79	
L3		9 cores		
Μ	Circular cor	89		
S□		EX500 Gateway Decentralised System 2 (128 points)	99	
S6 □	Serial transmission	EX600	115	
S□	u ansi ilission	EX250	133	
S□		EX260	141	
S4 □*1		EX126	153	
S3 □*1		EX120	161	

*1 EX126, EX120 are not yet UL-compliant.

* Refer to the pages shown in the table above for details.

3

With Lead wire

Lead wire length

1	0.6 m
2	1.5 m
3	3 m

· With D-sub connector (IP40/67) and Flat ribbon cable

Connector entry direction

1	Upward
2	Lateral

It is not necessary to select the items above for the valve with terminal block box or with circular connector or the serial transmission type.

4 Valve stations

Symbol	Stations	Note
02	2 stations	Some connectors have a limitation
:	:	on the number of stations. Refer to the pages shown in the table
24	24 stations	"Connector type" for details.

5 P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)
	_

* Refer to page 115 for the EX600 and 7 on page 127 for the EX250.

Fitting type: One-touch fitting

<u> </u>	3 71			
Symbol		A, B port		
С		Stra	light	
L	Metric size	Elbow	Upward*2	
В		EIDOW	Downward*2	
Ν		Stra	light	
LN	Inch size	Elbow	Upward*2	
BN		EIDOW	Downward*2	
CM *1	Mixed sizes	Stra	light	
LM*1	wixeu sizes	Elbow (Including upward	and downward piping)*2	

*1 Select CM or LM if mixed port sizes are to be used for each series. (For example, if mixed sizes, such as C6 and C8, are to be used for the SY5000 series) In such cases, indicate the sizes on the manifold specification sheet.

The direction of P, E port fittings is the same as for the A, B port. If selecting "LM," indicate it on the manifold specification sheet for the P, E port fitting direction.

*2 To avoid interference with the body or piping, select a downward elbow port when mounting the optional spacer assembly (pages 228 to 230). Elbow fittings are not available for Type 11 (Bottom ported).

* Elbow fittings: Ø 1/4" and Ø 5/16" are not available.

6 SUP/EXH block assembly

	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

3/5(E) port is plugged for the built-in silencer type.

Refer to page 115 for the EX600 and 1 on page 127 for the EX250.

8 SY7000: A, B port size (Metric/One-touch fitting)

(Inch/Or	ne-touch	fitting)
Sumbol		Dort oit

Symbol	Port size	Symbol	Port size
6	Ø 6	7	Ø 1/4"
8	Ø 8	9	Ø 5/16"
10	Ø 10	11	Ø 3/8"
12	Ø 12	-	For all stations of SY5000
_	For all stations of SY5000		

No symbol needs to be specified when fitting type "CM" or "LM" is selected.

SY5000: A, B port size (Metric/One-touch fitting)


x) (Inch/One-touch fitting)

(werne-touch niting)		(incluone-touch inting)		
Symbol	Port size	Symbol	Port size	
6	Ø 6	7	Ø 1/4"	
8	Ø 8	9	Ø 5/16"	
10	Ø 10	11	Ø 3/8"	
12	Ø 12			

The valve pitch is 19 mm, the same as that of the SY7000.
 No symbol needs to be specified when fitting type "CM" or "LM" is

 No symbol needs to be specified when fitting type "CN selected.

How to Order Manifold Assembly

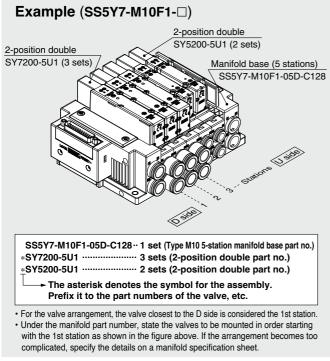

* When mixing top-ported configurations, select from those listed on page 198. In such cases, use caution as there is also output on the A and B ports on the base side.

Specify on the manifold specification sheet if plugs are required for the A and B ports on the base side.

SMC

Mounting and Option

			tion	DIN Rail Option			
Symbol	Mounting	Name plate	Station number		—	Stand	lard length
_			_		0		I rail (with bracket)
AA	Direct				3	For 3 stations	Specify a longer rail
BA	mounting	•	_				than the total length
D		-	_		24	For 24 stations	of specified stations.
A	DIN rail mounting	•					
B□	mounting	•	_				


∗ Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" above.)

Only direct mounting is available for the type 11 bottom-ported type.
Refer to page 192 to determine the L3 using "Calculation formula" for


the DIN rail length. (For the SY3000 and SY5000 mixed mounting type)

* The manifold block width is 19 mm for both the SY5000 and SY7000 sizes.

* Refer to page 319 for the fixation of DIN rail mounting type manifold.



SY5000/7000 Series

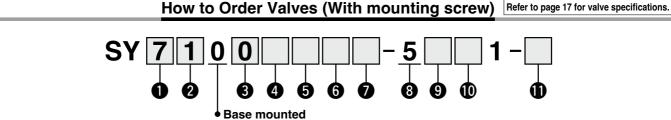

Series				
	5	SY5000		
	7	SY7000		

2 Type of actuation

1	2-position	Single		
2	2-position	Double		
3		Closed centre		
4	3-position	Exhaust centre		
5		Pressure centre		
A *1		N.C./N.C.		
B *1	4-position dual 3-port	N.O./N.O.		
C *1	uuai 3-port	N.C./N.O.		

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

-	
0	Rubber seal
1	Metal seal

Pilot type

_	Internal pilot			
R	External pilot			

* When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure.

5 Back pressure check valve (Built-in valve type)

	—	- None			
H Built-in		Built-in			
• Only the rubber seal type is available. A					

- eal type is av manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 236 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

ontior

Pliot valve option				
_	Standard (0.7 MPa)			
В	Quick response type (0.7 MPa)			
K ∗1	High pressure type (1.0 MPa)			
1 Only the metal seal type is available for the				

high pressure type.

Coil type

- Standard With power saving circuit (Continuous duty type)
- Be sure to select the power saving circuit type if the valve is to be continuously
- energised for long periods of time. Be careful of the energising time when the power saving circuit is selected. Refer to page 316 for details.

8 Rated voltage

5	5 24 VDC		
6	12 VDC		
* Only 24 VDC is available for the serial			

transmission type.


Uight/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
_	—	—		
R	—		Non-polar	
U	•			
S	_	•	Positive	
Z	•		common	
NS	—		Negative	
NZ	•		common	
" " to make a set it is to be to a the solution it as a set to be				

- "-" is not available for the SI unit manifold.
- For the non-polar type, be careful of surge voltage intrusion. Refer to page 317 for details
- (Excludes when an SI unit manifold is used) Only "Z" and "NZ" types are available with a power saving circuit. Select a valve which is suited to the SI unit output polarity or SI unit specification when the SI unit is selected. Refer to the pages below for details. EX500: pp. 101 EX600: p. 117

00. p. 117
60: p. 144
20: p. 163

Manual override

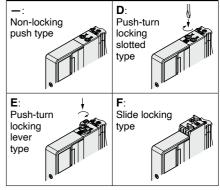


Refer to page 36 for the safety slide locking manual override.


Type of mounting screw

 Round head combination screw 	
B Hexagon socket head cap screw	
K Round head combination screw (Drop prevention	
H Hexagon socket head cap screw (Drop prevention t	

- For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 222 for base gasket and mounting screw part numbers. "B" and "H" cannot be selected for the
- individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.




Connector Connecting Base SY3000/5000/7000 Series

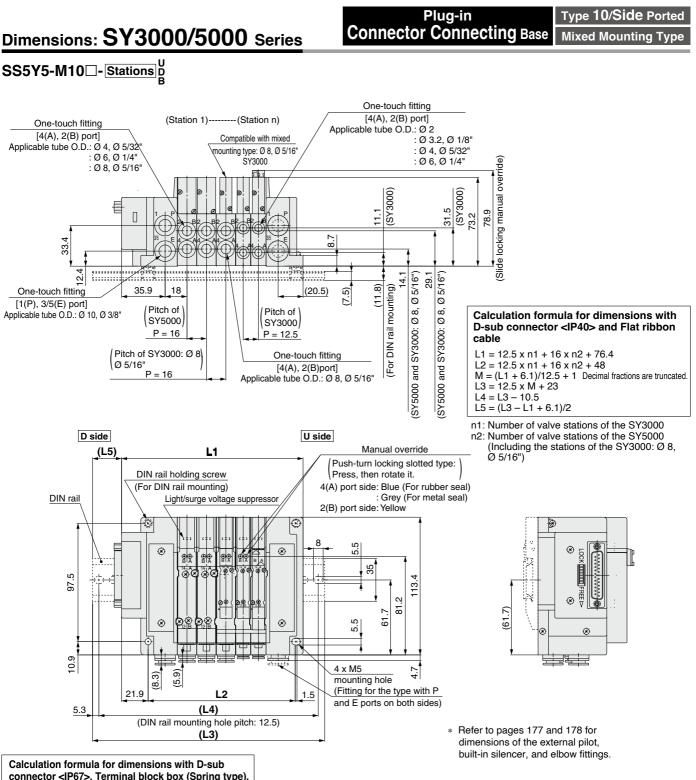

Calculation formula for dimensions with D-sub connector <IP67>, Terminal block box (Spring type), Terminal block box, Lead wire, Circular connector, EX500/600/250/260/126/120 serial transmission L1 = 12.5 x n1 + 16 x n2 + a + b x n3

- $L^{2} = 12.5 \times n1 + 10 \times n2 + 4 + 0 \times n3$ $L^{2} = 12.5 \times n1 + 16 \times n2 \times 48$ M = L1/12.5 + 1Decimal fractions are truncated. $L^{3} = 12.5 \times M + 23$ $L^{4} = L^{3} 10.5$ $L^{5} = (L^{3} L^{1})/2$
- L6 = b x n3 + c
- n1: Number of valve stations of the SY3000 n2: Number of valve stations of the SY5000 (Including the stations of the SY3000: Ø 8, Ø 5/16")
- n3: Number of I/O units or input block stations * Refer to pages 120 and 121 for dimensions of the EX600 serial transmission with I/O unit and page 132 for the EX250 serial transmission with input block when L6, b, and c are used for the calculation formula.


Coefficient	а	b	с
D-sub connector <ip67></ip67>	90.5	—	_
Terminal block box (Spring type)	128	—	_
Terminal block box or Serial transmission: EX126	149.3	—	_
Lead wire or Circular connector	97	—	_
EX500 Gateway Decentralised System 2 (128 points)	88.7	—	_
Serial transmission: EX600 (M12 connector)	141.5	47	81.5
Serial transmission: EX600 (7/8 inch connector)	158	47	81.5
Serial transmission: EX250	141.5	21	81.5
Serial transmission: EX260	88.7	—	_
Serial transmission: EX120	84.7	—	_

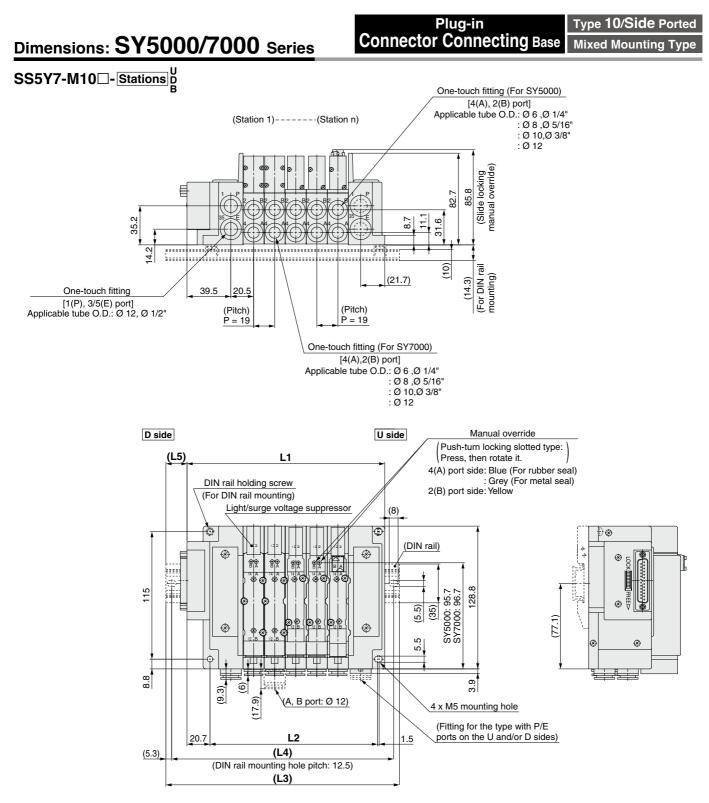


- * Refer to page 179 for dimensions of the external pilot and built-in silencer.
- * Refer to the pages below for L1, L2, L3, L4 dimensions and other dimensions that are not specified in each wiring specification.

There is the pages below for ET,	L_{2}, L_{0}, L_{1} unite
D-sub connector <ip40></ip40>	: p. 48
D-sub connector <ip67></ip67>	: p. 51
Flat ribbon cable	: p. 54
Terminal block box (Spring type)	: p. 65
Terminal block box	: p. 74
Lead wire	: p. 84
Circular connector	: p. 94
EX500 (128 points)	: p. 104
EX600	: pp. 122, 123
EX250	: p. 139
EX260	: p. 150
EX126	: p. 158
EX120	: p. 166

Connector Connecting Base SY3000/5000/7000 Series

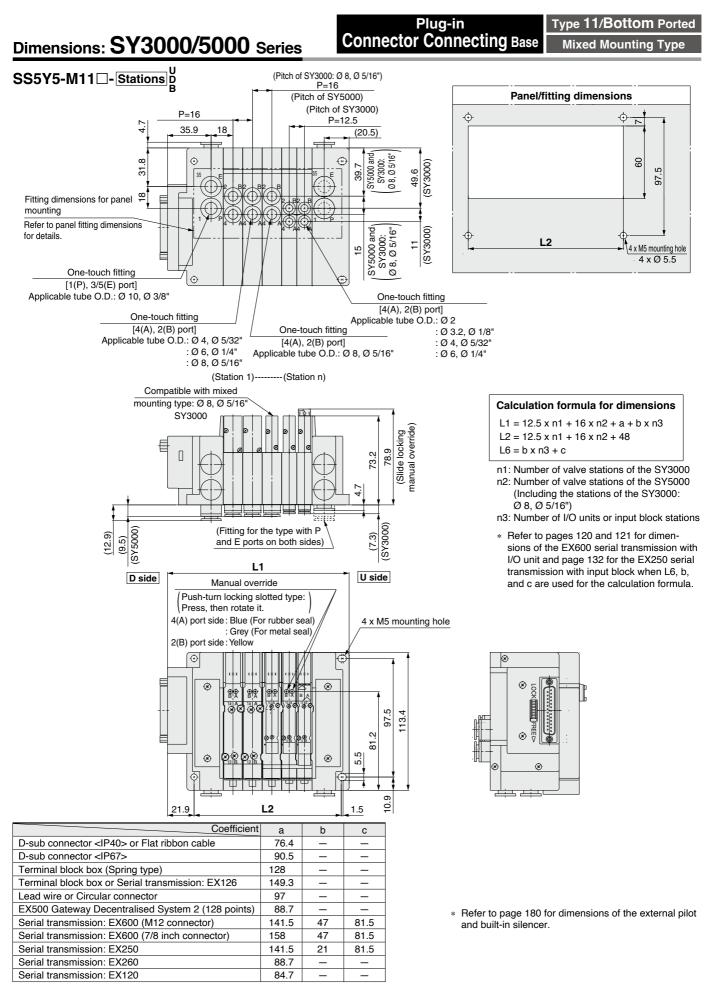

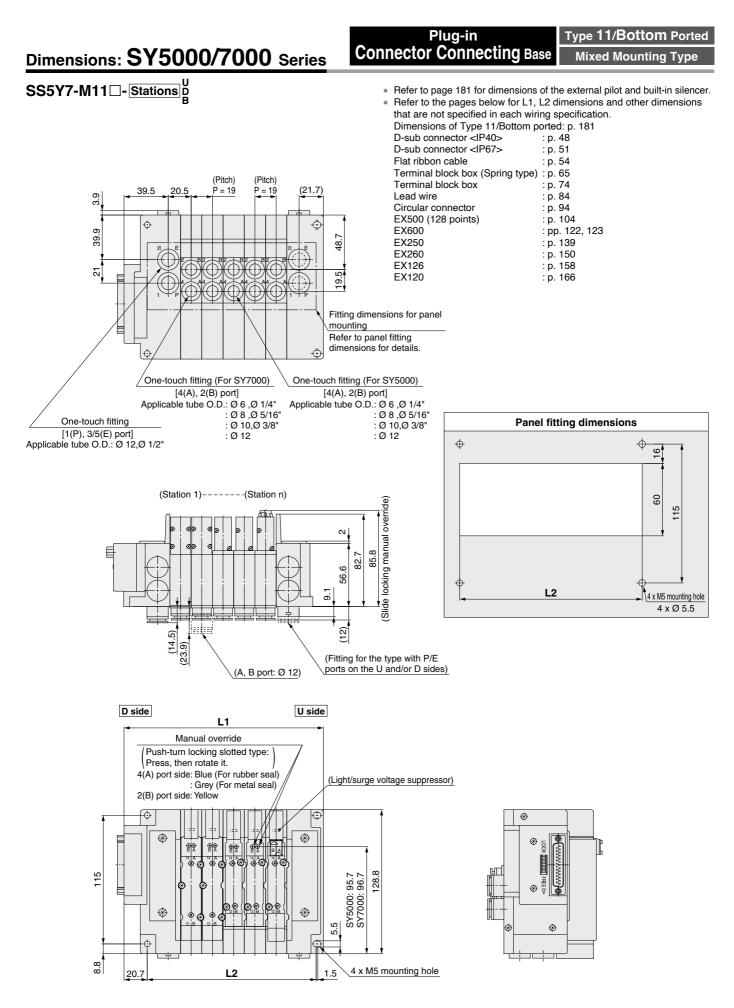


SMC




D-sub Connec Terminal Blo EX600 (IP67)	ctor (IP40/67) Flat Ri ock Box (IP67) Lea EX245 (IP65) EX2	bbon Cable d Wire (IP6 50 (IP67)	Terminal (7) Circu EX260 (IP6 Series	Block lar Cor 7) EX	fold Mixed Mounting Type Box/Spring Type (IP67) Innector (IP67) EX500 (IP67) (126 (IP67) EX120 EX180 EX120 EX180 EX120 EX180 • Refer to the connector type.
Mix For the SY5000 series, it is possible to mount th stations. However, the SY3000 manifold block v (16 mm for Ø 8 or Ø 5/16" One-touch fitting)	ked Mounting Type - he SY3000 size valves on width should be 12.5 mm.		1 -[3	05	
Also, for the SY7000 series, it is possible to mo all stations. However, the SY3000 cannot be mo				U*1	E port entry U side (2 to 10 stations)
,				D ∗1	D side (2 to 10 stations)
O Series	2 Connector type			В	Both sides (2 to 24 stations)
5 SY5000 7 SY7000 3	Symbol Type F D-sub connector FW (25 pins) P PG Flat ribbon cable	IP40 IP67 26 pins	Page 55	built-i * Refer page	ype "S", SUP/EXH block assembly with a n silencer, choose U or D for P, E port entry. to page 125 for the EX600 and on 134 for the EX250.
With Lead wire	PH	10 pins			P/EXH block assembly
Lead wire length	TC Terminal block box	(Spring type)	66		Internal pilot
1 0.6 m	T Terminal bl	ock box	75	S	Internal pilot, Built-in silencer
2 1.5 m 3 3 m	L1 L2 L3	34 cores 17 cores 9 cores	85		External pilot and E ports are only available on the U and s for the built-in silencer type. 3/5(E) port is
With D-sub connector (IP40/67) and	M Circular co		95		d. The silencer exhaust port is located on
Flat ribbon cable Connector entry direction 1 Upward 2 Lateral	S	EX500 Gateway Decentralised System 2 (128 points)	111	(Exam D side * Refer	posite side of the P and E port entry. ple: When the P and E port entry is on the , the silencer exhaust port is on the U side.) to page 125 for the EX600 and G on 134 for the EX250.
	S6 Serial	EX600	125	8 M-	ounting
* It is not necessary to select the items above for		EX245	127		
the valve with terminal block box or with circular connector or the serial transmission type.	S	EX250	133	-	Direct mounting
		EX260	141	D	DIN rail mounting (With DIN rail)
4 Valve stations	S4□*1 S3□*1	EX126 EX120	153 161	D0	DIN rail mounting (Without DIN rail)
Symbol Stations Note		EX120 EX180	169	D3	For 3 Specify a length longer than that stations of the standard rail.
02 2 stations Some connectors have a limitation				:	: [For the SS5Y5-M12, the SY5000
on the number of stations. Refer	 *1 EX126, EX120 are not * Refer to the pages show 			Dat	For 24 length (manifold block length of
24 24 stations "Connector type" for details.	for details.			D24	stations 16 mm).]
Open Symbol Symbol SY5000 SY7000 Note — Ø 10 Ø 12 Metric size N Ø 3/8" Ø 1/2" Inch size				"Calcu (For th mount * Refer	to page 199 to determine the L3 using Jlation formula" for the DIN rail length. he SY3000 and SY5000 mixed ting type) to page 319 for the fixation of DIN rail ting type manifold.
How to Order Manifold Assemb	hlv				



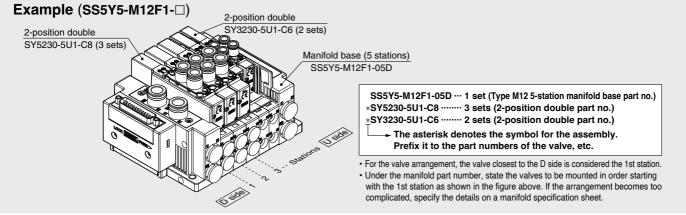



Connector Connecting Base SY3000/5000/7000 Series

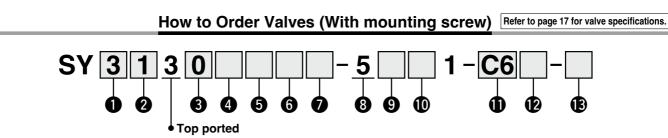

1 Sei	ries
3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

1	O maaitiam	Single		
2	2-position	Double		
3		Closed centre		
4	3-position	Exhaust centre		
5		Pressure centre		
A *1	4-position dual 3-port	N.C./N.C.		
B *1		N.O./N.O.		
C *1		N.C./N.O.		

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

_	Internal pilot	
R	External pilot	

 When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure.

5 Back pressure check valve (Built-in valve type)

—	None		
Н	Built-in		
* Only t	* Only the rubber seal type is available. A		

- manifold installed type is available if a back pressure check valve with a metal seal is required. Refer to page 236 for ordering examples. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

_	Standard (0.7 MPa)		
В	Quick response type (0.7 MPa)		
K *1	High pressure type (1.0 MPa)		

*1 Only the metal seal type is available for the high pressure type.

Coil type

- Standard

 T
 With power saving circuit (Continuous duty type)
- Be sure to select the power saving circuit type if the valve is to be continuously
- energised for long periods of time.
 Be careful of the energising time when the power saving circuit is selected. Refer to page 316 for details.

8 Rated voltage

5	24 VDC
6	12 VDC

* Only 24 VDC is available for the serial transmission type.

9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification	
—	—	—		
R	—		Non-polar	
U	•			
S	—	•	Positive	
Z	•		common	
NS	-		Negative	
NZ	•		common	
" " is made as a light of a star of the star of the start				


"—" is not available for the SI unit manifold.
 For the non-polar type, be careful of surge voltage intrusion.

Refer to page 317 for details. (Excludes when an SI unit manifold is used)

 Only "Z" and "NZ" types are available with a power saving circuit. Select a valve which is suited to the SI unit output polarity or SI unit specification when the SI unit is selected.

000000000000000000000000000000000000000	
Refer to the pages	below for details.
EX500: pp. 112	EX600: p. 126
EX245: p. 127	EX250: p. 141
EX260: p. 152	EX126: p. 160
EX120: p. 168	EX180: p. 176

Manual override

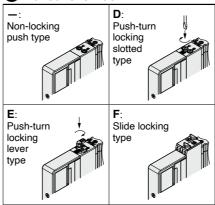

* Refer to page 36 for the safety slide locking manual override.

A, B port size

Thread piping					
Symbol	Port size	Applicable series			
M5	M5 x 0.8	SY3000			
01	1/8	SY5000			
02	1/4	SY7000			

One-touch fitting (Metric)

J.			
A, B port	SY3000	SY5000	SY7000
Ø 2		—	—
Ø 3.2		—	—
Ø 4		•	—
Ø 6			
Ø 8	_	•	
Ø 10	_	_	
Ø 12	_	_	•
	A, B port Ø 2 Ø 3.2 Ø 4 Ø 6 Ø 8 Ø 10	A, B port SY3000 Ø 2 ● Ø 3.2 ● Ø 4 ● Ø 6 ● Ø 8 − Ø 10 −	A, B port SY3000 SY5000 Ø 2 ● − Ø 3.2 ● − Ø 4 ● ● Ø 6 ● ● Ø 8 − ● Ø 10 − −

One-touch fitting (Inch)

Symbol	A, B port	SY3000	SY5000	SY7000
N1	Ø 1/8"		—	—
N3	Ø 5/32"		•	—
N7	Ø 1/4"			
N9	Ø 5/16"	—	•	
N11	Ø 3/8"	_	_	

Thread type

_	Rc	
F	G	
Ν	NPT	
Т	NPTF	


Only — is available for M5.


B Type of mounting screw

_	Round head combination screw	
В	B Hexagon socket head cap screw	
K	Round head combination screw (Drop prevention type)	
Н	Hexagon socket head cap screw (Drop prevention type)	

* For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.

- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 222 for base gasket and mounting screw part numbers.
- mounting screw part numbers. * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.




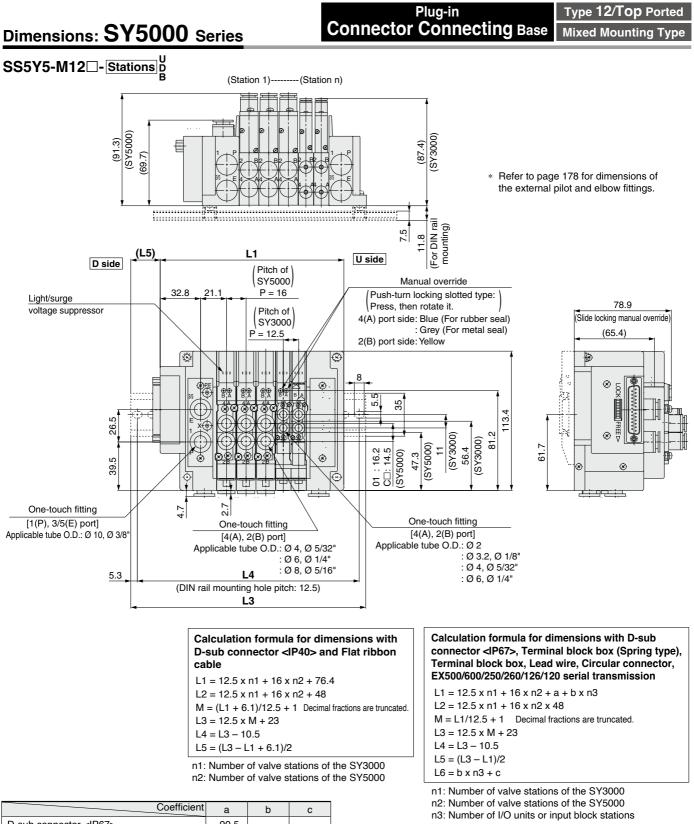

 Refer to pages 120 and 121 for dimensions of the EX600 serial transmission with I/O unit and page 132 for the EX250 serial transmission with input block when L6, b, and c are used for the calculation formula.

Coefficient	а	b	С
D-sub connector <ip67></ip67>	90.5	_	_
Terminal block box (Spring type)	128	—	—
Terminal block box or Serial transmission: EX126	149.3	—	—
Lead wire or Circular connector	97	—	—
EX500 Gateway Decentralised System 2 (128 points)	88.7	—	—
Serial transmission: EX600 (M12 connector)	141.5	47	81.5
Serial transmission: EX600 (7/8 inch connector)	158	47	81.5
Serial transmission: EX250	141.5	21	81.5
Serial transmission: EX260	88.7	_	_
Serial transmission: EX120	84.7	_	_


Connector Connecting Base SY3000/5000/7000 Series

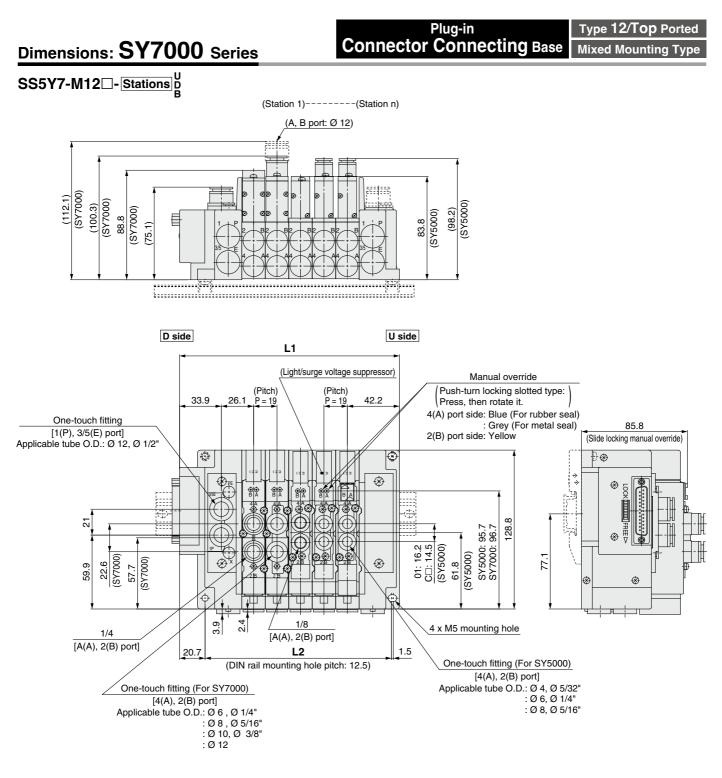

* Refer to page 179 for dimensions of the external pilot and elbow fittings.


	ricici to page 175 for annensione	of the external pilot and elbow in
k	Refer to the pages below for L1,	L2, L3, L4 dimensions and other
	dimensions that are not specified	in each wiring specification.
	Dimensions of Type 12/Top porte	ed: p. 184
	D-sub connector <ip40></ip40>	: p. 48
	D-sub connector <ip67></ip67>	: p. 51
	Flat ribbon cable	: p. 53
	Terminal block box (Spring type)	: p. 65
	Terminal block box	: p. 74
	Lead wire	: p. 84
	Circular connector	: p. 94
	EX500 (128 points)	: p. 104
	EX600	: pp. 122, 123
	EX250	: p. 139
	EX260	: p. 150
	EX126	: p. 158
	EX120	: p. 166

SY3000/5000/7000 Series Type 10, 11, 12 Connector Connecting Base Manifold Exploded View

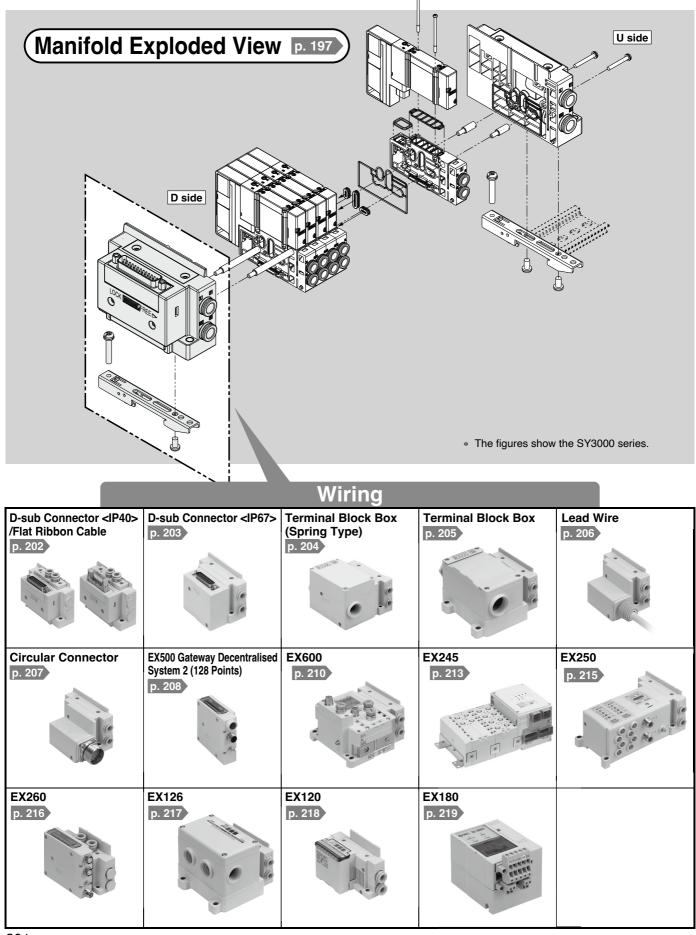


SMC

Type 10, 11, 12 Connector Connecting Base Manifold Exploded View SY3000/5000/7000 Series

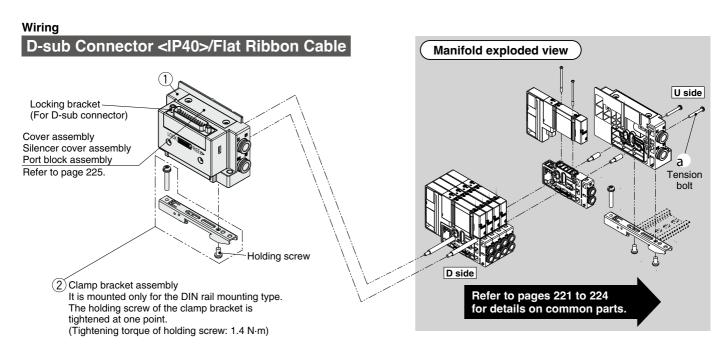

Manifold Parts Nos.

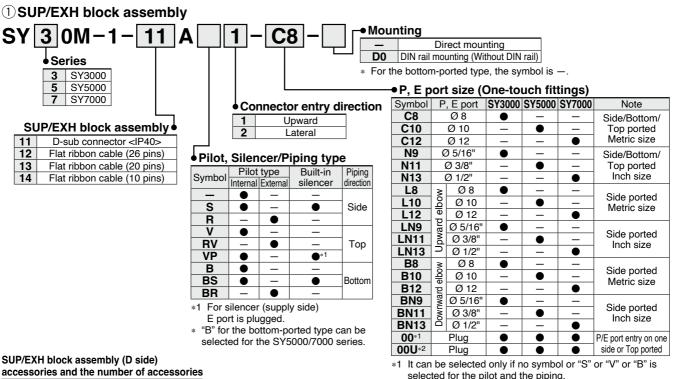

	concere a ner and phot and the phong.
*2	"00U" is available only for the D-sub connector type and it
	has an inch size locking bracket.


 Accessories
 SY3000
 SY5000 SY7000

 Tension bolt
 None*1
 3 pcs.


*1 Since the nuts are embedded in the SUP/EXH block

2 Clamp bracket assembly

Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

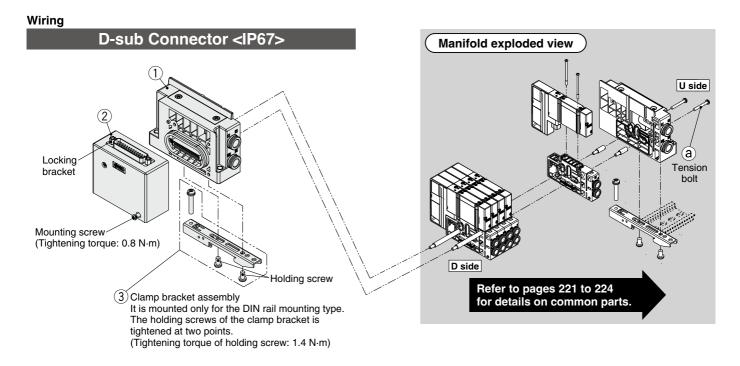

Manifold Parts Nos.

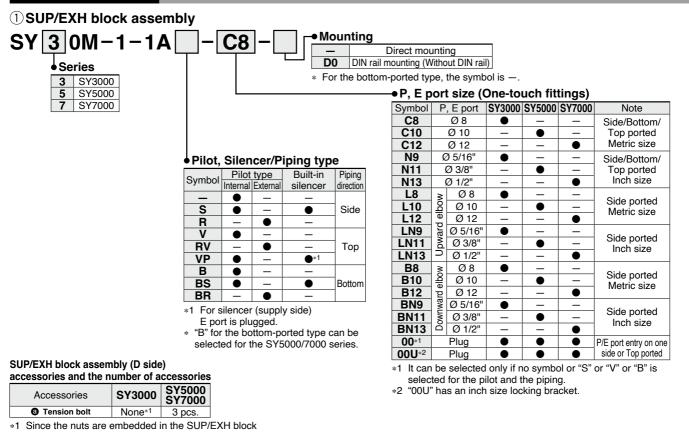


② D-sub connector block assembly <IP67>

Part no.	Connector direction	Locking bracket	
SY30M-14-9A1	Тор	Metric size	
SY30M-14-9A2	Side	wetric size	
SY30M-14-9A1U	Тор	Inch size	
SY30M-14-9A2U	Side	Inch size	


3 Clamp bracket assembly

Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

Type 10, 11, 12 Connector Connecting Base Manifold Exploded View SY3000/5000/7000 Series

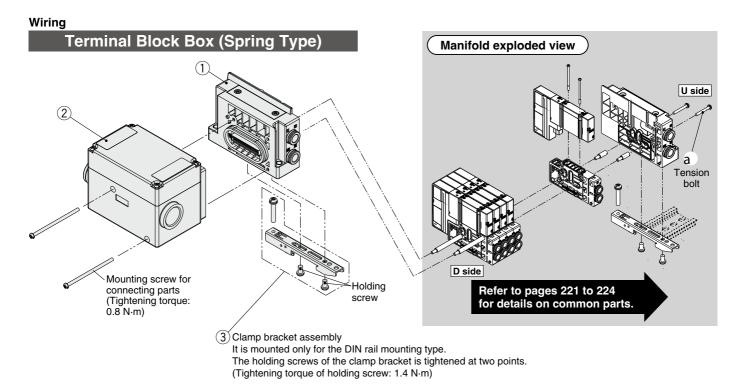

Manifold Parts Nos.

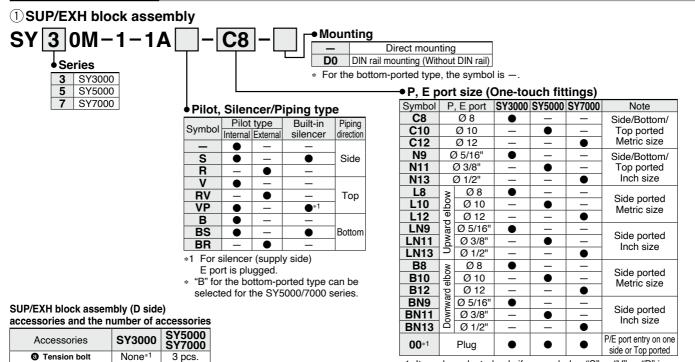

*1 It can be selected only if no symbol or "S" or "V" or "B" is selected for the pilot and the piping.


2 Terminal block assembly

SY30M-130-1A


3 Clamp bracket assembly

-		
Series	Part no.	
SY3000	SY30M-15-1A	
SY5000/7000 SY50M-15-1A		
Deut number is fer and assembly		

*1 Since the nuts are embedded in the SUP/EXH block

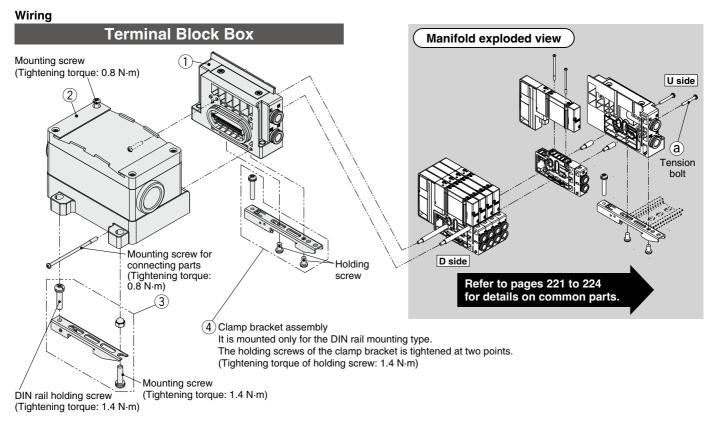

Manifold Parts Nos.

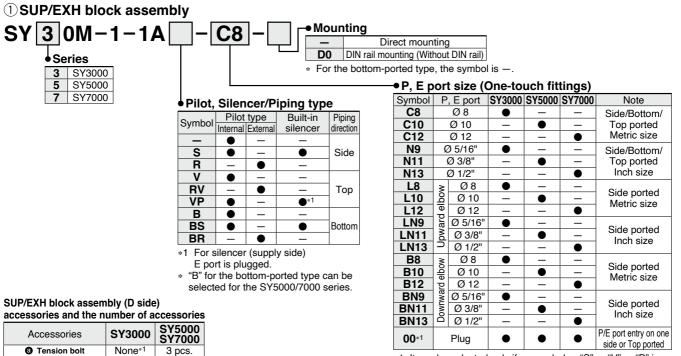

*1 It can be selected only if no symbol or "S" or "V" or "B" is selected for the pilot and the piping.

2 Terminal block box housing assembly

*1 Since the nuts are embedded in the SUP/EXH block

VVQC1000-T0-1

3 Clamp bracket assembly for terminal block box

SY30M-15-4A

* Part number is for one assembly.


④ Clamp bracket assembly

Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A




Type 10, 11, 12 Connector Connecting Base Manifold Exploded View SY3000/5000/7000 Series



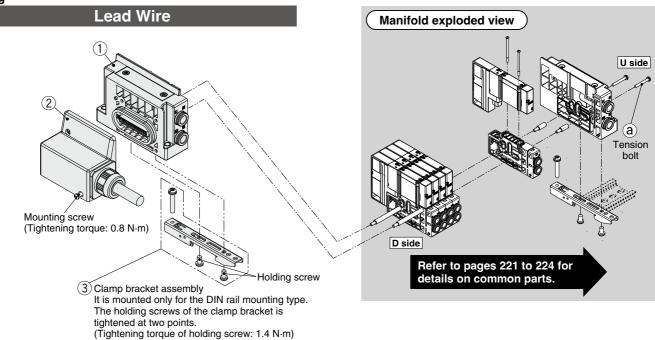


Manifold Parts Nos.

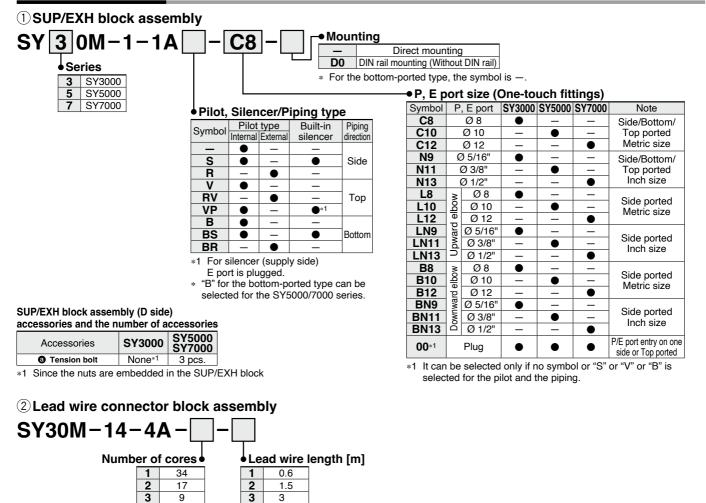


3 Clamp bracket assembly

-		
Series	Part no.	
SY3000	SY30M-15-1A	
SY5000/7000 SY50M-15-1A		
. Dert number is for one eccembly		

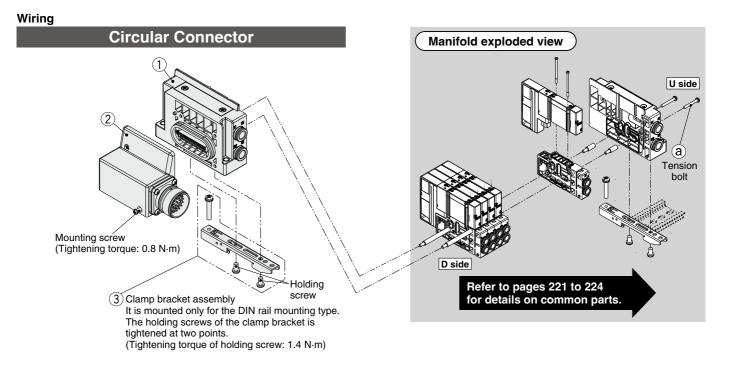

Manifold Parts Nos.

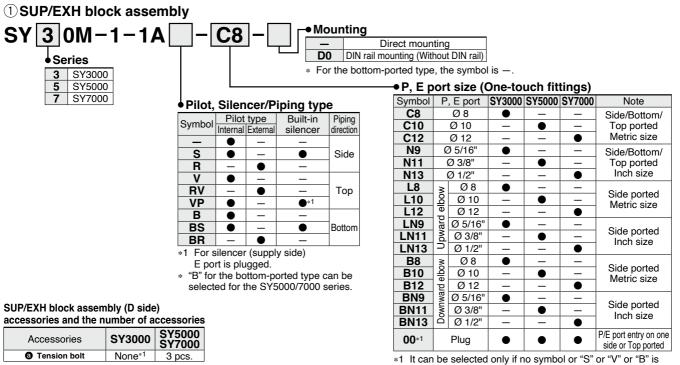

selected for the pilot and the piping.

*1 Since the nuts are embedded in the SUP/EXH block

② Circular connector block assembly

SY30M-14-5A * 26 pins

③Clamp bracket assembly


Series	Part no.				
SY3000	SY30M-15-1A				
SY5000/7000	SY50M-15-1A				

Туре 10, 11, 12


Connector Connecting Base Manifold Exploded View SY3000/5000/7000 Series



EX500 Gateway Decentralised System 2 (128 Points)

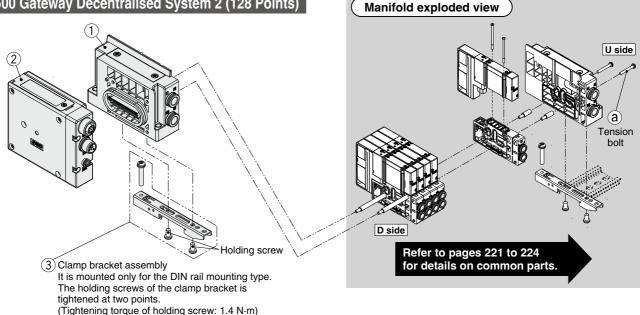

Manifold Parts Nos.

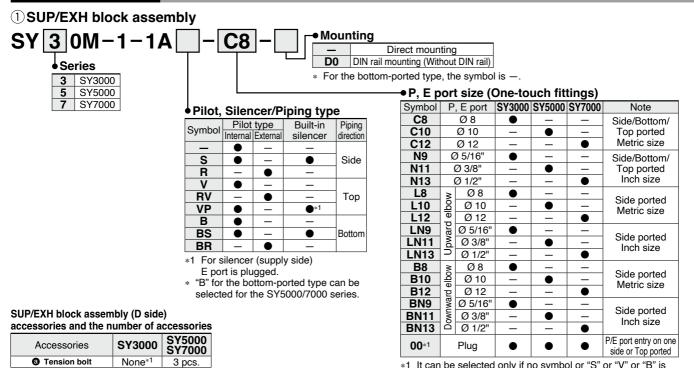

*1 It can be selected only if no symbol or "S" or "V" or "B" is selected for the pilot and the piping.


*1 Since the nuts are embedded in the SUP/EXH block

2 EX500 SI unit EX500-S103

3Clamp bracket assembly

Series	Part no.			
SY3000	SY30M-15-1A			
SY5000/7000	SY50M-15-1A			

Туре 10, 11, 12 Connector Connecting Base Manifold Exploded View SY3000/5000/7000 Series

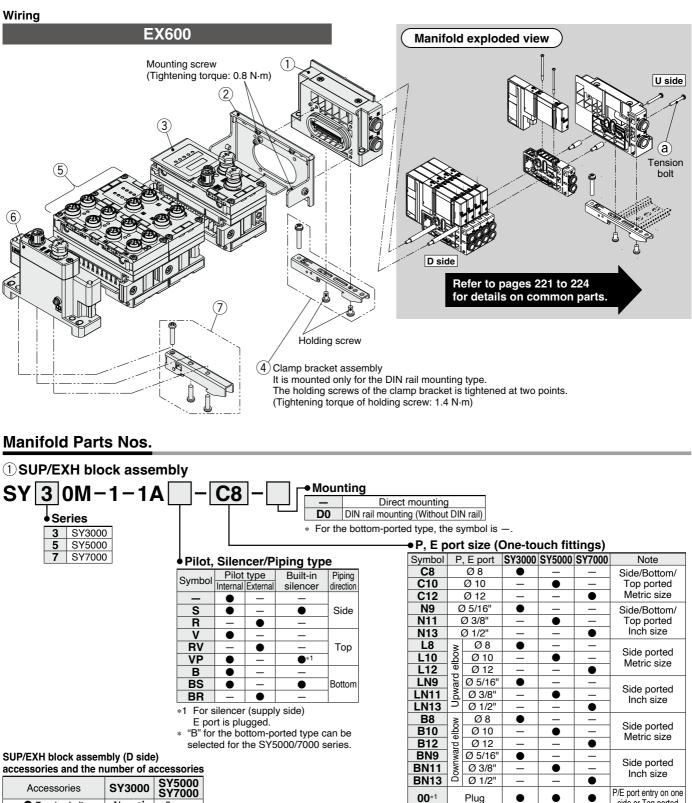

Accessories	313000	SY7000	
Tension bolt	None*1	3 pcs.	
4. Oliver all a second a second	المعاملة ما المعال		

*1 Since the nuts are embedded in the SUP/EXH block

*1 It can be selected only if no symbol or "S" or "V" or "B" is selected for the pilot and the piping.

side or Top ported

Manifold Parts Nos.

2 Valve plate

EX600-ZMV2


With mounting screws
 (2 pcs. of M4 x 6 and 2 pcs. of M3 x 8)

3 EX600 SI unit




Communication protocol

Symbol	Protocol	Output polarity			
PR1A	PROFIBUS DP	PNP (Negative common)			
PR2A	PROFIBUS DP	NPN (Positive common)			
DN1A	DeviceNet®	PNP (Negative common)			
DN2A	Devicemet	NPN (Positive common)			
MJ1	CC-Link	PNP (Negative common)			
MJ2	CC-LINK	NPN (Positive common)			
EN3	EtherNet/IP™	PNP (Negative common)			
EN4	Ethernet/IF	NPN (Positive common)			
EN7	EtherNet/IP™	PNP (Negative common)			
EN8	(IO-Link unit)	NPN (Positive common)			
EC3	EtherCAT	PNP (Negative common)			
EC4	(IO-Link unit)	NPN (Positive common)			
PN1	PROFINET	PNP (Negative common)			
PN2	FNOPINET	NPN (Positive common)			
PN3	PROFINET	PNP (Negative common)			
PN4	IO-Link unit	NPN (Positive common)			



③ EX600 SI unit (Wireless compatible)

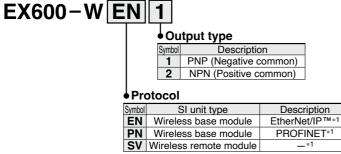

*1 The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country.

4 Clamp bracket assembly

Series	Part no.				
SY3000	SY30M-15-1A				
SY5000/7000	SY50M-15-1A				

Manifold Parts Nos.

5 EX600 digital input unit

EX600-DX|P|

Symbol Descript Ρ

Ν

Input type • Number of inputs, open circuit detection, and connect										
Description	S	ymbol	Number of inputs	Open circuit detection	Connector					
PNP		В	8	No	M12 connector (5 pins) 4 pcs.					
NPN		C 8		C 8	No	M8 connector (3 pins) 8 pcs.				
	C1 8		8	Yes	M8 connector (3 pins) 8 pcs.					
D 16		16	No	M12 connector (5 pins) 8 pcs.						
E 16 F 16		No	D-sub connector (25 pins)							
		No	Spring type terminal block (32 pins)							
	Description PNP	Description S PNP NPN	Description PNP B NPN C C1 D	Description PNP NPN NPN C 8 C1 8 D 16 E 16	Description Symbol Number of inputs Open circuit detection PNP B 8 No NPN C 8 No C1 8 Yes D 16 No E 16 No					

(5) EX600 digital output unit

EX600-DY P B

Output type Number of outputs and connector

Symbol Description			Symbol	Number of outputs	Connector
Ρ	P PNP		В	8	M12 connector (5 pins) 4 pcs.
Ν	NPN		E	16	D-sub connector (25 pins)
		[F	16	Spring type terminal block (32 pins)

5 EX600 digital input/output unit

PN

NP

EX600-DM P Ε

Input/Output type Descri

Svmbol

Ρ

N

Number of inputs/outputs and connector

ption	Symbol	Number of inputs	Number of outputs	Connector
Р	E	8	8	D-sub connector (25 pins)
N	F	8	8	Spring type terminal block (32 pins)

5 EX600 analogue input/output unit

EX600 - AX

Number of input channels and connector

Symbol	Description
AX	Analogue input
AY	Analogue output

Analogue input/output

Symbol Number of input channels Connector

M12 connector (5 pins) 2 pcs. 2 channels Α

5 EX600 analogue input/output unit

EX600-AMB

Analogue input/output

Number of input/output channels and connector Symbol Number of input channels Number of output channels Connector В 2 channels 2 channels M12 connector (5 pins) 4 pcs.

Description

Without DIN rail mounting bracket

With DIN rail mounting bracket

EX600-ED2-

5 EX600 IO-Link unit EX600-LAB1

∧ Caution

Port specification Symbol Description Port class A В Port class B

6 EX600 end plate

EX600-ED

Symbol

2

3

4

5

*

Number of ports and connector Symbol Number of ports Connector M12 connector В 4 ports (5 pins) 4 pcs.


Mounting

Symbol

3

The compatible SI unit models are as shown below. PROFINET compatible: EX600-SPN3/EX600-SPN4 · EtherNet/IP™ compatible: EX600-SEN7/EX600-SEN8 EtherCAT compatible: EX600-SEC3/EX600-SEC4

EX600-ED3-



⑦ Clamp bracket for EX600

EX600-ZMA3

Enclosed parts Round head screw with washer (M4 x 20) 1 pc. P-tight screw (4 x 14) 2 pcs.

The pin layout for the "4" and "5" pin connectors is different.

Power connector

Connector

M12 power supply connector, B-coded


7/8 inch power supply connector


M12 power supply connector IN/OUT,


A-coded, Pin arrangement 1 M12 power supply connector IN/OUT,

A-coded, Pin arrangement 2


EX600-ED4/5-

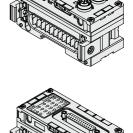

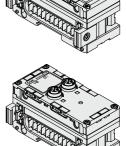




Wiring

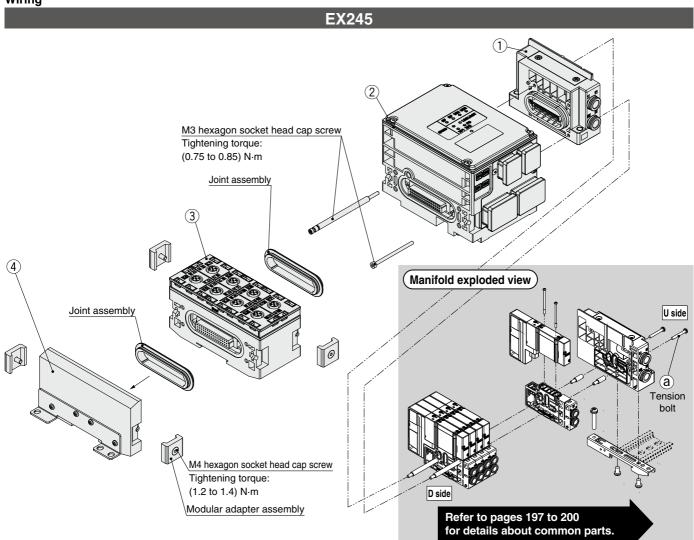

Manifold Parts No.

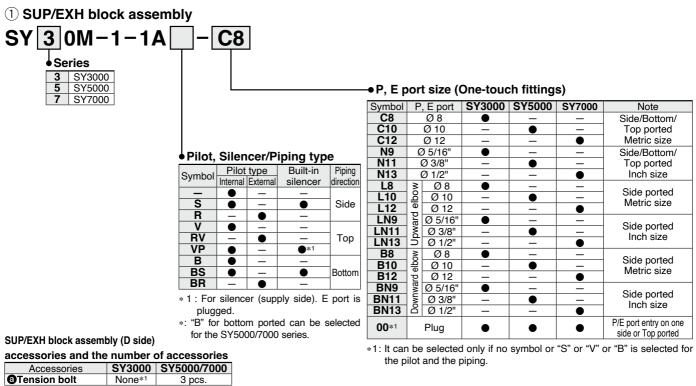

*1: Since the nuts are embedded in the SUP/EXH block.

SMC


Manifold Parts No.

2 EX245 SI Unit


EX245 – S PN 1A SI unit • • Ccc PROFINET • Sym

• Con	nector type	
Symbol	Communication connector	Power supply connector
1A	Push Pull connector (SCRJ): 2 pcs.	Push Pull connector (24 V): 2 pcs.
2A	Push Pull connector (RJ45): 2 pcs.	Push Pull connector (24 V): 2 pcs.
3 A	M12 connector (4-pin, Socket, D-coded): 2 pcs.	7/8 inch connector (5-pin, Plug): 1 pc. 7/8 inch connector (5-pin, Socket): 1 pc.

③ EX245 Digital Input Module



③ EX245 Digital Output Module




 Digital output module specification
 DY1 Digital output (8 outputs)





③ EX245 IO-Link module



Port specification							
Symbol	Description						
Α	Port class A						
В	B Port class B						





≜Caution

The only available SI unit part number is "EX245-SPN□A" (PROFINET compatible).

④ EX245 End Plate

EX245-EA2-3



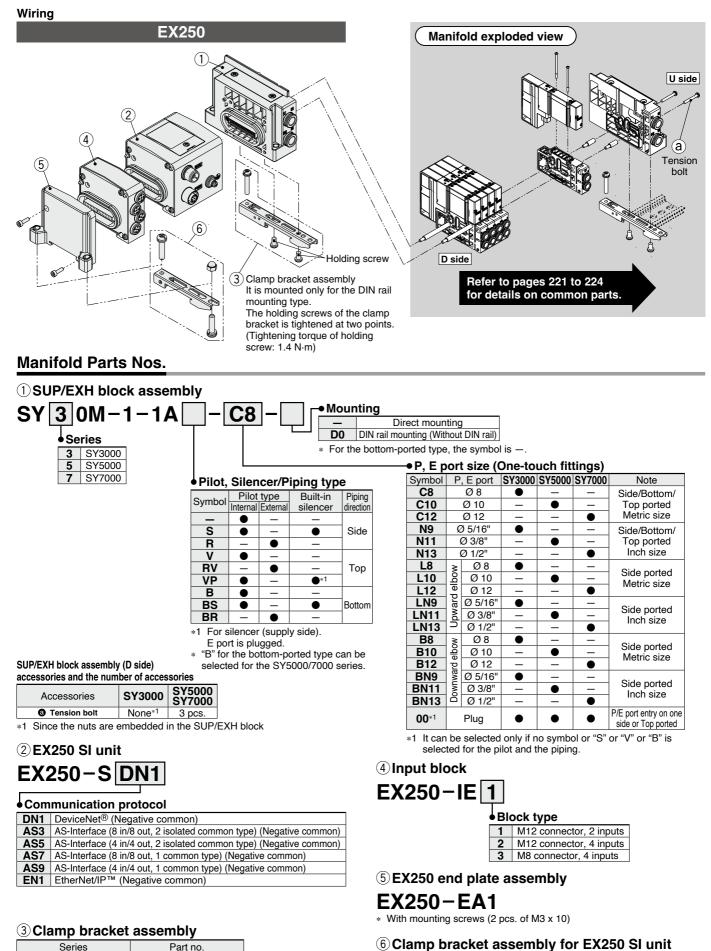

 Series
 Part no.


 SY3000
 SY30M-15-1A

 SY5000/7000
 SY50M-15-1A

SMC

SY30M-15-3A


Туре 10, 11, 12 Connector Connecting Base Manifold Exploded View SY3000/5000/7000 Series

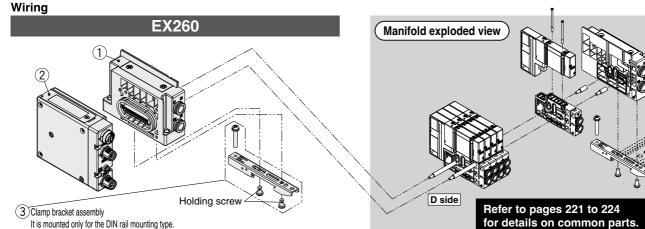

It is mounted only for the DIN rail mounting type.

The holding screws of the clamp bracket is tightened at two points. (Tightening torque of holding screw: 1.4 N-m)

Manifold Parts Nos.

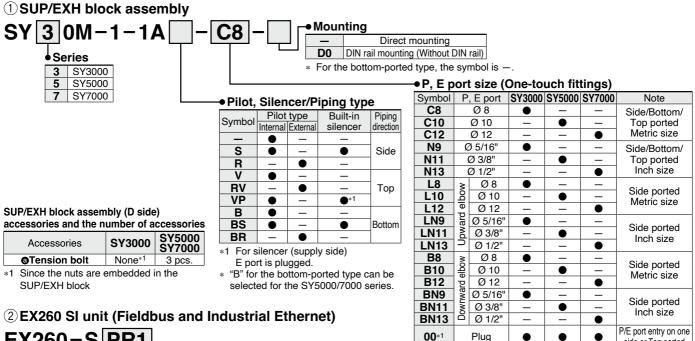

EX260-S PR1

• Communication protocol

*1 It can be selected only if no symbol or "S" or "V" or "B" is selected for the pilot and the piping.

Symbol	Protocol	Number of outputs	SI unit output polarity	Communication connector	Manifold symbol	Symbol	Protocol	Number of outputs	SI unit output polarity	Communication connector	Manifold symbol
DN1		32	Source/PNP (Negative common)		QAN	EC1		32	Source/PNP (Negative common)		DAN
DN2	DeviceNet [®]	32	Sink/NPN (Positive common)	M12	QA	EC2		32	Sink/NPN (Positive common)	M12	DA
DN3		16	Source/PNP (Negative common)	IVI I Z	QBN	EC3		16	Source/PNP (Negative common)	IVITZ	DBN
DN4		10	Sink/NPN (Positive common)		QB	EC4		10	Sink/NPN (Positive common)		DB
PR1		32	Source/PNP (Negative common)		NAN	PN1		32	Source/PNP (Negative common)		FAN
PR2	32	32	Sink/NPN (Positive common)	M12	NA	PN2	PROFINET	32	Sink/NPN (Positive common)	M12 -	FA
PR3	PROFIBUS DP	16	Source/PNP (Negative common)		NBN	PN3		16	Source/PNP (Negative common)		FBN
PR4		10	Sink/NPN (Positive common)		NB	PN4			Sink/NPN (Positive common)		FB
PR5		32	Source/PNP (Negative common)	D-sub*1	NCN	EN1	EtherNet/IP™	16	Source/PNP (Negative common)	M12	EAN
PR6		32	Sink/NPN (Positive common)		NC	EN2			Sink/NPN (Positive common)		EA
PR7		16	Source/PNP (Negative common)	D-Sub	NDN	EN3			Source/PNP (Negative common)		EBN
PR8		10	Sink/NPN (Positive common)		ND	EN4			Sink/NPN (Positive common)		EB
MJ1		32	Source/PNP (Negative common)		VAN	PL1	Ethernet	32	Source/PNP (Negative common)	M12	GAN
MJ2	CC-Link	Sink/NPN	Sink/NPN (Positive common)	M12	VA	PL3	POWERLINK	16	Source/FINF (INEGative continion)		GBN
MJ3		16	Source/PNP (Negative common)	11112	VBN	IL1	IO-Link	32	Source/PNP (Negative common)	M12	KAN
MJ4		10	Sink/NPN (Positive common)		VB						

SMC

*1 Enclosure is IP40 when the communication connector is D-sub.

EX260 SI Unit (Safety Communication)

Communication protocol

Symbol	Protocol	Number of outputs	SI unit output polarity	Communication connector	Manifold symbol
PS1	PROFIsafe	32	Source/PNP (Negative common)	M12	FPN


3 Clamp bracket assembly

Series	Part no.	
SY3000	SY30M-15-1A	* Part number is for one
SY5000/7000	SY50M-15-1A	assembly.


side or Top ported

U side

(a) Tension bolt

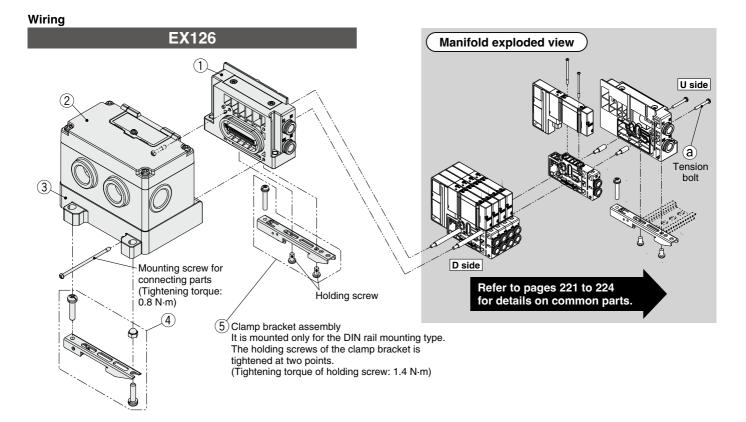

Manifold Parts Nos.

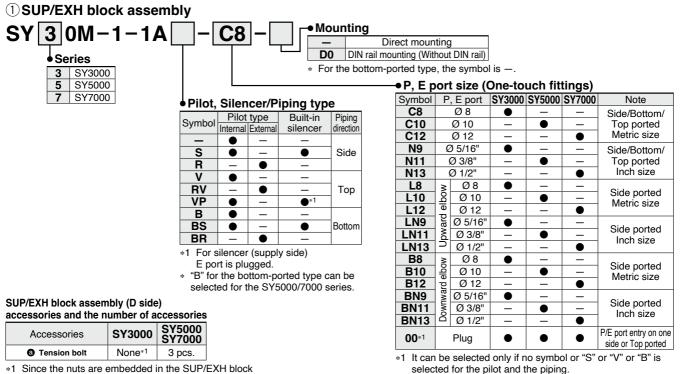

2 EX126 SI unit

EX126D-SMJ1

* CC-Link (Positive common)

③ Terminal block plate assembly VVQC1000-74A-2

selected for the pilot and the piping

(4) Clamp bracket assembly for EX126 SI unit

SY30M-15-4A

* Part number is for one assembly

5 Clamp bracket assembly


Series Part no. SY3000 SY30M-15-1A SY5000/7000 SY50M-15-1A

Part number is for one assembly.


SMC

Type 10, 11, 12 Connector Connecting Base Manifold Exploded View SY3000/5000/7000 Series

Wiring

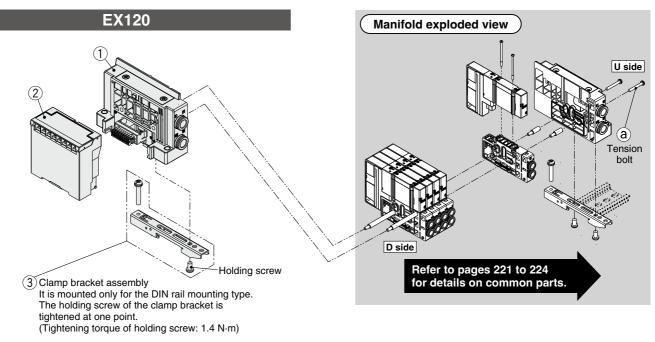

Manifold Parts Nos.

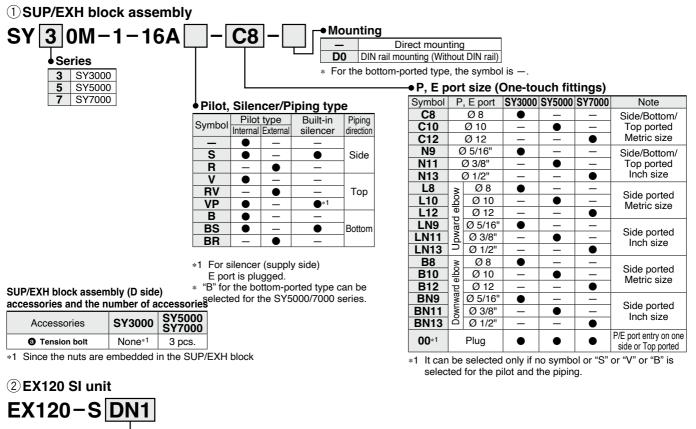


• Communication protocol


DN1	DeviceNet [®] (Positive common)		
CS1	OMRON Corp.: CompoBus/S (16 outputs) (Positive common)		
CS2	OMRON Corp.: CompoBus/S (8 outputs) (Positive common)		
MJ1	CC-Link (Positive common)		
CM1	CompoNet® NPN (Positive common)		
CM3	CompoNet® PNP (Negative common)		

③Clamp bracket assembly

Series	Part no.		
SY3000	SY30M-15-1A		
SY5000/7000	SY50M-15-1A		

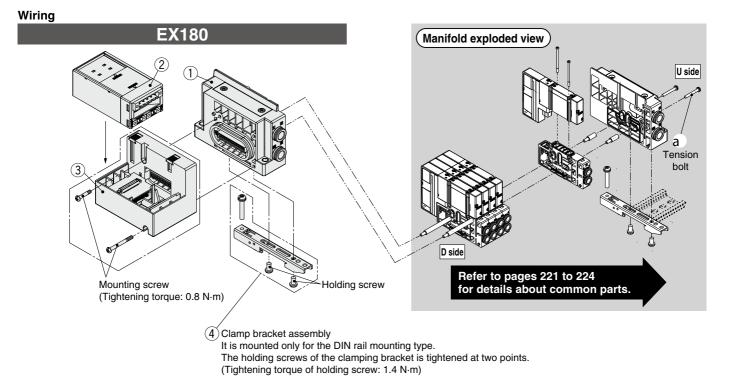


Manifold Parts No.

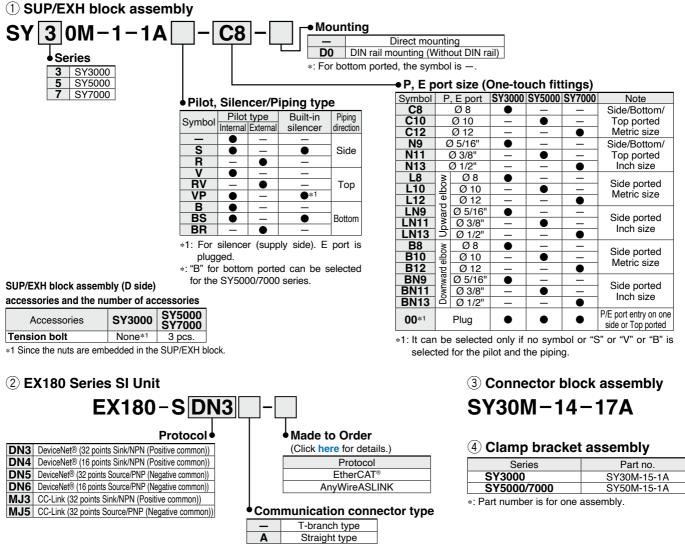


*: Communication and power supply connectors are included.



Manifold Exploded View (Common Parts)

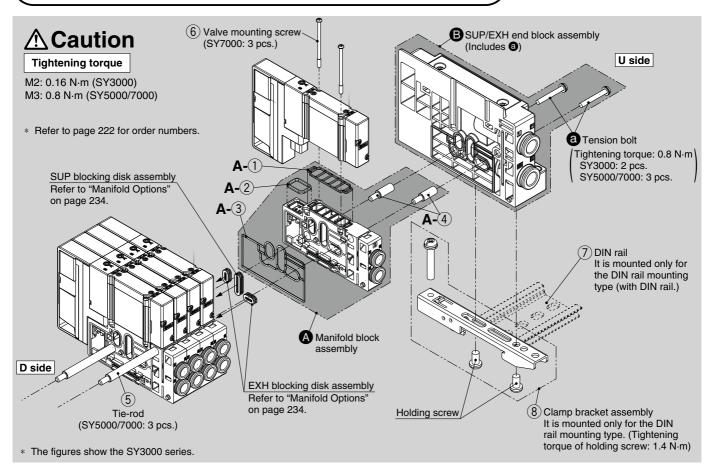

Type 10, 11, 12: How to Increase Connector Type Manifolds

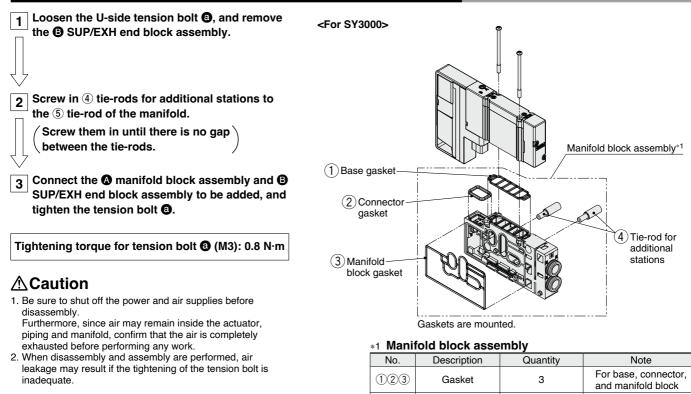

additional stations Refer to page 222 for ordering single unit.

Tie-rod for

SY3000: 2 pcs.

SY5000: 3 pcs.

SY7000: 3 pcs.

SMC

(4)

For SS5Y3-10/11/12, SS5Y5-(M)10/11/12, SS5Y7-(M)10/11/12

No.	Description				SY3000	SY5000	SY7000	Note
A- ①	oly	Base g (for co	asket nnector connect	ing base)	SY30M-9-1A	SY50M-9-1A	SY70M-9-1A	Part numbers shown on the left are for 10 valves. (10 pcs.)
A- 2	embly	Connector gasket			SX3000-146-2			Supplied individually
A- 3	asse		ld block gasket		SY30M-9-2	SY30M-9-2 SY50M-9-2		Supplied individually
A- ④	ž	≛al c	SY3000/5000/7000		SY30M-49-2-A (10.5 mm pitch)	SV2000-55-2A-A (16 mm pitch)	SY70M-49-2-A *2 (19 mm pitch)	2 pcs. supplied (SY3000), 3 pcs. supplied (SY5000/7000)
		Tie-rod for additional stations⁴1	For mixed mounting of SY3000/5000: SY3000 A, B port size \emptyset 8, \emptyset 5/16"		SV2000-55-2A-A (16 mm pitch)		_	3 pcs. supplied
	Ma	stac	For mixed mounting of SY3000/5000: SY3000 except A, B port size \emptyset 8, \emptyset 5/16"*4		SY50M-49-2 (12.5 mm pitch)			3 pcs. supplied
	Tie-rod		SY3000/5000/7000		VVQC1000-TR-□ (10.5 mm pitch)	SV2000-55-1-⊡-A (16 mm pitch)	SY70M-49-1-⊡-A (19 mm pitch)	□: Manifold stations (2 to 24 stations) 2 pcs. supplied (SY3000), 3 pcs. supplied (SY5000/7000)
5				SY50M-49-1-⊡-A * ^{3∗4} (12.5 mm pitch)		_		
			Mixed mounting type manifold		SV2000-55-1-⊡-A ^{∗5} (16 mm pitch)		_	□: Manifold stations (2 to 24 stations) 3 pcs. supplied
				SS5Y7-M**	_	SY70M- 4 (19 mn	I9-1-⊡-A n pitch)	
6	Valve		Round head combination screw		SY3000-23-24A (M2 x 32)	SY5000-221-1A (M3 x 32.5)	SY7000-221-1A (M3 x 36.5)	Part numbers shown on the left are as follow SY3000/5000:
		ounting rew	Hexagon socket head cap screw		SY3000-222-1A (M2 x 32)	SY5000-222-1A (M3 x 32.5)	SY7000-222-1A (M3 x 36.5)	for 10 valves (20 pcs. included) SY7000: for 10 valves (30 pcs. included)
7	DIN rail				VZ1000-11-1-□		VZ1000-11-4-□	Refer to page 227.
8	Clamp bracket assembly (for connector connecting base)			tor connecting base)	SY30M-15-1A	SY50M-15-1A		Supplied individually
8	Tension bolt (for connector connecting base)*6			AC00530	SX3000-145-21		Supplied individually	


*1 The manifold of the SY3000 (SS5Y3-10/11/12) can be assembled by connecting the tie-rods for additional stations for the number of manifold stations. However, the manifold of the SY5000 or SY7000 (SS5Y5/7-10/11/12 including mixed mounting) cannot be assembled by connecting the tie-rods for additional stations for the number of manifold stations.

*2 Includes the case when mounting with the SY5000
*3 When mounting only the SY3000 (12.5 mm pitch except A, B port size Ø 8, Ø 5/16")

*4 The port sizes except A, B port size Ø 8, Ø 5/16" are the following: Ø 2, Ø 3.2, Ø 4, Ø 6, Ø 1/8", Ø 5/32", Ø 1/4".

*5 When mounting only the SY3000 (16 mm pitch A, B port size Ø 8, Ø 5/16")
 *6 For the SY3000 SUP/EXH end block (there are no tension bolts for the SY3000 SUP/EXH block) or the SY5000 and SY7000 SUP/EXH (end) block

Manifold Parts Nos.

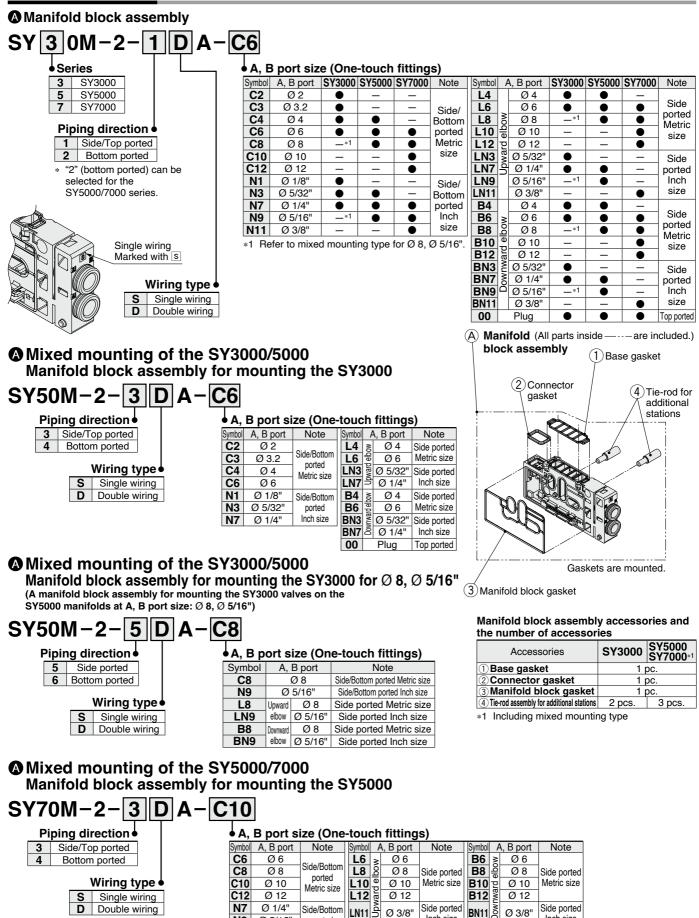



ported

Inch size

N9

Ø 5/16"

N11 Ø 3/8'

Inch size


00

Plug

Inch size

Top ported


Manifold Parts Nos.

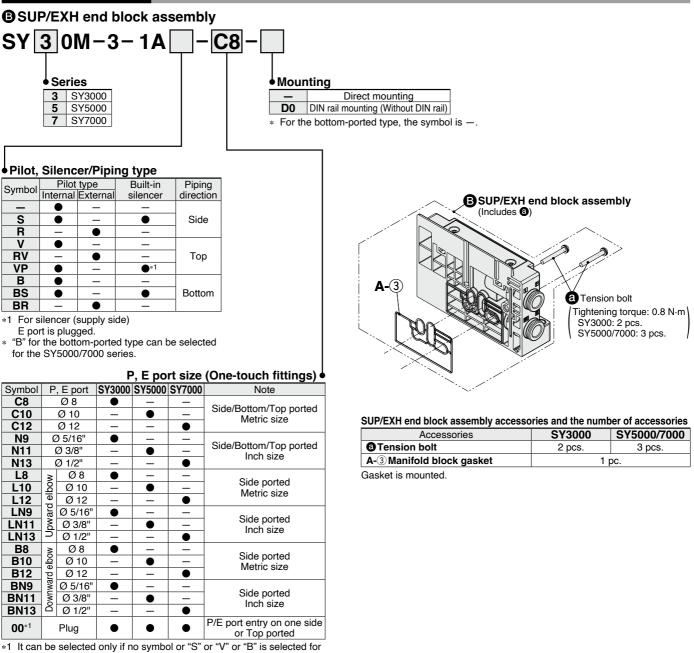

the pilot and the piping.

Manifold Parts Nos.



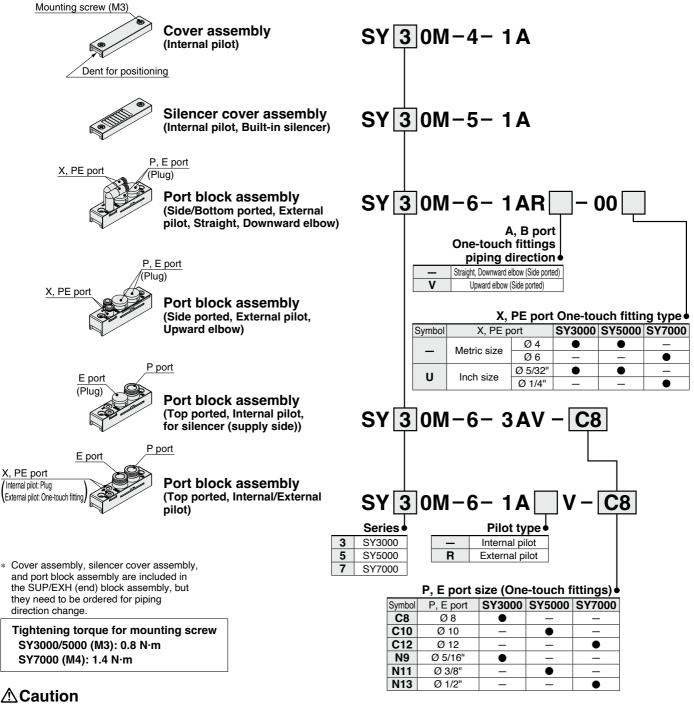

- 1. Be sure to shut off the power and air supplies before disassembly.
- Furthermore, since air may remain inside the actuator, piping, and manifold, confirm that the air is completely exhausted before performing any work.
- When disassembly and assembly are performed, air leakage may result if the tightening of the cover and port block assemblies are inadequate.

SY3000/5000/7000 Series One-touch Fitting, Plug Assembly Part Nos.

Refer to "How to Replace One-touch Fittings" on page 320 for the replacement method.

One-touch fittings

		Port siz	e	SY3000	SY5000	SY7000
		Ø 2		VVQ1000-50A-C2	_	_
	ĺ	Ø 3.2		VVQ1000-50A-C3	_	_
	ĺ	Ø 4		VVQ1000-50A-C4	VVQ1000-51A-C4	_
		Ø 6	Straight type	VVQ1000-50A-C6	VVQ1000-51A-C6	VVQ2000-51A-C6
		Ø 8		_	VVQ1000-51A-C8	VVQ2000-51A-C8
		Ø 10		_	_	VVQ2000-51A-C10
		Ø 12		_	_	KQ2H12-17-X224
	ize	Ø 4		SZ3000-73-1A-L4	SZ3000-74-1A-L4	_
	s C	Ø 6	-	SZ3000-73-1A-L6	SZ3000-74-1A-L6	SZ3000-83-1A-L6
	Metric size	 Ø 8	Elbow type		SZ3000-74-1A-L8	SZ3000-83-1A-L8
	Σ	Ø 10		_		SZ3000-83-1A-L10
		Ø 10	-			KQ2L12-17N-X224
		Ø 4		SZ3000-73-2A-L4	SZ3000-74-2A-L4	
-		Ø 6	-	SZ3000-73-2A-L4	SZ3000-74-2A-L4	SZ3000-83-2A-L6
port*1		Ø8	Long elbow type		SZ3000-74-2A-L0	SZ3000-83-2A-L8
ğ				_	323000-74-2A-L8	
A, B		Ø 10	4			SZ3000-83-2A-L10
~		Ø 12			-	KQ2W12-17N-X224
		Ø 1/8"	-	VVQ1000-50A-N1	— 	
		Ø 5/32"		VVQ1000-50A-N3	VVQ1000-51A-N3	_
		Ø 1/4"	Straight type	VVQ1000-50A-N7	VVQ1000-51A-N7	VVQ2000-51A-N7
		Ø 5/16"	-		VVQ1000-51A-N9	VVQ2000-51A-N9
	0	Ø 3/8"				VVQ2000-51A-N11
	Inch size	Ø 5/32"	-	KJL03-95-X224	_	_
	с К	Ø 1/4"	Elbow type	KJL07-95-X224	KQ2L07-14-X224	—
	Ĕ	Ø 5/16"		_	KQ2L09-14-X224	
		Ø 3/8"		_	_	KQ2L11-14-X224
		Ø 5/32"		KJL03-95-X225	_	_
		Ø 1/4"	Long elbow type	KJL07-95-X225	KQ2L07-14-X225	_
		Ø 5/16"		—	KQ2L09-14-X225	_
		Ø 3/8"]	—	_	KQ2L11-14-X225
		Ø 8		VVQ1000-51A-C8	_	—
		Ø 10	Straight type	_	VVQ2000-51A-C10	_
		Ø 12		_	_	VVQ4000-50B-C12
	size	Ø 8		SZ3000-74-1A-L8	_	_
	<u>i</u>	Ø 10	Elbow type	_	SZ3000-83-1A-L10	_
	Metric size	Ø 12		_		KQ2L12-19N-X224
	2	Ø8		SZ3000-74-2A-L8	_	_
÷-		Ø 10	Long elbow type		SZ3000-83-2A-L10	_
port		Ø 12		_	_	KQ2W12-19N-X224
ш		Ø 5/16"		VVQ1000-51A-N9	_	_
Ľ.		Ø 3/8"	Straight type	_	VVQ2000-51A-N11	_
		Ø 1/2"		_	_	VVQ4000-50B-N13
	e	Ø 5/16"		KQ2L09-14-X224	_	_
	Inch size	Ø 3/8"	Elbow type	_	KQ2L11-14-X224	_
	ЪС	Ø 1/2"			_	KQ2L13-19N-X224
	-	Ø 5/16"		KQ2L09-14-X225	_	
		Ø 3/8"	Long elbow type		 KQ2L11-14-X225	
		Ø 3/8 Ø 1/2"			NG2L11-14-A22J	 KQ2W13-19N-X224
) S") of the SV2000 and 5000	—		1021013-1910-7224

*1 A and B ports (Ø 8 and Ø 5/16") of the SY3000 and 5000 mixed mounting type are the same as those of the SY5000.

* Purchasing order is available in units of 10 pieces. Additionally, when performing the piping in the same orientation using the elbow type, please order "elbow type" or "long elbow type" appropriately.

* Select the same port size for both the A and B ports.

Plug assembly

	SY3000	SY5000	SY7000
A, B port	VVQ0000-58A	VVQ1000-58A	VVQ2000-58A
P, E port	VVQ1000-58A	VVQ2000-58A	SY9000-62-1A


* Purchasing order is available in units of 10 pieces.

SY3000/5000/7000 Series Manifold Options

■ DIN rail dimensions/weight for the SY3000/5000 Pugin connector connecting base

VZ1000-11-1-□

* After confirming the L3 dimension in the dimensions table of each series, refer to the DIN rail dimensions table below and specify the number in the box \Box .




(7.5)

No.	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
L dimension	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5	273	285.5	298	310.5	323
Weight [g]	17.6	19.9	22.1	24.4	26.6	28.9	31.1	33.4	35.6	37.9	40.1	42.4	44.6	46.9	49.1	51.4	53.6	55.9	58.1
No.	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37
L dimension	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5
Weight [g]	60.4	62.5	64.9	67.1	69.4	71.6	73.9	76.1	78.4	80.6	82.9	85.1	87.4	89.6	91.9	94.1	96.4	98.6	100.9
No.	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56
L dimension	573	585.5	598	610.5	623	635.5	648	660.5	673	685.5	698	710.5	723	735.5	748	760.5	773	785.5	798
Weight [g]	103.1	105.4	107.6	109.9	112.1	114.4	116.6	118.9	121.1	123.4	125.6	127.9	130.1	132.4	134.6	136.9	139.1	141.4	143.6
No.	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71				
L dimension	810.5	823	835.5	848	860.5	873	885.5	898	910.5	923	935.5	948	960.5	973	985.5				

■ DIN rail dimensions/weight for the SY7000 Plug-in connector connecting base

VZ1000-11-4-□

* After confirming the L3 dimension in the dimensions table of each series, refer to the DIN rail dimensions table below and specify the number in the box \Box .



No.	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
L dimension	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5	273	285.5	298	310.5	323
Weight [g]	24.8	28	31.1	34.3	37.4	40.6	43.8	46.9	50.1	53.3	56.4	59.6	62.7	65.9	69.1	72.2	75.4	78.6	81.7
No.	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37
L dimension	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5
Weight [g]	84.9	88	91.2	94.4	97.5	100.7	103.9	107	110.2	113.3	116.5	119.7	122.8	126	129.2	132.3	135.5	138.6	141.8
No.	00																		
INO.	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56
L dimension		39 585.5	40 598	41 610.5	42 623	43 635.5	44 648	45 660.5	46 673	47 685.5	48 698	49 710.5	50 723	51 735.5	52 748	53 760.5	54 773	55 785.5	56 798
	573		-			-		-	-		-	-		-	-			785.5	
L dimension	573	585.5	598	610.5	623	635.5	648	660.5	673	685.5	698	710.5	723	735.5	748	760.5	773	785.5	798
L dimension Weight [g]	573 145 57	585.5 148.1	598 151.3	610.5 154.5	623 157.6	635.5 160.8	648 163.9	660.5 167.1	673 170.3	685.5 173.4	698 176.6	710.5 179.8	723 182.9	735.5 186.1	748 189.2	760.5	773	785.5	798

Tightening torque for mounting screw

Manifold Options


Refer to pages 239 to 241 for dimensions.
 M3: 0.8 N·m (SY5000/700)

Individual SUP spacer assembly

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]

When the same manifold is used for different pressures, an individual SUP spacer assembly is used as a supply port for different pressures.

- * When selecting a One-touch fitting elbow type for a spacer assembly, use it faced upward, since it interferes with A and B port piping of Type 10 manifolds.
- * When the elbows are facing upward in A and B ports in Type 10 manifolds, they will interfere with the piping for the spacer assembly. Therefore, combine the A and B ports with straight types or elbows facing downward.

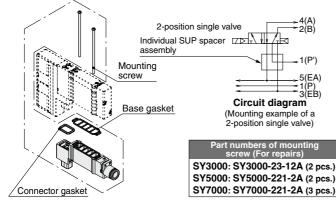


Individual EXH spacer assembly

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]

When valve exhaust affects other stations due to the circuit

configuration, this spacer assembly is used for individual valve exhaust.

- When selecting a One-touch fitting elbow type for a spacer assembly, use it faced upward, since it interferes with A and B port piping of Type 10 manifolds.
- * When the elbows are facing upward in A and B ports in Type 10 manifolds, they will interfere with the piping for the spacer assembly. Therefore, combine the A and B ports with straight types or elbows facing downward.

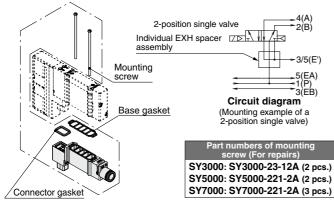

Refer to pa	ages	239 to 2	241 for	dimens	ions. 🛽 🔊	13: 0.8 N∙n	n (SY5000	/7000)
How to Or	der l	ndividı	ual SL	JP/EXH	Space	Assem	bly	
One-touch t Straight typ	fitting be	' SY[30	м – З	88 – 1	1 A-[C6	_
One-touch Elbow type	fitting	' SY[30	м – З	88 - 2	2 A-[L6	
		Series	; 🚽					
	3	SY3000						
	5	SY5000	_					
	7	SY7000	1					
			Space	er type				
		38 Ind	-	SUP space				
				EXH space	_			
ارون والمراجع					_			
Individu	ual 5			ort elbow t		•		
		3		ng elbow t		-		
				-		」 n valve when		
					downward. H			
						ked mounting		
		of conn downwa		necting bas	es cannot be	e used		
		downwe	uu.					
	P	ort siz	e (Me	tric/On	e-touch	fittings		
	Symbol	P, E	-	SY3000			-	
	L4	Ø 4		•	•	-		
	L6	Ø	3	•	•			
	L8	Ø		_	•	•	_	
	L10 L12	Ø. Ø.		-	-	-	_	
	LIZ			 (Inch/O		h fitting		
	Symbol					0 SY700		
	LN3	Ø 5/		•	-	-		
	LN7	Ø 1/		•	•	-		
	LN9	Ø 5/		-	•	-		
	LN11	Ø 3/	8"	-	-			
		п	ort oi		rio/Ono	touch f	ittingo)	
		Symbol			SY3000	-touch f		
		C2		2	<u> 313000</u>	-	-	-
		C3	Ø	3.2	•	_	-	-
		C4		4	•	•	-	4
		C6		6	•	•	•	_
		C8 C10		8 10		-		-
		C12		12	-	-	•	-
			Por	t size (Inch/Or	ne-touch	fittings	5)
		Symbol				SY5000		
		N1		/8"	•	-	-	
		N3		5/32"	•	•	-	-
		N7 N9		/4" 5/16"	-	•	•	-
		N11		3/8"	_	-	•	1
					ination wit	h the SY ⁵ 3	u01□-□1-E	(With
		resi	dual pre	essure rel	ease valve	e), the leng	th of the re	quired
		moi	unting s	crews will	differ. Ple	ease contac	t SMC for	details.
Flow rate ($P \rightarrow A/B$)	chara		> 3/5 (A	$(B \rightarrow F)$				

	Port	size	Flow rate characteristics						
Model	1, 3/5	4, 2	1 → 4/2 (P →	> A/B)	4/2 → 3/5 (A/B → E)				
	(P, E)	(A, B)	C [dm³/(s·bar)]	b	C [dm³/(s·bar)]	b			
SY30M-38-1A-C6	C8	C6	1.2	0.32	1.4	0.24			
SY30M-39-1A-C6	0	0	1.2	0.27	1.1	0.27			
SY50M-38-1A-C8	C10	C8	2.7	0.36	3.3	0.22			
SY50M-39-1A-C8	010	60	2.2	0.37	2.2	0.36			
SY70M-38-1A-C12	C12	C12	4.8	0.26	4.7	0.25			
SY70M-39-1A-C12	012	012	4.9	0.28	4.7	0.23			

* Calculation of effective area S and sonic conductance C: S = 5.0 x C

The value is for manifold base with 5 stations, rubber seal, and individually operated 2-position type.

* For connector connecting base (type 10) manifolds




Manifold Options

SUP stop valve spacer assembly with residual pressure release valve [With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]

It is used to shut off the supply air to valves individually.

 Cannot be selected when the elbows are facing upward in A and B ports in Type 10 manifolds, since they will interfere with the piping for the spacer assembly

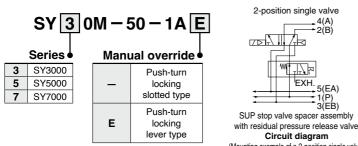

(Mounting example of a 2-position single valve)

* For lever type:

When locking the lever type manual override, push the lever down in the PUSH position with your fingers until it stops, then turn the lever 90° clockwise. (PUSH \rightarrow LOCK)

Turning the lever without pushing it down until it stops can cause damage to the manual override and other problems such as air leakages.

To unlock the manual override, turn the lever counterclockwise. (LOCK \rightarrow PUSH)


[How to mount SUP stop valve spacer assembly with residual pressure release valve] Insert the SUP stop valve mounting screw from the side of the spacer assembly,

and mount it to the manifold. Tighten the SUP stop valve mounting screw to the specified tightening torque.

Mount the valve and tighten the valve mounting screws to the specified tightening torque after mounting the SUP stop valve spacer assembly with residual pressure release valve.

- * Install the plate type nut to the spacer assembly as shown in the figure if it comes off. The SUP stop valve mounting screws can be tightened with a hexagon wrench without removing the plate type nut.
- * When the elbows are facing upward in A and B ports in Type 1 0 manifolds, they will interfere with the piping for the spacer assembly. Therefore, combine the A and B ports with straight types or elbows facing downward.
- * This product is only for internal pilot specifications, as the external pilot air cannot be shut off.
- * If the product is equipped with a 3 -position closed centre, residual pressure cannot be released, so use in combination with a 3 -port valve, which can be connected to the A, B piping port.

Base gasket
Connector gasket
Part numbers of mounting screw (For repairs)
SY3000: SY30M-56-1A (2 pcs.)
SY5000: SY50M-56-1A (2 pcs.)
SY7000: SY70M-56-1A (3 pcs.)

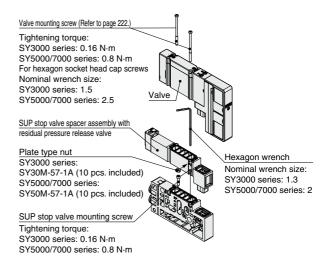

	Port	size	Flow rate characteristics					
Model	1, 3/5	4, 2	1 → 4/2 (P →	• A/B)	4/2 → 3/5 (A/B → E)			
	(P, E)	(A, B)	C [dm³/(s·bar)]	b	C [dm³/(s·bar)]	b		
SY30M-50-1A(E)	C8	C6	0.6	0.18	1.4	0.29		
SY50M-50-1A(E)	C10	C8	1.6	0.20	3.1	0.23		
SY70M-50-1A(E)	C12	C12	3.1	0.18	4.3	0.32		

* Calculation of effective area S and sonic conductance C: S = 5.0 x C

* The value is for manifold base with 5 stations, rubber seal, and individually operated 2-position type

For connector connecting base (type 10) manifolds

Tighte

* Refer to pages 239 to 241 for dimensions.

 Tightening torque for mounting screw

 M2: 0.16 N·m (SY3000)

 M3: 0.8 N·m (SY5000/7000)

▲Caution

6

▲Caution

Tightening torque for mounting screw M2: 0.16 N·m (SY3000)

Manifold Options


M3: 0.8 N·m (SY5000/7000) * Refer to pages 239 to 241 for dimensions.


Double check spacer assembly with residual pressure release valve (Side/Bottom ported)

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)] It is used to hold the intermediate position of the cylinder for a long period of time. Use a 3-position exhaust centre valve when the double check spacer assembly with residual exhaust valve is used. It can also be used for drop prevention at the cylinder stroke end when supply residual pressure is released by using a 2-position single/double valve.

When the elbows are facing upward in A and B ports in Type 10 manifolds, they will interfere with the piping for the spacer assembly. Therefore, combine the A and B ports with straight types or elbows facing downward.

Series	Part no.			Intermediate stop	Drop prevention
SY3000	SY30M-60-1A		Applicable	SY ³ ₅ 40 ⁰ ₁	SY ³ ₅₂ ¹ 0 ⁰ ₁
SY5000	SY50M-60-1A		valve	51540 ₁	31_{72}^{50}
SY7000	SY70M-60-1A	1			



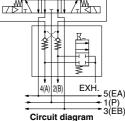

(Intermediate stop: When 3-position exhaust centre valve is mounted)


Double check spacer assembly with residual pressure release valve 2-position single valve

Circuit diagram (Drop prevention: When 2-position single valve is mounted)

FXH

5(FA)

3(EB)

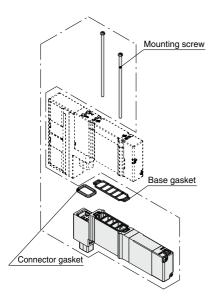

SY3000: SY3000-23-27A (2 pcs.) SY5000: SY5000-221-4A (2 pcs.) SY7000: SY7000-221-4A (3 pcs.)

▲Caution

- · Air leakage from the pipe between the valve and cylinder or from the fittings will prevent the cylinder from stopping for a long period of time. Check the leakage using neutral household detergent, such as dish washing soap. Also, check the cylinder's tube gasket, piston seal, and rod seal for air leakage.
- · Combining with 3-position closed centre or pressure centre valve will not work.
- If the exhaust of the double check spacer is restricted too much, the cylinder may not operate properly and may not stop intermediately.
- Set the cylinder load so that the cylinder pressure will be within two times that of the supply pressure.
- · If using a double check spacer that is built in to the sub-plate, refer to page 307.


Specifications

Max. operating	pressure	1.0 MPa
Min. operating	0.1 MPa	
Ambient and fluid temperatures		−10 to 50 °C
	SY3000	0.3 dm³/(s·bar)
Flow rate characteristics: C	SY5000	0.7 dm³/(s·bar)
characteristics. C	SY7000	1.1 dm³/(s·bar)
Max. operating f	requency	3 Hz


Blanking plate assembly

[With two mounting screws (3 pcs. for the SY7000)]


Used when valve additions are expected or for maintenance. A structure is in place on the blanking plate to prevent the mounting screws from sliding.



SY30M-26-1A(-B)




SY50M-26-1A(-B)



SY70M-26-1A(-B)

How to Order Blanking Plate Assembly

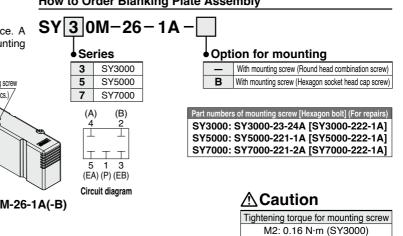

Refer to pages 239 to 241 for dimensions.



M3: 0.8 N·m (SY5000/7000)

▲Caution Tightening torque for mounting screw

M2: 0.16 N·m (SY3000)

M3: 0.8 N·m (SY5000/7000)

Manifold Options


* Refer to pages 239 to 241 for dimensions.

Interface regulator

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]

Used when the supply pressure for each valve on the same manifold must be individually set (reduced pressure).

How to Order

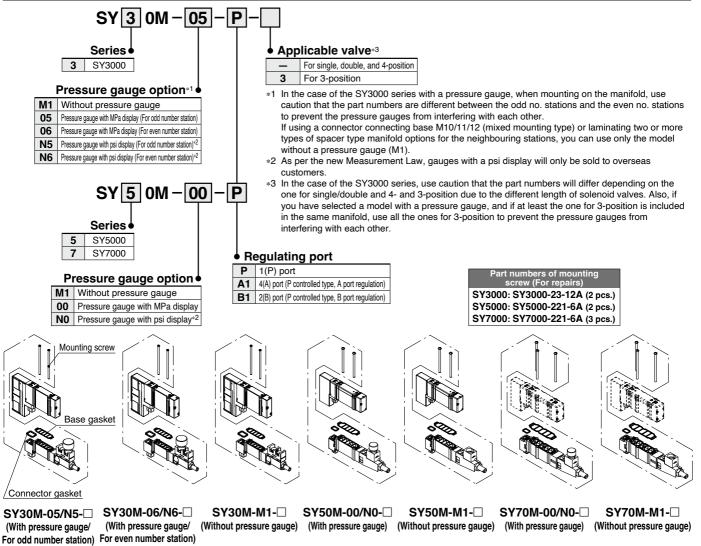

Specifications


Interface regu	lator model	SY30M-□-□-□	SY50M-□-□	SY70M-□-□
Applicable va	Ive model ^{*1}	SY3□3□(R)	SY5⊟30(R)	SY7□30(R)
Regulating po	ort		1(P), 4(A), 2(B)	
Set pressure	range		0.1 to 0.7 MPa	
Maximum ope	erating pressure		1.0 MPa	
Fluid			Air	
Ambient and fl	uid temperatures		10 to 50 °C (No freezing	g)
Weight [g]*2	With pressure gauge	33 (35)* ³	75	93
weight [g]	Without pressure gauge	27 (29)* ³	69	87

1 3-position closed centre and pressure centre, and 4-position dual 3-port valves are only available for 1(P) port pressure regulation.


2 Gasket and mounting screws are included in the weight. 3 (): Denotes the values of SY30M-D-D-3

Always apply pressure from 1(P) port in the base for interface regulator

When using in combination with the $SY_7^530_1^0\square$ - $\square1$ -E (With residual pressure release valve), the length of the required mounting screws will differ. Please contact SMC for details.

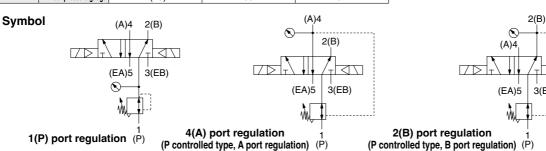

SMC

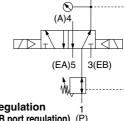

(P controlled type, B port regulation) (P)

▲Caution

 Tightening torque for mounting screw

 M2: 0.16 N·m (SY3000)

 M3: 0.8 N·m (SY5000/7000)

Manifold Options: Spacer Combinations and Screw List $\ensuremath{\textcircled{}}$

Qualitation		1) SY30	000 (M2)	2 SY50	000 (M3)	3 SY70	00 (M3)
Combination		Round head combination screw	Hexagon socket head cap screw	Round head combination screw	Hexagon socket head cap screw	Round head combination screw	Hexagon socket head cap screw
Round head combination screw> SY3000-23-24A SY5000-221-1A SY7000-221-1A 	Valve	SY3000- 23-24A [for 10 valves (20 pcs.)]	SY3000- 222-1A [for 10 valves (20 pcs.)]	SY5000- 221-1A [for 10 valves (20 pcs.)]	SY5000- 222-1A [for 10 valves (20 pcs.)]	SY7000- 221-1A [for 10 valves (30 pcs.)]	SY7000- 222-1A [for 10 valves (30 pcs.)]
Hexagon socket head cap screw> 1: SY3000-222-1A 2: SY5000-222-1A 3: SY7000-221-1A 1: SY30M-56-2A 2: SY50M-56-2A 3: SY70M-56-2A 3: SY70M-56-2A	pressure release valve		I-56-2A bcs.)		I-56-2A bcs.)		I -56-2A ics.)
Round head combination screw> 1: SY3000-23-33A 2: SY5000-221-5A	Valve						
(3: SY7000-221-5A	spacer assembly	SY3000- 23-33A (2 pcs.)	_	SY5000- 221-5A (2 pcs.)	_	SY7000- 221-5A (3 pcs.)	_
	SUP (EXH) spacer assembly						
Round head combination screw> 1: SY3000-23-32A 2: SY5000-221-3A	Valve Individual						
3: SY7000-221-3A	SUP (EXH) spacer assembly	SY3000- 23-32A (2 pcs.)	_	SY5000- 221-3A (2 pcs.)	-	SY7000- 221-3A (3 pcs.)	-
	Individual EXH (SUP) spacer assembly						
A Round head combination screw> ①: SY3000-23-24A	Valve	SY3000- 23-24A [for 10 valves (20 pcs.)]	SY3000- 222-1A [for 10 valves (20 pcs.)]	SY5000- 221-1A [for 10 valves (20 pcs.)]	SY5000- 222-1A [for 10 valves (20 pcs.)]	SY7000- 221-1A [for 10 valves (30 pcs.)]	SY7000- 222-1A [for 10 valves (30 pcs.)]
2: SY5000-221-1A 3: SY7000-221-1A Hexagon socket head cap screw> 1: SY3000-222-1A 2: SY5000-222-1A 3: SY7000-222-1A	SUP stop valve spacer assembly with residual pressure release valve		<u>.</u>		·		
(3: SY7000-222-1A (3: SY7000-222-1A (1: SY30M-56-4A (2: SY50M-56-4A (3: SY70M-56-4A (3: SY70M-56-4A	Individual SUP (EXH) spacer assembly		I-56-4A ocs.)		I-56-4A bcs.)		I-56-4A ics.)
رق. 51/Jun-30-4A	Individual EXH (SUP) spacer assembly						

* Mounting onto a manifold follows the order explained above.

* The fitting for individual SUP/EXH spacers comes in a straight type only, since an elbow type would interfere with each spacer assembly when laminated.

≜Caution

 Tightening torque for mounting screw

 M2: 0.16 N·m (SY3000)

 M3: 0.8 N·m (SY5000/7000)

Manifold Options: Spacer Combinations and Screw List 2

			① SY3000 (M2) ② SY5000 (M3) ③ SY7000 (M3)					00 (M2)
Com	nbination		Round head combination screw	. ,	-	· · ·	· · · · ·	
	Round head combination screw> D: SY3000-23-24A 2: SY5000-221-1A 3: SY7000-221-1A	Valve	SY3000- 23-24A [for 10 valves (20 pcs.)]	SY3000- 222-1A [for 10 valves (20 pcs.)]	SY5000- 221-1A [for 10 valves (20 pcs.)]	SY5000- 222-1A	SY7000- 221-1A	SY7000- 222-1A [for 10 valves (30 pcs.)]
	Hexagon socket head cap screw> D: SY3000-222-1A 2: SY5000-222-1A 3: SY7000-222-1A D: SY30M-56-3A	SUP stop valve spacer assembly with residual pressure release valve Double check		SY30M-56-3A (2 pcs.)		SY50M-56-3A (2 pcs.)		I -56-3A rcs.)
	2: SY50M-56-3A 3: SY70M-56-3A C	spacer assembly with residual pressure release valve						
	Round head combination screw> A 1: SY3000-23-24A 2: SY5000-221-1A	Valve	SY3000- 23-24A [for 10 valves (20 pcs.)]	SY3000- 222-1A [for 10 valves (20 pcs.)]	SY5000- 221-1A [for 10 valves (20 pcs.)]	SY5000- 222-1A [for 10 valves (20 pcs.)]	SY7000- 221-1A [for 10 valves (30 pcs.)]	SY7000- 222-1A [for 10 valves (30 pcs.)]
	3): SY7000-221-1A Hexagon socket head cap screw> 1): SY3000-222-1A 2): SY5000-222-1A 3): SY7000-222-1A	SUP stop valve spacer assembly with residual pressure release valve	SY30M-56-5A (2 pcs.)		SY50M-56-5A (2 pcs.)		SY70M-56-5A (3 pcs.)	
	D: SY30M-56-5A 2: SY50M-56-5A 3: SY70M-56-5A	Double check spacer assembly with residual pressure release valve						
	D	Individual EXH (SUP) spacer assembly						
	A Round head combination screw> D: SY3000-23-32A	Valve						
	2: SY5000-221-7A 3: SY7000-221-7A	Interface regulator	SY3000- 23-32A (2 pcs.)	_	SY5000- 221-7A (2 pcs.)	_	SY7000- 221-7A (3 pcs.)	_
	c	Individual SUP (EXH) spacer assembly						

* Mounting onto a manifold follows the order explained above.

The fitting for individual SUP/EXH spacers comes in a straight type only, since an elbow type would interfere with each spacer assembly when laminated.
 When laminating an interface regulator with other options, only the combinations in the table above are possible.

* Refer to pages 239 to 241 for dimensions.

Tightening torque for mounting screw M2: 0.16 N⋅m (SY3000)

M3: 0.8 N·m (SY5000/7000)

Manifold Options

Individual SUP block assembly

On the circuit of the plug-in connector connection base, an individual SUP block assembly can be used to supply air to a series of valves if a separate air supply is required, or if addition air is required for additional air flow. Individual SUP block assembly occupies 1 station.

Blocking disks also supplied (2 pieces). Can be used to block both sides of the number of stations being isolated for individual air supply (as shown in example).

- * Specify the mounting position of the block as well as the position where the SUP passage is to be blocked on the manifold specification sheet. Blocking is required for 1 or 2 positions for 1 set. (2 SUP blocking disks to block SUP is attached to individual SUP block.)
- Electrical wiring is connected to a number of stations in the individual SUP block manifold.
- When used in M10/11/12 (mixed mounting type), select the SY50M type for SS5Y5 and the SY70M type for SS5Y7.
- A structure to prevent screws falling out is in place on the individual SUP block, making it much harder for the mounting screws to fall out.


Individual EXH block assembly


On the circuit of the plug-in connector connection base, individual EXH block assembly can be used to individually exhaust series of valves when the exhaust from the valves would affect a number of other stations.


Individual EXH block assembly occupies 1 station.

Blocking disks also supplied (4 pieces). Can be used to block both sides of the number of stations being isolated for individual exhaust. (as shown in example).


- Specify the mounting position of the block as well as the position where the EXH passage is to be blocked on the manifold specification sheet.
- Blocking is required for 1 or 2 positions for 1 set. (2 sets of EXH blocking disks (4 pcs.) to block EXH is attached to individual EXH block.)
- Electrical wiring is connected to a number of stations in the individual EXH block manifold.
- When used in M10/11/12 (mixed mounting type), select the SY50M type for SS5Y5 and the SY70M type for SS5Y7.
- * A structure to prevent screws falling out is in place on the individual EXH block, making it much harder for the mounting screws to fall out.

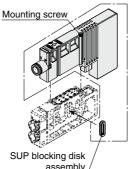


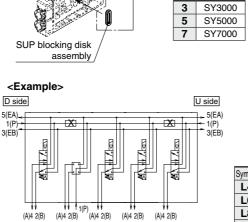

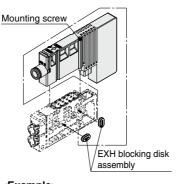

<Example>

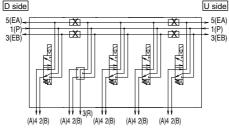

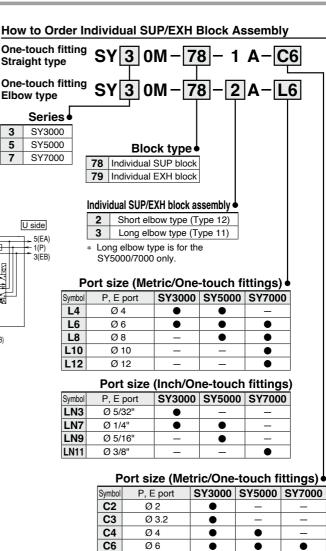

Port size (Inch/One-touch fittings)

•

•

		(
Symbol	P, E port	SY3000	SY5000	SY7000
N1	Ø 1/8"	•	-	-
N3	Ø 5/32"	•	•	-
N7	Ø 1/4"	•	•	•
N9	Ø 5/16"	—	•	•
N11	Ø 3/8"	_	_	•

C8

C10

C12

Ø 8

Ø 10

Ø 12

Manifold Options

Blanking Plate with Output

[With two mounting screws]

The blanking plate extracts the individual signal of the manifold valve.

Specifications


Number of outputs	2 outputs
Load voltage	12 VDC, 24 VDC
	(Dependent on the rated voltage of the built-in manifold)
Load current	42 mA/point (Max.)
Enclosure	Dust proof (M12 connector: IP67)

For serial transmission-capable manifolds, only the 24 VDC is applicable.
 When non-polar type valves are mounted on the same manifold (excludes SI unit manifolds), be careful of surge voltage intrusion.

▲ Caution

Tightening torque for mounting screw
M2: 0.16 N·m

How to Order Blanking Plate with Output

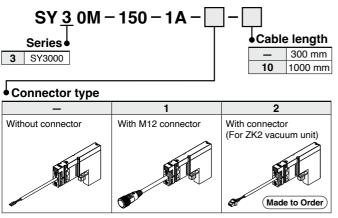

Refer to the specifications for output polarity.

SUP/EXH blocking disk assembly (for connector type manifold, Type 10, 11, 12) [SUP blocking disk]


By inserting the SUP blocking disk in the pressure supply passage of the manifold valve, can provide two different high and low pressure in one manifold.

[EXH blocking disk]

By inserting the EXH blocking disk in the exhaust passage of the manifold valve, can separate the exhaust from the valve so it does not affect the other valves. It can also be used for the manifold for the positive pressure and vacuum mixed manifold. (2 pcs. are required to block FA/EB both sides of the EXH.)

Label for blocking disk

Label to indicate and confirm on the manifold where the SUP/EXH blocking disk assemblies were inserted. (3 sheets each)



Output Polarity

Manifold common specifications	А	В	COM.
Positive common	_	-	+
Negative common	+	+	_


Specifications are the same as the manifold common specifications.

Without connector M12 connector With connector Brown (A) Blue (COM.) Blue (COM.) Black (B) (B) (COM.) (B) (COM.) (B) (COM.) (COM.) (B) (COM.) (COM.)

\bigcirc	Series	SUP blocking disk assembly	EXH blocking disk assembly
	SY3000	SY30M-40-1A	SY30M-40-2A
	SY5000	SY50M-40-1A	SY50M-40-1A
	SY7000	SY70M-40-1A	SY70M-40-1A




If the blocking disk assembly is ordered using the manifold specification sheet and ordered at the same time as the manifold, the position where the blocking disk assembly is inserted will be labelled and shipped out.





Manifold Options

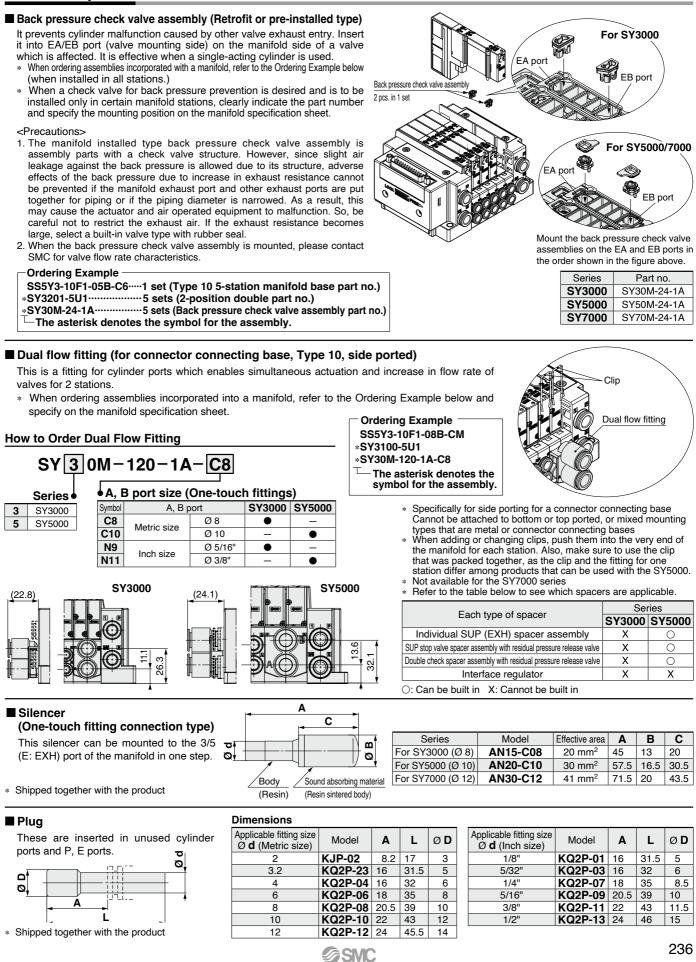

Manifold Options


■ Name plate (For connector connecting base)

SY3000: For SS5Y3-10 (Side ported) SY5000: For SS5Y5-10/11 (Side/Bottom ported) SY7000: For SS5Y7-(M)10/11 (Side/Bottom ported)

Name plate bracket assembly and name plate mounting instructions

Insert it into the groove on the name plate bracket onto which a

SUP/EXH (end) block is mounted, as shown in Figure 2. When ordering assemblies incorporated with a manifold, refer to the Ordering Example below.



Mounting and Option


					<u> </u>				
	Mounting option								
Symbol	Prin	iting		DIN rail		Direct			
	Yes	No	With	Without	Specified length	mounting			
AA	•	• –		-	-	•			
Α	۲	_	•	_	-	_			
A0	•	_	_	•	-	_			
A3	•)				_			
:	:		:	÷	:	_			
A24	•	-	_	-	For 24 stations	-			
BA	_	•	_	_	-	۲			
В	-	•	•	-	_	_			
B0	-	•	_	•	-	_			
B 3	_	•	_	_	For 3 stations	-			
:	:			:	:	_			
B24	_	•	_	_	For 24 stations	-			
					-	· · ·			

┌ Ordering Example ─────	
SS5Y3-10F1-05UR-C6AA	·· 1 set
*SY3200R-5U1	^{••} 5 sets
The asterisk denotes the symbol for the ass	sembly.


Name plates cannot be mounted onto Type 12 (Top ported) and Type 10 (Side ported) mixed mounting types with top ported valves, nor onto manifolds with optional laminated spacers.

No name plate settings are available for the SY3000/SY5000 mixed mounting types. However, they are available for the SY5000/SY7000 mixed mounting types.

<SY3000>

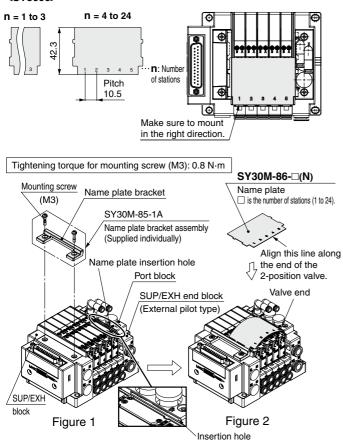

<SY5000/7000>

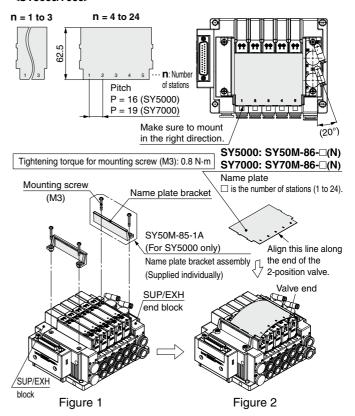

SMC

Manifold Options

* A transparent plastic plate to put a label with the name of the function of the solenoid valve

If adding a name plate

If adding a name plate to a manifold in use, order a name plate bracket assembly, in addition to ordering a name plate. Refer to the table below for the part number and the amount.

Name plate part number

Model		SS5Y3-10	SS5Y5-10/11	SS5Y7-(M)10/11	Note
Name	Printed	SY30M-86-⊡N	SY50M-86-⊟N	SY70M-86-⊡N	:Number of stations
plate	No printing	SY30M-86-□	SY50M-86-□	SY70M-86-□	(1 to 24)

Name plate bracket assembly part number and number of items ordered

Mode	I	SS5Y3-10	SS5Y5-10/11		
Name plate assemb	ly part number	SY30M-85-1A	SY50M-85-1A		
Manifold SUP/EXH	Internal pilot U/D piping	2 pcs.			
block assembly	Internal pilot double sided piping	2 pcs.	- 2 pcs.		
Pilot type and	External pilot U/D piping	1 pc.*1			
P, E port entry	External pilot double sided piping	Not required*1			


*1 If the manifold is an external pilot, an insertion slot for name plates is on the port block of the SUP/EXH block assembly. Thus, a bracket assembly is no longer required on the port piping side.

* Name plate bracket assembly is not required for the SY7000.

ACaution

- Be sure to shut off the power and air supplies before mounting the name plate bracket assembly. Furthermore, since air may remain inside the actuator, piping, and manifold, confirm that the air is completely exhausted before performing any work.
- When disassembly and assembly are performed, air leakage may result if the tightening of the bracket mounting screws is inadequate.

Dimensions: Manifold Options/SY3000 Series

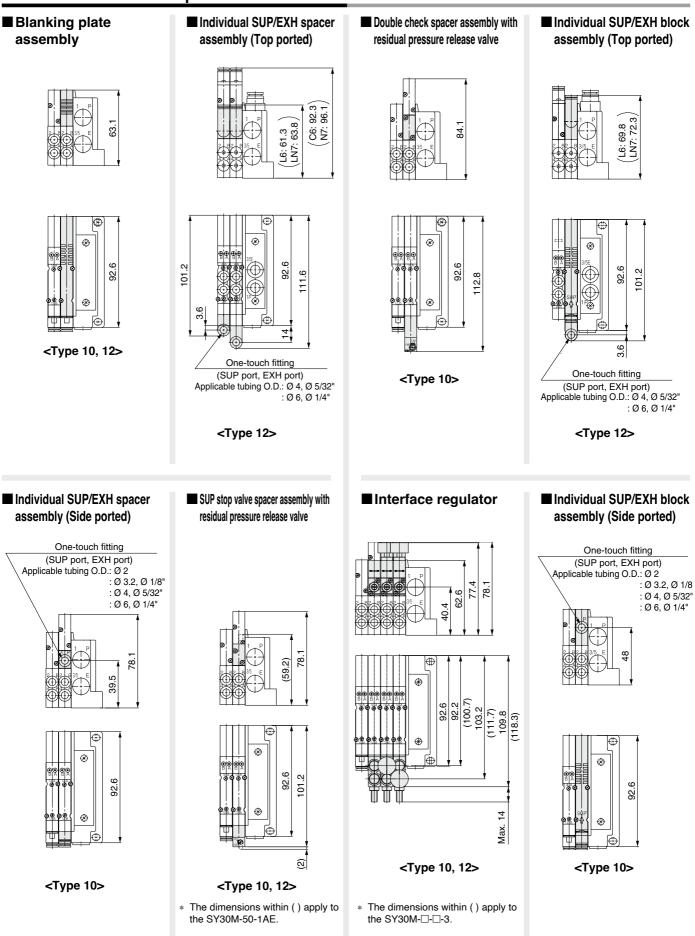




Blanking plate Individual SUP/EXH spacer Double check spacer assembly with Individual SUP/EXH block Individual SUP/EXH block assembly assembly (Top/Bottom ported) residual pressure release valve assembly (Top ported) assembly (Side ported) One-touch fitting (SUP port, EXH port) Applicable tubing O.D.: Ø 4, Ø 5/32" 5 H (108.8) : Ø 6. Ø 1/4" 101.2 (88.9) (76.8) : Ø 8. Ø 5/16" 73.2 63.7 œ Œ ⊗ Ø 0 \otimes 13.4 113.4 116.7 113.4 C.021 113.4 142.5 138.7 Γ 126. €# ð R Ø \otimes Æ 113.4 5.5 8.2 <Type 10, 11, 12> <Type 10, 11> \bigotimes One-touch fitting One-touch fitting (SUP port, EXH port) Applicable tubing O.D.: Ø 4 (SUP port, EXH port) Applicable tubing O.D.: Ø 4, : Ø 6, Ø 1/4" . Ø 6, Ø 1/4" :Ø8,Ø5/16" : Ø 8, Ø 5/16" <Type 11, 12> <Type 12> <Type 10> Individual SUP/EXH spacer Individual SUP/EXH block SUP stop valve spacer assembly with ■ Interface regulator assembly (Side ported) residual pressure release valve assembly (Side ported) One-touch fitting One-touch fitting (SUP port, EXH port) (SUP port, EXH port) Applicable tubing O.D.: Ø 4, Ø 5/32" Applicable tubing O.D.: Ø 4, : Ø 6, Ø 1/4" : Ø 6, Ø 1/4" (78.2) 79.1 92.4 96.2 90. : Ø 8, Ø 5/16" : Ø 8, Ø 5/16" 54.6 ŝ 90.1 38. 51.6 æ Ø 113.4 127.6 113.4 127.9 145.6 Ø Ø ø 113.4 113.4 142.7 $\widehat{\mathbb{C}}$ Ø 5 <Type 10, 11, 12> Max. 7 2 * The dimensions within () apply to the SY50M-50-1AE. <Type 10, 11, 12> <Type 10> <Type 11> **SMC**


Dimensions: Manifold Options/SY5000 Series


Dimensions: Manifold Options/SY7000 Series

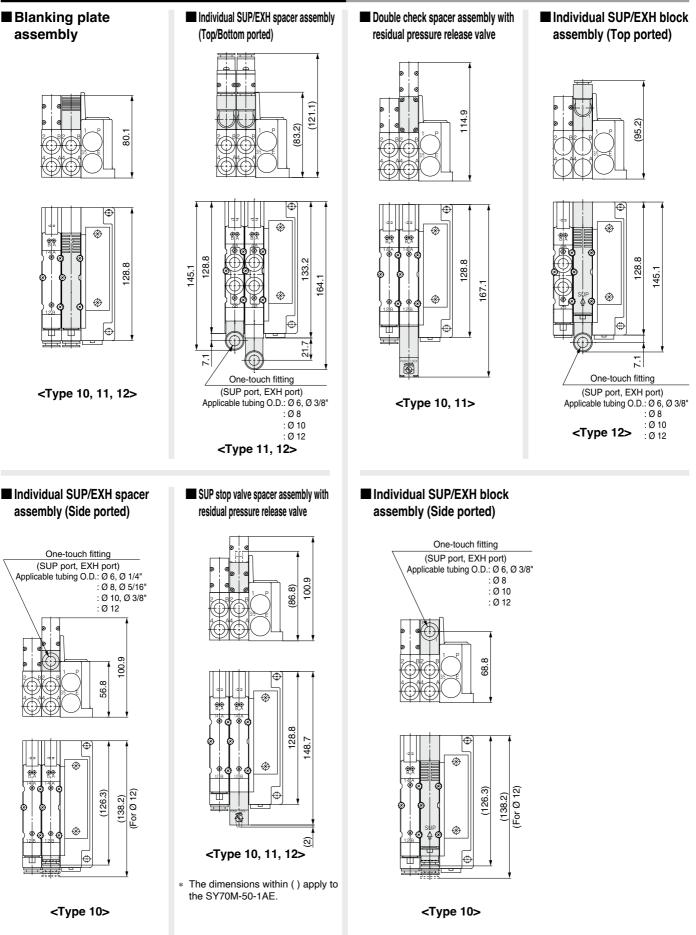



SMC

Dimensions: Manifold Options/SY7000 Series



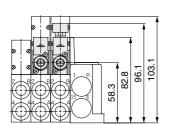

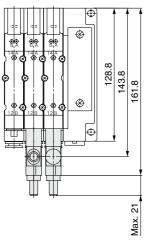


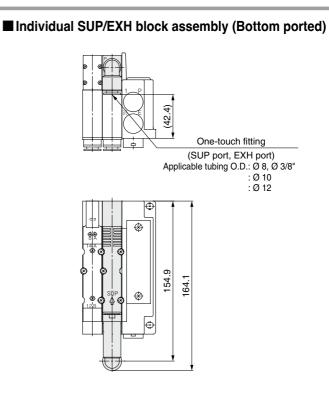

<Type 10, 11, 12>

<Type 11>

Plug-in Metal Base

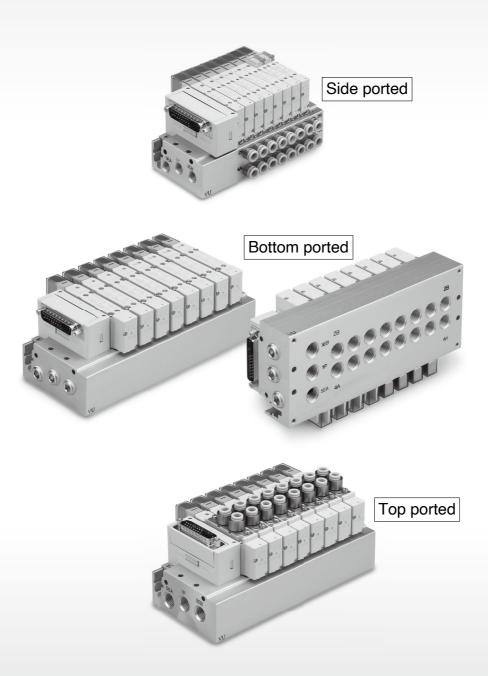

SY3000/5000/7000 series Type 50, 51, 52 Plug-in Metal Base



Manifold Specifications

			D-sub connector		Flat ribbon cable		Serial wiring		
	Model		F type	P type PG type PH type			S5 type (EX510)		
Manifold type	•		Plug-in metal base						
SUP/EXH por	t type				Common SUP/EXH				
Value station	All double wiring	J	0.45.10	stations	2 to 9 stations	2 to 4 stations	2 to 8 stations		
Valve stations All single wiring		2 10 12	stations	2 to 12 stations	2 to 8 stations	2 to 12 stations			
Applicable connector			D-sub connector Conforming to		t ribbon cable connec with strain relief nforming to MIL-C-83		_		
		MIL-C-24308 JIS-X-5101	Socket: 26 pins MIL type	Socket: 20 pins MIL type	Socket: 10 pins MIL type				
Internal wiring	g		Positive common, Negative common						
	SY300		1/8						
	1(P), 3/5(E) port	SY5000	1/4						
		SY7000	3/8						
Port size	SY3000		M5 x 0.8, 1/8 Ø 2 One-touch fitting, Ø 3.2 One-touch fitting, Ø 4 One-touch fitting, Ø 6 One-touch fitting Ø 1/8" One-touch fitting, Ø 5/32" One-touch fitting, Ø 1/4" One-touch fitting						
Port size	4(A), 2(B) port	SY5000	1/8, 1/4 Ø 4 One-touch fitting, Ø 6 One-touch fitting, Ø 8 One-touch fitting Ø 5/32" One-touch fitting, Ø 1/4" One-touch fitting, Ø 5/16" One-touch fitting						
		SY7000	1/4 Ø 6 One-touch fitting, Ø 8 One-touch fitting, Ø 10 One-touch fitting, Ø 12 One-touch fitting Ø 1/4" One-touch fitting, Ø 5/16" One-touch fitting, Ø 3/8" One-touch fitting						
Enclosure (Ba	ased on IEC60529)	1	IP40 IP20						

Type 50, 51, 52 Plug-in Metal Base SY3000/5000/7000 Series

Manifold Flow Rate Characteristics*1/Manifold Weight

Valve Seal Type: Rubber Seal

	Port s	ize			Valve flow rate	e characteristi	CS		Weight: W [g]* ²		
Model	1, 5, 3	4, 2	1→4/2 (P→A/B)			4/2→5/3 (A/B→E)			(n: stations)		
	(P, EA, EB)	(A, B)	C [dm³/(s·bar)]	b	Q [l/min (ANR)]*3	C [dm ³ /(s·bar)]	b	Q [l/min (ANR)]*3	Fixed: C□	Replaceable:: KC	
SS5Y3-50 (Side ported)	1/8	C6	1.1	0.19	262	1.1	0.15	256	39n + 247	43.5n + 247	
SS5Y3-51 (Bottom ported)	1/8	C6	1.2	0.31	307	1.2	0.14	278	41.5n + 251	48.5n + 251	
SS5Y3-52 (Top ported)	1/8	C6	1.1	0.29	278	1.2	0.20	287	44n + 247		
SS5Y5-50 (Side ported)	1/4	C8	2.6	0.28	653	2.6	0.14	603	93n + 379	110n + 379	
SS5Y5-51 (Bottom ported)	1/4	C8	2.7	0.35	709	2.8	0.20	671	93n + 413	113n + 413	
SS5Y5-52 (Top ported)	1/4	C8	2.6	0.26	645	3.1	0.13	715	103n	+ 379	
SS5Y7-50 (Side ported)	3/8	C10	3.8	0.27	948	4.0	0.20	958	144n + 510	158n + 510	
SS5Y7-51 (Bottom ported)	3/8	C10	4.1	0.34	1070	4.8	0.20	1150	150n + 549	172n + 549	
SS5Y7-52 (Top ported)	3/8	C10	4.5	0.27	1123	4.9	0.24	1201	164n	+ 510	

Valve Seal Type: Metal Seal

	Port s	ize			Valve flow rate	e characteristi	cs		Weight	: W [g]* ²
Model	1, 5, 3	4, 2	1→	•4/2 (P-	→A/B)	4/2-	→5/3 (A	/B→E)	(n: sta	ations)
	(P, EA, EB)	(A, B)	C [dm3/(s·bar)]	b	Q [l/min (ANR)]*3	C [dm3/(s·bar)]	b	Q [l/min (ANR)]*3	Fixed: C□	Replaceable:: KC
SS5Y3-50 (Side ported)	1/8	C6	0.9	0.14	209	1.0	0.12	229	39n + 247	43.5n + 247
SS5Y3-51 (Bottom ported)	1/8	C6	1.0	0.21	241	1.1	0.10	250	41.5n + 251	48.5n + 251
SS5Y3-52 (Top ported)	1/8	C6	1.1	0.15	256	1.1	0.14	255	44n + 247	
SS5Y5-50 (Side ported)	1/4	C8	2.2	0.20	527	2.3	0.13	530	93n + 379	110n + 379
SS5Y5-51 (Bottom ported)	1/4	C8	2.4	0.26	595	2.5	0.16	586	93n + 413	113n + 413
SS5Y5-52 (Top ported)	1/4	C8	2.4	0.18	568	2.6	0.12	596	103n	+ 379
SS5Y7-50 (Side ported)	3/8	C10	3.2	0.23	780	3.5	0.18	829	144n + 510	158n + 510
SS5Y7-51 (Bottom ported)	3/8	C10	3.5	0.25	863	4.0	0.16	937	150n + 549	172n + 549
SS5Y7-52 (Top ported)	3/8	C10	3.5	0.21	843	3.8	0.18	900	164n	+ 510

*1 The value is for manifold base with 5 stations and individually operated 2-position type.

*2 Weight: W is the value for the D-sub connector manifold.

To obtain the weight with valves attached, add the valve weights given on page 19 for the appropriate number of stations. *3 These values have been calculated according to ISO6358 and indicate the flow rate under standard conditions with an inlet pressure of 0.6 MPa (relative pressure) and a pressure drop of 0.1 MPa.


* Calculation of effective area S and sonic conductance C: S = $5.0 \times C$

Plug-in Metal Base

D-sub Connector Flat Ribbon Cable

SY3000/5000/7000 Series

How to Order Manifolds

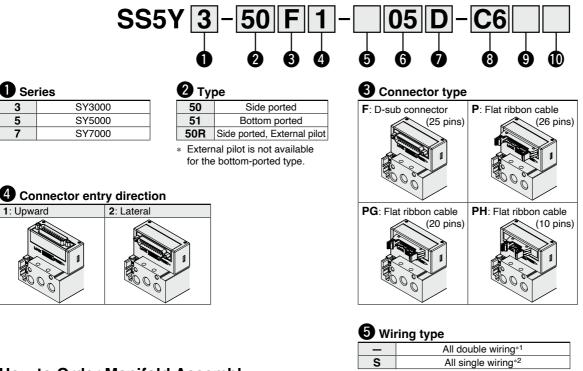

All double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations.

- *2 All single wiring: Available only for the manifold which has 2-position single for all stations
- Note that 2-position double, 3-, or 4-position valves cannot be used.
- * If a mix of single and double wiring is required, it is supplied as a special order.

6 Valve stations


Symbol	Stations	Note	Symbol	Stations	Note
02	2 stations	All	02	2 stations	All
:	:	double	:	:	double
12	12 stations	wiring	12	12 stations	wiring
02	2 stations	All	02	2 stations	All
:		single	:		single
12	10 ataliana	wiring	12	12 stations	wiring
12	12 stations	wining	12	12 SIdliUIIS	wining
PG:	Flat ribbo	on cable (20 pins)	PH:		0
	Flat ribbo	on cable (20 pins)		Flat ribbo	on cable (10 pins
PG: Symbol	Flat ribbo Stations	on cable (20 pins) Note	PH: Symbol	Flat ribbo Stations	on cable (10 pins Note
PG: Symbol	Flat ribbo Stations	on cable (20 pins) Note All	PH: Symbol	Flat ribbo Stations	n cable (10 pins Note All
PG: Symbol 02 :	Flat ribbo Stations 2 stations :	n cable (20 pins) Note All double	PH: Symbol 02 :	Flat ribbo Stations 2 stations :	n cable (10 pins Note All double
PG: Symbol 02 : 09	Flat ribbo Stations 2 stations : 9 stations	n cable (20 pins) Note All double wiring	PH: Symbol 02 : 04	Flat ribbc Stations 2 stations : 4 stations	n cable (10 pins Note All double wiring

Type 50


Type 51 **Bottom Ported**

Side Ported

3	SY3000
5	SY5000
7	SY7000



How to Order Manifold Assembly

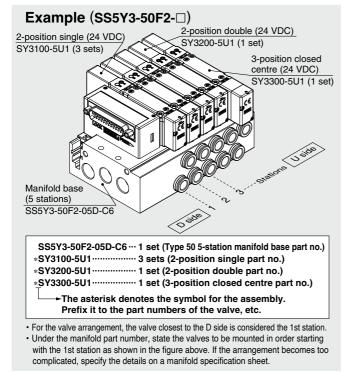

When mixing top-ported configurations, select from those listed on page 268. In such cases, use caution as there is also output on the A and B ports on the base side. Specify on the manifold specification sheet if plugs are required for the A and B ports on the base side.



Elucein Metal Base SY3000/5000/7000 Series

P, E port entry

-	- , -		
U		U side*1	
D)	D side*1*2	
В	}	Both sides	
*1 P	lug	s are mounted on the opp	osite

side of the selected ports. *2 Only D side is available for the type 51

bottom-ported type.

9 Thread type

_	Rc
F	G
Ν	NPT
Т	NPTF

(D) Mounting

_	Direct mounting				
D	DIN rail mounting (With DIN rail)				
D0	DIN rail mounting (Without DIN rail)				
D3	For 3 stations Specify a length longer				
:	:	than that of the standard			
D12	For 12 stations	rail.			

* Only direct mounting is available for the type 51 bottom-ported type.

* Refer to page 319 for the fixation of DIN rail mounting type manifold.

8 A, B port size Thread piping

Inread				
Symbol	A, B port	SY3000	SY5000	SY7000
M5	M5 x 0.8		—	-
01	1/8		•	-
02	1/4	—	•	•


One-touch fitting (Metric)


Sy	/mbol	A, B port	SY3000	SY5000	SY7000		
	C2	Ø 2		—	—		
	C3	Ø 3.2		-	—		
Fixed	C4	Ø 4			—		50
Е	C6	Ø 6			_		<u> </u>
	C8	Ø 8	-		•	JC) e
	C10	Ø 10	-	-	•		
	KC2	Ø 2		—	—	Type 50	Type 51
	KC3	Ø 3.2		-	—	(Side ported)	(Bottom ported)
ole	KC4	Ø 4			—	ก	
Replaceable	KC6	Ø 6			•		
plac	KC8	Ø 8	-		•		
Re	KC10	Ø 10	_	_	•		
	KC12	Ø 12	_	_	•		198
	M *1	Mixed sizes					
Ρ,	E port	size (Thread piping)	1/8	1/4	3/8		

One-touch fitting (Inch)

S	ymbol	A, B port	SY3000	SY5000	SY7000		
	N1	Ø 1/8"	•	_	—		//
5	N3	Ø 5/32"	•	•	—		
Fixed	N7	Ø 1/4"	•	•	_	- /	02
ш.	N9	Ø 5/16"	-		•		<i>joⁿ</i>
	N11	Ø 3/8"	-	-	•		, ,
	KN1	Ø 1/8"		_	—	Type 50	Type 51
e	KN3	Ø 5/32"			—	(Side ported)	(Bottom ported)
Replaceable	KN7	Ø 1/4"			•		
plac	KN9	Ø 5/16"	-		•		
Ве	KN11	Ø 3/8"	_	_	•		
	M *1	Mixed sizes	•		•		68
Ρ,	E port	size (Thread piping)	1/8	1/4	3/8		

*1 When ports are of mixed sizes, indicate the piping specifications on the manifold specification sheet.



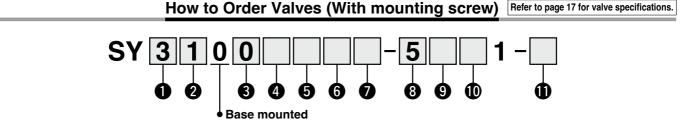

Sei	ries
3	SY3000
5	SY5000
7	SV7000

2 Type of actuation

- /1		
1	2 position	Single
2	2-position	Double
3	3-position	Closed centre
4		Exhaust centre
5		Pressure centre
A *1	4-position dual 3-port	N.C./N.C.
B *1		N.O./N.O.
C *1	uuai 3-port	NC/NO

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

Seal type

0	Rubber seal		
1	Metal seal		

4 Pilot type

_	Internal pilot
R	External pilot

* When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure.

5 Back pressure check valve (Built-in valve type)

ſ	_	None									
	Н	В	uilt-in								

Only the rubber seal type is available. The back pressure check valve is not available

for the 3-position type or the SY7000.

6 Pilot valve option

-							
 Standard (0.7 MPa) 							
B Quick response type (0.7 MPa)							
K *1	High pressure type (1.0 MPa)						
*1 Only	the metal seal type is available for the						

high pressure type.

Coil type

- Standard
- With power saving circuit (Continuous duty type) Be sure to select the power saving circuit type if the valve is to be continuously
- energised for long periods of time. Be careful of the energising time when the
- power saving circuit is selected. Refer to page . 316 for details.

8 Rated voltage


5	24 VDC
6	12 VDC

Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
—	—	—	
R	—		Non-polar
U	•		
S	—		Positive
Z	•	•	common
NS	—		Negative
NZ	•		common
F			at a standard

* For the non-polar type, be careful of surge voltage intrusion. Refer to page 317 for details. Only "Z" and "NZ" types are available with a power saving circuit.

Manual override

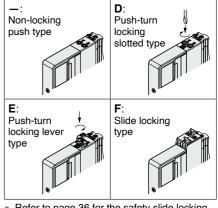


Refer to page 36 for the safety slide locking manual override.

Type of mounting screw

_	Round head combination screw
В	Hexagon socket head cap screw
Κ	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.


- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 290 for base gasket and mounting screw part numbers. "B" and "H" cannot be selected for the
- individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve



249




Electrin Metal Base SY3000/5000/7000 Series

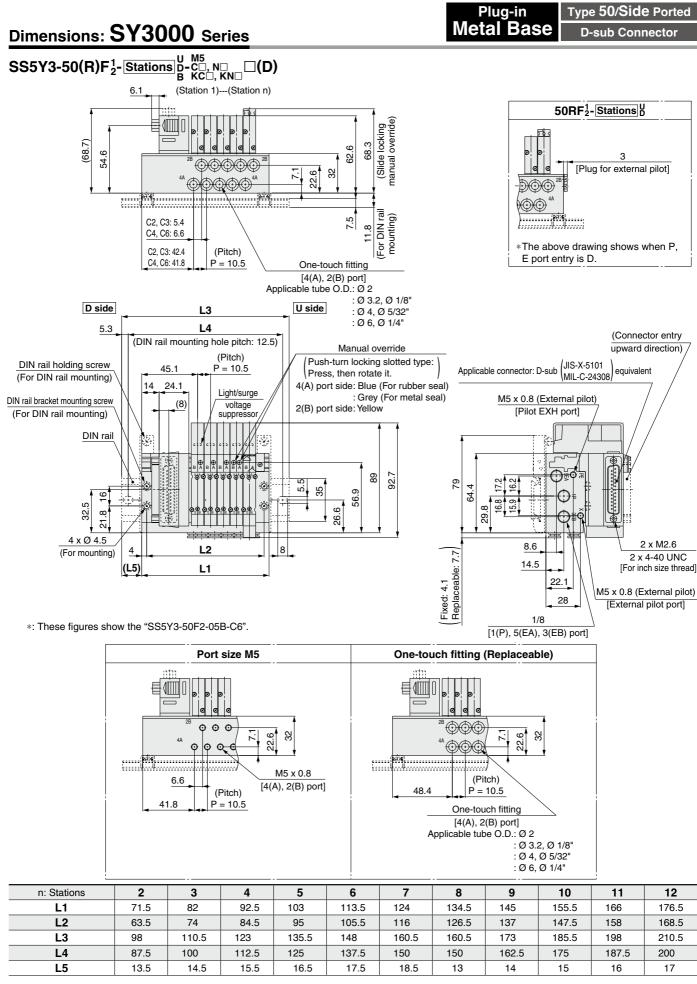

Dimensions: SY3000 Series

SS5Y3-50(R)F¹₂-Stations^U_B-01□(D)

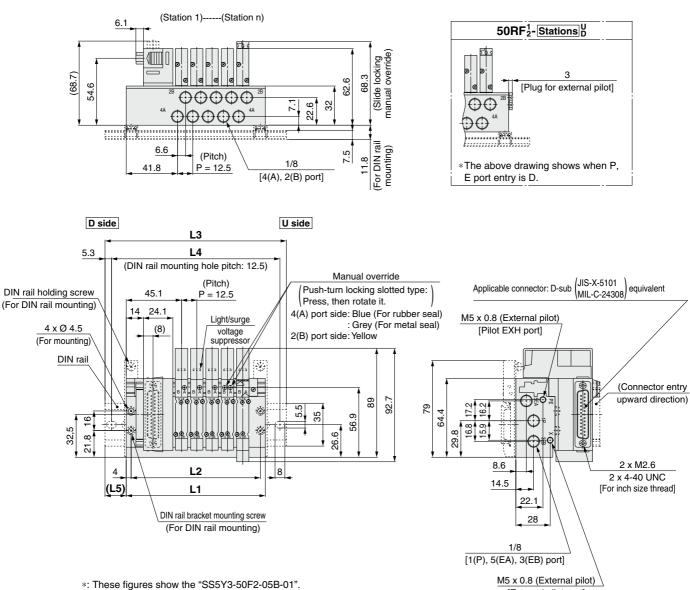

[External pilot port]

Plug-in Metal Base


Type 50/Side Ported

D-sub Connector

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5
L4	100	112.5	125	137.5	150	162.5	175	187.5	200	212.5	225
L5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5



Electrin Metal Base SY3000/5000/7000 Series

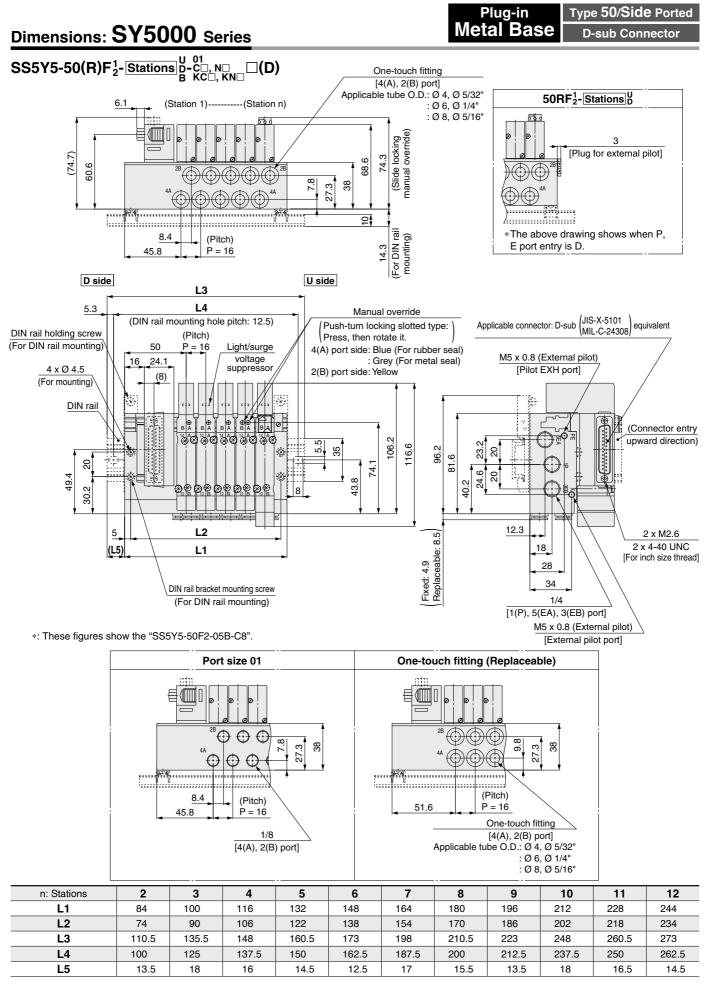


Dimensions: SY5000 Series

Plug-in Type 50/3 Metal Base D-sub (

Type 50/Side Ported D-sub Connector


SS5Y5-50(R) F_2^1 -Stations B_B^U -02 \Box (D)

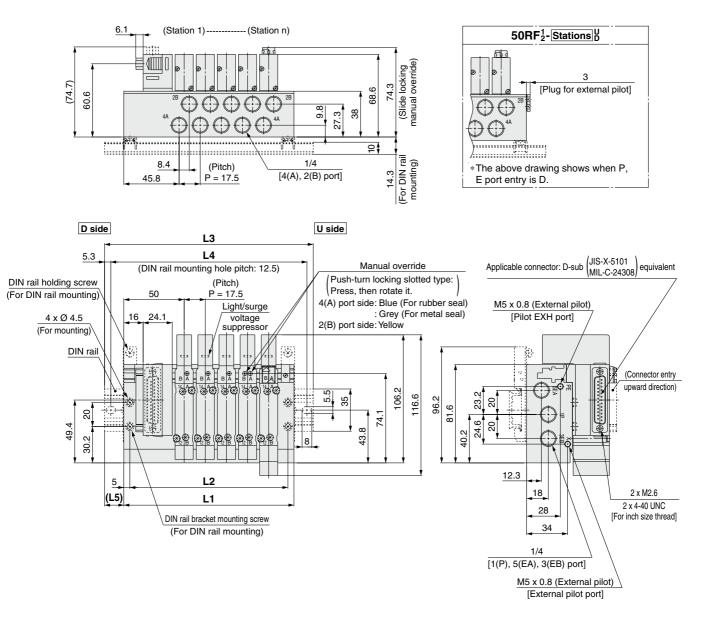


*: These figures show the "SS5Y5-50F2-05B-02".

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	123	135.5	148	173	185.5	210.5	223	235.5	260.5	273	298
L4	112.5	125	137.5	162.5	175	200	212.5	225	250	262.5	287.5
L5	17.5	15	12.5	16	13.5	17.5	15	12.5	16	13.5	17.5


Electin Metal Base SY3000/5000/7000 Series

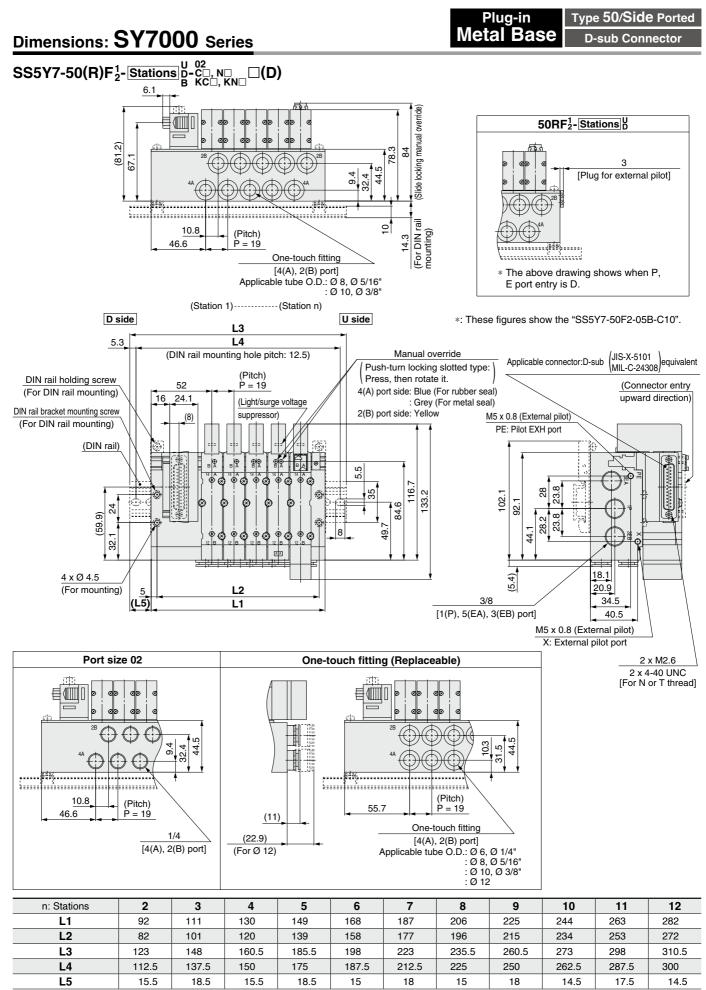

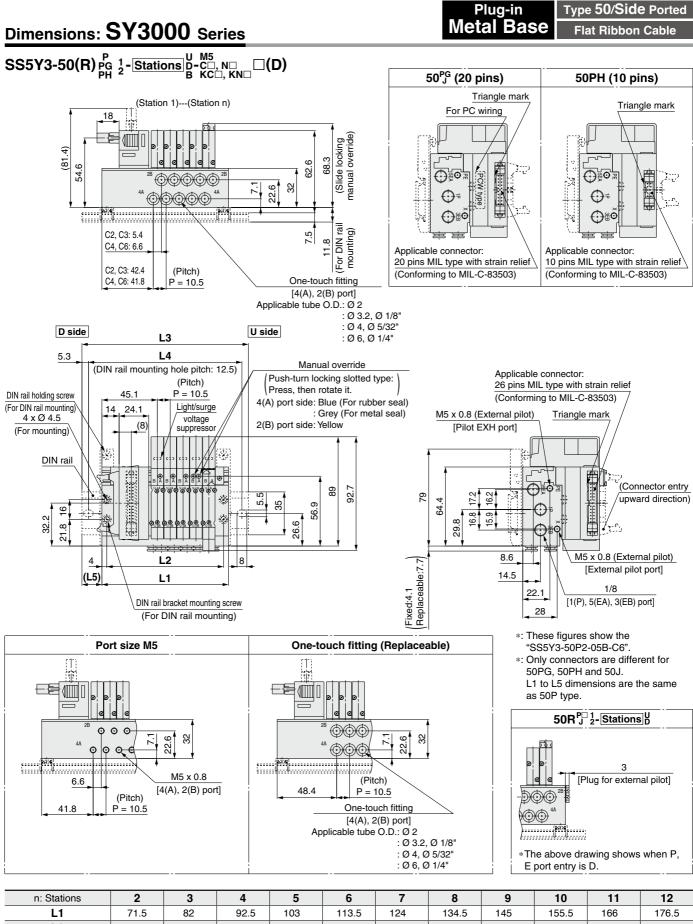

11. Otations	L 2	J		J	U		U	3	10		12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17
255					SMC	х 7	~	~			

Elligetin Metal Base SY3000/5000/7000 Series

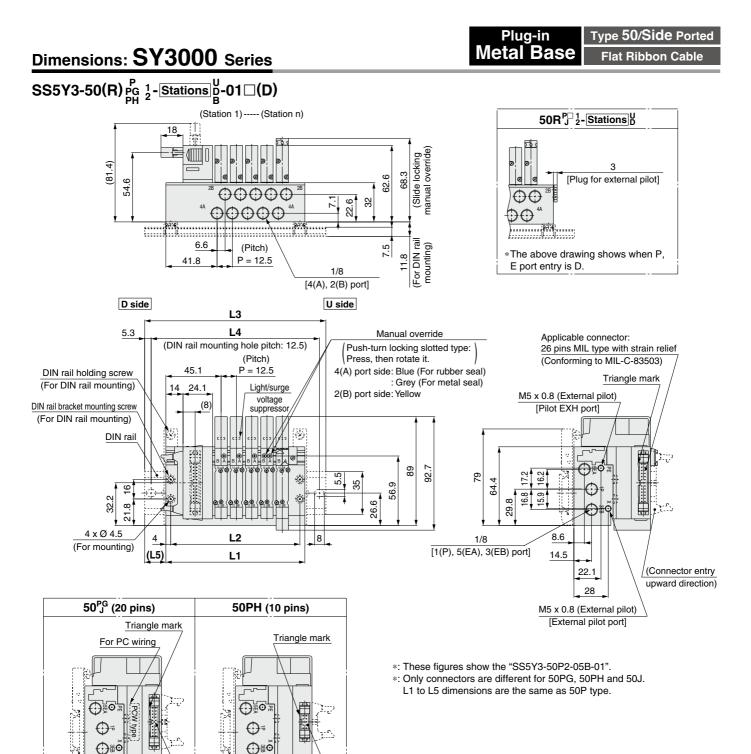

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5
L4	100	112.5	125	137.5	150	162.5	175	187.5	200	212.5	225
L5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5

Applicable connector:


20 pins MIL type with strain relief

(Conforming to MIL-C-83503)

Applicable connector:


10 pins MIL type with strain relief

(Conforming to MIL-C-83503)

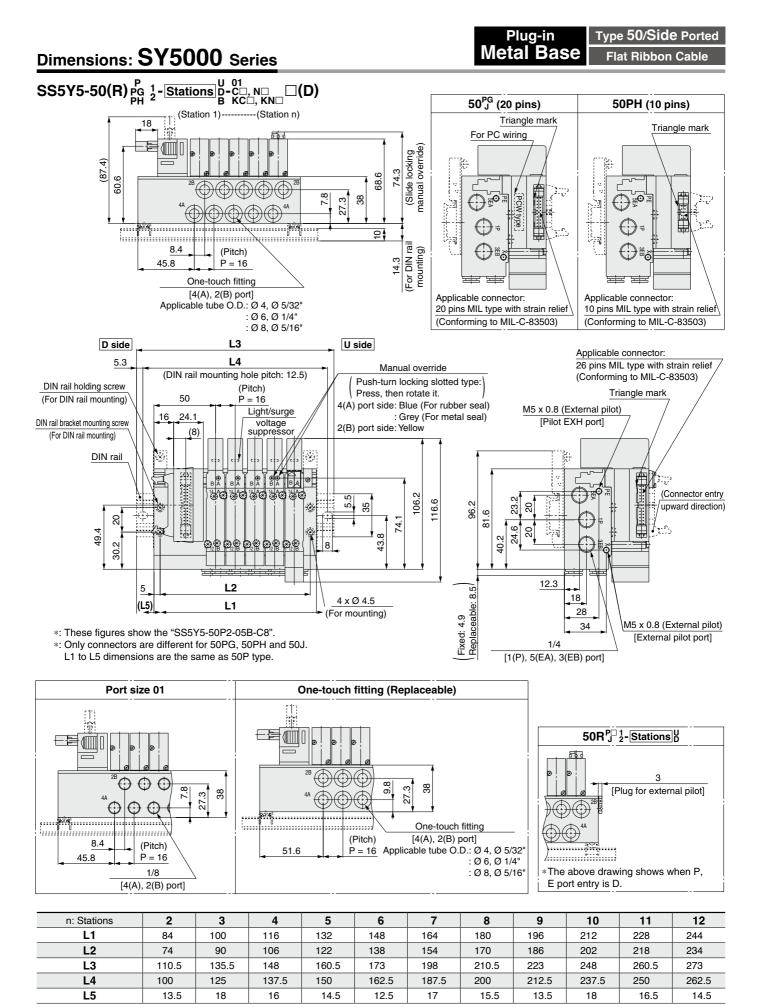


SMC

Elligetin Metal Base SY3000/5000/7000 Series

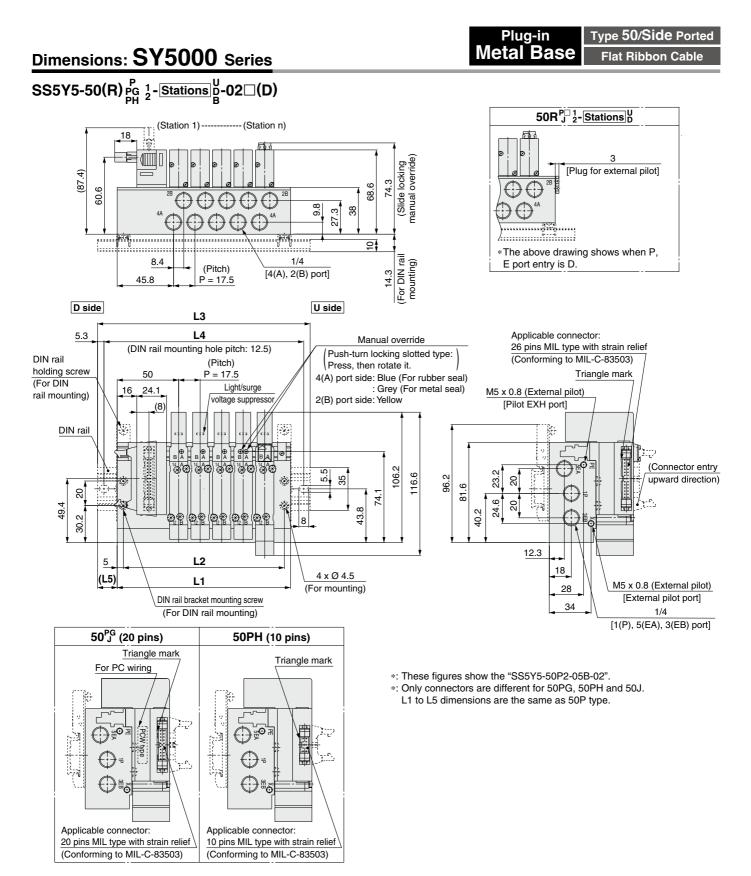

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	123	135.5	148	173	185.5	210.5	223	235.5	260.5	273	298
L4	112.5	125	137.5	162.5	175	200	212.5	225	250	262.5	287.5
L5	17.5	15	12.5	16	13.5	17.5	15	12.5	16	13.5	17.5

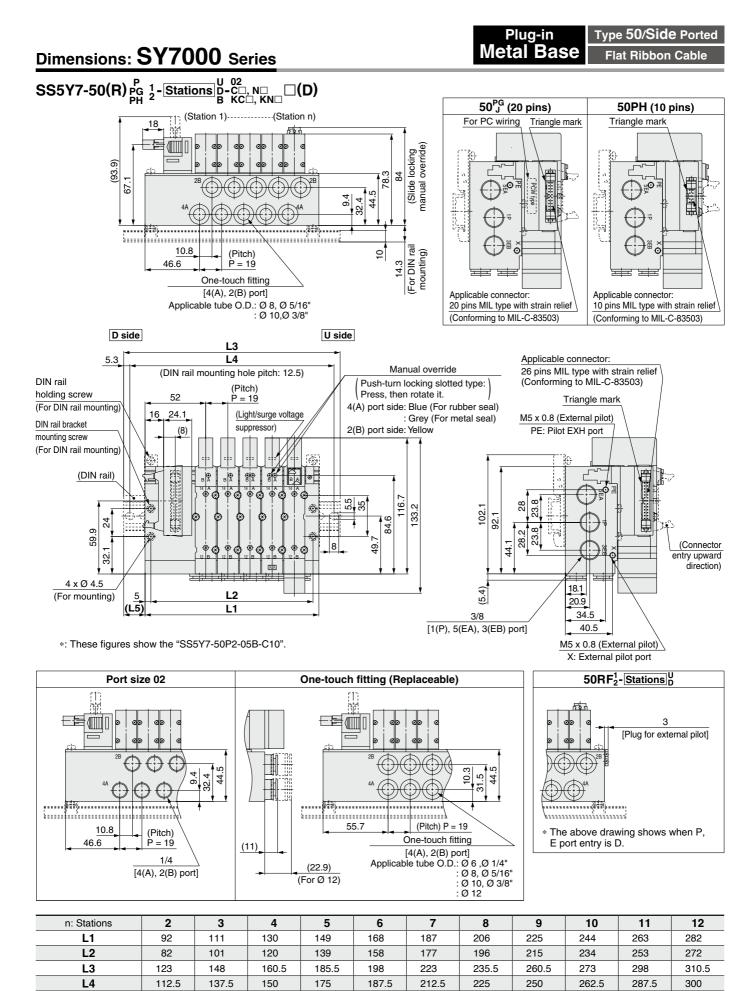

15.5

18.5

15.5

18.5



18

15


18

14.5

17.5

14.5

Elligetin Metal Base SY3000/5000/7000 Series

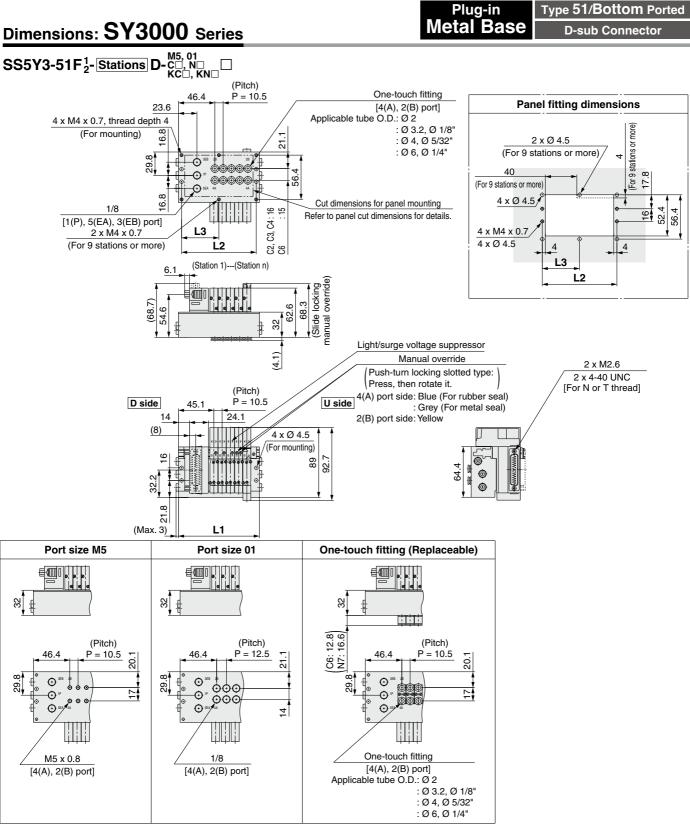


Port Sizes M5, C , N , KC , KN

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	—	—	—	—	—	—	—	68.5	73.8	79	84.3

Port Size 01

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	—	—	—	—	—	—	—	77.8	84	90.3	96.5



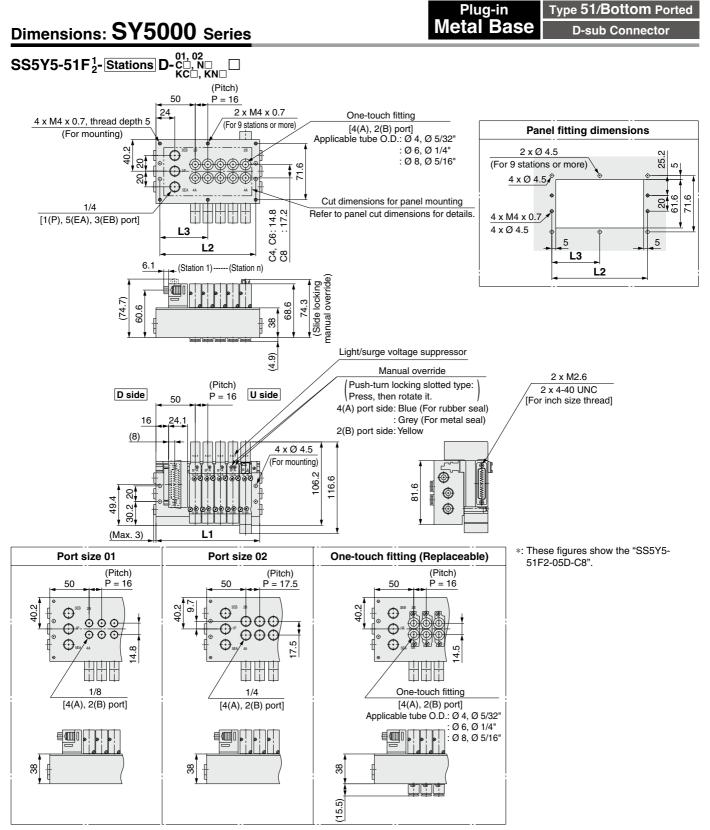

Port Sizes 01, C , N , KC , KN


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	—	—	—	—	—	—	—	93	101	109	117

Port Size 02


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	_	—	_	_	—	-	_	100.5	109.3	118	126.8



Electric Metal Base SY3000/5000/7000 Series

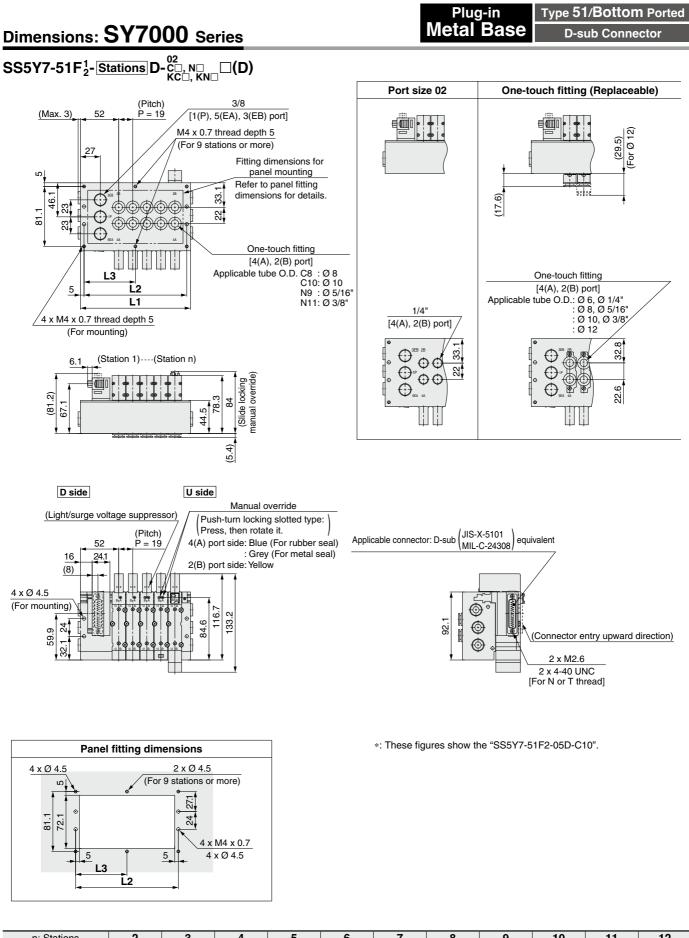

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	—	—	—	—	—	—	—	107.5	117	126.5	136

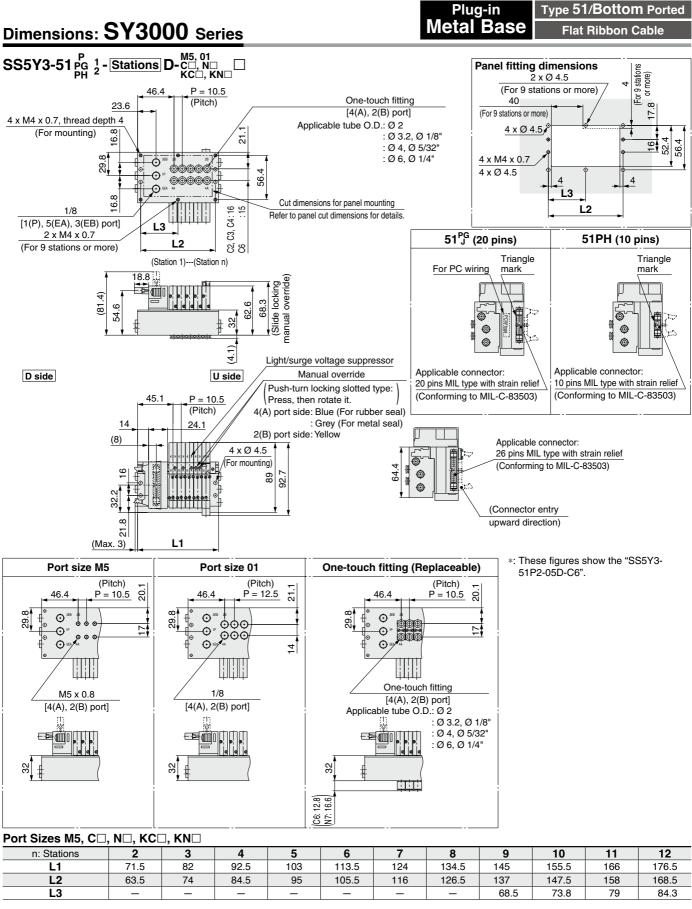


Port Size 01

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	—	—	—	—	—	—	—	77.8	84	90.3	96.5



Elligetin Metal Base SY3000/5000/7000 Series

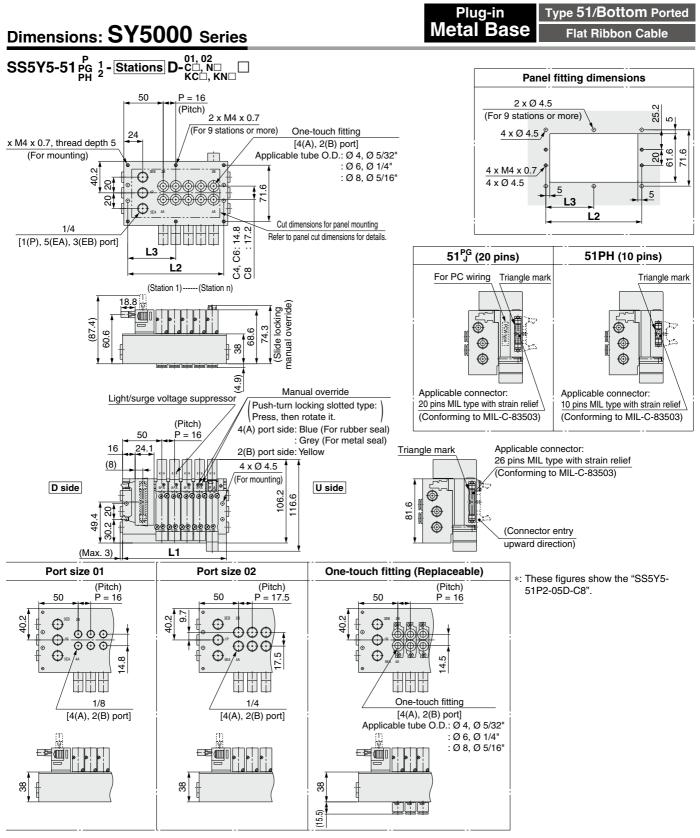


Port Sizes 01, C□, N□, KC□, KN□

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	—	_	_	_	_	—	_	93	101	109	117

Port Size 02

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	-	_	_	_	—	—	_	100.5	109.3	118	126.8

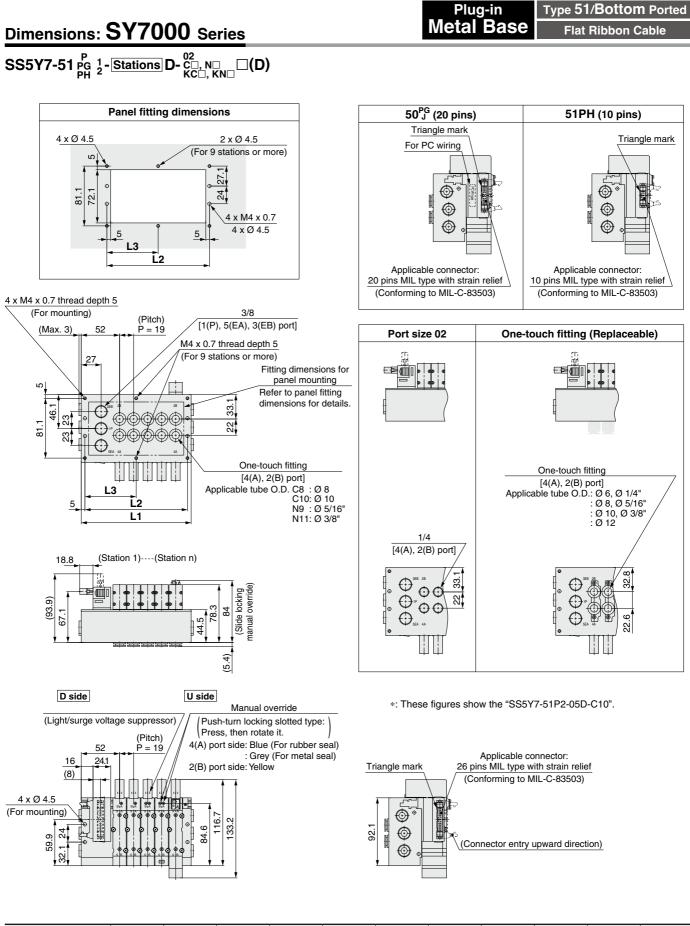

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	—	—	—	—	—	—	—	107.5	117	126.5	136

SMC



Plug-in Metal Base

D-sub Connector Flat Ribbon Cable

Type 52 Top Ported

3


5

7


S

SY3000/5000/7000 Series

How to Order Manifolds

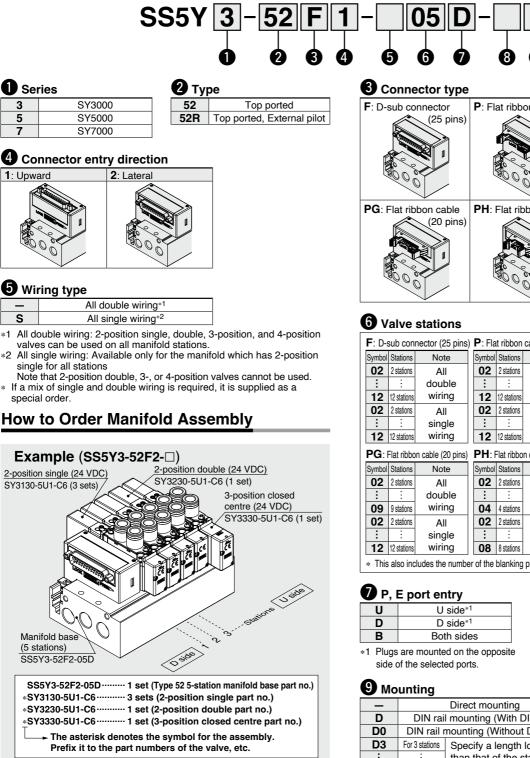

• For the valve arrangement, the valve closest to the D side is considered the 1st station. · Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

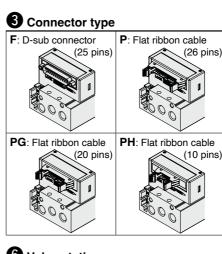

F : D-s	sub con	nector (25 pins)	P: Fla	t ribbon	cable (26 pins)
Symbol	Stations	Note	Symbol	Stations	Note
02	2 stations	All	02	2 stations	All
:	:	double	:		double
12	12 stations	wiring	12	12 stations	wiring
02	2 stations	All	02	2 stations	All
÷	÷	single	:	÷	single
12	12 stations	wiring	12	12 stations	wiring
PG:	Flat ribbo	on cable (20 pins)	PH: F	-lat ribbo	n cable (10 pins)
Symbol	Stations	Note	Symbol	Stations	Note
02	2 stations	All	02	2 stations	All
:	:	double	:		double
09	9 stations	wiring	04	4 stations	wiring
02	2 stations	All	02	2 stations	All
02					
:	÷	single		:	single

* This also includes the number of the blanking plate assembly.


8 Th	read type
—	Rc
00F	G
00N	NPT
00T	NPTF

<u> </u>	intening								
—		Direct mounting							
D	DIN rai	I mounting (With DIN rail)							
D0	DIN rail r	mounting (Without DIN rail)							
D3	For 3 stations	Specify a length longer							
:	÷	than that of the standard							
D12	For 12 stations	rail.							

Refer to page 319 for the fixation of DIN rail mounting type manifold.

⁄多SMC

Eugen Metal Base SY3000/5000/7000 Series

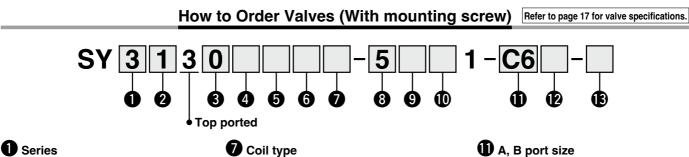

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

1	0 nonition	Single	
2	2-position	Double	
3		Closed centre	
4	3-position	Exhaust centre	
5		Pressure centre	
A *1	4-position	N.C./N.C.	
B *1	dual	N.O./N.O.	
C*1 3-port		N.C./N.O.	

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

-	
_	Internal pilot
R	External pilot

* When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure.

Back pressure check valve (Built-in valve type)

		None		
	Built-in			
	* Only the rubber seal type is available			

The back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

 Standard (0.7 MPa) 		
В	tAuick rasponse by s (Rail MBa)	
K *1	e High pressure type (1.0 MPa)	

—	Standard	
т	With power saving circuit	
•	(Continuous duty type)	
Be sure to calent the newer serving sireuit		

- t the power saving type if the valve is to be continuously energised for long periods of time.
- * Be careful of the energising time when the power saving circuit is selected. Refer to page 316 for details.

8 Rated voltage

-	U
5	24 VDC
6	12 VDC

Uight/surge voltage suppressor and common specification


Symbol	With light	Surge voltage suppressor	Common specification	
_	—	—		
R	—		Non-polar	
U	•			
S	_		Positive	
Z	•		common	
NS	_		Negative	
NZ	۲		common	

 For the non-polar type, be careful of surge voltage intrusion.

Refer to page 317 for details. Only "Z" and "NZ" types are available with a

power saving circuit.

Manual override

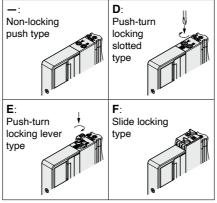

Refer to page 36 for the safety slide locking manual override.

Thread piping				
Symbol	Port size	Applicable series		
M5	M5 x 0.8	SY3000		
01	1/8	SY5000		
02	1/4	SY7000		

One-touch fitting (Metric)

A, B port	SY3000	SY5000	SY7000	
Ø 2	•	_	—	
Ø 3.2	•	_	_	
Ø 4			—	
Ø 6	•	•		
Ø 8	_			
Ø 10	_	—		
Ø 12	_	—		
	Ø 2 Ø 3.2 Ø 4 Ø 6 Ø 8 Ø 10	Ø 2 ● Ø 3.2 ● Ø 4 ● Ø 6 ● Ø 8 − Ø 10 −	$\begin{array}{c ccccccccccccccccccccccccccccccccccc$	

One-touch fitting (Inch)

		- /		
Symbol	A, B port	SY3000	SY5000	SY7000
N1	Ø 1/8"	•	—	_
N3	Ø 5/32"			—
N7	Ø 1/4"	•		
N9	Ø 5/16"	_		
N11	Ø 3/8"	_	_	

Thread type


-	
—	Rc
F	G
Ν	NPT
Т	NPTF


Only - is available for M5.


B Type of mounting screw

- /	U
_	Round head combination screw
В	Hexagon socket head cap screw
Κ	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)

- For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 290 for base gasket and mounting screw part numbers.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.



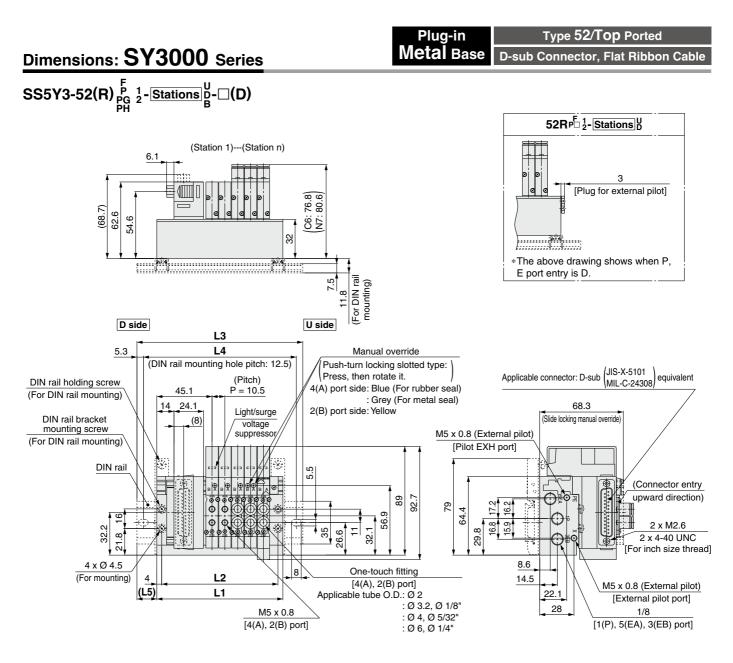


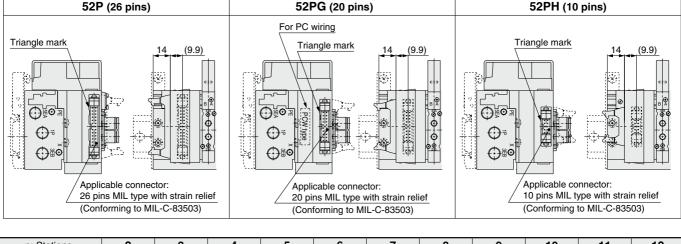

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17

SMC

Electin Metal Base SY3000/5000/7000 Series

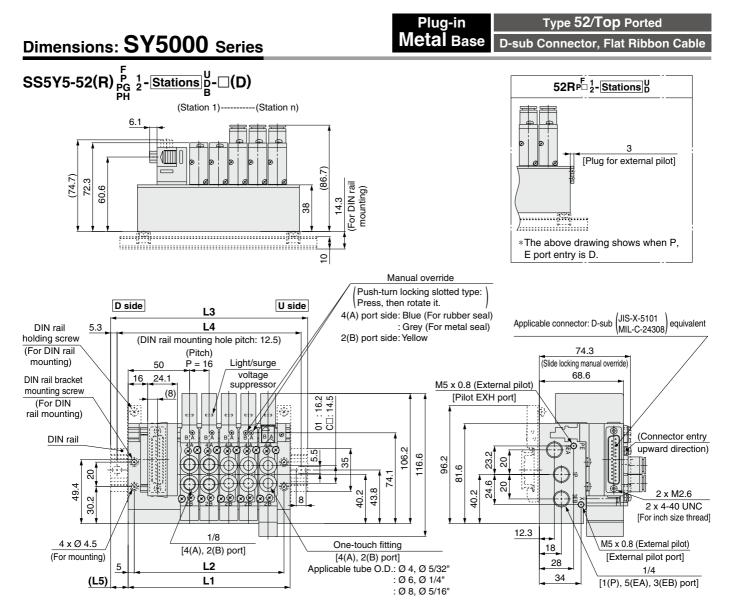


*: These figures show the "SS5Y5-52F2-05B".

52PH (10	pins)		52	PG (20 j	oins)		52P (26 pins)				
							ring Je mark				
Applicable connector: 10 pins MIL type with strain relief (Conforming to MIL-C-83503)				Applicable connector: 20 pins MIL type with strain relief (Conforming to MIL-C-83503)				Applicable connector: <u>26 pins MIL type with strain relief</u> (Conforming to MIL-C-83503)			
n: Stations	2	3	4	5	6	7	8	9	10	11	12

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	110.5	135.5	148	160.5	173	198	210.5	223	248	260.5	273
L4	100	125	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5
L5	13.5	18	16	14.5	12.5	17	15.5	13.5	18	16.5	14.5



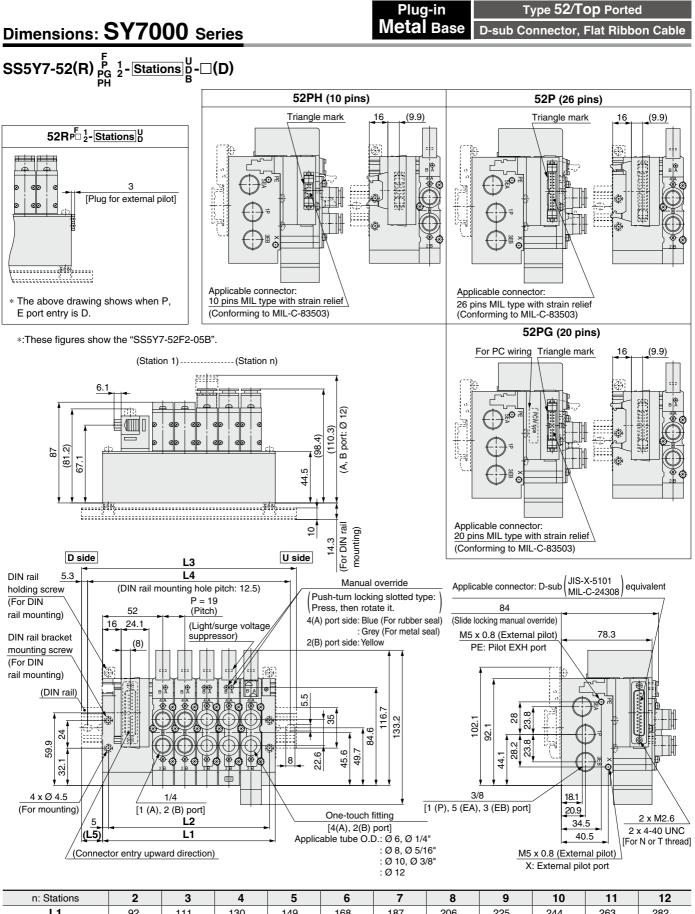

L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	123	148	160.5	185.5	198	223	235.5	260.5	273	298	310.5
L4	112.5	137.5	150	175	187.5	212.5	225	250	262.5	287.5	300
L5	15.5	18.5	15.5	18.5	15	18	15	18	14.5	17.5	14.5
271					SMC	х У					

Electrical Wiring Specifications

If alignment is not specified, the internal wiring is double wiring (connected to SOL. a and SOL. b) regardless of number of stations, valve and option types. If alignment is not specified, the internal wiring is double wiring (connected to SOL. a and SOL. b) regardless of number of stations, valve and option types. Connector terminal no.	D-sub connector						
Image: Station 1 Image: Station 2 Image: Station 3 Image: Station 4 Image: Station 3 Image: Station 5 Image: Station 4 Image: Station 5 Image: Station 7 Image: Station 7 <td< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td></td></td<>							
Lead wire no. Polarity no. colour marking Station 1 { SOL ao 1 (-) (+) 1 White None Station 2 { SOL ao 2 (-) (+) 3 Green None Station 2 { SOL bo 15 (-) (+) 3 Green None Station 3 { SOL bo 16 (-) (+) 5 Greey None Station 4 { SOL bo 16 (-) (+) 5 Greey None Station 5 { SOL bo 17 (-) (+) 7 Blue None Station 5 { SOL bo 18 (-) (+) 7 Blue None Station 6 { SOL bo 19 (-) (+) 7 Blue None Station 7 { SOL bo 20 (-) (+) 10 Purple None Station 10 { SOL bo 21 (-) (+)	140 01 W 150 03 160 160 04 170 170 05 180 190 07 200 200 08 210 2200 01 230 230 011 240 240 012 4	viring umbe	(connect er of stati	ed to SOL. a a ons, valve and	and SOL. b)	regardless	
Station 1 { SOL b 14 (-) (+) Station 2 { 1 White None Station 2 { 2 Brown None Station 3 { 3 Green None Station 3 { 3 Green None Station 3 { <td></td> <td>vire no</td> <td>. Pol</td> <td>arity</td> <td></td> <td></td> <td>Dot marking</td>		vire no	. Pol	arity			Dot marking
Station 1	Station 1	1	(-)	(+)	1	White	None
Station 2 {	[[[[[[[[[[[[[[[[[[[(–)	(+)			
Station 3 {	Station 2	-			-		
Station 3 { Sol. boost (-) (+) 5 Grey None Station 4 { Sol. boost (-) (+) 6 Pink None Station 5 { Sol. boost (-) (+) 7 Blue None Station 5 { Sol. boost (-) (+) 7 Blue None Station 5 { Sol. boost (-) (+) 8 Red None Station 6 { Sol. boost (-) (+) 9 Black None Station 6 { Sol. boost (-) (+) 9 Black None Station 7 { Sol. boost (-) (+) 10 Purple None Station 7 { Sol. boost (-) (-) (+) 11 Grey Pink Station 8 { Sol. boost (-) (-) (+) 13 White Green Station 10 { Sol. boost (-) (-) (+) 16 Yellow Brown Station 11 { Sol. boost (-) (-) (+) 18 Grey Pink Brown Station 12 { Sol. boost (-) (-) (+	SOL a		• •	. ,	-		
Station 4	Station 3		• •	. ,			
Station 4 { Sol. bo 17 (-) (+) Station 5 { Sol. bo 18 (-) (+) 7 Blue None Station 5 { Sol. bo 18 (-) (+) 9 Black None Station 6 { Sol. bo 19 (-) (+) 10 Purple None Station 7 { Sol. bo 19 (-) (+) 11 Grey Pink Station 7 { Sol. bo 20 (-) (+) 12 Red Blue Station 8 { Sol. bo 20 (-) (+) 12 Red Blue Station 8 { Sol. bo 21 (-) (+) 14 Brown Green Station 9 { Sol. bo 22 (-) (+) 16 Yellow Brown Station 10 { Sol. bo 23 (-) (+) 18 Grey Brown Station 11 { Sol. bo 22 (-) (+) 18 Grey Brown Station 12 { COM. 13 </td <td>SOL. a</td> <td></td> <td>. ,</td> <td></td> <td>-</td> <td>,</td> <td></td>	SOL. a		. ,		-	,	
Station 5 {	Station 4 Sol. b		• •	. ,	-		
Station 5 1 Soll books 18 (-) (+) Station 6 { Soll books 6 (-) (+) Station 6 { Soll books 19 (-) (+) Station 7 { Soll books 19 (-) (+) Station 7 { Soll books 19 (-) (+) Station 7 { Soll books 19 (-) (+) Station 8 { Soll books 20 (-) (+) 11 Grey Station 8 { Soll books 20 (-) (+) 13 White Green Station 9 { Soll books 21 (-) (+) 15 White Yellow Station 10 { Soll books 22 (-) (+) 16 Yellow Brown Station 11 { Soll books 23 (-) (+) 18 Grey Brown Station 12 { Soll books 24 (-) (+) 20 Pink Brown Station 12 { COM. 13 (+) (-) 23 White	SOL. a	5	· · /	. ,			
Station 6 {	[18	(-)	(+)	-		
statum { 1000 Ju 0 0 19 (-) (+) 11 Grey Pink Station 7 { 000 Ju 0 0 20 (-) (+) 11 Grey Pink Station 8 { 000 Ju 0 0 20 (-) (+) 12 Red Blue Station 8 { 000 Ju 0 0 20 (-) (+) 13 White Green Station 9 { 000 Ju 0 0 22 (-) (+) 14 Brown Green Station 9 { 000 Ju 0 0 22 (-) (+) 16 Yellow Brown Station 10 { 000 Ju 0 0 22 (-) (+) 16 Yellow Brown Station 10 { 000 Ju 0 0 23 (-) (+) 18 Grey Brown Station 11 { 000 Ju 0 0 23 (-) (+) 18 Grey Brown Station 12 { 000 Ju 0 0 23 (-) (+) 19 White Pink Station 12 { 000 Ju 0 0 23 (-) (+) 19 White Pink Station 12 { 000 Ju 0 0 23 (-) (+) 20 Pink Brown Station 12 { 000 Ju 0 0 23 (-) (+) 20 Pink Brown Station 12 { 000 Ju 0 0 23 (-) (+) 21 White Blue COM. 13 (+) (-) Positive common Negative 23 White Red 24 Brown Red 25 White Black * Connector made in conformity with DIM27100	Station 6	6	(-)	(+)	-		
Station 7 {	[[m 000.00	19	(–)	(+)	-	· ·	
Station 8 { SOL a ₀ 8 (-) (+) 13 White Green Station 8 { SOL a ₀ 8 (-) (+) 14 Brown Green Station 9 { Sol a ₀ 9 (-) (+) 15 White Green Station 9 { Sol a ₀ 9 (-) (+) 16 Yellow Brown Station 10 { Sol a ₀ 10 (-) (+) 17 White Grey Station 11 { Sol a ₀ 11 (-) (+) 18 Grey Brown Station 11 { Sol a ₀ 11 (-) (+) 19 White Pink Station 12 { Sol a ₀ 12 (-) (+) 20 Pink Brown Station 12 { COM. 13 (+) (-) 23 White Red 22 Brown Blue 23 White Black 24 Brown Red 24 Brown Red 25 White Black 25 White	Station 7		. ,			,	
Station 8 { Sol. boords 21 (-) (+) Station 8 { Sol. boords 9 (-) (+) Station 9 { Sol. boords 9 (-) (+) Station 10 { Sol. boords 22 (-) (+) Station 10 { Sol. boords 10 (-) (+) Station 10 { Sol. boords 10 (-) (+) Station 11 { Sol. boords 23 (-) (+) Station 11 { Sol. boords 23 (-) (+) Station 12 { Sol. boords 24 (-) (+) Station 12 { COM. or 13 (+) (-) 20 Pink Brown COM. or 13 (+) (-) (+) 22 Brown Blue 22 Brown Red 24 Brown Red 24 Brown Red 25 White Black * When using a valve with no polarity, either positive * Connector made in conformity * th DIN47100			. ,	. ,	-		
Station 9 { Sol. a or g (-) (+) (+) (+) (+) (+) (+) (+) (+) (+) (+	Station 8 < Sol b				-		
Station 9 { Sol. boo 22 (-) (+) 16 Yellow Brown Station 10 { Sol. boo 23 (-) (+) 17 White Grey Station 10 { Sol. boo 23 (-) (+) 18 Grey Brown Station 11 { Sol. boo 24 (-) (+) 19 White Pink Station 12 { Sol. boo 25 (-) (+) 20 Pink Brown Station 12 { COM. o 13 (+) (-) 24 Brown Red 22 Brown Blue 23 White Red 24 Brown Red 24 Brown Red 24 Brown Red 25 White Black * When using a valve with no polarity, either positive * Connector made in conformity * * * * *	SOL. a		• •	. ,	-	-	
Station 10 {	Station 9	-	• •	. ,	-		
Station 10 { Sol_bo 23 (-) (+) Station 10 { Sol_bo 23 (-) (+) Station 11 { Sol_bo 24 (-) (+) Station 12 { Sol_bo 24 (-) (+) Station 12 { Sol_bo 25 (-) (+) COM. 13 (+) (-) 23 When using a valve with no polarity, either positive Negative with no polarity, either positive * Connector made in conformity with DIM/27100	SOL. a						
Station 11 {		23			-		
Station 12 {	Station 11	11	(-)	(+)			
Station 12 { Sol. bo 25 (-) (+) 21 White Blue COM. 13 (+) (-) 23 White Red Positive common Negative common 25 White Blue * When using a valve with no polarity, either positive Verter positive with DIM/2700 Negative with DIM/2700	1 901 0				-		
* When using a valve with no polarity, either positive 25 (-) 10 10 10 * When using a valve with no polarity, either positive * Connector made in conformity with DIM/27100 * Connector made in conformity	Station 12		• •				-
COM. 13 (+) (-) Positive common Negative common 24 Brown Red * When using a valve with no polarity, either positive * Connector made in conformity with DIM/2700 * Connector made in conformity		25	(-)	(+)			
Positive common Negative common 24 Brown Red * When using a valve with no polarity, either positive * Connector made in conformity with DIM/17100 * Connector made in conformity	COM						
Positive common Negative common 25 White Black * When using a valve with no polarity, either positive with DIM/2700 * Connector made in conformity with DIM/2700 * Connector made in conformity	00101.	13	(+)	(-)			
* When using a valve with no polarity, either positive * Connector made in conformity with DIM/27100							
		no pol	arity, eith	er positive	* Connecto	r made in co	

Connector Cable


GVVZS3000-21A-[] [IP40]

D-sub connector/cable

Cable length (L)	Assembly part no.	Note
1 m	GVVZS3000-21A-160	60°angled
3 m	GVVZS3000-21A-260	60°angled
5 m	GVVZS3000-21A-360	60°angled
8 m	GVVZS3000-21A-460	60°angled
3 m	GVVZS3000-21A-2	Standard
5 m	GVVZS3000-21A-3	Standard
8 m	GVVZS3000-21A-4	Standard

Shielded cable

Cable length (L)	Assembly part no.	Note
1 m	GVVZS3000-21A-1S	Shieled
3 m	GVVZS3000-21A-2S	Shieled
5 m	GVVZS3000-21A-3S	Shieled
8 m	GVVZS3000-21A-4S	Shieled
20 m	GVVZS3000-21A-5S	Made to order

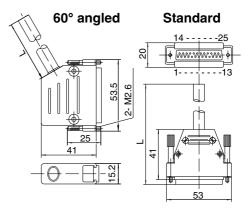


Electrical characteristics

Item	Property
Conductor resistance $\Omega/km,$ 20 $^{\circ}\text{C}$	Max. 57
Voltage limit V, 5 minute, AC	1500
Insulation resistance M Ω /km, 20 °C	20


Standard D-Sub connector cable assembly (option) AXT100-DS25- 010 050 (According to MIL-C24308)

^{*} Please contact SMC for details.

Electrical Wiring Specifications

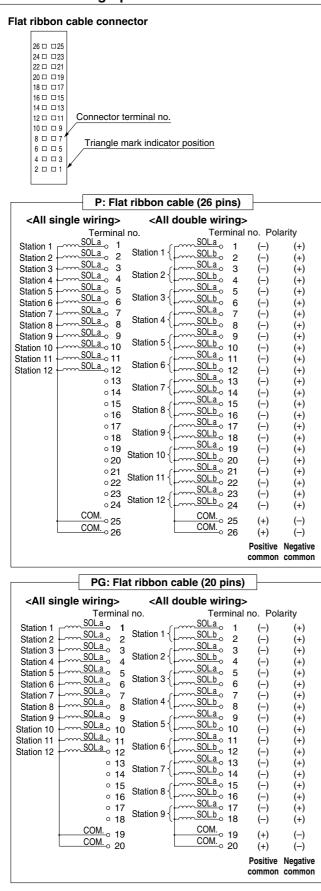

 When using a valve with no polarity, either positive common or negative common can be used.

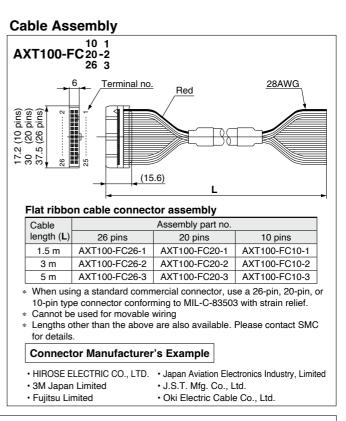


$\begin{array}{c c c c c c c c c c c c c c c c c c c $		PH: Fla	t ribbon cable (10 pins)		
$\begin{array}{c ccccccccccccccccccccccccccccccccccc$	<all singl<="" th=""><th>e wiring></th><th><all double="" th="" wiring<=""><th>j></th><th></th></all></th></all>	e wiring>	<all double="" th="" wiring<=""><th>j></th><th></th></all>	j>	
rositive negative	Station 2 Station 3 Station 4 Station 5 Station 6 Station 7	SOLa 1 SOLa 2 SOLa 3 SOLa 4 SOLa 5 SOLa 6 SOLa 7 SOLa 8 COM. 9	Station 1 $\begin{cases} -\frac{\text{SOLa}}{\text{SOLb}} & 1\\ -\frac{\text{SOLb}}{\text{SOLb}} & 2\\ \end{array}$ Station 2 $\begin{cases} -\frac{\text{SOLa}}{\text{SOLb}} & 3\\ -\frac{\text{SOLb}}{\text{SOLb}} & 4\\ \end{array}$ Station 3 $\begin{cases} -\frac{\text{SOLa}}{\text{SOLb}} & 5\\ -\frac{\text{SOLb}}{\text{SOLb}} & 6\\ \end{array}$ Station 4 $\begin{cases} -\frac{\text{SOLa}}{\text{SOLb}} & 7\\ -\frac{\text{SOLb}}{\text{SOLb}} & 8\\ \hline \end{array}$		(+) (+) (+) (+) (+) (+) (+) (+)





How to Order Manifolds

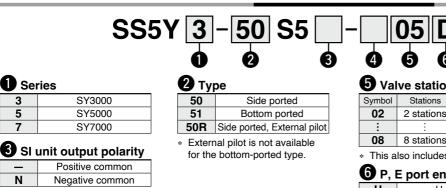

Wiring type

Series

3

5 7

Ν

Type 50

Type 51 Bottom Ported

Side Ported

_	All double wiring*1
S	All single wiring ^{*2}


SY3000

SY5000

SY7000

- *1 All double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations.
- *2 All single wiring: Available only for the manifold which has 2-position single for all stations
- Note that 2-position double, 3-, or 4-position valves cannot be used. * If a mix of single and double wiring is required, it is supplied as a special order.

How to Order Manifold Assembly

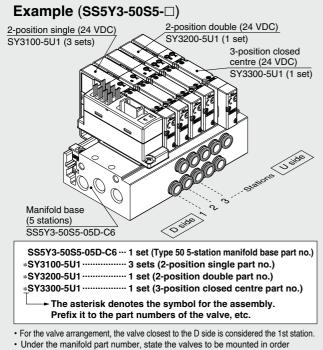

starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

* When mixing top-ported configurations, select from those listed on page 285. In such cases, use caution as there is also output on the A and B ports on the base side. Specify on the manifold specification sheet if plugs are required for the A and B ports on the base side.

5 Valve stations

Symbol	Stations	Note	Symbol	Stations	Note
02	2 stations	All double	02	2 stations	All single
:	:		:	÷	0
08	8 stations	wiring	12	12 stations	wiring

Plugs are mounted on the opposite

Only D side is available for the type

side of the selected ports.

51 bottom-ported type.

* This also includes the number of the blanking plate assembly.

C6

6 P, E port entry

U side* U D side*1*2 D *2 В Both sides

🛛 A, B port size

Thread piping

A, B port	SY3000	SY5000	SY7000
M5 x 0.8	•	—	—
1/8			—
1/4	—		
	M5 x 0.8 1/8	M5 x 0.8 ● 1/8 ●	M5 x 0.8 ● − 1/8 ● ●

One-touch fitting (Metric)

<u> </u>	ie-iou	ch hung (Met					
S	/mbol	A, B port	SY3000	SY5000	SY7000		
	C2	Ø 2	•	_	—		
	C3	Ø 3.2	•	-	—		
Fixed	C4	Ø 4	•	•	—		50
і. Ш	C 6	Ø 6	•	•	—		<i>Jok</i>
	C8	Ø 8	_	•	•	JC JC	pe
	C10	Ø 10	_	_	•		
	KC2	Ø 2	•	-	—	Type 50	Type 51
	КС3	Ø 3.2	٠	_	—	(Side ported)	(Bottom ported)
e	KC4	Ø 4	•	•	—		
Replaceable	KC6	Ø 6	•	•	•		
plac	KC8	Ø 8	-	•	•		
Be	KC10	Ø 10	—	—	•		
	KC12	Ø 12	—	-	•		
	M *1	Mixed sizes	•	•	•		
Ρ,	E port s	size (Thread piping)	1/8	1/4	3/8		

One-touch fitting (Inch)

		en nang (ine	ŕ				
Sy	mbol	A, B port	SY3000	SY5000	SY7000		
	N1	Ø 1/8"		-	-		
5	N3	Ø 5/32"			-		
Fixed	N7	Ø 1/4"			-	"/	0 <u> </u>
ш	N9	Ø 5/16"	-		•	Ű	HO ^{re}
	N11	Ø 3/8"	-	-	•	×	I A A A A A A A A A A A A A A A A A A A
	KN1	Ø 1/8"	•	-	-	Type 50	Type 51
ole	KN3	Ø 5/32"			-	(Side ported)	(Bottom ported)
Replaceable	KN7	Ø 1/4"			\bullet		
pla	KN9	Ø 5/16"	—		\bullet		
Be	KN11	Ø 3/8"	-	_			
	M *1	Mixed sizes					1616
Ρ,	E port s	size (Thread piping)	1/8	1/4	3/8		

*1 When ports are of mixed sizes, indicate the piping specifications on the manifold specification sheet.



Elligen Metal Base SY3000/5000/7000 Series

8 Thread type		
_		Rc
F		G

Ν

т

G

NPT NPTF

9	Mounting
---	----------


_		Direct mounting	
D	DIN rail mounting (With DIN rail)		
D0	DIN rail mounting (Without DIN rail)		
D3	For 3 stations	Specify a length longer	
÷	-	than that of the standard	
D12	For 12 stations rail.		

Only direct mounting is available for the type 51 bottom-ported type.

Refer to page 319 for the fixation of DIN rail mounting type manifold.

For details on the EX510 Gateway Type Serial Transmission System, refer to the Web Catalogue and the Operation Manual. Please download the Operation Manual via the SMC website, https://www.smc.eu

How to Order Valves (With mounting screw) Refer to page 17 for valve specifications.



Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

1	2 position	Single
2	2-position	Double
3		Closed centre
4	3-position	Exhaust centre
5		Pressure centre
A *1	4-position dual 3-port	N.C./N.C.
B *1		N.O./N.O.
C *1	uuai 5-port	N.C./N.O.

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

—	Internal pilot	
R	External pilot	
* When selecting the external pilot specification for the		

4-position dual 3-port valve, pay attention to the pilot pressure.

5 Back pressure check valve (Built-in valve type)

-	None						
Н	Built-in						
* Only the rubber seal type is available							

- The back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

-	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
K *1	High pressure type (1.0 MPa)

Only the metal seal type is available for the high pressure type.

Coil type

_	Standard
Т	With power saving circuit (Continuous duty type)
* Be su	re to select the power saving circuit

- type if the valve is to be continuously energised for long periods of time.
- Be careful of the energising time when the power saving circuit is selected. Refer to page 316 for details.

8 Rated voltage


24 VDC 5

Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification			
R	_		Non-polar			
U	•		Νοπ-ροιαί			
S	_	•	Positive common			
Z	•	-	FUSILIVE COMMON			
NS	—		Negative common			
NZ	\bullet		Negative continion			

 Only "Z" and "NZ" types are available with a power saving circuit. Select "R," "U," "S," or "Z" for the valve when the SI unit output polarity is — (positive common). Select "R," "U," "NS," or — ("NZ of the valve when the SI unit output polarity is N (negative common).

Manual override

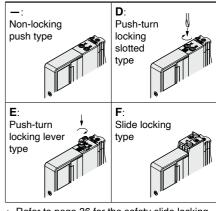



Refer to page 36 for the safety slide locking manual override.

D Type of mounting screw

_	Round head combination screw
В	Hexagon socket head cap screw
Κ	Round head combination screw (Drop prevention type)
Н	Hexagon socket head cap screw (Drop prevention type)


- * For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 290 for base gasket and mounting screw part numbers. "B" and "H" cannot be selected for the
- individual SUP/EXH spacer assembly, interface regulator, or double check spacer assembly with residual pressure release valve.



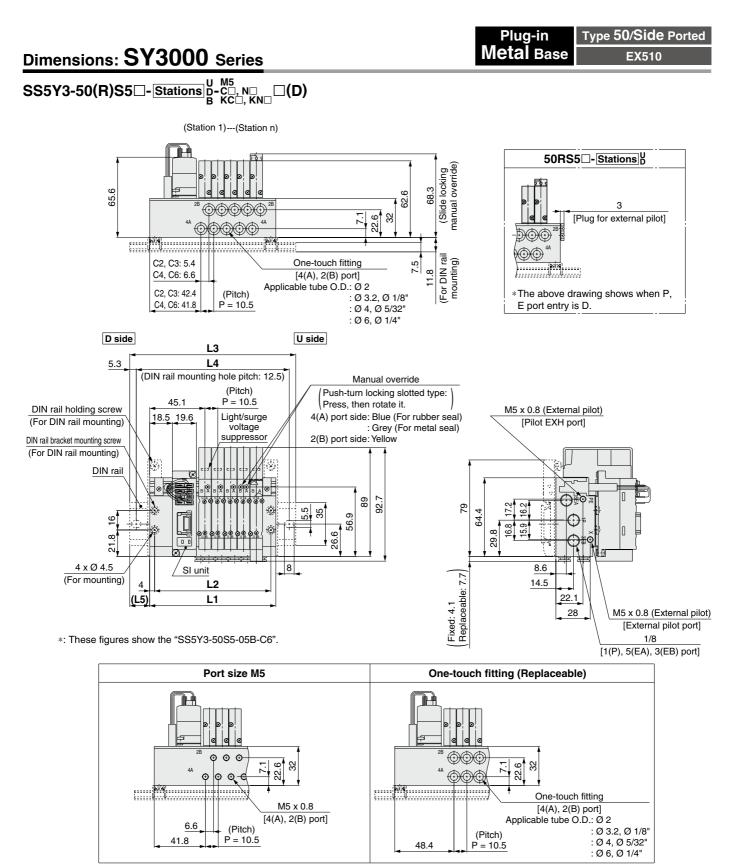


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17

Elucetin Metal Base SY3000/5000/7000 Series

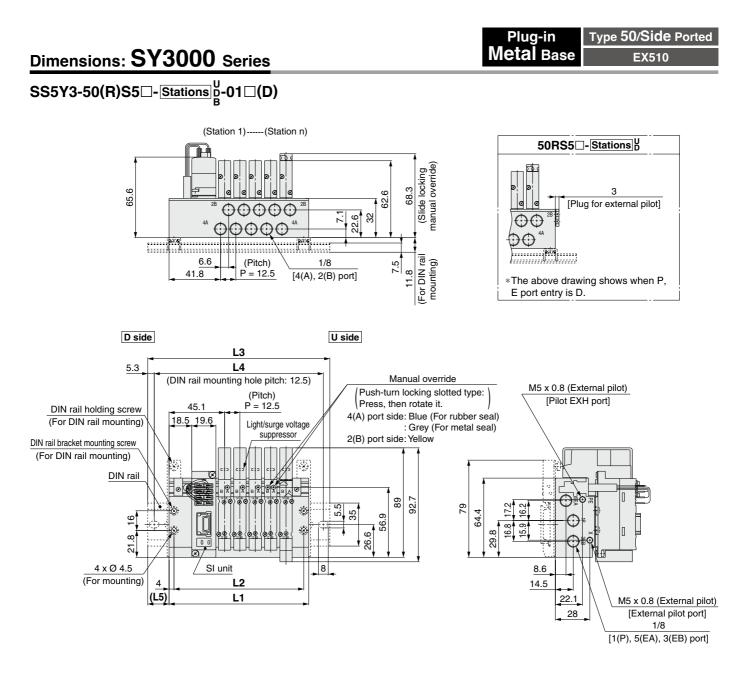

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5
L4	100	112.5	125	137.5	150	162.5	175	187.5	200	212.5	225
L5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5

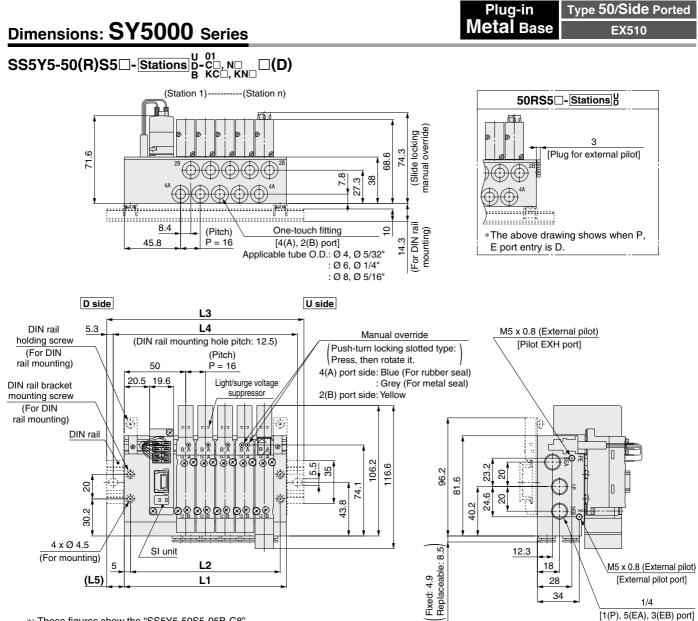

 $\ast:$ These figures show the "SS5Y5-50S5-05B-C8".

Port size 01	One-touch fitting (Replaceable)
$ \begin{array}{c} $	$\begin{array}{c} & & & \\ & & & & \\ & & & \\ & & & & \\$

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	110.5	135.5	148	160.5	173	198	210.5	223	248	260.5	273
L4	100	125	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5
L5	13.5	18	16	14.5	12.5	17	15.5	13.5	18	16.5	14.5




Elucetin Metal Base SY3000/5000/7000 Series

Plug-in Metal Base Type 50/Side Ported Dimensions: SY5000 Series EX510 SS5Y5-50(R)S5 - Stations 2-02 (D) (Station 1) ----- (Station n) 50RS5 - Stations D ₩**₽** 5 6 5 (Slide locking manual override) 3 [Plug for external pilot] 74.3 71.6 68.6 Æ 9.8 27.3 38 89.8 _B-14 ; ü...ü U U (For DIN rail mounting) 얻 *The above drawing shows when P, 8.4 1/4 (Pitch) [4(A), 2(B) port] 14.3 E port entry is D. 45.8 P = 17.5 D side U side L3 M5 x 0.8 (External pilot) L4 5.3 Manual override [Pilot EXH port] (DIN rail mounting hole pitch: 12.5) DIN rail holding screw Push-turn locking slotted type: (Pitch) P = 17.5 (For DIN rail mounting) Press, then rotate it. 50 4(A) port side: Blue (For rubber seal) Light/surge voltage : Grey (For metal seal) 20.5 19.6 DIN rail bracket mounting screw suppressor 2(B) port side: Yellow (For DIN rail mounting) DIN rail ٢ 长 F A O 106.2 116.6 3.5 ٢ 96.2 23.5 20 Ĩ 81.6 20 74.1 12 24.6 20 43.8 40.2 30.2 ¢ $(\bigotimes \otimes$ 8 4 x Ø 4.5 SI unit 12.3 (For mounting) 1/4 L2 5 18 M5 x 0.8 (External pilot) [1(P), 5(EA), 3(EB) port] (L5) L1 28 [External pilot port]

*: These figures show the "SS5Y5-50S5-05B-02".

34


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	123	135.5	148	173	185.5	210.5	223	235.5	260.5	273	298
L4	112.5	125	137.5	162.5	175	200	212.5	225	250	262.5	287.5
L5	17.5	15	12.5	16	13.5	17.5	15	12.5	16	13.5	17.5

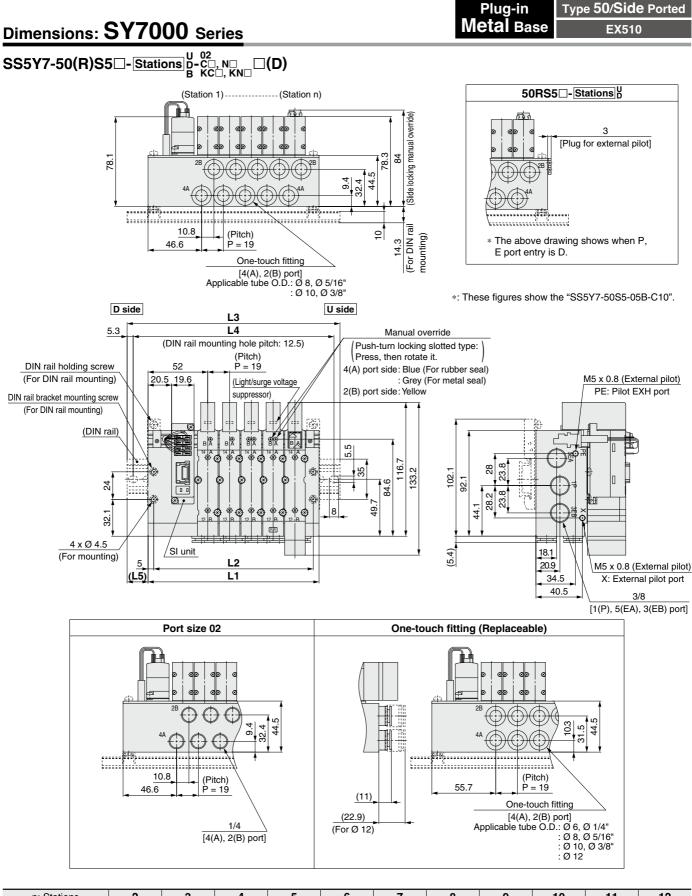

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	123	148	160.5	185.5	198	223	235.5	260.5	273	298	310.5
L4	112.5	137.5	150	175	187.5	212.5	225	250	262.5	287.5	300
L5	15.5	18.5	15.5	18.5	15	18	15	18	14.5	17.5	14.5
001	·				-						

SMC

Elligetin Metal Base SY3000/5000/7000 Series

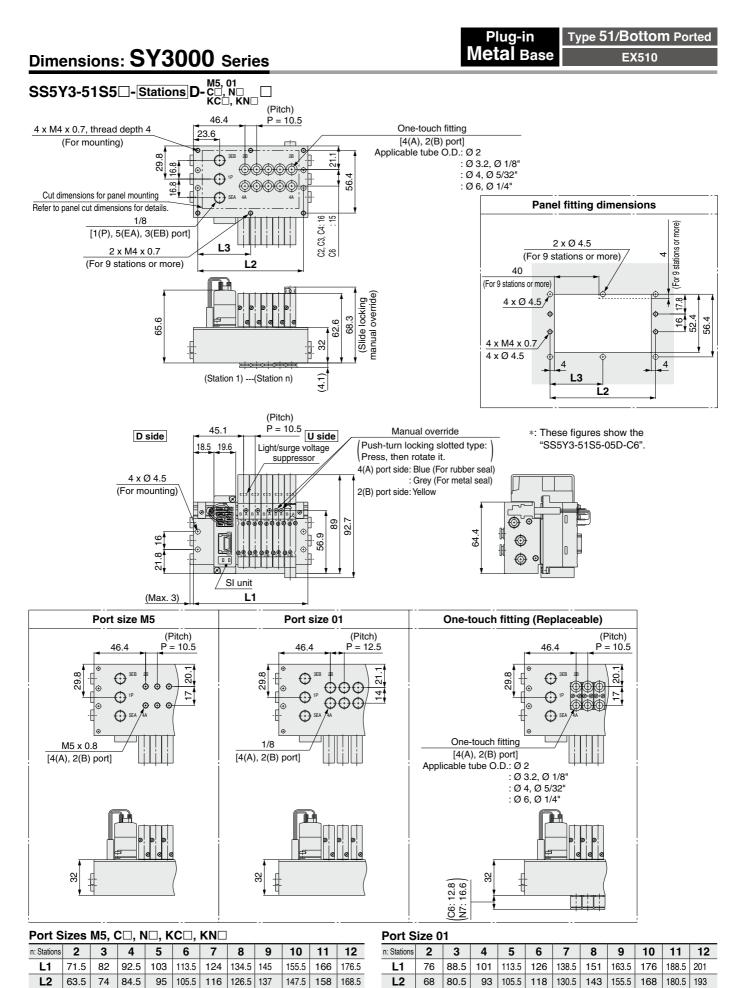

L3

84.3

68.5

73.8

79


L3

_

77.8

84

90.3

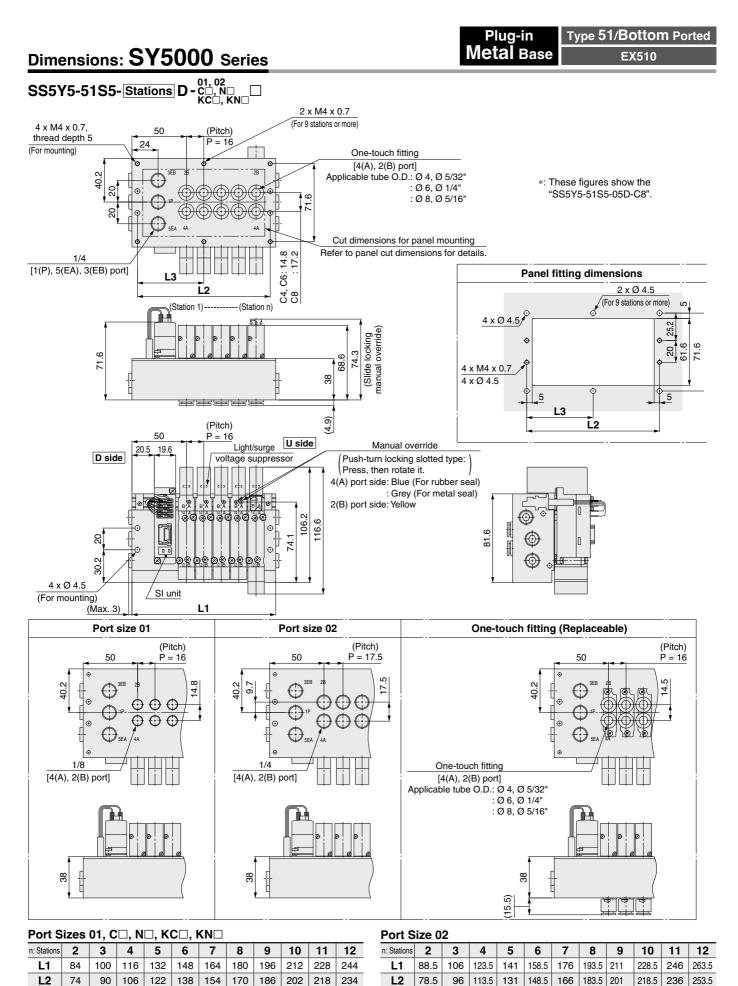

_	—	93	101	109		

_



L3

_


100.5 109.3

118

126.8

117

Elucetic Metal Base SY3000/5000/7000 Series

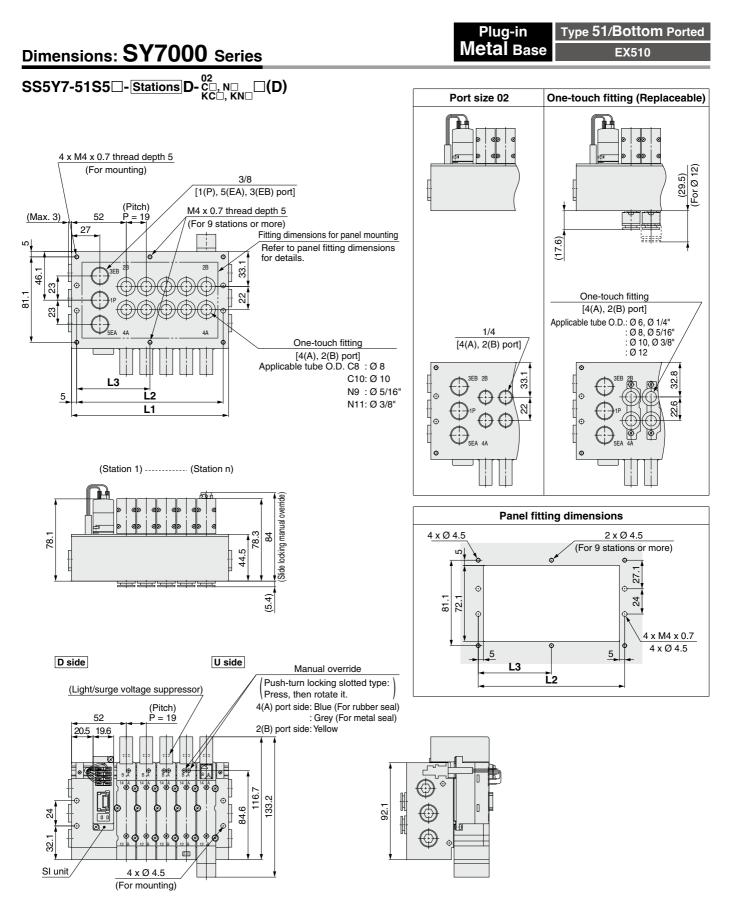


*: These figures show the "SS5Y7-51S5-05D-C10".

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	—	—	—	—	—	-	—	107.5	117	126.5	136



Plug-in Metal Base EX510 **SY3000/5000/7000 Series** (E 🖽 C 🕬 us

How to Order Manifolds



O Series								
3	SY3000							
5	SY5000							
7	SY7000							

2 Туре

Ν

<u> </u>	<i></i>
52	Top ported
52R	Top ported, External pilot

3 SI unit output polarity

Wiring type

_	All double wiring*1
S	All single wiring* ²

- *1 All double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations.
- *2 All single wiring: Available only for the manifold which has 2-position single for all stations Note that 2-position double, 3-, or 4-position valves cannot be used.
- If a mix of single and double wiring is required, it is supplied as a special order.

5 Valve stations

Symbol	Stations	Note			
02	2 stations	All double			
:		wiring			
08	8 stations	winng			
02	2 stations				
:		All single wiring			
12	12 stations	winng			

* This also includes the number of the blanking plate assembly.

6 P, E port entry


<u> </u>					
U	U side ^{*1}				
D D side*1					
В	Both sides				

*1 Plugs are mounted on the opposite side of the selected ports.

How to Order Manifold Assembly

Positive common

Negative common

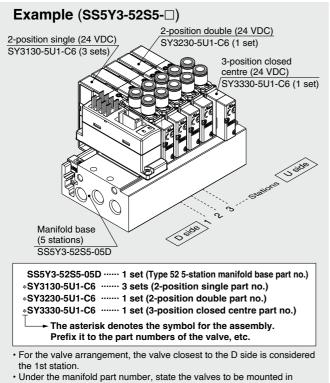

 Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure above. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.

7 Thread type

•••• • • • •
Rc
G
NPT
NPTF

8 Mounting


-							
—		Direct mounting					
D	DIN rail mounting (With DIN rail)						
D0		DIN rail mounting (Without DIN rail)					
D3	For 3 stations	Specify a length longer					
	:	than that of the standard					
D12	For 12 stations	rail.					

 Refer to page 319 for the fixation of DIN rail mounting type manifold.

For details on the EX510 Gateway Type Serial Transmission System, refer to the **Web Catalogue** and the Operation Manual. Please download the Operation Manual via the SMC website, https://www.smc.eu



Elugen Metal Base SY3000/5000/7000 Series

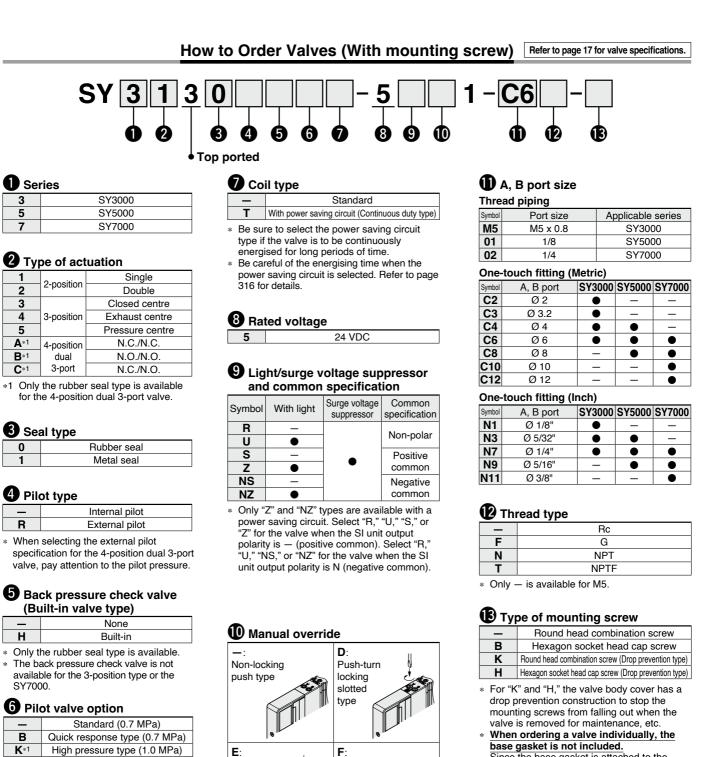



Only the metal seal type is available *1 for the high pressure type.

E: Slide locking Push-turn locking lever type type

Refer to page 36 for the safety slide locking × manual override

- Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to page 290 for base gasket and mounting screw part numbers.
- "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or interface regulator.



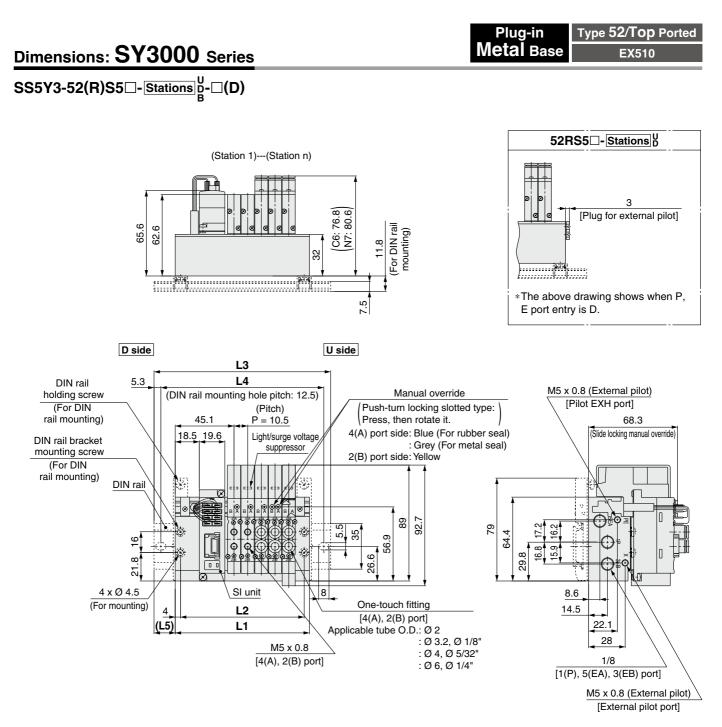


*: These figures show the "SS5Y3-52S5-05B".

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17

SMC

Elucetin Metal Base SY3000/5000/7000 Series

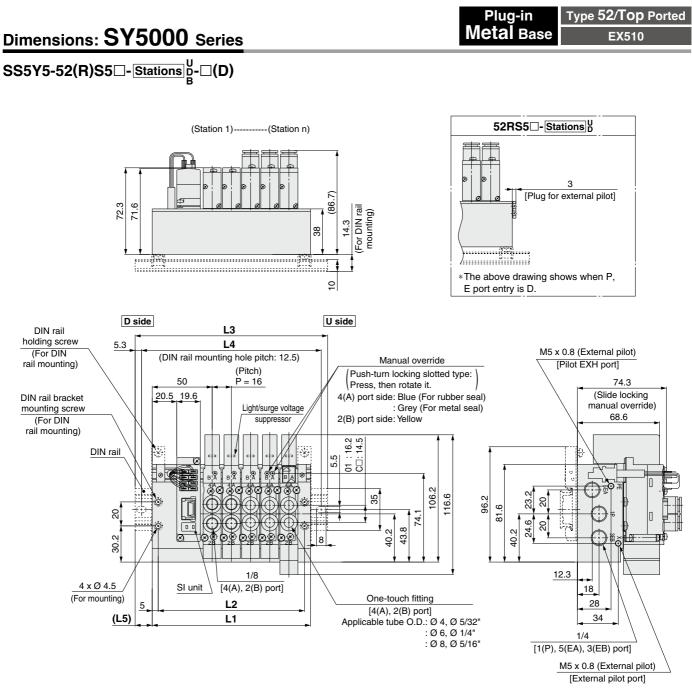


*: These figures show the "SS5Y5-52S5-05B".

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	110.5	135.5	148	160.5	173	198	210.5	223	248	260.5	273
L4	100	125	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5
L5	13.5	18	16	14.5	12.5	17	15.5	13.5	18	16.5	14.5

Dimensions: SY7000 Series

Plug-in Type 52/Top Ported
Metal Base EX510


SS5Y7-52(R)S5 \Box -Stations B_{B}^{U} - \Box (D)

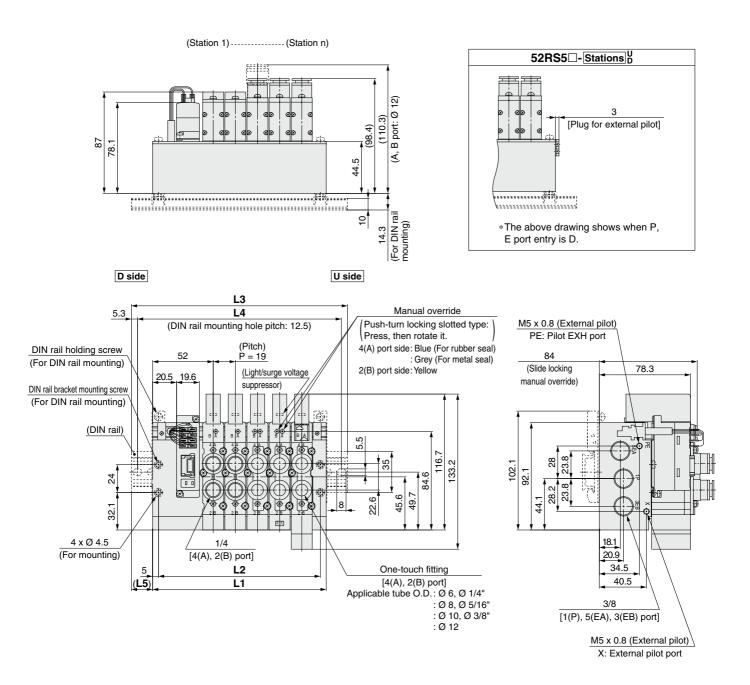

*: These figures show the "SS5Y7-52S5-05B".

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	123	148	160.5	185.5	198	223	235.5	260.5	273	298	310.5
L4	112.5	137.5	150	175	187.5	212.5	225	250	262.5	287.5	300
L5	15.5	18.5	15.5	18.5	15	18	15	18	14.5	17.5	14.5

SY3000/5000/7000 Series Type 50, 51, 52 Plug-in Metal Base Manifold Exploded View

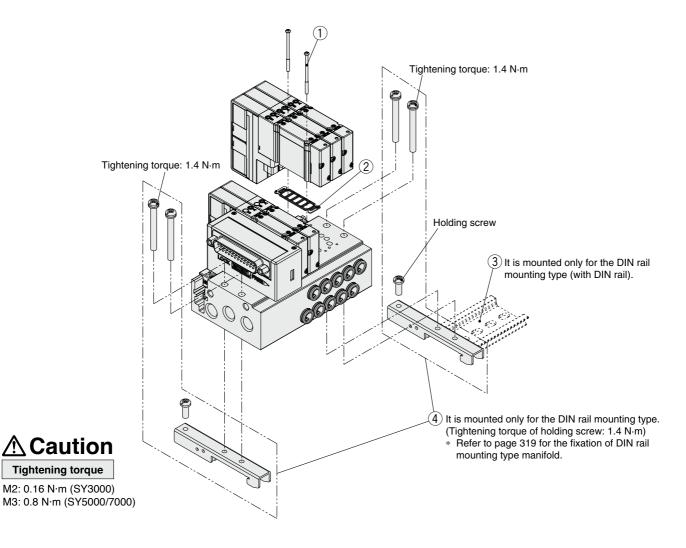

Manifold Parts Nos.

No.	Dec	scription		Part no.	Note	
	De	scription	SY3000	SY5000	SY7000	Note
	Valve mounting	Round head combination screw	SY3000-23-24A (M2 x 32)		SY7000-221-1A (M3 x 36.5)	Part numbers shown on the left are for 10 valves (20 pcs.).
	screw	Hexagon socket head cap screw	SY3000-222-1A (M2 x 32)	SY5000-222-1A (M3 x 32.5)	SY7000-222-1A (M3 x 36.5)	(30 pcs. for the SY7000)
2	Base gasket (for plug-in metal base and sub-plate)		SY30M-11-1A	SY50M-11-1A	SY70M-11-1A	Part numbers shown on the left are for 10 valves (10 pcs.).
3	3) DIN rail		VZ1000-11-1-□	VZ1000-11-4-□	VZ1000-11-4-□	Refer to page 292.
4	Clamp bracket assembly (for plug-in metal base)		SY30M-15-2A	SY50M-15-2A	SY70M-15-2A	Part numbers shown on the left are for the clamp bracket assembly for one manifold (two sets of clamp brackets).

SY3000/5000/7000 Series One-touch Fitting, Plug Assembly Part Nos.

Refer to "How to Replace One-touch Fittings" on page 300 for the replacement method.

■ One-touch fittings

		Port siz	е	SY3000	SY5000	SY7000
		Ø 2		VVQ1000-50A-C2 —		—
		Ø 3.2		VVQ1000-50A-C3	—	—
	size	Ø 4		VVQ1000-50A-C4	VVQ1000-51A-C4	—
	Lic.	Ø 6	Straight type	VVQ1000-50A-C6	VVQ1000-51A-C6	VVQ2000-51A-C6
ť	Metric	Ø 8		—	VVQ1000-51A-C8	VVQ2000-51A-C8
port	2	Ø 10		—	—	VVQ2000-51A-C10
B		Ø 12		—	—	KQ2H12-17-X224
À,		Ø 1/8"		VVQ1000-50A-N1	—	—
	size	Ø 5/32"		VVQ1000-50A-N3	VVQ1000-51A-N3	—
		Ø 1/4"	Straight type	VVQ1000-50A-N7	VVQ1000-51A-N7	VVQ2000-51A-N7
	Inch	Ø 5/16"		—	VVQ1000-51A-N9	VVQ2000-51A-N9
		Ø 3/8"		_	_	VVQ2000-51A-N11

* Purchasing order is available in units of 10 pieces.

Plug assembly

	SY3000	SY5000	SY7000		
A, B port	VVQ0000-58A	VVQ1000-58A	VVQ2000-58A		


 $\ast~$ Purchasing order is available in units of 10 pieces.

SY3000/5000/7000 Series Manifold Options

■ For the SY3000 Plug-in metal base

VZ1000-11-1-□

* After confirming the L3 dimension in the dimensions table of each series, refer to the DIN rail dimensions table below and specify the number in the box D.




No.	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
L dimension	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5	273	285.5	298	310.5	323
Weight [g]	17.6	19.9	22.1	24.4	26.6	28.9	31.1	33.4	35.6	37.9	40.1	42.4	44.6	46.9	49.1	51.4	53.6	55.9	58.1
No.	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37
L dimension	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5
Weight [g]	60.4	62.5	64.9	67.1	69.4	71.6	73.9	76.1	78.4	80.6	82.9	85.1	87.4	89.6	91.9	94.1	96.4	98.6	100.9
No.	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56
L dimension	573	585.5	598	610.5	623	635.5	648	660.5	673	685.5	698	710.5	723	735.5	748	760.5	773	785.5	798
Weight [g]	103.1	105.4	107.6	109.9	112.1	114.4	116.6	118.9	121.1	123.4	125.6	127.9	130.1	132.4	134.6	136.9	139.1	141.4	143.6
No.	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71				
L dimension	810.5	823	835.5	848	860.5	873	885.5	898	910.5	923	935.5	948	960.5	973	985.5				
Weight [g]	145.9	148.1	150.4	152.6	154.9	157.1	159.4	161.6	163.9	166.1	168.4	170.6	172.9	175.1	177.4				

■ For the SY5000/7000 Plug-in metal base

VZ1000-11-4-□

* After confirming the L3 dimension in the dimensions table of each series, refer to the DIN rail dimensions table below and specify the number in the box D.





No.	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
L dimension	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5	273	285.5	298	310.5	323
Weight [g]	24.8	28	31.1	34.3	37.4	40.6	43.8	46.9	50.1	53.3	56.4	59.6	62.7	65.9	69.1	72.2	75.4	78.6	81.7
No.	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37
L dimension	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5
Weight [g]	84.9	88	91.2	94.4	97.5	100.7	103.9	107	110.2	113.3	116.5	119.7	122.8	126	129.2	132.3	135.5	138.6	141.8
No.	38	39	40	41	42	43	44	45	46	47	40	40	ГO	E4	50	50	E 4		50
	30	39	40	41	42	43	44	45	40	47	48	49	50	51	52	53	54	55	56
L dimension		585.5	40 598	41 610.5	623	43 635.5	648	45 660.5	40 673	47 685.5	48 698	49 710.5	50 723	51 735.5	52 748	53 760.5	54 773	55 785.5	798
	573					-		-	-					-	-				
L dimension	573	585.5	598	610.5	623	635.5	648	660.5	673	685.5	698	710.5	723	735.5	748	760.5	773	785.5	798
L dimension Weight [g]	573 145	585.5 148.1	598 151.3	610.5 154.5	623 157.6	635.5 160.8	648 163.9	660.5 167.1	673 170.3	685.5 173.4	698 176.6	710.5 179.8	723 182.9	735.5 186.1	748 189.2	760.5	773	785.5	798

Manifold Options


Blanking plate assembly (With mounting screw)

Used when valve additions are expected or for maintenance A structure is in place on the blanking plate to prevent the mounting screws from sliding.

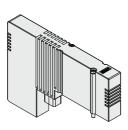

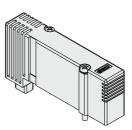

SY50M-26-2A (-B)

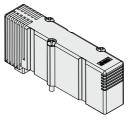

SY70M-26-2A (-B)


Refer to pages 300 to 302 for dimensions.

Refer to pages 294 to 299 for individual SUP/EXH and other options.

SY30M-26-2A (-B)


Part numbers of mounting screw [Hexagon bolt] (For repairs)
SY3000: SY3000-23-24A [SY3000-222-1A]
SY5000: SY5000-221-1A [SY5000-222-1A]
SY7000: SY7000-221-2A [SY7000-222-1A]

How to Order Blanking Plate Assembly

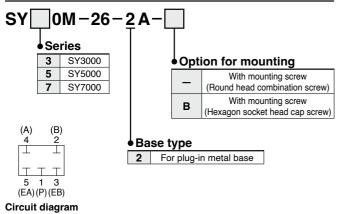

■ Plug

These are inserted in unused cylinder ports and P, E ports.



* Shipped together with the product

Dimensions

Applicable fitting size $\emptyset \mathbf{d}$ (Metric size)	Model	Α	L	ØD
2	KJP-02	8.2	17	3
3.2	KQ2P-23	16	31.5	5
4	KQ2P-04	16	32	6
6	KQ2P-06	18	35	8
8	KQ2P-08	20.5	39	10
10	KQ2P-10	22	43	12
12	KQ2P-12	24	45.5	14

Applicable fitting size Ø d (Inch size)	Model	Α	L	ØD
1/8"	KQ2P-01	16	31.5	5
5/32"	KQ2P-03	16	32	6
1/4"	KQ2P-07	18	35	8.5
5/16"	KQ2P-09	20.5	39	10
3/8"	KQ2P-11	22	43	11.5

Manifold Options SY3000/5000/7000 Series

* Refer to pages 300 to 302 for dimensions.

▲Caution

Tightening torque for mounting screw M2: 0.16 N·m (SY3000)

M3: 0.8 N·m (SY5000/7000)


Manifold Options

Individual SUP spacer assembly

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]

When the same manifold is used for different pressures, an individual SUP spacer assembly is used as a supply port for different pressures.

When selecting a One-touch fitting elbow type for a spacer assembly, use it faced upward, since it interferes with A and B port piping of Type 50 manifolds.

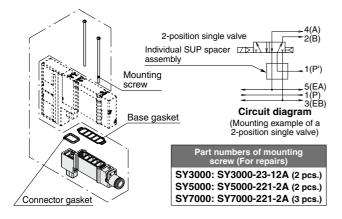


Individual EXH spacer assembly

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]

When valve exhaust affects other stations due to the circuit configuration, this spacer assembly is used for individual valve exhaust.

When selecting a One-touch fitting elbow type for a spacer assembly, use it faced upward, since it interferes with A and B port piping of Type 50 manifolds.

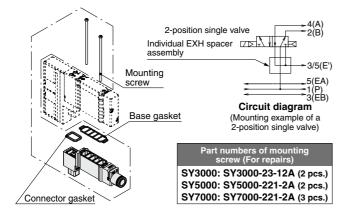

How to Ord	der Ir	naiviau	al Su	JP/EXH	Spacer	Assem	bly
One-touch f Straight typ	itting e	SY[30	M – 🕃	38 – 1	A-[C 6
One-touch f Elbow type	itting	31		м — 🕃	38 - 2	2] A-[L6
		Series	<u>•</u>				
	3	SY3000					
	5	SY5000					
	7	SY7000					
		:	Spac	er type			
	[38 Indi	vidual S	SUP space	er		
	ĺ	39 Indi	vidual E	EXH space	er		
			_				
Individu	ial S						
		2		ort elbow		-	
	l	3		ng elbow t			
	:			g elbow t	ype for a		
		3-posit	ion valv	ve.			
	Р	ort size	e (Me	tric/On	e-touch	fittings	a) 🖕
	Symbol	P, E p				0 SY700	
	L4	Ø4		•	•	_	
	L6	Ø 6		•	•	•	
	L8	Ø 8		_			
	L10	Ø 1	0	—	-		
	L12	Ø 1	2	—	-	•	
		Port	size	(Inch/O	ne-touc	h fitting	js)
	Symbol	P, E p	oort	SY300	0 SY500	0 SY700	00
	LN3	Ø 5/3		•	_	-	
	LN7	Ø 1/4		•	•	-	
	LN9	Ø 5/1		-	•	-	
	LN11	Ø 3/8	3"	—	-		
		D	ort ei	70 (Mot	tric/One	-touch f	ittings)
		Symbol		E port	SY3000		
		C2) 2	•	-	
		C3		3.2	•	_	- 1
		C4) 4	•	•	- 1
		C6		6	•	•	•
		C 8	Ø	Í 8	_		•
		C10	Ø	۱0 ⁽	_	_	
		C12	Ø	12	_	-	
			Por	t size (Inch/Or	e-touch	n fittings
				1	01/0000	01/5000	

	I OIT DIED		le teach	intenigo
Symbol	P, E port	SY3000	SY5000	SY7000
N1	Ø 1/8"	•	-	-
N3	Ø 5/32"	•		_
N7	Ø 1/4"	•		•
N9	Ø 5/16"	_	•	•
N11	Ø 3/8"	_	_	•
	·		-	

∗ When using in combination with the SY⁵₇30⁰₁□-□1-E (With residual pressure release valve), the length of the required mounting screws will differ. Please contact SMC for details.


How


Manifold Options

SUP stop valve spacer assembly with residual pressure release valve

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]

It is used to shut off the supply air to valves individually.

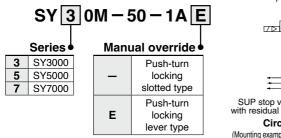

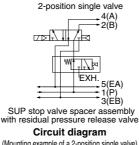

(Mounting example of a 2-position single valve)

Base gasket Connector gasket Part numbers of mounting screw (For repairs) SY3000: SY30M-56-1A (2 pcs.) SY5000: SY50M-56-1A (2 pcs.)

* For lever type

When locking the lever type manual override, push the lever down in the PUSH position with your fingers until it stops, then turn the lever 90° clockwise. (PUSH → LOCK)

Turning the lever without pushing it down until it stops can cause damage to the manual override and other problems such as air leakages.

To unlock the manual override, turn the lever counterclockwise. (LOCK → PUSH)

[How to mount SUP stop valve spacer assembly with residual pressure release valve

Insert the SUP stop valve mounting screw from the side of the spacer assembly, and mount it to the manifold.

Tighten the SUP stop valve mounting screw to the specified tightening torque. Mount the valve and tighten the valve mounting screws to the specified tightening torque after mounting the SUP stop valve spacer assembly with residual pressure exhaust valve

- * Install the plate type nut to the spacer assembly as shown in the figure if it comes off. The SUP stop valve mounting screws can be tightened with a hexagon wrench without removing the plate type nut.
- This product is only for internal pilot specifications, as the external pilot air cannot be shut off.
- If the product is equipped with a 3-position closed centre, residual pressure cannot be released, so use in combination with a 3-port valve, which can be connected to the A, B piping port.

Valve mounting screw (See page 198.) Tightening torque: SY3000 series: 0.16 N⋅m SY5000/7000 series: 0.8 N·m For Hexagon socket head cap screws Nominal wrench size: SY3000 series: 1.5 SY5000/7000 series: 2.5 Valv

SUP stop valve spacer assembly with residual pressure release valve Plate type nut SY3000 series

SY7000: SY70M-56-1A (3 pcs.)

* Refer to pages 300 to 302 for dimensions.

SY30M-57-1A (10 pcs. included) SY5000/7000 series: SY50M-57-1A (10 pcs. included)

SUP stop valve mounting screw

Tightening torque: SY3000 series: 0.16 N⋅m SY5000/7000 series: 0.8 N·m

Hexagon wrench Nominal wrench size: SY3000 series: 1.3 SY5000/7000 series: 2

Mounting screw

Tightening torque for mounting screw M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

▲Caution

Manifold Options SY3000/5000/7000 Series

▲Caution

Manifold Options

* Refer to pages 300 to 302 for dimensions.

Double check spacer assembly with residual pressure release valve (Side/Bottom ported)

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)] It is used to hold the intermediate position of the cylinder for a long period of time. Use a 3-position exhaust centre valve when the double check spacer assembly with residual exhaust valve is used.

It can also be used for drop prevention at the cylinder stroke end when supply residual pressure is released by using a 2-position single/double valve.

Series	Part no.		Intermediate stop	Drop prevention
SY3000	SY30M-60-1A	Annellashia sahar	SY ³ ₅ 40 ⁰	$0x^{3} 10^{0}$
SY5000	SY50M-60-1A	Applicable valve	SY 5401	SY ⁵ ₇₂ ¹ 0 ⁰ ₁
SY7000	SY70M-60-1A			


Mounting

Base gasket

screw




M3: 0.8 N·m (SY5000/7000)

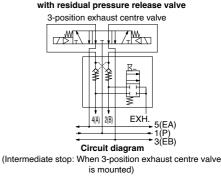

<Example> Double check spacer assembly

Double check spacer assembly with residual pressure release valve

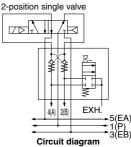


(Drop prevention: When 2-position single valve is mounted)

- · Air leakage from the pipe between the valve and cylinder or from the fittings will prevent the cylinder from stopping for a long period of time. Check the leakage using neutral household detergent, such as dish washing soap. Also, check the cylinder's tube gasket, piston seal, and rod seal for air leakage. · Combining with 3-position closed centre or pressure centre valve will not work.
- If the exhaust of the double check spacer is restricted too much, the cylinder may not operate properly and may not stop intermediately.
- Set the cylinder load so that the cylinder pressure will be within two times that of the supply pressure.
- If using a double check spacer that is built in to the sub-plate, refer to page 307.

Specifications

Connector gasket

Max. operating p	1.0 MPa			
Min. operating p	0.1 MPa			
Ambient and fluid ter	−10 to 50 °C			
El averante	SY3000	0.3 dm ³ /(s·bar)		
Flow rate	SY5000	0.7 dm ³ /(s·bar)		
characteristics: C	SY7000	1.1 dm3/(s·bar)		
Max. operating fr	3 Hz			

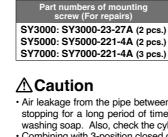

Caution

M2: 0.16 N·m (SY3000)

M3: 0.8 N·m (SY5000/7000)

Manifold Options


* Refer to pages 300 to 302 for dimensions.

Interface regulator

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]

Used when the supply pressure for each valve on the same manifold must be individually set (reduced pressure)

How to Order

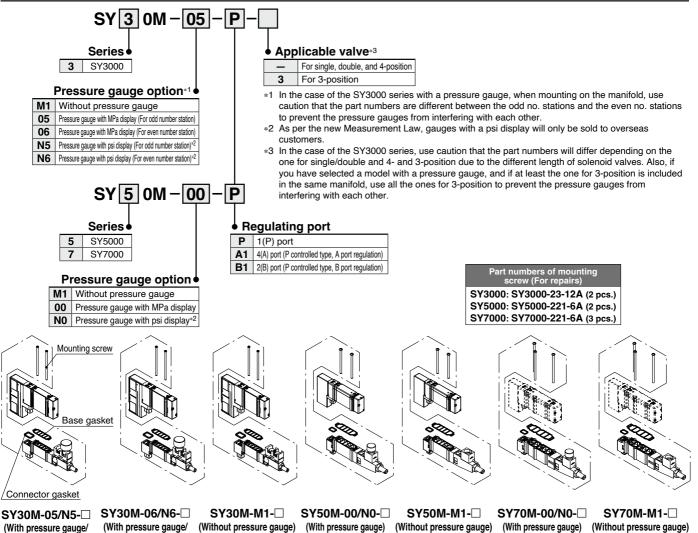


SMC

Specifications


For odd number station) For even number station)

Interface regulator model		SY30M-□-□-□	SY50M-□-□	SY70M-□-□		
Applicable valv	ve model ^{*1}	SY3□ ₃ ⁰ □(R)	SY5□ ⁰ ₃ □(R)	SY7□ ⁰ ₃ □(R)		
Regulating por	t	1(P), 4(A), 2(B)				
Set pressure ra	ange	0.1 to 0.7 MPa				
Maximum opera	ating pressure	1.0 MPa				
Fluid		Air				
Ambient and fluid temperatures		-10 to 50 °C (No freezing)				
Weight [g]*2	With pressure gauge	33 (35)* ³ 75 93				
weight [g]*=	Without pressure gauge	27 (29)* ³	69	87		

Symbol

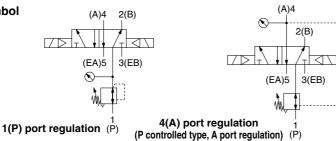

- *1 3-position closed centre and pressure centre, and 4-position dual 3-port valves are only available for 1(P) port pressure regulation.
- *2 Gasket and mounting screws are included in the weight. *3 (): Denotes the values of SY30M-□-□-3
- Always apply pressure from 1(P) port in the base for interface regulator.
- * When using in combination with the SY⁵30⁰₁---1-E (With residual pressure release valve), the length of the required mounting screws will differ. Please contact SMC for details.

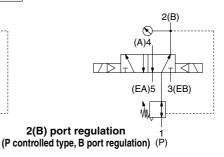

Manifold Options SY3000/5000/7000 Series

ACaution

 M2: 0.16 N·m (SY3000)

 M3: 0.8 N·m (SY5000/7000)

Manifold Options: Spacer Combinations and Screw List $\underline{\mathbb{1}}$

)00 (M2)		00 (M3)	2 672	000 (M3)
Combination				Round head combination screw		1	Hexagon socket head cap screw
Round head combination screw> 1: SY3000-23-24A A 2: SY5000-221-1A 3: SY7000-221-1A	Valve	SY3000- 23-24A [for 10 valves (20 pcs.)]	SY3000- 222-1A [for 10 valves (20 pcs.)]	SY5000- 221-1A [for 10 valves (20 pcs.)]	SY5000- 222-1A [for 10 valves (20 pcs.)]	SY7000- 221-1A [for 10 valves (30 pcs.)]	SY7000- 222-1A [for 10 valves (30 pcs.)]
Hexagon socket head cap screw> 1: SY3000-222-1A 2: SY5000-222-1A 3: SY7000-221-1A 1: SY30M-56-2A 2: SY50M-56-2A 3: SY70M-56-2A 3: SY70M-56-2A	SUP stop valve spacer assembly with residual pressure release valve Individual SUP (EXH) spacer assembly		I-56-2A bcs.)		I -56-2A cs.)		1-56-2A bcs.)
Round head combination screw> 1: SY3000-23-33A 2: SY5000-221-5A 3: SY7000-221-5A B	Valve Double check spacer assembly	SY3000- 23-33A (2 pcs.)	_	SY5000- 221-5A (2 pcs.)	_	SY7000- 221-5A (3 pcs.)	_
	Individual SUP (EXH) spacer assembly						
Round head combination screws 1: SY3000-23-32A 2: SY5000-221-3A 3: SY7000-221-3A B C C	Valve Individual SUP (EXH) spacer assembly Individual EXH (SUP) spacer assembly	SY3000- 23-32A (2 pcs.)	_	SY5000- 221-3A (2 pcs.)	_	SY7000- 221-3A (3 pcs.)	_
Round head combination screw> (1): SY3000-23-24A	Valve	SY3000- 23-24A [for 10 valves (20 pcs.)]	SY3000- 222-1A [for 10 valves (20 pcs.)]	SY5000- 221-1A [for 10 valves (20 pcs.)]	SY5000- 222-1A [for 10 valves (20 pcs.)]	SY7000- 221-1A [for 10 valves (30 pcs.)]	SY7000- 222-1A [for 10 valves (30 pcs.)]
2: SY5000-221-1A 3: SY7000-221-1A Hexagon socket head cap screws 1: SY3000-222-1A 2: SY5000-222-1A 3: SY7000-222-1A 3: SY7000-222-1A 3: SY7000-222-1A 3: SY7000-222-1A 3: SY7000-56-4A 3: SY70M-56-4A 3: SY70M-56-4A	SUP stop valve spacer assembly with residual pressure release valve Individual SUP (EXH) spacer assembly Individual	SY30M-56-4A (2 pcs.)		SY50M-56-4A (2 pcs.)		SY70M-56-4A (3 pcs.)	
E C	EXH (SUP) spacer assembly						

* Mounting onto a manifold follows the order explained above.

* The fitting for individual SUP/EXH spacers comes in a straight type only, since an elbow type would interfere with each spacer assembly when laminated.

 M2: 0.16 N·m (SY3000)

 M3: 0.8 N·m (SY5000/7000)


Manifold Options: Spacer Combinations and Screw List 2

			00 (M2)		00 (M2))00 (M3)
Combination		Round head combination screw	DOO (M2) Hexaqon socket head cap screw	Round head combination screw	OOO (M3) Hexagon socket head cap screw	Round head combination screw	Hexagon socket head cap screw
<round combination="" head="" screw=""> 1: SY3000-23-24A 2: SY5000-221-1A 3: SY7000-221-1A</round>	Valve	SY3000- 23-24A [for 10 valves (20 pcs.)]	SY3000- 222-1A [for 10 valves (20 pcs.)]	SY5000- 221-1A	SY5000- 222-1A	SY7000- 221-1A [for 10 valves (30 pcs.)]	SY7000- 222-1A [for 10 valves (30 pcs.)]
A I: SY3000-222-1A B I: SY7000-222-1A I: SY7000-222-1A I: SY7000-222-1A	SUP stop valve spacer assembly with residual pressure release valve		I-56-3A		I-56-3A		I-56-3A
C	Double check spacer assembly with residual pressure release valve	(2 p	(2 pcs.)		(2 pcs.)		ics.)
Round head combination screw> A 1: SY3000-23-24A 2: SY5000-221-1A	Valve	SY3000- 23-24A [for 10 valves (20 pcs.)]	SY3000- 222-1A [for 10 valves (20 pcs.)]	SY5000- 221-1A [for 10 valves (20 pcs.)]	SY5000- 222-1A [for 10 valves (20 pcs.)]	SY7000- 221-1A [for 10 valves (30 pcs.)]	SY7000- 222-1A [for 10 valves (30 pcs.)]
3: SY7000-221-1A Hexagon socket head cap screw> 1: SY3000-222-1A 2: SY5000-222-1A 3: SY7000-222-1A	SUP stop valve spacer assembly with residual pressure release valve						
G - 0: SY30M-56-5A 2: SY50M-56-5A 3: SY70M-56-5A	Double check spacer assembly with residual pressure release valve		SY30M-56-5A (2 pcs.)		SY50M-56-5A (2 pcs.)		I-56-5A lcs.)
	Individual EXH (SUP) spacer assembly						
Round head combination screw> ①: SY3000-23-32A	Valve						
A ● ②: SY5000-221-7A ③: SY7000-221-7A ● B	Interface regulator	SY3000- 23-32A (2 pcs.)	_	SY5000- 221-7A (2 pcs.)	_	SY7000- 221-7A (3 pcs.)	_
C→	Individual SUP (EXH) spacer assembly						

* Mounting onto a manifold follows the order explained above.


The fitting for individual SUP/EXH spacers comes in a straight type only, since an elbow type would interfere with each spacer assembly when laminated.
 When laminating an interface regulator with other options, only the combinations in the table above are possible.

Dimensions: Manifold Options/SY3000 Series

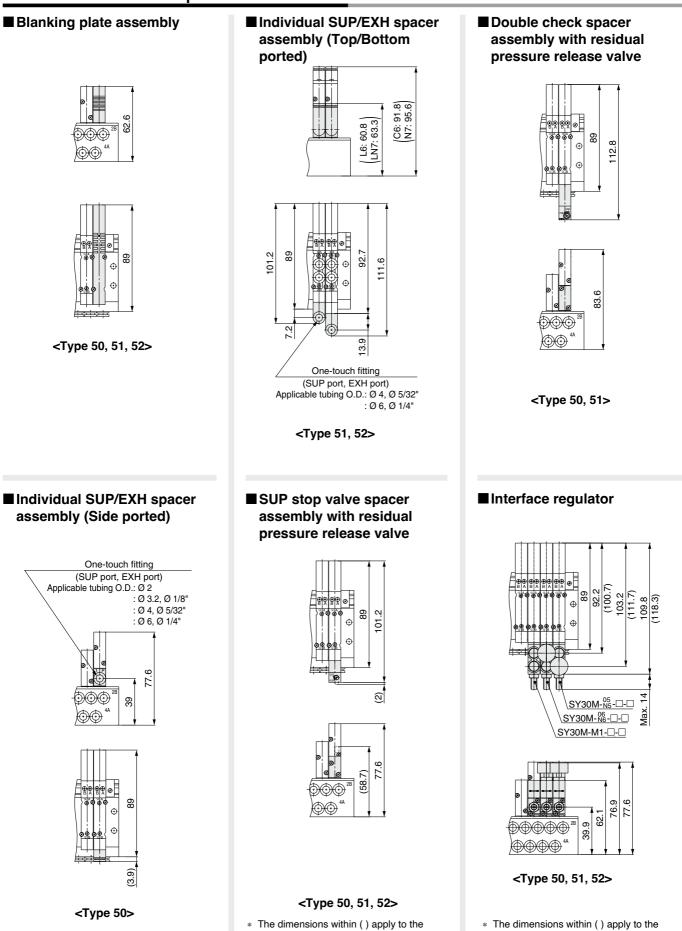


- SY30M-50-1AE. **SMC**
- * The dimensions within () apply to the SY30M-□-□-3.

Dimensions: Manifold Options/SY5000 Series

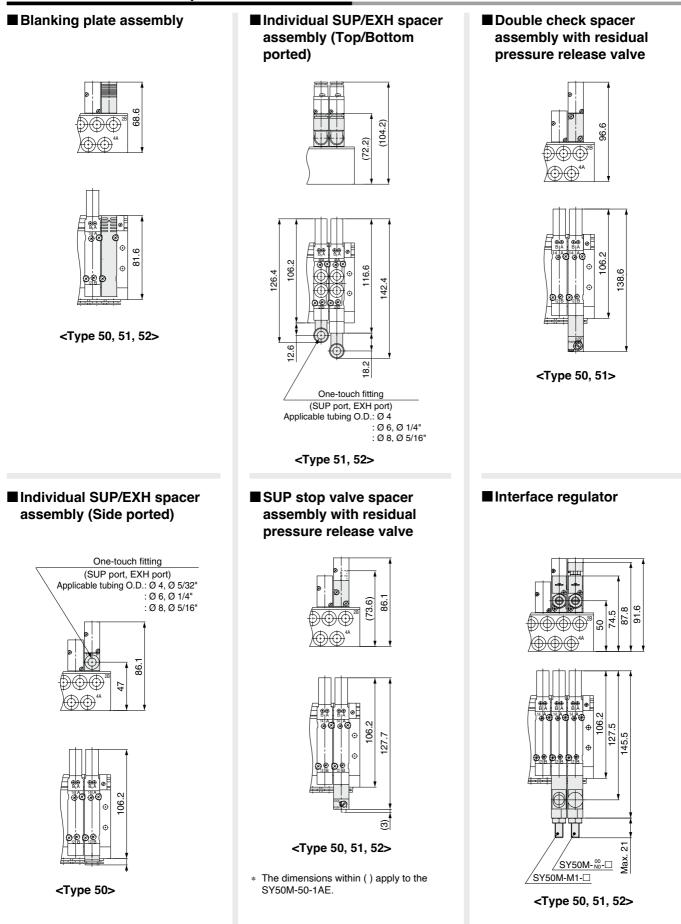

SMC

Dimensions: Manifold Options/SY7000 Series

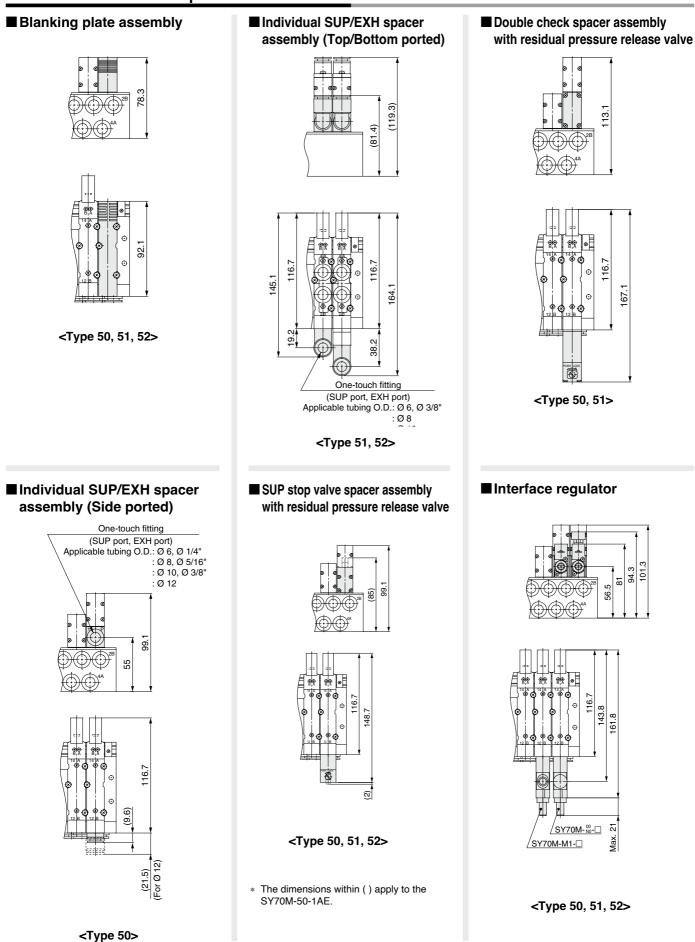



Plug-in Sub-plate Type [IP67 Compliant]



SY3000/5000/7000 Series Plug-in Single Unit/Sub-plate Type [IP67 Compliant]

RoHS

(Side ported, Bottom ported, Top ported)

Plug-in Sub-plate Specifications

Mana Malal Anna a		Diversity such as the			
Manifold type		Plug-in sub-plate			
	Side ported	1(P), 5(EA)/3(EB) port, 4(A)/2(B) port	Side p		
Piping direction	Bottom ported	1(P), 5(EA)/3(EB) port, 4(A)/2(B) port	Bottom ported		
1 3 1 1 1 1	Top ported	1(P), 5(EA)/3(EB) port	Side p		
		4(A)/2(B) port	Тор ро	orted	
SUP/EXH port type		SUP/EXH individual port [5(EA), 3(EB) indiv	/idual]		
Applicable connector		M12 waterproof connector			
Internal wiring		Positive common, Negative common			
			SY3000	1/8	
	Side ported	1(P), 5(EA)/3(EB) port, 4(A)/2(B) port	SY5000	1/4	
			SY7000	3/8	
	Bottom ported		SY3000	1/8	
Port size		1(P), 5(EA)/3(EB) port, 4(A)/2(B) port	SY5000	1/4	
			SY7000	3/8	
Ē	Top ported		SY3000	1/8	
		1(P), 5(EA)/3(EB) port	SY5000	1/4	
			SY7000	3/8	
		4(A)/2(B) port	Compliant with the valve*1		
Enclosure (Based on IEC60529)		IP67	1 1		
		Side ported	9	9	
	SY3000	Bottom ported	109		
		Top ported	104		
F		Side ported	145		
Weight: W [g]*2	SY5000	Bottom ported	17	2	
0 101		Top ported	15		
F		Side ported	20	-	
	SY7000	Bottom ported	232		
		Top ported	227		

*1 Refer to page 17 for valve specifications.

*2 The valve and cable weights are not included. To obtain the weight with valves attached, add the valve weights given on page 19, and to include the cable weight, add the connector cable weight on page 307.

Plug-in Sub-plate Flow Rate Characteristics

Rubber Seal

Series	Sub-plate	Fitting port size			1 → 4/2			4/2 → 5/3		
Series	piping location	(P, E)	(A, B)	С	b	Q [l/min(ANR)]*2	С	b	Q [l/min(ANR)]*2	
	Side ported	1/8	1/8	1.8	0.27	449	1.7	0.26	422	
SY3000	Bottom ported	1/8	1/8	1.7	0.23	414	1.4	0.27	349	
	Top ported	1/8	C6	1.3	0.34	339	1.5	0.27	374	
	Side ported	1/4	1/4	4.2	0.21	1012	4.0	0.26	992	
SY5000	Bottom ported	1/4	1/4	4.0	0.19	953	4.0	0.23	975	
	Top ported	1/4	C8	2.9	0.29	733	4.1	0.33	1063	
	Side ported	3/8	3/8	6.5	0.24	1593	6.3	0.23	1535	
SY7000	Bottom ported	3/8	3/8	6.4	0.22	1591	6.3	0.22	1526	
	Top ported	3/8	C12	5.4	0.30	1373	6.0	0.27	1497	

Metal Seal


Series	Sub-plate Fitting port size			1 → 4/2			4/2 → 5/3		
Series	piping location	(P, E)	(A, B)	С	b	Q [l/min(ANR)]*2	С	b	Q [l/min(ANR)]*2
	Side ported	1/8	1/8	1.4	0.14	325	1.3	0.26	322
SY3000	Bottom ported	1/8	1/8	1.3	0.13	300	1.3	0.22	315
	Top ported	1/8	C6	1.2	0.22	291	1.4	0.29	354
	Side ported	1/4	1/4	3.2	0.13	738	3.5	0.16	820
SY5000	Bottom ported	1/4	1/4	3.0	0.12	688	3.2	0.17	754
	Top ported	1/4	C8	2.6	0.23	634	3.2	0.19	762
	Side ported	3/8	3/8	4.6	0.10	1044	4.9	0.16	1148
SY7000	Bottom ported	3/8	3/8	4.6	0.10	1044	4.9	0.17	1154
	Top ported	3/8	C12	4.0	0.18	947	4.7	0.16	1101

* Calculation of effective area S and sonic conductance C: S = 5.0 x C

*1 The value is for individually operated 2-position type.

*2 The values have been calculated according to ISO 6358 and indicate the flow rate under standard conditions with an inlet pressure of 0.6 MPa (relative pressure) and a pressure drop of 0.1 MPa.

How to Order

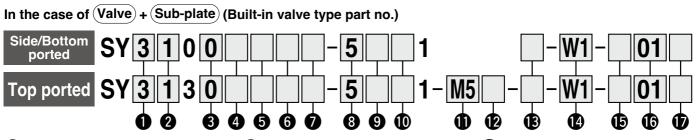

Series

3	SY3000
5	SY5000
7	SY7000

2 Type of actuation

1	0 maaitian	Single				
2	2-position	Double				
3		Closed Centre				
4	3-position	Exhaust Centre				
5		Pressure Centre				
A *1	4-position dual 3-port	N.C./N.C.				
B *1		N.O./N.O.				
C *1	uuai 5-port	N.C./N.O.				

*1 Only the rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

0	Rubber seal
1	Metal seal

4 Pilot type

_	Internal pilot
R	External pilot

 When selecting the external pilot specification for the 4-position dual 3-port valve, pay attention to the pilot pressure.

Back pressure check valve (Built-in valve type)

_	None	
Н	Built-in	

* Only the rubber seal type is available.

 The built-in valve type back pressure check valve is not available for the 3-position type or the SY7000.

6 Pilot valve option

_	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
K *1	High pressure type (1.0 MPa)	

*1 Only the metal seal type is available for the high pressure type.

Coil type


—	Standard	
Т	With power saving circuit (Continuous duty type)	

- * Be sure to select the power saving circuit type if the valve is to be continuously energized for long periods of time.
- Be careful of the energising time when the power saving circuit is selected. Refer to page 316 for details.

8 Rated voltage

5	24 VDC
6	12 VDC


9 Light/surge voltage suppressor and common specification

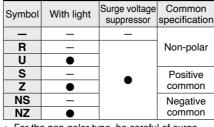

 For the non-polar type, be careful of surge voltage intrusion. Refer to page 317 for details.
 Only "Z" and "NZ" types are available with a

power saving circuit.

Manual override

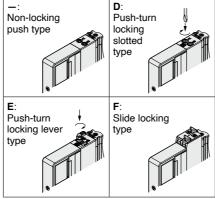

* Refer to page 36 for the safety slide locking manual override.

A, B port size (* Top-ported valve only) Thread piping

Symbol	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000
02	1/4	SY7000

Metric size (One-touch fitting)

A, B port	SY3000	SY5000	SY7000
Ø 2		-	—
Ø 3.2	•	_	_
Ø 4		•	—
Ø 6	•	•	•
Ø 8	_	•	
Ø 10	_	_	
Ø 12	—	_	
	Ø 2 Ø 3.2 Ø 4 Ø 6 Ø 8 Ø 10	Ø 2 ● Ø 3.2 ● Ø 4 ● Ø 6 ● Ø 8 − Ø 10 −	$\begin{array}{c ccccccccccccccccccccccccccccccccccc$

Inch size (One-touch fitting)

Symbol	A, B port	SY3000	SY5000	SY7000
N1	Ø 1/8"		—	-
N3	Ø 5/32"			_
N7	Ø 1/4"		•	•
N9	Ø 5/16"	_		
N11	Ø 3/8"	_	_	

A, B port thread type (Thread piping)

_	Rc			
F	G			
Ν	NPT			
T NPTF				
* Only — is available for M5				

B Tuna of mounting one

Type of mounting screw		
 Round head combination screw 		
В	Hexagon socket head cap screw	
K	Round head combination screw (Drop prevention type)	
Н	Hexagon socket head cap screw (Drop prevention type)	

 For "K" and "H," the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance, etc.

- Refer to page 307 when the base gaskets and mounting screws are required for maintenance.
- When using an optional spacer assembly,
 "B" and "H" cannot be selected.

Wiring specifications (Sub-plate)

WO	Without M12 connector cable	
W1	With M12 connector cable (300 mm)	
W2	With M12 connector cable (500 mm)	
W3	With M12 connector cable (1000 mm)	
W4	With M12 connector cable (2000 mm)	
W7	With M12 connector cable (5000 mm)	

 When ordering a product with M12 connector cable, the connector cable is included.

• Port location (Sub-plate)

—	Side ported	
В	Bottom ported	
V *1	Top ported (1P, 5EA, 3EB port: Side ported)	

*1 Only available for the valve piping type "3" top ported

Dort size (Sub-plate)


Symbol	Port size	Applicable series
01	1/8	SY3000
02	1/4	SY5000
03	3/8	SY7000

Thread type (Sub-plate)

• • • • • • • • • • • • • • • • • • • •								
_	Rc							
F	G							
N	NPT							
Т	NPTF							

- * When mounting a special order (including Made-to-Order specification) valve or manifold option (spacer, etc.) on the sub-plate, add the valve part number or spacer part number under the sub-plate part number to place an order. For details, refer to the ordering example on page 307.
- * When selecting a product with residual pressure release valve or vacuum release valve with restrictor, after selecting a model from page 26 or 28, make selections for items 15 to 18 above.



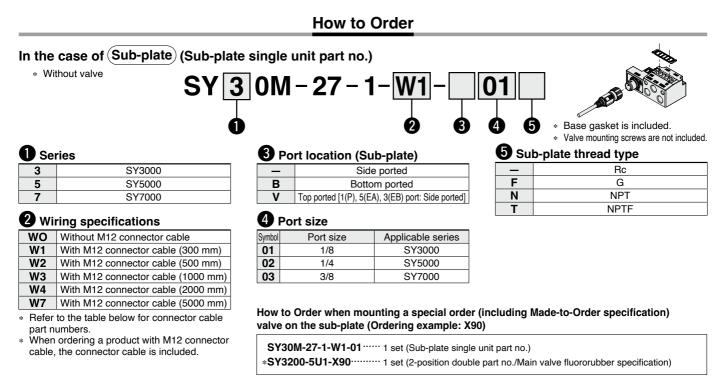

Ordering example when mounting a manifold option (spacer, etc.)

SY30M-27-1-W1-01 ······ 1 set (Sub-plate single unit part no.)

*SY3400-5U1 ······ 1 set (3-position exhaust centre part no.)

*SY30M-60-1A 1 set (Part no. for double check spacer with residual pressure release valve)

ACaution

Due to the properties of the double check spacer, assembly carried out by the customer is not recommended. If a double check spacer is to be used, be sure to order the type that is built in to the sub-plate as shown in the ordering example above.

Sub-plate Parts Nos.

(1) 📲	No.	No. Description			Part no.	Note		
* 3 pcs. for the SY7000		Desc	cription	SY3000	SY5000	SY7000	NOLE	
		Valve mounting screw	Round head combination screw	SY3000-23-24A (M2 x 32)	SY5000-221-1A (M3 x 32.5) (M3 x 36.5)		Part numbers shown on the left are for 10 valves	
			Hexagon socket head cap screw	SY3000-222-1A (M2 x 32)	SY5000-222-1A (M3 x 32.5)	SY7000-222-1A (M3 x 36.5)	(20 pcs.). (30 pcs. for the SY7000)	
	Base gasket (for sub-plate)			SY30M-11-1A	SY50M-11-1A	SY70M-11-1A	Part numbers shown on the left are for 10 valves (10 pcs.).	
2		M12 waterproof connector cable			ZS-37-L	Cable length: 300 mm Cable weight: Approx. 18 g		
	(\prec)				ZS-37-M	Cable length: 500 mm Cable weight: Approx. 23 g		
					ZS-37-N	Cable length: 1000 mm Cable weight: Approx. 36 g		
3					ZS-37-P	Cable length: 2000 mm Cable weight: Approx. 62 g		
					ZS-37-C	Cable length: 5000 mm Cable weight: Approx. 140 g		

Caution

 Tightening torque

 M2: 0.16 N·m (SY3000)


 M3: 0.8 N·m (SY5000/7000)





(Side ported, Bottom ported, Top ported) SY3000/5000/7000 Series

Dimensions: SY3000 Series

Plug-in Single Unit/Sub-plate Side Ported **Top** Ported

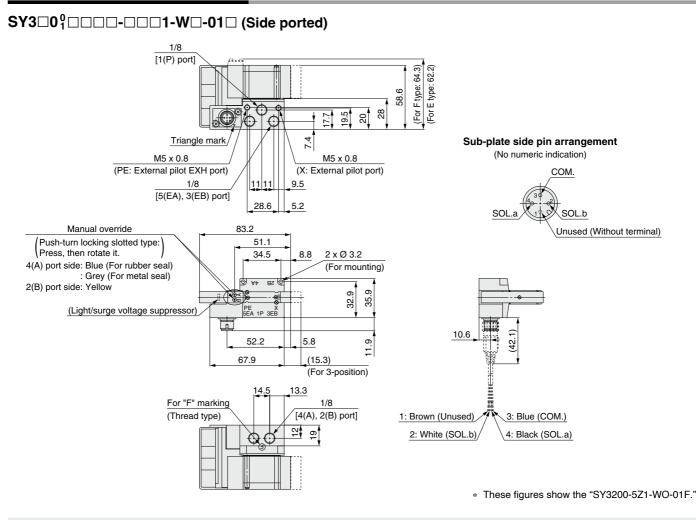

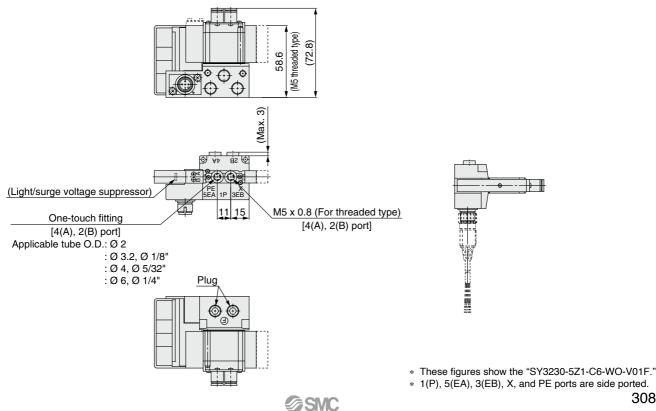

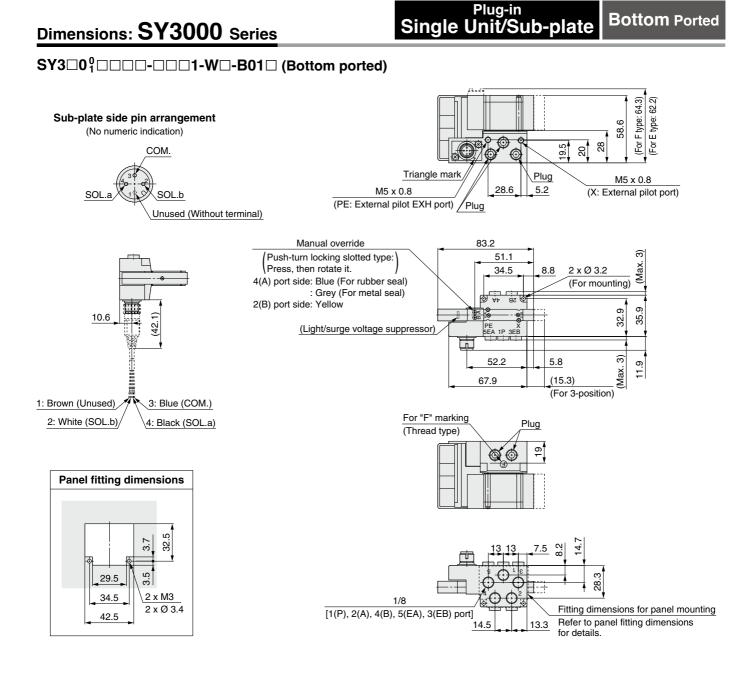

* These figures show the "SY3200-5Z1-WO-B01F."


(Side ported, Bottom ported, Top ported) SY3000/5000/7000 Series


Side Ported


Top Ported

Plug-in Single Unit/Sub-plate

Dimensions: SY5000 Series

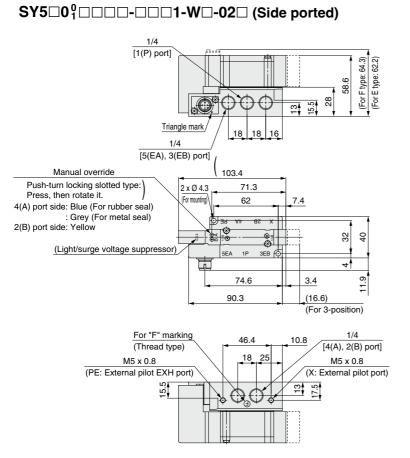





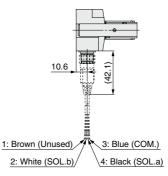

* These figures show the "SY5200-5Z1-WO-02F."

SY5_3⁰₁____1___1-___1-W_-V02_ (Top ported)

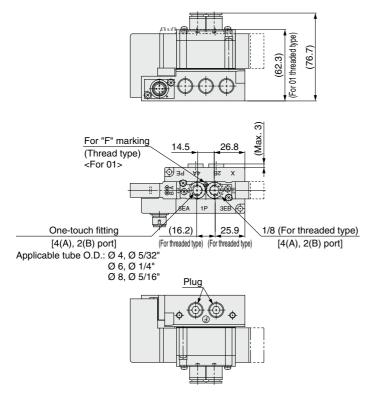




* These figures show the "SY5230-5Z1-C8-WO-V02F."

* 1(P), 5(EA), 3(EB), X, and PE ports are side ported.

Plug-in Single Unit/Sub-plate

Bottom Ported

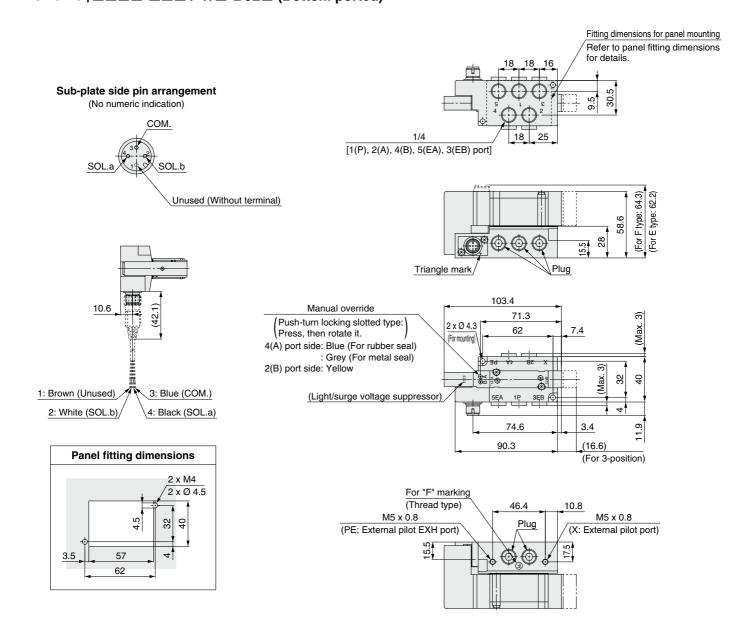


* These figures show the "SY5200-5Z1-WO-B02F."


(Side ported, Bottom ported, Top ported) SY3000/5000/7000 Series

Plug-in Single Unit/Sub-plate Side Ported **Top** Ported

Dimensions: SY7000 Series

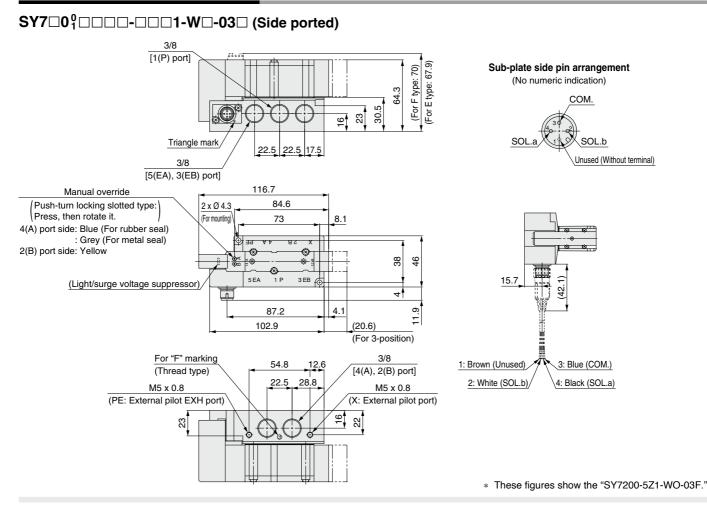

SY7_3¹_____1___1-____W_-V03_ (Top ported)

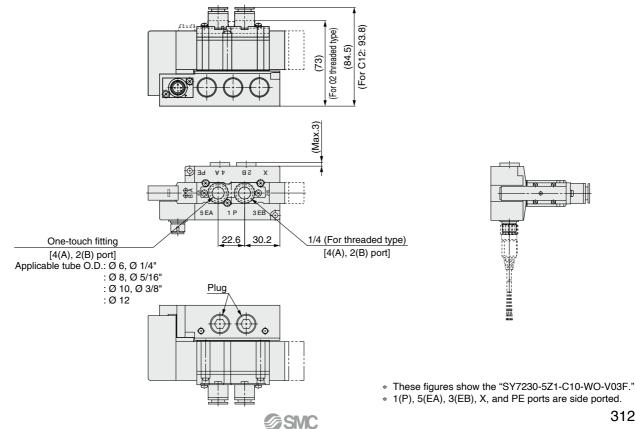

Plug-in Single Unit/Sub-plate Bottom Ported Dimensions: SY7000 Series Fitting dimensions for panel mounting Refer to panel fitting dimensions 17.5 22.5 for details. ₽ g Sub-plate side pin arrangement (No numeric indication) COM. 3/8 22.5 28.8 [1(P), 2(A), 4(B), 5(EA), 3(EB) port] SOL.a SOL.b Unused (Without terminal) For E type: 67.9) (For F type: 70) 64.3 30.5 23 Triangle mark Plug 116.7 42.1) 15.7 Manual override (Max.3) 84.6 Push-turn locking slotted type: 2 x Ø 4.3 Press, then rotate it. 8.1 73 (For mounting 4(A) port side: Blue (For rubber seal) : Grey (For metal seal) नत 2(B) port side: Yellow (Max.3) -🐼 ⊗ 88 46 1: Brown (Unused) 3: Blue (COM.) -🐼 5 EA 3 EB f 1 P (Light/surge voltage suppressor) 2: White (SOL.b) 4: Black (SOL.a) 87.2 4.1 o Ξ 102.9 (20.6) Panel fitting dimensions (For 3-position) 2 x M4 2 x Ø 4.5 For "F" marking (Thread type) 54.8 46.2 12.6 38 M5 x 0.8 M5 x 0.8 Plug (PE: External pilot EXH port) (X: External pilot port) 69 g N 73

* These figures show the "SY7200-5Z1-WO-B03F."



Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smc.eu

Environment

MWarning

- 1. Do not use valves in atmospheres of corrosive gases, chemicals, sea water, water, water vapour, or where there is direct contact with any of these.
- Products compliant with IP67 enclosures (based on IEC60529) are protected against dust and water, however, these products cannot be used in water. If using in an environment that is exposed to water and dust splashes, take measures such as using a protective cover.
- 3. When using built-in silencer type manifold with an IP67 enclosure, keep the exhaust port of the silencer from coming in direct contact with water or other liquids.
- 4. The metal seal valve is provided with a hole to discharge the pilot EXH. When using in atmospheres containing water and dust, mount it horizontally.

Valve Mounting

ACaution

Mount it so that there is no slippage or deformation in gaskets, and tighten with the tightening torque as shown to the right.

Series	Thread size	Tightening torque
SY3000	M2	0.16 N·m
SY5000/7000	M3	0.8 N∙m


Manual Override

MWarning

Regardless of an electric signal for the valve, the manual override is used for switching the main valve. Connected actuator is started by manual operation. Use the manual override after confirming that there is no danger.

Non-locking push type


Push down on the manual override button until it stops.



■ Push-turn locking slotted type [D type]

Push down on the manual override with a small flat head screwdriver until it stops, and then turn it 90° clockwise. The manual override is then locked. To release it, turn it counter-clockwise.

If it is not turned, it can be operated the same way as the non-locking push type.

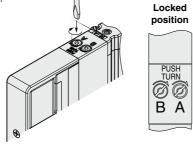


Manual Override

▲Warning

■ Push-turn locking lever type [E type]

Push down on the manual override by finger until it stops, and then turn it 60° clockwise. The manual override is then locked. To release it, turn it counterclockwise. If it is not turned, it can be operated the same way as the non-locking push type.

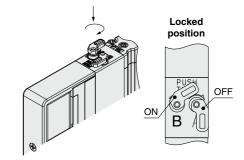

Carefully check the manual override projection amount. Max. (at OFF): 3.7 mm




▲Caution

Do not apply excessive torque when turning the manual override. [0.1 $N{\cdot}m]$

When locking the manual override, be sure to push it down before turning. Turning without first pushing it down can cause damage to the manual override and other trouble such as air leakage, etc.

Slide locking type (Manual)

It is locked by sliding the manual override all the way in the direction indicated by the arrow (ON side) with a small flat head screwdriver or with your fingers. Slide it in the direction indicated by the arrow (OFF side) to release it.

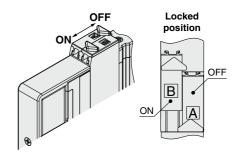



Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smc.eu

Back Pressure Check Valve

≜Caution

•There are two types of back pressure check valves; the type which is built into a valve (rubber seal type only) and the type which is built in on the manifold side with a connector connection. Both types have a check valve built in to prevent back pressure.

Please note that for this reason, even if a valve with an external pilot specification is used, it cannot be pressurised from exhaust port [3/5(E)]. As compared with the types which do not integrate the back pressure check valve, C value of the flow rate characteristics goes down. Please contact SMC for details.

- The manifold installed type back pressure check valve assembly is assembly parts with a check valve structure. However, since slight air leakage against the back pressure is allowed due to its structure, adverse effects of the back pressure due to increase in exhaust resistance cannot be prevented if the manifold exhaust port and other exhaust ports are put together for piping or if the piping diameter is narrowed. As a result, this may cause the actuator and air operated equipment to malfunction. So, be careful not to restrict the exhaust air. If the exhaust resistance becomes large, select a built-in valve type with rubber seal.
- Do not switch valves when A or B port is open to the atmosphere, or while the actuators and air operated equipment are in operation. For built-in valve type with rubber seal, the back pressure prevention seal may be peeled off, which may cause air leakage or malfunctions. Use caution especially when performing a trial operation or maintenance work.

Exhaust Throttle

▲Caution

The SY series pilot valve and main valve share a common exhaust inside the valve. Therefore, do not block the exhaust port when arranging the piping.

Used as a 3-Port Valve

≜Caution

■ In case of using a 5-port valve as a 3-port valve

The SY3000/5000/7000 series can be used as normally closed (N.C.) or normally open (N.O.) 3 -port port valves by closing one of the cylinder ports 4 (A) or 2 (B) with a plug. However, they should be used with the exhaust ports kept open. They are convenient at times when a double solenoid type 3 -port valve is required.

Plu	g position	B port	A port
Туре	of actuation	N.C.	N.O.
Number of solenoids	Single	(A)4 2(B)	(A)4 2(B) (EA)5 1 3(EB) (P)
Number of	Double	(A)4 2(B)	(A)4 2(B) 조 고 고 (EA)5 1 3(EB) (P)

Valve and Manifold Combination

The SY series plug-in valve has the common configuration of the valve mounting surface between base-mounted type $(SY_{\frac{3}{7}}^{3}\Box 0\Box)$ and top-ported type $(SY_{\frac{3}{7}}^{3}\Box 3\Box)$, therefore, it can be mounted to all manifolds of the side-ported type (Type 5 0 and Type 1 0), the bottom-ported type (Type 51 and Type 11), and the top-ported type (Type 52 and Type 12). For example, air output can be obtained from both sides of the A and B ports of the manifold and the valve by mounting a top-ported valve to a side-ported or bottom-ported manifold, and a pressure switch can be connected to the output port on one side. However, when selecting valves and manifolds, note that when a base-mounted valve is mounted to a top-ported manifold, there will be no output from the A and B port.




Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smc.eu

Light/Surge Voltage Suppressor


ACaution

Polar type Positive common Single solenoid

Light/surge voltage suppressor ($\Box Z$)





Surge voltage suppressor (\Box S)




Positive common Double solenoid, 3-position, 4-position

Light/surge voltage suppressor (□Z)









■ Non-polar type

With surge voltage suppressor (□R) Single solenoid Do




Single solenoid Light/surge voltage suppressor (□NZ)

Negative common




Surge voltage suppressor (□NS)




Negative common

Double solenoid, 3-position, 4-position

Light/surge voltage suppressor (□NZ)




Surge voltage suppressor (\Box NS)




[SOL.a] / ↓ (+) Polarity protectic


Double solenoid



With light/surge voltage suppressor (\Box U)

Single solenoid




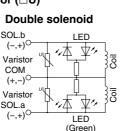

■ With power saving circuit


Power consumption is decreased to approx. 1/3 compared with the standard product by reducing the wattage required to hold the valve in an energised state. (Effective energising time is over 67 ms at 24 VDC.)

 Be careful of the energising time, as quick response and high pressure types will become operational when the energising time is over 40 ms.

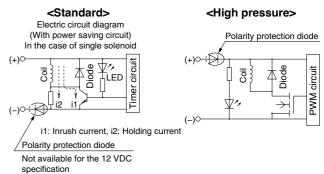

The circuit shown above reduces the power consumption for holding in order to save energy. Refer to the electrical power waveform as shown below.

<Electrical power waveform with power saving circuit>

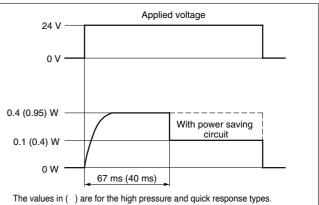

- The 12 VDC specification with power saving circuit (standard specification) does not have the polarity protection diode. Do not make a mistake with the polarity.
- Since the voltage will drop by approx. 0.5 V due to the transistor, pay attention to the allowable voltage fluctuation. (For details, refer to the solenoid specifications of each type of valve.)

Residual voltage of the surge voltage suppressor

If a varistor or diode surge voltage suppressor is used, there is some residual voltage to the protection element and rated voltage. Therefore, refer to the table below and pay attention to the surge voltage protection on the controller side. Also, since the response time does change, refer to the valve specifications on page 18.

Residual Voltage

Surge voltage	DC						
suppressor	24 V	12 V					
S, Z	Approx. 1 V						
R, U	Approx. 47 V	Approx. 32 V					



Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smc.eu

Continuous Duty

▲Caution

If a valve is energised continuously for long periods of time, the rise in temperature due to heat-up of the coil assembly may cause a decline in solenoid valve performance, reduce service life, or have adverse effects on peripheral equipment. In particular, if three or more adjacent stations on the manifold are energised simultaneously for extended periods of time or if the valves on A side and B side are energised simultaneously for long periods of time, take special care as the temperature rise will be greater. In such cases, if it is possible to select a valve with a power-saving circuit, be sure to do so.

UL Approved Product

▲Caution

When conformity to UL is required, the product should be used with a UL1310 Class 2 power supply.

The product is a UL approved product only if it has a **c** Wus mark on the body.

Countermeasure for Surge Voltage Intrusion

Surge voltage intrusion

With non-polar type valves, at times of sudden interruption of the loading power supply, such as emergency shutdown, surge voltage intrusion may be generated from loading equipment with a large capacity (power consumption), and a valve in a de-energised state may switch over (see Figure 1). When installing a breaker circuit for the loading power supply, consider using a valve with polarity (with polarity protection diode), or install a surge absorption diode between the loading equipment COM line and the output equipment COM line (see Figure 2).

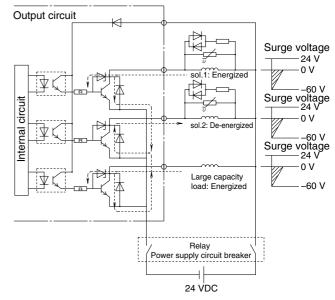


Figure 1. Surge intrusion circuit example (NPN outlet example) (24 VDC)

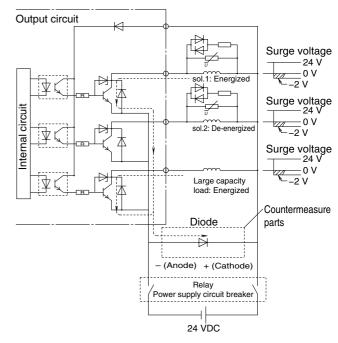


Figure 2. Surge intrusion countermeasure example (NPN outlet example) (24 VDC)


SMC



Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smc.eu

Light Indication

When equipped with indicator light and surge voltage suppressor, the light window turns red when solenoid a is energised, and it turns green when solenoid b is energised.

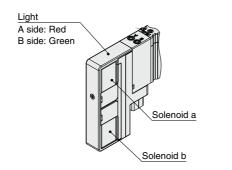


Type 5 (Metal Base), Type 1 (Connector Connecting Base) Changing Connector Entry Direction


≜Caution

Connector direction for electrical entry of D-sub connector <IP 40> and flat ribbon cable can be changed. If the directional change is required, slide the lever on the side of the connector block to the FREE position, and then change the direction as shown in the figure. Also, before connecting the connector, be sure to return the lever to the LOCK position. (If the lever is difficult to slide, move the connector a little bit to make it easier to slide the lever.)

If an excessive force is applied on the connector in the LOCK position, the connector block may be damaged. Also, using in such a way that the connector floats in the FREE position, it may cause the lead wire, etc., to break. Thus, refrain from using in these ways.

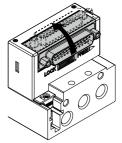

Type 5□ (Metal base)

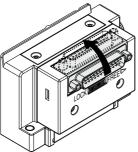


Type 1□ (Connector connecting base)

Manifold Indication Symbol

≜Caution

The letter "S" is indicated on manifold blocks for the SY series Type 1 \Box (connector connecting base) as shown below. This indication refers to the type of substrate assembly (single wiring) inside the manifold blocks. When there is no symbol, double wiring is used.

When the manifold specification sheet does not include a wiring specification, all stations will be double wiring specification. In this case, single and double solenoid valves can be mounted in any position, but when a single valve is used, there will be an unused control signal. To avoid this, indicate positions of manifold blocks for single wiring specification and double wiring specification on a manifold specification sheet. (Note that double, 3-, or 4-position valves cannot be used for manifolds blocks with single wiring specification **S**.)

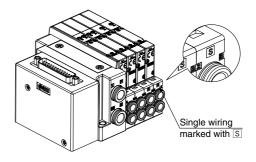



Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smc.eu

Substrate Assemblies inside Manifolds

≜Caution

Substrate assemblies inside of manifolds cannot be taken apart. Attempting to do so may damage parts.

Fixation of DIN Rail Mounting Type Manifolds

ACaution

- 1. When the manifold is fixed with bolts on a mounting surface, etc., it can be operated just by fixing on both ends of the DIN rail if the bottom surface of the DIN rail is entirely in contact with the mounting surface when mounted horizontally. However, if it is used with other mounting or with side or reverse mounting, fix the DIN rail with bolts at regular intervals. As a guide, insert bolts in 2 locations for 2-5 stations, 3 locations for 6-10 stations, 4 locations for 11-15 stations, 5 locations for 16-20 stations, and 6 locations for 21-24 stations.
- 2. When using the manifold with DIN rail in an environment where any vibration or impact is applied to it, the DIN rail itself may be broken. In particular, if the installation surface vibrates when mounting the manifold on the wall or if a load is directly applied to the manifold, the DIN rail may be broken, causing the manifold to drop. When any vibration, impact, or load is applied to the manifold, be sure to use the direct mounting manifold.


Port Block Assembly and How to Change Piping Types between Top and Side

▲Caution

For the top-ported type, the port size of A and B ports can be changed by switching the port block assemblies which are mounted on the body. The piping method can also be changed by switching the top-ported type port block assembly with the side-ported type cover assembly. Also, it may cause air leakage if the mounting screws are not tightened securely enough when they are switched. Take care to tighten to the correct tightening torque.

Refer to pages 24 and 25 for part numbers of port block assembly and body cover assembly for A, B port and page 225 for part numbers of port block assembly and body cover assembly for P, E port.

When switching them while valves are mounted on a manifold, remove the clip with a flat head screwdriver before switching the port plugs and the One-touch fittings. It may cause air leakage if the mounting screws are not tightened or the clip is not inserted securely enough when they are switched. Take care to tighten to the correct tightening torque.

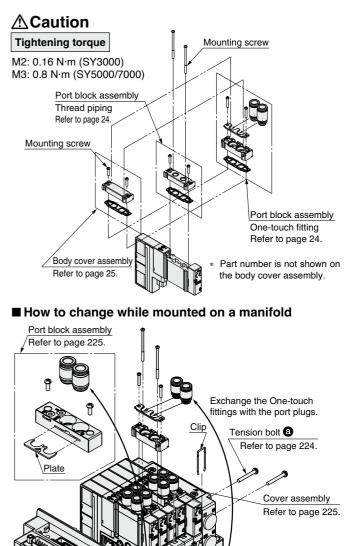

Plug assembly For SY3000

Plug assembly

Refer to page 226.

Plate

Removable by screwing an M3 screw into the centre hole



Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smc.eu


How to Replace One-touch Fittings

▲ Caution

By replacing One-touch fittings of valve or manifold base, it is possible to change the connection diameter of the 4(A), 2(B), 1(P), 3/5(E) ports.

When replacing the One-touch fittings, remove the clip or the plate and the plate mounting screws with a screwdriver before pulling the One-touch fittings off. Mount the One-touch fittings by following the removal procedure in reverse.

It may cause air leakage if the mounting screws are not tightened or the clip and the clip plate are not inserted securely enough when they are switched. Take care to tighten to the correct tightening torque. Refer to page 226 for part numbers of One-touch fittings for valve or manifold.

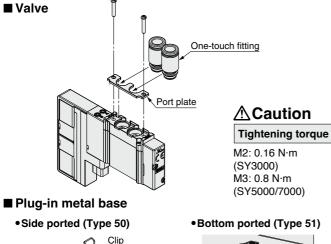


Clip One-touch fitting

Clip part nos. (10 pcs. included)

Series	Part no.
SY3000	SY30M-19-2A
SY5000	SY50M-19-2A
SY7000	SY70M-19-2A

■ Plug-in connector connecting base • Side ported (Type 10)

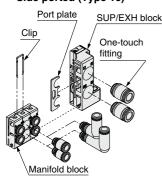

Bottom ported (Type 51) Plate Plate mounting screw

Plate assembly part nos. (10 pcs. included)

(10 pcs. ii	(To pes. included)								
Series	Part no.								
SY3000	SY30M-10-3A								
SY5000	SY50M-10-6A								
SY7000	SY70M-10-7A								
	* Including mounting screw								

Including mounting screw

Clip part nos. (10 pcs. included)									
Series	A, B port size	Part no.							
SY3000	—	SY30M-19-1A							
SY5000	—	SY50M-19-6A							
SY7000	—	SV3000-70-1A							
SY3000/5000 Mixed mounting type (For mounting	Ø 2, Ø 3, Ø 4 Ø 6, Ø 1/8" Ø 5/32", Ø 1/4"	SY50M-19-1A							
the SY3000)*1	Ø 8, Ø 5/16"	SY50M-19-6A							
*1 The part number for mounting the									

- SY5000 is SY50M-19-6A The part number for the SY5000/7000
- mixed mounting type is SV3000-70-1A. If the port plate for the SUP/EXH block
- is required, please contact SMC.

How to Replace One-touch Fittings

▲ Caution

•Bottom ported (Type 11)

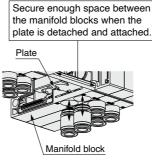


Plate part nos. (10 pcs. included)

Series	A, B port size	Part no.						
SY5000	_	SY50M-10-4A						
SY7000	-	SY70M-10-4A						
SY3000/5000 Mixed mounting type (For mounting	Ø 2, Ø 3, Ø 4 Ø 6, Ø 1/8" Ø 5/32", Ø 1/4"	SY50M-10-5A						
the SY3000)*1	Ø 8, Ø 5/16"	SY50M-10-4A						
1 The part number for mounting the								

SY5000 is SY50M-10-4A.

The part number for the SY5000/7000

mixed mounting type is SY70M-10-4A.

Other Tube Brands

- 1. When using other than SMC brand tube, confirm that the following specifications are satisfied with respect to the tube outside diameter tolerance.
 - 1) Nylon tube
 - 2) Soft nylon tube
 - 3) Polyurethane tube
- within ±0.1 mm within +0.15 mm

within ±0.1 mm

-0.2 mm

Do not use tube which do not meet these outside diameter tolerances. It may not be possible to connect them, or they may cause other trouble, such as air leakage or the tube pulling out after connection.

One-touch Fittings

Tube attachment/detachment for One-touch fittings

1) Tube attachment

- 1. Take a tube having no flaws on its periphery and cut it off at a right angle. When cutting the tube, use tube cutters TK-1, 2, or 3. Do not use pliers, nippers, scissors, etc. If cutting is done with tools other than tube cutters, the tube may be cut diagonally or become flattened, etc., making a secure installation impossible, and causing problems such as the tube pulling out after installation or air leakage. Allow some extra length in the tube.
- 2. Grasp the tube and push it in slowly, inserting it securely all the way into the fitting.
- 3. After inserting the tube, pull on it lightly to confirm that it will not come out. If it is not installed securely all the way into the fitting, this can cause problems such as air leakage or the tube pulling out.

2) Tube detachment

- 1. Push in the release button sufficiently, pushing its collar equally around the circumference.
- 2. Pull out the tube while holding down the release button so that it does not come out. If the release button is not pressed down sufficiently, there will be increased bite on the tube and it will become more difficult to pull it out.
- 3. When the removed tube is to be used again, cut off the portion which has been chewed before reusing it. If the chewed portion of the tube is used as is, this can cause trouble such as air leakage or difficulty in removing the tube.



Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smc.eu

One-touch Fittings

ACaution

When fittings are used, they may interfere with one another depending on their types and sizes. Therefore, the dimensions of the fittings to be used should first be confirmed in their respective catalogues.

Fittings whose compliance with the SY series is already confirmed are stated below. If the fitting within the applicable range is selected, there will not be any interference.

Applicable Fittings: KQ2H, KQ2S Series

Series	Model	Piping port	Port	Fittings			Applica	ıble tubir	ng O.D.			
Series	INIOUEI	Fipilig port	size	Fillings	Ø 2	Ø 3.2	Ø 4	Ø 6	Ø 8	Ø 10	Ø 12	
		44.00		KQ2H								
	SY3⊡30-□□-M5	4A, 2B	M5	KQ2S								
			1/0	KQ2H								
		1P, 5EA, 3EB	1/8	KQ2S								
0.1/0000		Y DE	M5 -	KQ2H								
SY3000	SS5Y3-50/51/52 (R)	X, PE		KQ2S								
	Manifold base				KQ2H							
		44.00	1/8	KQ2S								
		4A, 2B		KQ2H								
			M5	KQ2S								

Corico	Model	Distant sout	Port	Littingo			Applica	able tubir	ng O.D.		
Series	woder	Piping port	size	Fittings	Ø 2	Ø 3.2	Ø 4	Ø 6	Ø 8	Ø 10	Ø 12
	SY5⊡30-□□-01		1 /0	KQ2H							
	515_3001	4A, 2B	1/8	KQ2S							
			4 / 4	KQ2H							
		1P, 5EA, 3EB	1/4	KQ2S							
CVE000		X, PE	M5 -	KQ2H		1					
SY5000	SS5Y5-50/51/52 (R)			KQ2S			[
	Manifold base			KQ2H							
			1/4	KQ2S							
		4A, 2B	1/0	KQ2H							
			1/8	KQ2S							

Sorioo	Model	Diping port	Port	Eittingo			Applica	able tubir	ng O.D.							
Selles	Series Model	Piping port	size	Fittings	Ø 2	Ø 3.2	Ø 4	Ø 6	Ø 8	Ø 10	Ø 12					
				KQ2H												
	SY7⊡30-□□-02	4A, 2B	1/4	KQ2S												
		1P, 5EA, 3EB	0/0	KQ2H												
SY7000			IF, SEA, SED	IF, JEA, JEB	IF, JEA, JED	IF, JEA, JED	TF, JLA, JLD	11, JEA, JED 3/0	3/8	KQ2S						
517000	SS5Y7-50/51/52 (R)		M5	KQ2H												
	Manifold base			KQ2S												
		4A, 2B	1/4	KQ2H												
				KQ2S												

Trademark

DeviceNet[®] is a trademark of ODVA, Inc.

EtherNet/IP[®] is a trademark of ODVA, Inc.

CompoNet[®] is a trademark of ODVA, Inc.

 $\label{eq:charge} \mbox{EtherCAT}^{\circledast} \mbox{ is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.$

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of **"Caution," "Warning"** or **"Danger."** They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC) ¹⁾, and other safety regulations.

▲ Caution:	Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.
▲ Warning:	Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.
▲ Danger:	Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

▲ Safety Instructions

▲ Warning

 The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.
 Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and

on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

3. Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.

- 1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
- 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
- 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.

- 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
- 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalogue.
- 3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
- 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

▲ Caution

 The product is provided for use in manufacturing industries. The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary. If anything is unclear, contact your nearest sales branch.

1) ISO 4414: Pneumatic fluid power – General rules relating to systems. ISO 4413: Hydraulic fluid power – General rules relating to systems.

IEC 60204-1: Safety of machinery – Electrical equipment of machines. (Part 1: General requirements) ISO 10218-1: Manipulating industrial robots - Safety.

etc.

Limited warranty and Disclaimer/Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".Read and accept them before using the product.

Limited warranty and Disclaimer

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first. ²⁾ Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products.
- 2) Vacuum pads are excluded from this 1 year warranty. A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

- 1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

▲ Caution

SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country.

Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

▲ Safety Instructions

SMC Corporation (Europe)

Austria Belgium Bulgaria +359 (0)2807670 Croatia Czech Republic +420 541424611 www.smc.cz Denmark +45 70252900 Estonia +372 6510370 Finland France Germany +49 (0)61034020 Greece +30 210 2717265 +36 23513000 Hungary Ireland +39 03990691 Italy Latvia +371 67817700

+43 (0)2262622800 www.smc.at +32 (0)33551464 www.smc.be www.smc.bg +385 (0)13707288 www.smc.hr www.smcdk.com +358 207513513 www.smc.fi +33 (0)164761000 www.smc-france.fr www.smc.de www.smchellas.gr www.smc.hu +353 (0)14039000 www.smcautomation.ie sales@smcautomation.ie www.smcitalia.it www.smc.lv

office@smc.at info@smc.be office@smc.bg office@smc.hr office@smc.cz smc@smcdk.com www.smcpneumatics.ee smc@info@smcee.ee smcfi@smc.fi info@smc-france.fr info@smc.de sales@smchellas.gr office@smc.hu mailbox@smcitalia.it info@smc.lv

Lithuania +370 5 2308118 Netherlands +31 (0)205318888 www.smc.nl Norway +47 67129020 +48 222119600 Poland Portugal +351 214724500 Romania +40 213205111 Russia +7 8127185445 Slovakia +421 (0)413213212 www.smc.sk Slovenia +386 (0)73885412 www.smc.si Spain +34 945184100 Sweden +46 (0)86031240 Switzerland +41 (0)523963131 Turkey UК +44 (0)845 121 5122 www.smc.uk

www.smclt.lt www.smc-norge.no www.smc.pl www.smc.eu www.smcromania.ro www.smc-pneumatik.ru www.smc.eu www.smc.nu www.smc.ch

info@smclt.lt info@smc.nl post@smc-norge.no office@smc.pl apoioclientept@smc.smces.es smcromania@smcromania.ro info@smc-pneumatik.ru office@smc.sk office@smc.si post@smc.smces.es smc@smc.nu info@smc.ch +90 212 489 0 440 www.smcpnomatik.com.tr info@smcpnomatik.com.tr sales@smc.uk

South Africa +27 10 900 1233 www.smcza.co.za zasales@smcza.co.za