# **OSHA Standard Compliant Pressure Relief 3-Port Valve** with Locking Holes New



Improved flow rate characteristics

% increase

Panel mount specification VHS30EW-D Series p. **5-1** 

SUP

**Energy saving** Zero blow-by of the air during switching of the handle

Max.


\*1 VHS40-04-D

## Safety measure

**OSHA** (Occupational Safety and Health Administration) standard compliant

High-pressure silencer (Option)

### Modular design with uniform body style to F.R.L units.

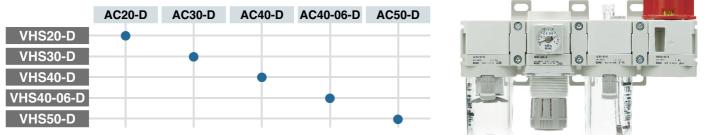

### Variations


Single action	on	VHS20-D	VHS30-D	VHS40-D	VHS40-06-D	VHS50-D
Double action		VHS20W-D	VHS30W-D	VHS40W-D	VHS40W-06-D	VHS50W-D
	1/8	•				
	1/4	•	•	•		
Port size	3/8		•	•		
(Rc, NPT, G)	1/2			•		
	3/4				•	•
	1					•

**Single Action** 

VHS20/30/40/50-D Series Double Action VHS20W/30W/40W/50W-D Series



## Improved flow rate characteristics

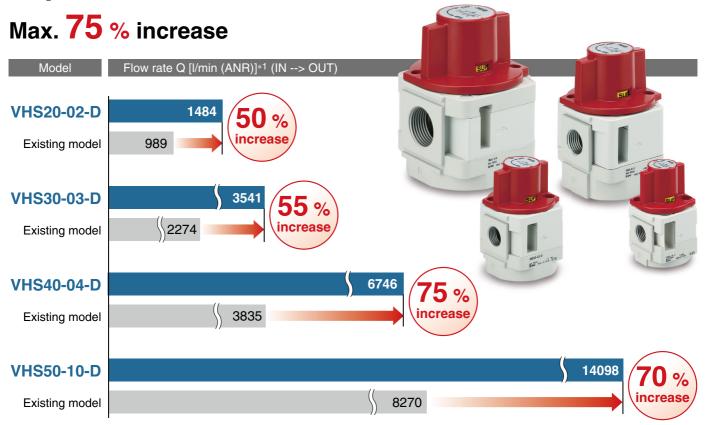

\*1 These values have been calculated according to ISO 6358 and indicate the flow rate under standard conditions with an inlet pressure of 0.6 MPa (relative pressure) and a pressure drop of 0.1 MPa.

#### With the indicator window



The supply/exhaust status of the air flow can be verified at a glance in the indicator window.

SUP : Supply EXH : Exhaust

#### **Double action**

Push the handle and then turn, 2-step action prevents malfunction.



#### OSHA standard compliant (Occupational Safety and Health Administration - US standard)


For safety control, OSHA rule requires energy sources for certain equipment be turned off or disconnected and that the device either be locked or labelled with a warning tag.

With locking holes When in the exhaust position, the valve may be padlock secured.



#### Lower pressure drop contributing to energy saving New Double action Panel mount specification Pressure drop: reduced by up to 73 % (\* for flow rate up to 1500 l/min.) p. **5-1** <Typical example> VHS30-03-D Inlet pressure: 0,5 MPa 0,5 Reduced Outlet pressure [MPa] by C Existing model Panel MISTOR - 10-9 VHS30EW-D Series 1000 2000 3000 Flow rate [l/min (ANR)]

# Options

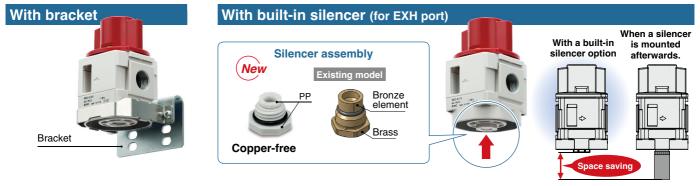

### Semi-standard/Made to Order



**SMC** 

		Sing VF Dou	Standard Compliant Pressure le Action <b>IS20/30/40/2</b> ble Action <b>IS20W/30W/2</b>	50-D	Ser	ies	R	OHS			
Symbo	ol						í				
Ļ	2							824			
Ŵ	\ <u>/ ┬│┬ │</u> 3│1│		How to Order					1			
								ar. als			
VF		0 0 0	<b>3</b> - <b>D</b> - <b>D</b> - <b>4</b> <b>5 6</b> <b>Made to Order</b> (For details, refer to page 8.)	Option/Semi-stanc Option/Semi-stanc When more than a alphanumeric orda Example) VHS30-N	lard symbo one specific er.	l: ation is requ		ite in			
					0						
		Symbol	Description		20	Body 30	size 40	50			
			Single action	]	<u>20</u>	30	40	<u> </u>			
2	Handle operation	W	Double action		•	•	•	•			
		+	Bc*1	]	•						
8	Pipe thread type	N	NPT			•	•	•			
		F	G		•		•	•			
		+				г – т					
		01	<u> </u>		•	_					
_		02	3/8		•	•	•				
4	Port size	03	1/2		_	_	•	_			
		06	3/4		_	_	•	•			
		10	1		—	—	_				
		+		ı,							
	a Mounting	-	Without mounting option		•	•	•	•			
Option		B +	With bracket		•		•	•			
Optic Optic	<del>,</del>	+   _	Without silencer	][	•		•				
	b Silencer	S	With built-in silencer (for EXH port)			•					
		+									
		_	Red		•		•	•			
	c Handle colour	К	Black		•	•	•	•			
		+		, ,		· · · ·					
larc	d Handle material		Resin		•	•	•	•			
<b>a</b> nc		<u>M</u>	Metal		•	•		●			
0		+	Flow direction: Left to right	] [	•		-				
9 Semi-standard	e Flow direction			•	•						
0,		R +	Flow direction: Right to left								
	f Pressure unit	—	Product label in SI units: MPa		•						
	f Pressure unit	<b>Z</b> *2	Product label in imperial units: psi		○*3	○*3	○*3	○*3			
∗1 The	pipe thread type for the E	XH port is	• G.								

\*1 The pipe thread type for the EXH port is G.

\*2 For the pipe thread type: NPT only. This product is for overseas use only according to the New Measurement Act. (The SI unit type is provided for use in Japan.) \*3 O: For the pipe thread type: NPT only

### Simple Specials System A system designed to respond quickly and easily to your special ordering needs



#### For modular connection units (shipped assembled), the simple specials system can be used.

Short lead times

This system enables us to respond to your special needs (additional machining, accessory assembly, or the designing of a modular unit) and deliver your personalised products as quickly as standard products.

#### **Repeat orders**

Once we receive a simple special part number from one of your previous orders, we will process the order, manufacture the product, and deliver it to you as quickly as possible.

Please contact your local sales representative for more details.





..... OSHA standard (Occupational Safety and Health Administration, U.S. Department of Labor - US standard) For safety control, OSHA rule requires energy sources for certain equipment be turned off or disconnected and that the device either be locked or labelled with a warning tag.

#### Specifications

#### Standard Specifications

Standard Specifications	5				Standard Specifications										
Model	VHS20-D	VHS30-D	VHS40-D	VHS40-06-D	VHS50-D										
Applicable AC size	AC20-D	AC30-D	AC40-D	AC40-06-D	AC50-D AC60-D*1										
Fluid			Air												
Ambient and fluid temperatures	–5 to 60 °C (No freezing)														
Proof pressure	1.5 MPa														
Max. operating pressure			1.0 MPa												
Handle switching angle			90°												
Paint colour	Handle: Red Body: White Body cover: White														
Weight	0.10 kg	0.18 kg	0.40 kg	0.43 kg	0.82 kg										

\*1 The VHS50 can be connected to the AC60.

#### **Flow Rate Characteristics**

TIOW Hate O	11414010										
	Port	size	Flow rate characteristics*2								
Model	IN. OUT	EXH	IN → OUT					OUT	→ EXH		
	IN, OUT	EVU	C (dm <sup>3</sup> /s·bar)	b	Cv	Q [l/min (ANR)]*1	C (dm <sup>3</sup> /s·bar)	b	Cv	Q [l/min (ANR)]*1	
VHS20-D	1/8	1/8	4.0	0.41	1.1	1096	3.7	0.42	1.1	1021	
VH520-D	1/4		5.8	0.31	1.4	1484	3.8	0.42	1.1	1049	
VHS30-D	1/4	1/4	8.8	0.44	2.4	2466	8.0	0.46	2.3	2277	
VH330-D	3/8	1/4	14.1	0.28	3.5	3541	7.8	0.46	2.2	2220	
	1/4		9.5	0.49	2.8	2769	13.3	0.47	3.6	3815	
VHS40-D	3/8	3/8	17.2	0.47	4.8	4934	13.6	0.47	3.7	3901	
	1/2		26.7	0.29	6.3	6746	13.4	0.43	3.7	3727	
VHS40-06-D	3/4	1/2	34.0	0.22	7.6	8237	16.1	0.41	4.4	4412	
VHS50-D	3/4	1/2	45.0	0.26	10.6	11163	23.0	0.49	6.4	6705	
VH350-D	1	1/2	53.3	0.36	13.5	14098	22.8	0.49	6.3	6647	

\*1 These values have been calculated according to ISO 6358 and indicate the flow rate under standard conditions with an inlet pressure of 0.6 MPa (relative pressure) and a pressure drop of 0.1 MPa.


\*2 The flow rate characteristics of this product vary.

#### **Option/Part Nos.**

Optional	Model								
specifications	VHS20-D	VHS30-D	VHS40-D	VHS40-06-D	VHS50-D				
Bracket assembly <sup>*1</sup>	VHS24P-180AS	VHS34P-180AS	VHS44P-180AS	VHS44P-180AS	VHS54P-180AS				
Silencer assembly <sup>*2</sup>	VHS24P-190AS	VHS34P-190AS	VHS44P-190AS	VHS54P-190AS	VHS54P-190AS				


\*1 The assembly consists of a bracket A/B and 2 mounting screws.

\*2 The assembly consists of the element assembly and an O-ring.

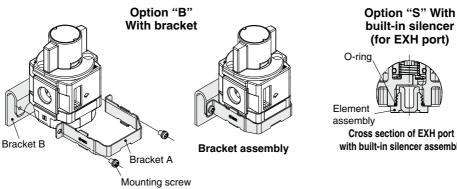

SMC


(for EXH port)

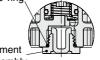

Cross section of EXH port with built-in silencer assembly

## VHS20/30/40/50-D Series

### Dimensions

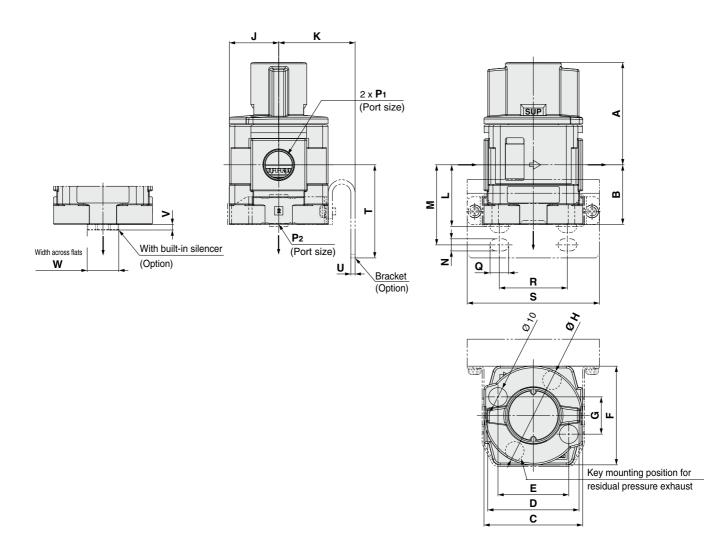


#### Dimensions

	Standard specifications											
Model	P1	P2		4	в	с	D	Е	E	G	н	J
		F2	Single	Double	Б		U	<b>–</b>	Г	G		
VHS20-D	1/8, 1/4	1/8	48.5	51.7	23	40	37	28	42	17.5	40	21
VHS30-D	1/4, 3/8	1/4	55	58.2	32	53	49	38	53	20	53	26.5
VHS40-D	1/4, 3/8, 1/2	3/8	69.7	73.9	41.3	70	63	52	71	29	70	35.5
VHS40-06-D	3/4	1/2	71.7	75.9	43.3	75	63	52	71	29	70	35.5
VHS50-D	3/4, 1	1/2	86.5	90.7	44.5	90	80	72	90	33	90	45

	Options specifications											
Model	With bracket										With silencer	
	К	L	М	N	Q	R	S	Т	U	V	W	
VHS20-D	30	25.3	34	5.4	8.4	27	60	40	2.3	3	13	
VHS30-D	41	33	43	6.5	10	36.5	71	50	2.3	3	17	
VHS40-D	50	44	57	8.5	19	43.5	88	66	2.3	3	21	
VHS40-06-D	50	46	59	8.5	19	43.5	88	68	2.3	4	27	
VHS50-D	70	60	—	11	27.5	49.5	113	71	3.2	4	27	

[mm]

### **OSHA Standard Compliant Pressure Relief 3-Port Valve with Locking Holes Double Action Panel Mount Specification** VHS30EW-D Series

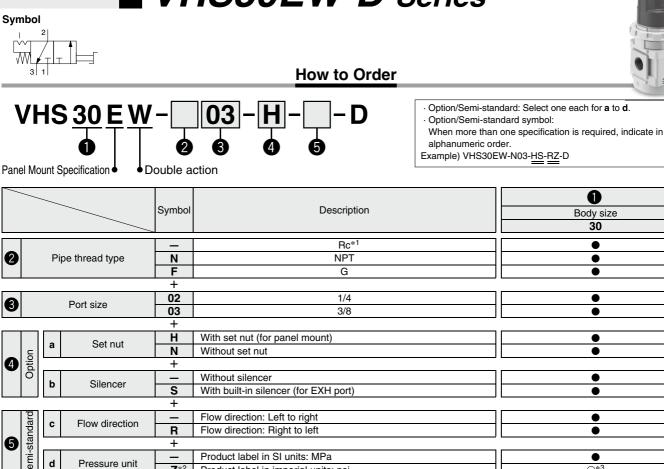

Pressure unit \*1 The pipe thread type for the EXH port is G.

\*2 For the pipe thread type: NPT only. This product is for overseas use only according to the New Measurement Act. (The SI unit type is provided for use in Japan.) \*3 O: For the pipe thread type: NPT only

Product label in SI units: MPa

Product label in imperial units: psi

#### Specifications

d

Fluid	Air
Ambient and fluid temperatures	–5 to 60 °C (No freezing)
Proof pressure	1.5 MPa
Max. operating pressure	1.0 MPa
Paint color	Handle: Red Body: White
	Bonnet cover: White
Weight	0.27 kg

**Z**\*2

### **Flow Rate Characteristics**

Port size		Flow rate characteristics								
IN, EXH	IN→	OUT		OUT→EXH						
OUT	EVU	C (dm3/s·bar)	b	Cv	C (dm3/s·bar)	b	Cv			
1/4	1/4	8.8	0.44	2.4	8.0	0.46	2.3			
3/8	1/4	14.1	0.28	3.5	7.8	0.46	2.2			

•

O\*3

\* The flow rate characteristics of this product have variations.


#### Set Nut for Panel Mount

#### **ARG33P-260S**




#### **Assembly/Usage Precautions**

· The set nut can only be mounted on the panel mount type (VHS30EW-D).

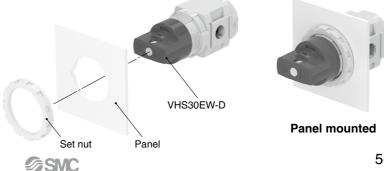

## VHS30EW-D Series

### Dimensions

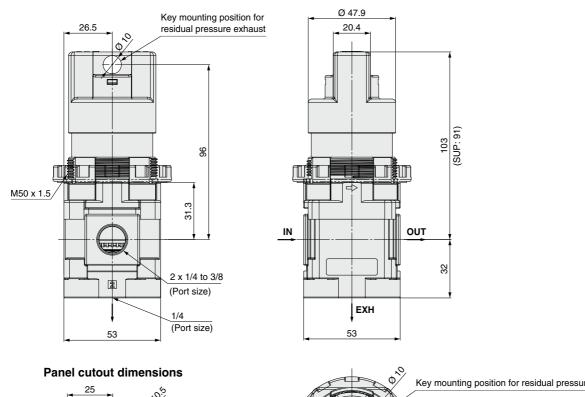


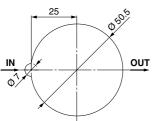


Plate thickness: Max. 3.5

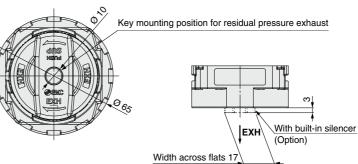



## VHS20/30/40/50-D Series Modular Connection Example

Please note that products do not come assembled. They should be ordered separately and assembled by the customer.

For modular connection units (shipped assembled), the simple specials system can be used. For details, refer to page 3.


### Combination example 1

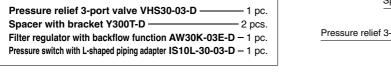

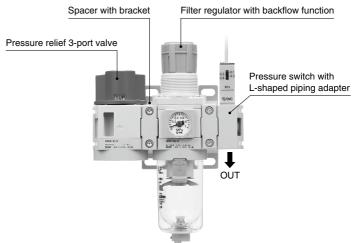


### Combination example 2

L-shaped piping adapter E300L-03-D 1	pc.
Spacer with bracket Y300T-D 4 p	cs.
Air filter AF30-03-D 1	pc.
Regulator AR30-03E1-D 1	pc.
Cross spacer Y34-03-D 1	pc.
Pressure relief 3-port valve VHS30-03-D 1	pc.

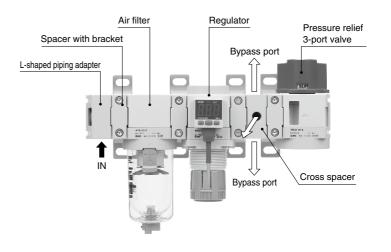

### Combination example 3


Pressure relief 3-port valve VHS30-03-D	— 1 рс.
Spacer with bracket Y300T-D	- 4 pcs.
Air filter AF30-03-D	— 1 pc.
Common supply regulator with backflow function	0
AR30MK-0302E-D	– 2 pcs.
Regulator with backflow function AR30K-03E-D —	— 1 pc.

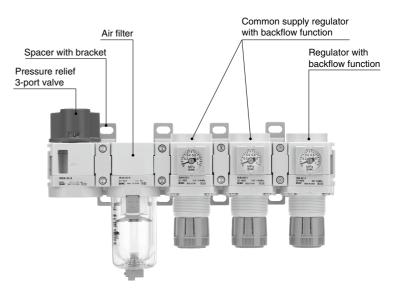



## VHS20/30/40/50-D Series Accessories Sold Separately (for Individual Parts)

### Spacer/Spacer with Bracket

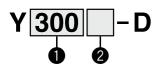

Spacer (Y⊡-D) Spacer with bracket

				0						
		Symbol	Description	Body size [Applicable VHS size]						
				<b>200</b> [VHS20]	<b>300</b> [VHS30]	<b>400</b> [VHS40]	<b>500</b> [VHS40-06]	<b>600</b> [VHS50]		
		_	Spacer		•	•	•	●		
2	Bracket	т	Spacer with bracket	•	•	•	•	•		





#### Standard Specifications

Fluid	Air
Ambient and fluid temperatures	–5 to 60 °C (No freezing)
Proof pressure	1.5 MPa
Max. operating pressure	1.0 MPa

#### **Replacement Parts**

		Part number							
Description	Material	Y200-D	Y300-D	Y400-D	Y500-D	Y600-D			
		Y200T-D	Y300T-D	Y400T-D	Y500T-D	Y600T-D			
Seal	HNBR	Y220P-050S	Y320P-050S	Y420P-050S	Y520P-050S	Y620P-050S			

#### Dimensions

#### Spacer Spacer with bracket D κ н (7 D E С • Center of body ш Center of body മ (Except Y300T-D) m ـ ш Ш Α Α (Spacer width) (Spacer width)


Part no.	Α	В	С	D	Е	Applicable model
Y200-D	3.2	35	13.2	42	0.6	VHS20-D
Y300-D	4.2	43	16.2	53	—	VHS30-D
Y400-D	5.2	51	19.2	71		VHS40-D
Y500-D	5.2	54	21.2	71	_	VHS40-06-D
Y600-D	6.2	64	27.2	90	_	VHS50-D

Part no.	Α	В	С	D	Ε	EE	F	G	Н	J	Κ	Applicable model
Y200T-D	3.2	67	29	51	24	33	11.5	5.5	15.5	3.5	30	VHS20-D
Y300T-D	4.2	85	42.5	67.5	35	Ι	14	7	20	6	41	VHS30-D
Y400T-D	5.2	115	50	85.5	40	55	18	9	26	7	50	VHS40-D
Y500T-D	5.2	115	50	85.5	40	55	18	9	26	7	50	VHS40-06-D
Y600T-D	6.2	140	60	115	50	70	20	11	31.2	8	70	VHS50-D

## VHS20/30/40/50-D Series Made to Order

Please contact SMC for detailed dimensions, specifications, and delivery times.



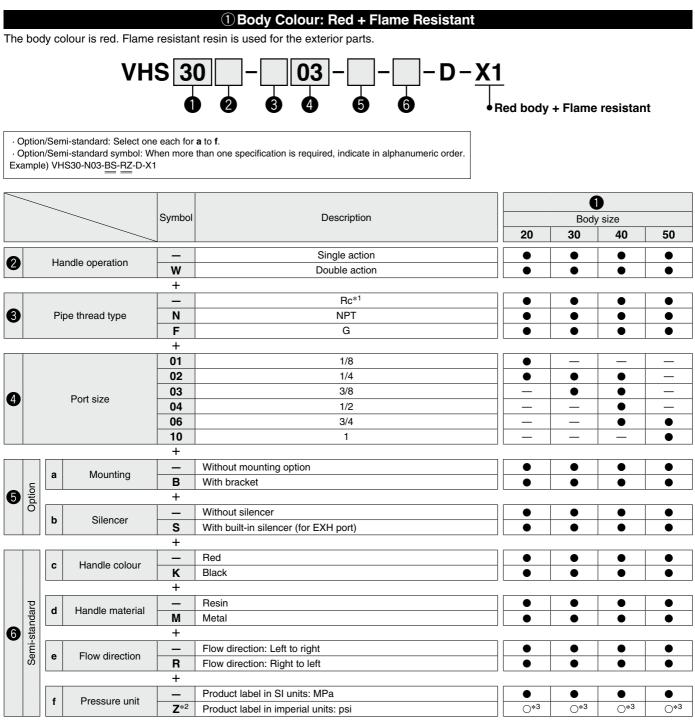

\*1 The pipe thread type for the EXH port is G.

\*2 For the pipe thread type: NPT only. This product is for overseas use only according to the New Measurement Act.

\*3 O: For the pipe thread type: NPT only

## VHS20/30/40/50-D Series

$\begin{array}{c c c c c c c c c c c c c c c c c c c $	
$\begin{array}{c c c c c c c c c c c c c c c c c c c $	
<ul> <li>Option/Semi-standard: Select one each for a to f.</li> <li>Option/Semi-standard symbol: When more than one specification is required, indicate in alphanumeric order. Example) VHS30-N03-BT-KMRZ-D-X425</li> <li>Symbol</li> <li>Description</li> <li>Body size</li> <li>30</li> <li>4</li> <li>Pipe thread type</li> <li>High-pressure silencer</li> <li>Body size</li> <li>30</li> <li>Pipe thread type</li> <li>N</li> <li>NPT</li> <li>Body size</li> <li>30</li> <li>Pipe thread type</li> <li>N</li> <li>NPT</li> <li>G</li> <li>Port size</li> <li>02</li> <li>1/4</li> <li>04</li> <li>1/2</li> <li>-</li> <li>04</li> <li>1/2</li> <li>-</li> <li>Multing</li> <li>With built-in silencer (for EXH port)</li> <li>Silencer</li> <li>With built-in silencer (for EXH port)</li> </ul>	SUP
$ \begin{array}{ c c c c c c } \hline Symbol & Description & \hline Body size \\ \hline 30 & 4 \\ \hline 00 & 1 \\ \hline F & G & \hline 0 & 0 \\ \hline F & G & \hline 0 & 0 \\ \hline F & G & \hline 0 & 0 \\ \hline F & G & \hline 0 & 0 \\ \hline F & G & \hline 0 & 0 \\ \hline F & G & \hline 0 & 0 \\ \hline F & G & \hline 0 & 0 \\ \hline F & G & \hline 0 & 0 \\ \hline 0 & 1/4 & \hline 0 & 0 \\ \hline 0 & 3 & 3/8 & \hline 0 & 0 \\ \hline 0 & 3 & 3/8 & \hline 0 & 0 \\ \hline 0 & 1/2 & \hline - & \hline 0 & 0 \\ \hline & & & & & \\ \hline & & & & \\ \hline & & & & \\ \hline & & & &$	
$ \begin{array}{c c c c c c c c c c c c c c c c c c c $	
Pipe thread type         N         NPT           F         G         Image: Constraint of the state of	)
$\begin{tabular}{ c c c c c } \hline F & G & & & & & & & & & & & & & & & & &$	
$\begin{tabular}{ c c c c c } \hline F & G & & & & & & & & & & & & & & & & &$	
O2         1/4         Image: Constraint of the state o	1
Image: Port size         O3         3/8           04         1/2         -           +         -         -           Image: Port size         -         -           Image: Port size         -         -         -           Image: Port size         -         Without mounting option         -         -           Image: Port size         -         Without mounting option         Image: Port size         -         -           Image: Port size         -         With bracket         Image: Port size         - <th< td=""><td></td></th<>	
O4     1/2       +       a     Mounting       B     With bracket       +       b     Silencer       T     With built-in silencer (for EXH port)	
Image: State of the state	
a     Mounting     -     Without mounting option       B     With bracket       +       b     Silencer       T     With built-in silencer (for EXH port)	
Important Strength     Important Strength	
Image: Second	
b Silencer T With built-in silencer (for EXH port)	
b Silencer T With built-in silencer (for EXH port)	
+	
c Handle color K Black	
d Handle material*2 M Metal	
5 <sup>1</sup> / <sub>2</sub>	
e Flow direction R Flow direction: Right to left	,
Fragoura unit - Product label in SI units: MPa	
f     Pressure unit     Z*3     Product label in imperial units: psi     O*4	4

\*1 The pipe thread type for the EXH port is G.

\*2 The handle material for the high-pressure specification is metal. Be sure to select the semi-standard option "M."

\*3 For the pipe thread type: NPT only. This product is for overseas use only according to the New Measurement Act. (The SI unit type is provided for use in Japan.) \*4 〇: For the pipe thread type: NPT only

#### Specifications

Fluid	Air
Ambient and fluid temperatures	–5 to 60 °C (No freezing)
Proof pressure	3.0 MPa
Max. operating pressure	2.0 MPa

#### Flow rate characteristics


	Port size		Flow rate characteristics*1						
Model	IN,	EXH	IN→OUT			OUT→EXH			
	OUT	EVU	C (dm3/s·bar)	b	Cv	C (dm3/s·bar)	b	Cv	
VHS30-D-X425	1/4	1/4	7.3	0.49	2.1	4.8	0.50	1.4	
VH530-D-A425	3/8	1/4	11.1	0.34	2.7	5.0	0.51	1.4	
	1/4		8.3	0.58	2.7	9.9	0.29	2.4	
VHS40-D-X425	3/8	3/8	16.0	0.50	4.6	11.5	0.30	2.8	
	1/2		20.0	0.41	5.3	11.9	0.33	3.0	

\*1 The flow rate characteristics of this product have variations.

#### **Assembly/Usage Precautions**

- Be sure to connect a silencer to the EXH port to reduce the amount of noise caused by the exhaust.
  The built-in silencer (standard specification option)
- The built-in silencer (standard specification option) cannot be used with the high-pressure specification.


#### High-pressure silencer assembly

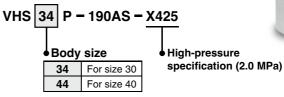



### Made to Order VHS20/30/40/50-D Series

### **②High-Pressure Specification**

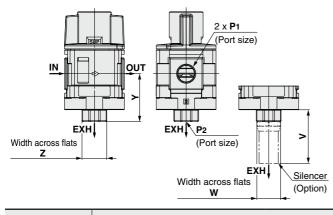

High-pressure specification With built-in silencer Model **P**1 P2 Υ Ζ ۷ w VHS30-D-X425 1/4, 3/8 1/4 42.5 22 47.5 21 VHS40-D-X425 1/4, 3/8, 1/2 3/8 52 24 47.7 21

Dimensions (Dimensions other than those below are the same as those of the standard type.)



## VHS20/30/40/50-D Series **Specific Product Precautions 1**

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

#### **Precautions on Design**

### **Marning**

1. Do not supply air pressure from ports other than the 1 (P) port.

The valve will malfunction when air pressure is supplied from other ports.

2. We recommend using a lock with a shackle diameter of  $\emptyset$  5 or more. If a lock with a shackle diameter of less than Ø 5 is to be used, please test it on the actual machine.


Installation and Adjustment

### **∧**Caution

- 1. The valve must be switched to each position instantly and securely. Stopping the handle between the extreme positions may cause a malfunction.
- 2. Double action type requires two actions (push the handle and turn it). Confirm that the handle is pushed properly before turning it. If the handle is not pushed properly to the end, the internal parts will be broken by turning the handle.
- 3. Tighten the 2 holding screws on the spacer with bracket or spacer evenly.

Tighten them to the recommended tightening torque. Insufficient tightening torque may result in loosening or sealing failure. Excessive tightening torque may damage the thread, etc.

Recommen	Recommended Tightening Torque									
Applicable model	VHS20 [AC20]	VHS30 [AC30]		VHS40-06 [AC40-06]						
Spacer with bracket part number	Y200T-D	Y300T-D	Y400T-D	Y500T-D	Y600T-D					
Spacer part number	Y200-D	Y300-D	Y400-D	Y500-D	Y600-D					
Torque	0.36 ±0.036	1.2 ±0.05	1.2 ±0.05	1.4 ±0.05	2.0 ±0.1					

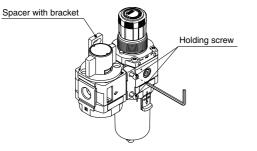

Piping

### **∕∆Warning**

#### 1. Piping load and moment

Avoid any torsional or bending moments other than those caused by the equipment's own weight as failure to do so may result in damage.


Support external piping separately.

If moment application is unavoidable during operation, the moment should be lower than the max. moment shown below. Piping materials without flexibility, such as steel tube piping, are prone to being affected by excess moment loads or vibrations from the piping side. Use flexible tubing in between to avoid such effects.

Unit: N·m

Applicable model	VHS20 [AC20]	VHS30 [AC30]		VHS40-06 [AC40-06]	
Max. moment ( <b>M</b> )	14.5	16	19.5	35	45

Max. moment  $(\mathbf{M})$  = Length  $(\mathbf{L})$  x Load  $(\mathbf{F})$ 

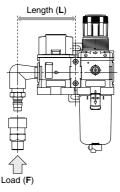

2. Before piping is connected, the pipes should be thoroughly blown through with air (flushing) or washed to remove chips, cutting oil and other debris from inside.

Should they remain, they could cause a malfunction.

3. When connecting pipes and fittings, etc., be sure that neither chips from the pipe threads nor sealing material get inside the valve.

When using sealant tape, leave 1.5 to 2 thread ridges exposed at the end of the pipe/fitting.

4. Connect piping/fittings using the recommended torgue while holding the female thread side tightly.

Insufficient tightening torque can result in loose piping or sealing failure. Over tightening may break the thread. If the female side is not held while tightening, excessive force will be applied to the bracket directly, resulting in breakage.

Recommen	ded Tigh	tening T	orque			Unit: N⋅m
Connection thread	1/8	1/4	3/8	1/2	3/4	1
Torque	7 to 9	12 to 14	22 to 24	28 to 30	28 to 30	36 to 38



## VHS20/30/40/50-D Series Specific Product Precautions 2

Be sure to read before handling. Refer to back cover for Safety Instructions and "Handling Precautions for SMC Products" (M-E03-3) for 3/4/5 Port Solenoid Valve Precautions on the SMC website: https://www.smc.eu

Piping

## **M**Warning

5. When an SMC One-touch fitting is used, refer to the operation manual for the One-touch fitting.

#### 6. Silencer is recommended in the exhaust port.

When mounting a built-in resin silencer (VHS series/optional), tighten it by hand, and then use a tool on the width across flats of the octagonal part to tighten it additionally until it is attached firmly on the end. When mounting the resin silencers (AN series), use a tool on the width across flats of the hexagonal part to tighten it an additional 1/4 turn after tightening the silencer by hand.

When installing One-touch fittings (KQ2 series), add a 1/2 turn after tightening it by hand. Excess tightening torque may damage the resin silencers or the threads of the exhaust port.

#### Air Supply

## **M**Warning

1. Air containing a large amount of drainage can cause a malfunction. Install an air dryer or aftercooler on the inlet side of the product.

### **≜**Caution

- 1. Use an air filter with 5  $\mu m$  or less filtration rating on the inlet side to avoid any damage to the seat caused by dust.
- 2. Install a mist separator on the inlet side to remove carbon powder from the compressor or other equipment. An excessive amount of carbon dust ingress via the inlet may cause the valve to malfunction.

Refer to "SMC Air Preparation System" for further details on compressed air quality.

#### **Operating Environment**

### 

- 1. Do not use in an atmosphere containing corrosive gases, chemicals, sea water, water, water steam, or where there is direct contact with any of these.
- 2. Do not use in explosive atmospheres.
- 3. Do not use in locations subject to vibration or impact.
- 4. A protective cover should be used to shield the product from direct sunlight.
- 5. Remove any sources of excessive heat.
- 6. Employ suitable protective measures in locations where there is contact with water droplets, oil, welding spatter, etc.
- 7. Install a silencer into exhaust port to prevent the ingress of dust if there is a lot of dust in the atmosphere.

If dust enters the valve via exhaust port, it may cause air leakage.

If any ambient environments from 1 to 7 mentioned above are true for your operating conditions, select the metal handle type for your safety.

#### Maintenance

### **Marning**

1. When equipment is to be removed, first confirm that measures are in place to prevent dropping of driven objects and run-away of equipment, etc. Then cut the supply air pressure and electric power, and exhaust all compressed air from the system using its residual pressure release function.

When the equipment is to be started again after remounting or replacement, first confirm that measures are in place to prevent lurching of actuators and then confirm that equipment operates normally.

2. Do not disassemble the product.

It will cause damage to the product and result in operation failure.

These safety instructions are intended to prevent hazardous situations and/or equipment ▲ Safety Instructions damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)<sup>1)</sup>, and other safety regulations. 1) ISO 4414: Pneumatic fluid power – General rules and safety Danger indicates a hazard with a high level of risk requirements for systems and their components. **∧** Danger: which, if not avoided, will result in death or serious ISO 4413: Hydraulic fluid power - General rules and safety injury. requirements for systems and their components. Warning indicates a hazard with a medium level of risk (Part 1: General requirements) **∧** Warning: which, if not avoided, could result in death or serious iniury. industrial robots - Part 1: Robots. Caution indicates a hazard with a low level of risk etc

**∧** Caution: which, if not avoided, could result in minor or moderate injury.

**∧** Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications. Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

#### 2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

- 3. Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.
  - 1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
  - 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
  - 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.
- 4. Our products cannot be used beyond their specifications. Our products are not developed, designed, and manufactured to be used under the following conditions or environments. Use under such conditions or environments is not covered.
  - 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
  - 2. Use for nuclear power, railways, aviation, space equipment, ships, vehicles, military application, equipment affecting human life, body, and property, fuel equipment, entertainment equipment, emergency shut-off circuits, press clutches, brake circuits, safety equipment, etc., and use for applications that do not conform to standard specifications such as catalogues and operation manuals.
  - 3. Use for interlock circuits, except for use with double interlock such as installing a mechanical protection function in case of failure. Please periodically inspect the product to confirm that the product is operating properly.

IEC 60204-1: Safety of machinery - Electrical equipment of machines. ISO 10218-1: Robots and robotic devices - Safety requirements for

### **∧** Caution

We develop, design, and manufacture our products to be used for automatic control equipment, and provide them for peaceful use in manufacturing industries. Use in non-manufacturing industries is not covered.

Products we manufacture and sell cannot be used for the purpose of transactions or certification specified in the Measurement Act.

The new Measurement Act prohibits use of any unit other than SI units in Japan.

### Limited warranty and **Disclaimer/Compliance** Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".Read and accept them before using the product.

#### Limited warranty and Disclaimer

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.<sup>2)</sup> Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products.
- 2) Vacuum pads are excluded from this 1 year warranty. A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

#### **Compliance Requirements**

- 1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

#### **SMC Corporation (Europe)**

Austria Belgium Bulgaria Croatia Czech Republic +420 541424611 www.smc.cz Denmark +45 70252900 Estonia +372 6510370 Finland France Germany +49 (0)61034020 Greece +36 23513000 Hungary Ireland +39 03990691 Italy Latvia +371 67817700

+43 (0)2262622800 www.smc.at +32 (0)33551464 www.smc.be +359 (0)2807670 www.smc.bg +385 (0)13707288 www.smc.hr www.smcdk.com +358 207513513 www.smc.fi +33 (0)164761000 www.smc-france.fr www.smc.de +30 210 2717265 www.smchellas.gr www.smc.hu +353 (0)14039000 www.smcautomation.ie sales@smcautomation.ie www.smcitalia.it www.smc.lv

office@smc.at info@smc.be office@smc.bg office@smc.hr office@smc.cz smc@smcdk.com www.smcpneumatics.ee smc@info@smcee.ee smcfi@smc.fi info@smc-france.fr info@smc.de sales@smchellas.gr office@smc.hu mailbox@smcitalia.it info@smc.lv

Lithuania +370 5 2308118 Netherlands +31 (0)205318888 www.smc.nl Norway +47 67129020 +48 2221 19600 Poland Portugal +351 214724500 Romania +40 213205111 Russia +7 (812)3036600 Slovakia +421 (0)413213212 www.smc.sk Slovenia +386 (0)73885412 www.smc.si Spain +34 945184100 Sweden +46 (0)86031240 Switzerland +41 (0)523963131 Turkey UK +44 (0)845 121 5122 www.smc.uk

www.smclt.lt www.smc-norge.no www.smc.pl www.smc.eu www.smcromania.ro www.smc.eu www.smc.eu www.smc.nu www.smc.ch

info@smclt.lt info@smc.nl post@smc-norge.no office@smc.pl apoioclientept@smc.smces.es smcromania@smcromania.ro sales@smcru.com office@smc.sk office@smc.si post@smc.smces.es smc@smc.nu info@smc.ch +90 212 489 0 440 www.smcpnomatik.com.tr info@smcpnomatik.com.tr sales@smc.uk

South Africa +27 10 900 1233 www.smcza.co.za zasales@smcza.co.za