

G thread Adapter Set

Thermo chiller

HRS Series / HRS-EP014

Introduction

Thank you for purchasing SMC's HRS Thermo chiller.

This [G thread Adapter Set] includes the adapters for the piping thread that are used for the thermo-chiller HRS series.

Please confirm the following procedure before handling.

Safety caution

- This work should be done by a person who has enough knowledge of general machineries. Check the safety before the work.
- Read and understand the Thermo chiller's operation manual before the work.
- Do not supply power during the work. Be sure to check that the power supply is shut off.
- Work on before supplying circulating fluid or discharge all Circulating fluid from the Thermo chiller.

1. Parts and Accessories

 This [G thread Adapter Set] includes the following parts. Please check that all required parts are included.

Parts List





Manual(This manual)





Rc-G Adapter (3/4 inch) (Material: Stainless) 1 pc.

2



Rc-G Adapter (1 inch) (Material: Stainless) 3 pcs.






Rc-G Adapter (1/2 inch) (Material: Stainless) 1 pc.

2. Mounting

- 1) Check that there is no dust and foreign material in the connection parts of the Thermo chiller.
- 2) Use seal tape or sealant for the adapters as sealant material.
- 3) Fasten the [Rc-G Adapter (1 inch)] into the outlet port, return port of the circulating fluid and overflow port. (recommended torque: 36 to 38 N⋅m)
- 4) Fasten the [Rc-G Adapter (1/2 inch)] into the automatic water-fill port. (recommended torque: 28 to 30N⋅m)
- 5) Fasten the [Rc-G Adapter (3/4 inch)] into the tank drain port. (recommended torque: 28 to 30N⋅m)
- 6) Sealing material is not attached. Please purchase separately (SMC part no: HRG-S0214).

When using sealant, apply it around the screw part of [Rc-G Adapter] leaving a thread from the end. It will take approx. 2 hours to harden. Do not supply circulating fluid before hardening.

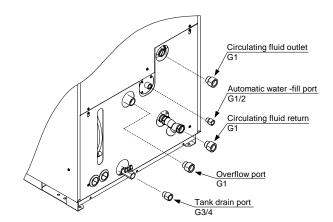

 Operate the Thermo chiller and check that there is no fluid leakage after the sealant hardening.