Circulating Fluid Temperature Controller

Thermo-chiller/Rack Mount Type

Air-cooled Refrigeration

Water-cooled Refrigeration





New

A 0.95 kW (50 Hz) cooling capacity option and an inverter specification mechanical sealless pump option have been added.

Operable without the need to remove the unit from the rack

Front access

Simple to control, service, and maintain with all filters and drainage accessible via the front panel

Space saving

Multiple chillers can be mounted to a 19-inch rack.

*1 Refer to page 1 for details on 19-inch



New

310 mm

Equivalent to 7U (EIA standards*1)

Fluid fill port

Drain port

Equivalent to 9U . (EIA standards*1)

399

mm

Bypass valve (Standard) Particle filter (Standard)

Cooling

0.9/1.0/1.6/2.0/2.5 kW (50 Hz)

DI filter (Option)

Temperature stability

±0.1 °C

Global power supply


Single-phase 100 VAC (50/60 Hz)/115 VAC (60 Hz) Single-phase 200 to 230 VAC (50/60 Hz)









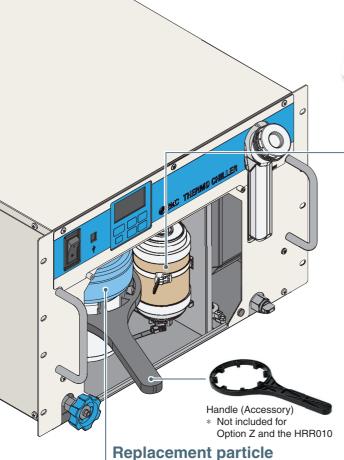

Front access

Maintenance

DI filter replacement

Optional Accessories p. 32




Drain pan (Built-in water leakage sensor)


The leakage sensor detects fluid leakage. The drain pan prevents leaked fluid from pooling at the bottom of the product.



Discharge of the circulating fluid



Cleaning of the dustproof filter

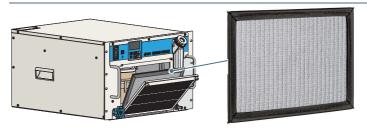


filter element Optional Accessories p. 32



Space saving

Footprint can be reduced by 53% by installing the product in a 19-inch rack (EIA standards*1).

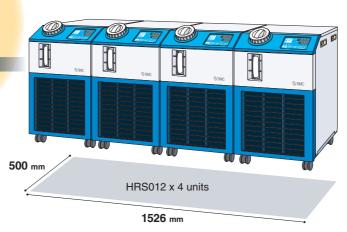

*1 19-inch Back Standards

11 13 mon maok otamaaras						
Standard	EIA (Electronic Industries Alliance)					
Standard no.	EIA310-D					
Height	44.5 mm (=1U)					
Length	450 mm (min)					
Width	483.4 mm					

630 mm

HRR012 x 4 units

570 mm

(Typical rack dimensions)

Setting and Adjustment

A bypass valve and flow sensor are built in (standard).

Flow rate and pressure adjustment can be seen on the displayed panel.

- * Option Z does not come with a bypass valve or flow sensor.
- * Option Z1 does not come with a flow sensor.

Flow rate sensor Open Close

Colour LCD screen




Current value (displayed in white): Discharge temperature, pressure, flow rate, etc.

Set value (displayed in green): Set temperature, etc.

Angled inlet allows for the easy supply of circulating fluid





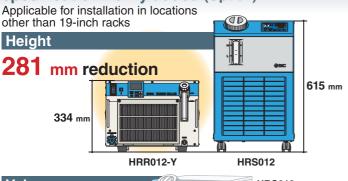







Temperature stability: ±0.1 °C

A precision temperature control method which utilizes expansion valves and temperature sensors allowed for the realization of a product with a high temperature stability of ± 0.1 °C.

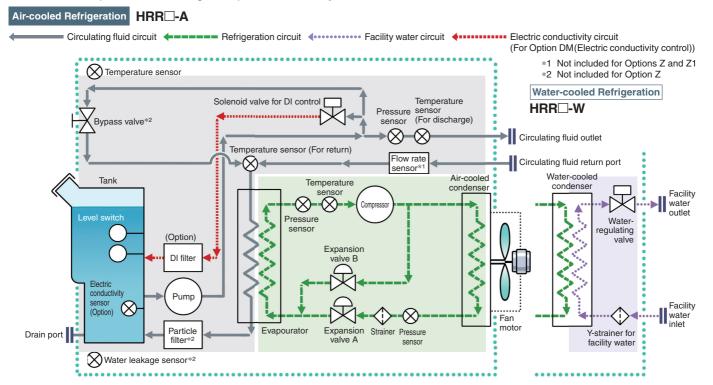

Refrigeration circuit

- The compressor compresses the refrigerant gas and discharges high-temperature, high-pressure refrigerant gas.
- In the case of air-cooled refrigeration, the high-temperature, highpressure refrigerant gas is cooled down by fan ventilation in the aircooled condenser, where it is then liquefied. In the case of watercooled refrigeration, the refrigerant gas is cooled by the facility water in the facility water circuit in the water-cooled condenser, where it is then liquefied.
- The liquefied high-pressure refrigerant gas expands and its temperature lowers when it passes through expansion valve A, where it vapourizes after receiving heat from the circulating fluid in the evapourator.
- The vapourized refrigerant gas is sucked into the compressor and compressed again.
- When heating the circulating fluid, the high-pressure, hightemperature refrigerant gas is bypassed into the evapourator by expansion valve B to heat the circulating fluid.



Circulating fluid circuit

- After the circulating fluid discharged from the pump is heated or cooled by the user's equipment, it returns to the thermo-chiller.
- The circulating fluid is controlled to remain at a set temperature by the refrigeration circuit. It will then be discharged to the user's equipment side again by the thermo-chiller.



Facility water circuit

For water-cooled refrigeration HRR□-W

• The water-regulating valve opens and closes to keep the refrigerant gas pressure consistent. The facility water flow rate is controlled by the water-regulating valve.





Self-diagnosis function and alarm code display

Display of 24 types of alarm codes (For details → p.25)

Operation is monitored at all times by the integrated sensor. The applicable alarm code (24 types) is displayed after self-diagnosis.

Changeable alarm set values

Setting item	Set range*1
Circulating fluid discharge temperature rise	5 to 45 °C
Circulating fluid discharge temperature drop	1 to 35 °C
Circulating fluid discharge pressure rise	0.05 to 0.5 MPa
Circulating fluid flow rate reduction	2.0 to 15.0 LPM


^{*1} Set values vary depending on the model.



Menu for maintenance schedule

When it is time for periodical checks of the pumps, fan motor, dustproof filter, etc., a maintenance code will be generated as a reminder. Helpful for facility maintenance

Ex.) MT01 "Pump maintenance notice"

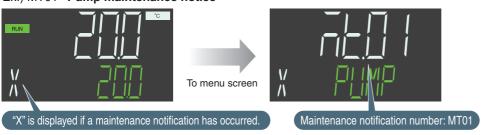


Displaying screen for operating conditions

Thermo-chiller internal temperature, pressure, etc., can be displayed.



With heating function

As the heating method uses discharged heat, a heater is unnecessary. The heating function is effective in maintaining a constant temperature, particularly in the winter when the ambient temperature is low.

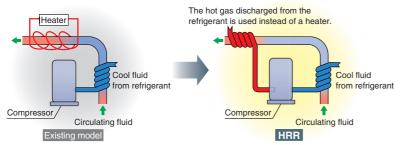

* This is just an example diagram.




Communication functions

Serial communication (RS-232C/RS-485) and contact input/output signals (2 inputs and 3 outputs) are equipped as standard. This allows for communication with the user's equipment and system construction, depending on the application.


Ex. 1 Remote signal I/O through serial communication

Remote operation is enabled (to start and stop operation) through serial communication.




Ex. 2 Remote operation signal input

The chiller can be operated remotely by contact input signals.

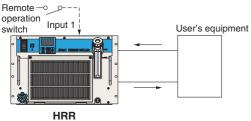

Ex. 3 Alarm and operation status (start, stop, etc.) signal output

The alarm and status generated in the product are assigned to 3 output signals based on their contents, which can then be output.




Output setting example

Output 1: Temperature rise Output 2: Pressure rise

Output 3: Operation status (start, stop, etc.)

Power supply (24 VDC) available

Power can be supplied from the contact input/output communication connector to external switches, etc.

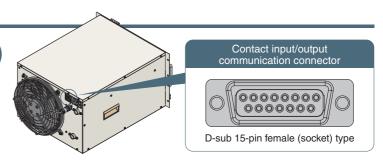

Variations


Model	Cooling capacity [W] (50/60 Hz)	Heating capacity [W] (50/60 Hz)	Cooling method	Temperature stability	Power supply	Circulating fluid	Option (pp. 28 to 31)	Optional accessories (pp. 32, 33)	International standards	
a. HD	950/1100 R010	250/300	Air-cooled refrigeration		- Single-phase 200 to 230 VAC			Particle filter element for replacement	C€	
	1000/1100	200/200	- Air-cooled refrigeration	cooled		(50/60 Hz)		With electric conductivity control function, Applicable to DI water piping	Anti-quake bracket*3	(6
HRI		· 400/500 (100 V type)		geration	- Single-phase 100 VAC (50/60 Hz)/ 115 VAC (60 Hz) - Single-phase 200 to 230 VAC (50/60 Hz)	Tap water 15 % ethylene glycol aqueous solution	water piping mel - High-pressure pump mounted*1 elei - Inverter pump mounted*2 - D If			
HR	R018 1600/1800	· 450/500 (200 V type)						element for replacement DI filter replacement	C €	
HR	HRR024 2000/2400	cooled		Water- cooled refrigeration	- Single-phase		rack mounting brackets	cartridge - Anti-quake bracket*3	(UL Standards) (Air-cooled: Option U Water-cooled: Standard)	
HRI	R030 2500/3000	330/700			200 to 230 VAC (50/60 Hz)		, , , ,	Piping conversion fitting Power supply cable		

^{*1} Applicable to the HRR012 to 030 *2 Only applicable to the HRR010 *3 Option: Only applicable to the with feet/without rack mounting brackets type

Inverter specification mechanical sealless pump (HRR010 option)


- As the pump has no external leakage of the circulating fluid, a periodic leakage check and replacement of the mechanical seal are not necessary.
- Circulating fluid pressure adjustable (Pressure adjustment via bypass piping is not required.)
- There is no pump capacity difference between the 50 Hz and the 60 Hz.


Application Examples

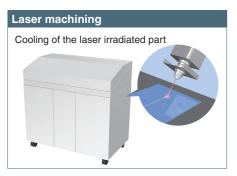







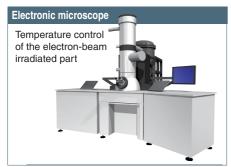

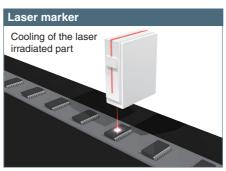

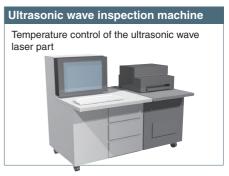




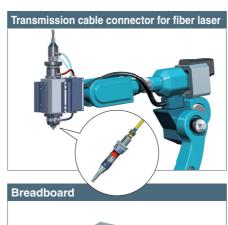





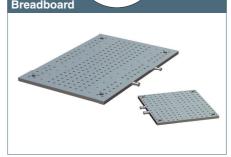

Global Supply Network

SMC has a comprehensive network in the global market.


We now have a presence of more than 5 6 0 branch offices and distributors in 8 3 countries and regions worldwide. With this global network, we are able to provide a global supply of our substantial range of products and high-quality customer service. We also provide full support to local factories, foreign manufacturing companies, and Japanese companies in each country.





Circulating Fluid/Facility Water Line Equipment

For details, refer to the SMC website.

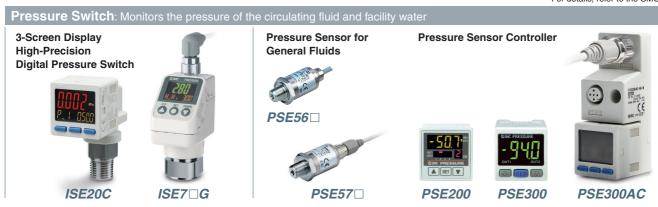

For details, refer to the SMC website.



CONTENTS

HRR Series



Thermo-chiller/Rack Mount Type HRR Series

HRR010	Operation Display Panelp. 25
How to Order	Alarmp. 25
Air-cooled Refrigeration (Single-phase 200 to 230 VAC) p. 9	Communication Functionspp. 26, 27
Water-cooled Refrigeration (Single-phase 200 to 230 VAC)p. 9	Options
Specifications	With Electric Conductivity Control Function,
Air-cooled Refrigeration (Single-phase 200 to 230 VAC)p. 10	Applicable to DI Water Pipingp. 28
Water-cooled Refrigeration (Single-phase 200 to 230 VAC)p. 11	Applicable to DI Water Pipingp. 28
HRR012/018	Inverter Pump Mountedp. 29
How to Order	High-Pressure Pump Mountedp. 30
Air-cooled Refrigeration (Single-phase 100/115 VAC)p. 12	With Feet/Without Rack Mounting Bracketsp. 31
Water-cooled Refrigeration (Single-phase 100/115 VAC)p. 12	Removed Partsp. 31
Specifications	
Air-cooled Refrigeration (Single-phase 100/115 VAC)p. 13	Optional Accessories
Water-cooled Refrigeration (Single-phase 100/115 VAC)p. 13	① Concentration Meterp. 32
HRR012/018/024/030	② Particle Filter Element for Replacementp. 32
How to Order	③ DI Filter Replacement Cartridgep. 32
Air-cooled Refrigeration (Single-phase 200 to 230 VAC)p. 14	④ Anti-quake Bracketp. 32
Water-cooled Refrigeration (Single-phase 200 to 230 VAC)p. 14	⑤ Piping Conversion Fitting (For Air-cooled Refrigeration)p. 33
Specifications	$\ensuremath{\texttt{\textcircled{6}}}$ Piping Conversion Fitting (For Water-cooled Refrigeration) \cdots p. 33
Air-cooled Refrigeration (Single-phase 200 to 230 VAC)p. 15	⑦ Power Supply Cablep. 33
Water-cooled Refrigeration (Single-phase 200 to 230 VAC) p. 16	
Cooling Capacitypp. 17, 18	Cooling Capacity Calculation
Heating Capacity ·····pp. 19, 20	Required Cooling Capacity Calculationpp. 34, 35
Pump Capacityp. 21	Precautions on Cooling Capacity Calculationp. 35
Required Facility Water Flow Ratep. 21	Circulating Fluid Typical Physical Property Valuesp. 35
Dimensions	
Air-cooled Refrigeration pp. 22, 23	Specific Product Precautionspp. 36 to 40
Water-cooled Refrigerationpp. 22, 24	



Thermo-chiller/Rack Mount Type Single-phase 200 to 230 VAC ROHS







How to Order

HRR010

Air-cooled refrigeration

Water-cooled refrigeration

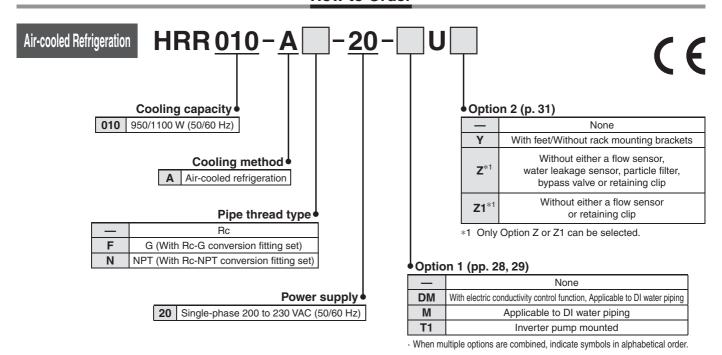

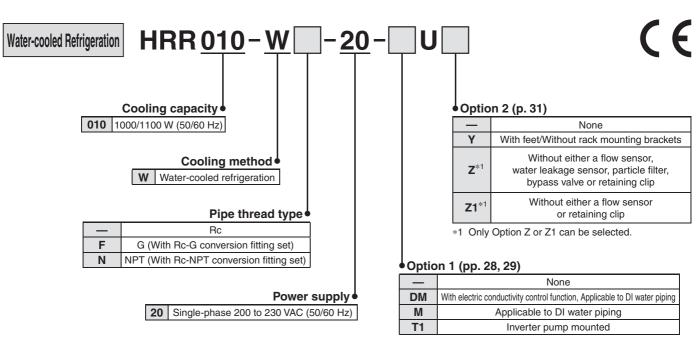

[·] When multiple options are combined, indicate symbols in alphabetical order.



Specifications: 200 to 230 VAC Air-cooled Refrigeration

	Model		HRR010-A-20				
Co	poling method		Air-cooled refrigeration				
Re	efrigerant		R410A (HFC)				
Re	efrigerant charge	[kg]	0.22				
-	ontrol method		PID control				
Αı	Ambient temperature/Humidity/Altitude*1, 14		Temperature: 5 to 40 °C, Humidity: 30 to 70 %, Altitude: less than 3000 m				
	Circulating fluid*2		Tap water, 15 % ethylene glycol aqueous solution				
	Set temperature range*1	[°C]	15 to 35				
	Cooling capacity (50/60 Hz)*3	[W]	950/1100				
	Heating capacity (50/60 Hz)*4	[W]	250/300				
	Temperature stability*5	[°C]	±0.1				
system	Pump capacity (50/60 Hz)*6	[MPa]	0.09 (at 5 l/min)/0.11 (at 5 l/min) For Option T1: 0.35 (at 5 l/min)/0.35 (at 5 l/min)				
Sys	Rated flow (50/60 Hz)*7	[l/min]	5/5 For Option T1: 5/5				
	Flow display range*20	[l/min]	2 to 16				
ΙĘ	Electric conductivity display range	[µS/cm]	0.1 to 48 (Only for Option DM)				
ing	Electric conductivity setting range	[μ S/cm]	0.5 to 45 (Only for Option DM)				
Tat	Particle filter nominal filtration rating*1	⁹ [μ m]	35				
Circulating fluid	Bypass valve*19		Installed				
O	Tank capacity [L]		Approx. 3				
	Outlet, Return port size		Rc1/2				
	Drain port size		Rc1/4, With cap				
	Leakage protection		Drain pan (With water leakage sensor*19)				
	Fluid contact material		Stainless steel, Copper (Heat exchanger brazing)*12, Alumina ceramic, Carbon, PP, PE, PPE, POM, PET, PA, FKM, EPDM, NBR, PVC, PPS, Fluoropolymer*13, Ion exchange resin*13				
	Power supply		Single-phase 200 to 230 VAC, 50/60 Hz, Allowable voltage range $\pm 10~\%$ *15				
	Circuit protector [A]		10				
system	Applicable earth leakage breaker ca	apacity*8	Rated current: 10 A Sensitivity current: 30 mA				
sys	Cable quantity x Size (Including grounding	g cable)*16	3 cores x 14 AWG (3 cores x 2.0 mm ²)				
			2.5/3.0				
Electrical	Rated operating current (50/60 Hz)*17	[A]	For Option T1				
<u>8</u>	(30/00 112)		4.3/4.7				
ш			0.48/0.60 (0.51/0.61)				
	Rated power consumption (50/60 Hz)*17	[kW (kVA)]	For Option T1				
	(30/00 112)		0.73/0.80 (0.85/0.94)				
Co	ommunication function		Contact input/output, Serial RS-485/RS-232C				
	oise level (50/60 Hz)*9	[dB(A)]	59/59				
	mensions*10	[mm]	W 483 x D 550 x H 221				
	ccessories*18		Power supply connector, Operation manual, Particle filter element*19				
W	eight*11	[kg]	29				
_							

- *1 No condensation should be present. During seasons or in locations where the ambient temperature is likely to fall below freezing point, please contact SMC.
- *2 If tap water is used, use water that is compliant with the Water Quality Standards of the Japan Refrigeration and Air Conditioning Industry Association (JRA GL- 0 2 - 1 9 9 4 cooling water system - circulating type make-up water).
- *3 ① Ambient temperature: 25 °C, ② Circulating fluid temperature: 20 °C, ③ Circulating fluid at the rated flow, ④ Circulating fluid: Tap water, ⑤ Power supply: 200 VAC, ⑥ Piping length: Shortest For models with an inverter pump mounted (Option T1), the cooling capacity will decrease by 300 W.
- Ambient temperature: 25 °C, ② Circulating fluid temperature: 20 °C, ③ Circulating fluid at the rated flow, ④ Circulating fluid: Tap water, ⑤ Power supply: 200 VAC, ⑥ Piping length: Shortest
- *5 Temperature at the thermo-chiller outlet when the circulating fluid flow is at the rated flow and the circulating fluid outlet and return port are directly connected
 - The installation environment and power supply are within the specification range and stable.
- *6 The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20 °C
- *7 The required flow rate for maintaining the cooling capacity or temperature stability
 The specification of the cooling capacity and the temperature stability
- may not be satisfied if the flow rate is lower than the rated flow.

 *8 Purchase an earth leakage breaker with a sensitivity current of 3 0 mA and a power supply of 200 VAC separately.

- *9 Front: 1 m, height: 1 m, stable with no load, Other conditions → See *4.
- *10 Dimensions between panels, not including the dimensions of protrusion When Option Y (With feet/Without rack mounting brackets) is selected, refer to page 31.
- *11 Weight in the dry state without circulating fluids The weight will increase by 1 kg when Option DM (With electric conductivity control function, Applicable to DI water piping) is selected. The weight will increase by 2 kg when Option T 1 (Inverter pump mounted) is selected.
- *12 Option M (Applicable to DI water piping) does not contain copper.
- *13 For Option DM (With electric conductivity control function, Applicable to DI water piping)
- *14 If the product is used at an altitude of 1000 m or higher, refer to "For altitudes of 1000 m or higher" on page 37.
- *15 No continuous voltage fluctuation
- *16 To be prepared by the customer
- 17 ① Ambient temperature: 25 °C, ② Circulating fluid temperature: 20 °C, ③ Circulating fluid at the rated flow, ④ Circulating fluid: Tap water, ⑤ Power supply: 2 0 0 VAC, ⑥ Piping length: Shortest, ⑦ With the rated cooling load applied
- *18 For Option DM (With electric conductivity control function, Applicable to DI water piping), a DI filter is included.
 - For pipe thread type F, a G thread conversion fitting set is included. For pipe thread type N, an NPT thread conversion fitting set is included.
- *19 Not included for Option Z (Removed parts)
- *20 Not included for Options Z and Z1 (Removed parts)





Specifications: 200 to 230 VAC Water-cooled Refrigeration

	Model		HRR010-W-20			
Co	poling method		Water-cooled refrigeration			
Re	efrigerant		R410A (HFC)			
Re	efrigerant charge	[kg]	0.15			
	ontrol method		PID control			
Ar	nbient temperature/Humidity/Altitu	de*1, 15	Temperature: 5 to 40 $^{\circ}\text{C}$, Humidity: 30 to 70 $\%$, Altitude: less than 3000 m			
	Circulating fluid*2		Tap water, 15 % ethylene glycol aqueous solution			
	Set temperature range*1	[°C]	15 to 35			
	Cooling capacity (50/60 Hz)*3	[W]	1000/1100			
	Heating capacity (50/60 Hz)*4	[W]	200/200			
	Temperature stability*5	[°C]	±0.1			
system	Pump capacity (50/60 Hz)*6	[MPa]	0.09 (at 5 l/min)/0.11 (at 5 l/min) For Option T1: 0.35 (at 5 l/min)/0.35 (at 5 l/min)			
s	Rated flow (50/60 Hz)*7	[l/min]	5/5 For Option T1: 5/5			
Circulating fluid	Flow display range*21	[l/min]	2 to 16			
ΙĘ	Electric conductivity display range	[μ S/cm]	0.1 to 48 (Only for Option DM)			
ing	Electric conductivity setting range	[µS/cm]	0.5 to 45 (Only for Option DM)			
at	Particle filter nominal filtration rating*20	⁾ [μ m]	35			
길	Bypass valve*20		Installed			
Ö	Tank capacity	[L]	Approx. 3			
	Outlet, Return port size		Rc1/2			
	Drain port size		Rc1/4, With cap			
	Leakage protection		Drain pan (With water leakage sensor*20)			
	Fluid contact material		Stainless steel, Copper (Heat exchanger brazing)*12, Alumina ceramic, Carbon, PP, PE, PPE, POM, PET, PA, FKM, EPDM, NBR, PVC, PPS, Fluoropolymer*13, Ion exchange resin*13			
em	Temperature range [°C]		5 to 35			
syste	Pressure range	[MPa]	0.3 to 0.5			
water system	Required flow rate*14	[l/min]	6			
Wa	Inlet-outlet pressure differential of facility water [MPa]		0.3 or more			
Facility	Port size		Rc3/8			
<u>a</u>	Fluid contact material		Stainless steel, Copper (Heat exchanger brazing), Bronze, Brass, Synthetic rubber			
	Power supply		Single-phase 200 to 230 VAC, 50/60 Hz, Allowable voltage range $\pm 10~\%$ *16			
	Circuit protector	[A]	10			
system	Applicable earth leakage breaker ca	pacity*8	Rated current: 10 A Sensitivity current: 30 mA			
sys	Cable quantity x Size (Including grounding	cable)*17	3 cores x 14 AWG (3 cores x 2.0 mm²)			
	Dated analystical accurant		2.4/3.0			
Electrical	Rated operating current (50/60 Hz)*18	[A]	For Option T1			
ec	(30/00 HZ)		4.2/4.6			
ш	B-t-d		0.47/0.59 (0.50/0.60)			
	Rated power consumption (50/60 Hz)*18	[kW (kVA)]	For Option T1			
	(30/00 HZ)		0.72/0.78 (0.84/0.93)			
Co	ommunication function		Contact input/output, Serial RS-485/RS-232C			
	oise level (50/60 Hz)*9	[dB(A)]	57/58			
Di	mensions ^{*10}	[mm]	W 483 x D 550 x H 221			
1	ccessories*19	-	Power supply connector, Operation manual, Particle filter element*20			
W	eight*11	[kg]	27			

- No condensation should be present. During seasons or in locations where the ambient temperature is likely to fall below freezing point, please contact SMC.
- *2 If tap water is used, use water that is compliant with the Water Quality Standards of the Japan Refrigeration and Air Conditioning Industry Association
- (JRA GL-02-1994 cooling water system circulating type make-up water).

 *3 ① Facility water temperature: 25 °C, ② Circulating fluid temperature: 20 °C, ③ Circulating fluid at the rated flow, ④ Circulating fluid: Tap water, 5 Power supply: 200 VAC, 6 Piping length: Shortest For models with an inverter pump mounted (Option T1), the cooling capacity will decrease by 300 W. ① Ambient temperature: 25 °C, ② Facility water temperature: 25 °C, ③
- Circulating fluid temperature: 20 °C, 4 Circulating fluid at the rated flow, 5 Circulating fluid: Tap water, 6 Power supply: 200 VAC, 7 Piping length: Shortest
- *5 Temperature at the thermo-chiller outlet when the circulating fluid flow is at the rated flow and the circulating fluid outlet and return port are directly connected The installation environment and power supply are within the specification range and stable
- *6 The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20 °C
- *7 The required flow rate for maintaining the cooling capacity or temperature stability
 - The specification of the cooling capacity and the temperature stability may not be satisfied if the flow rate is lower than the rated flow.
- *8 Purchase an earth leakage breaker with a sensitivity current of 30 mA and a power supply of 200 VAC separately
- *9 Front: 1 m, height: 1 m, stable with no load, Other conditions → See *4.

- *10 Dimensions between panels, not including the dimensions of protrusion When Option Y (With feet/Without rack mounting brackets) is selected, refer to page 31.
- Weight in the dry state without circulating fluids and facility water (for water-cooled refrigeration)
 - The weight will increase by 1 kg when Option DM (With electric conductivity control function, Applicable to DI water piping) is selected. The weight will increase by 2 kg when Option T1 (Inverter pump mounted) is selected.
- *12 Option M (Applicable to DI water piping) does not contain copper
- *13 For Option DM (With electric conductivity control function, Applicable to DI water piping)
- *14 The required flow rate when the cooling capacity load is applied under the conditions in *3
- *15 If the product is used at an altitude of 1000 m or higher, refer to "For altitudes of 1000 m or higher" on page 37.
- *16 No continuous voltage fluctuation
- To be prepared by the customer ① Facility water temperature: 25 °C, ② Circulating fluid temperature: 20 C, 3 Circulating fluid at the rated flow, 4 Circulating fluid: Tap water, 5 Power supply: 200 VAC, 6 Piping length: Shortest, 7 With the rated cooling load applied
- *19 For Option DM (With electric conductivity control function, Applicable to DI water piping), a DI filter is included. For pipe thread type F, a G thread conversion fitting set is included.
- For pipe thread type N, an NPT thread conversion fitting set is included. *20 Not included for Option Z (Removed parts)
- *21 Not included for Options Z and Z1 (Removed parts)




Thermo-chiller/Rack Mount Type Single-phase 100/115 VAC ROHS


HRR012/018





How to Order

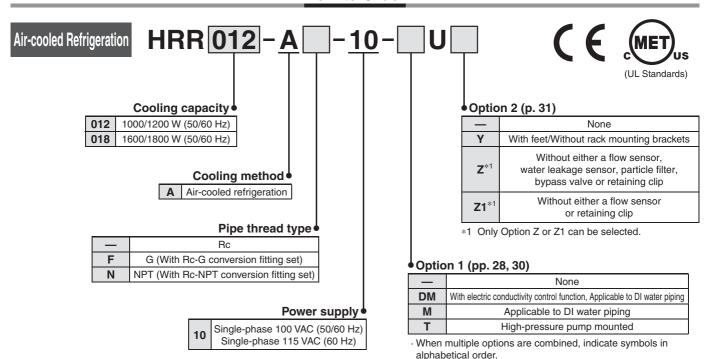

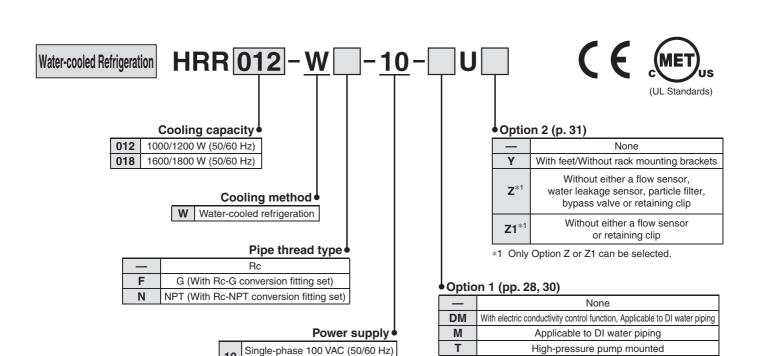

Single-phase 115 VAC (60 Hz)

When multiple options are combined, indicate symbols in

alphabetical order.

HRR Series

Specifications: 100/115 VAC

Model		HRR012-A-10	HRR018-A-10	HRR012-W-10	HRR018-W-10			
Cooling method		Air-cooled	efrigeration	Water-cooled refrigeration				
Refrigerant			R410A (HFC)					
Refrigerant charge	[kg]	0.36	0.36	0.25	0.25			
Control method				ontrol				
Ambient temperature/Humidity/Altit	tude*1, 14	Temperature: 5 to 40 $^{\circ}\text{C}$, Humidity: 30 to 70 $\%$, Altitude: less than 3000 m						
Circulating fluid*2			Tap water, 15 % ethylene glycol aqueous solution					
Set temperature range*1	[°C]		5 to	35				
Cooling capacity (50/60 Hz)*3	[W]	1000/1200	1600/1800	1000/1200	1600/1800			
Heating capacity (50/60 Hz)*4	[W]	40	00	50	00			
Temperature stability*5	[°C]		±0).1				
Pump capacity (50/60 Hz)*6 Rated flow (50/60 Hz)*7 Flow display range*21 Electric conductivity display range Electric conductivity setting range Particle filter nominal filtration rating* Bypass valve*20 Tank capacity	[MPa]		0.13 (at 7 l/min). For Options T, MT: 0.36 (a	/0.18 (at 7 l/min) t 7 l/min)/0.42 (at 10 l/min)				
ື Rated flow (50/60 Hz)*7	[l/min]		7/7 For Option	ons T, MT: 7/10				
Flow display range*21	[l/min]		2 to	16				
Electric conductivity display range	[µS/cm]		0.1 to 48 (Only	for Option DM)				
Electric conductivity setting range			0.5 to 45 (Only	for Option DM)				
Particle filter nominal filtration rating*	²⁰ [μ m]			5				
ପ୍ରି Bypass valve* ²⁰			Insta	alled				
Tank capacity	[L]		Appr	ox. 4				
Outlet, Return port size		Rc1/2						
Drain port size			Rc1/4, \	Vith cap				
Leakage protection			Drain pan (With wate	er leakage sensor)*20				
Fluid contact material		Stainless steel, Copp PP, PE, POM, PA	per (Heat exchanger brazin FKM, EPDM, PVC, PPS,	g)*11, Brass*17, SiC, Alum AS, Fluoropolymer*12, Ion	ina ceramic, Carbon, exchange resin*12			
E Temperature range	[°C]		5 to 40					
Temperature range Pressure range	[MPa]			0.3 to	0.5			
Required flow rate (50/60 Hz)*13	[l/min]			8 12				
Inlet-outlet pressure differential of facility water	er [MPa]	_	_	0.3 or more				
Required flow rate (50/60 Hz)*13 Inlet-outlet pressure differential of facility water port size Fluid contact material				Rc	3/8			
Fluid contact material				Stainless steel, Copper (Heat exchange	ger brazing), Bronze, Synthetic rubb			
D			Single-phase 100 VAC (50	0/60 Hz), 115 VAC (60 Hz)	•			
Power supply			Allowable voltage	e range ±10 % *15				
Circuit protector	[A]		1	5				
Applicable earth leakage breaker	capacity*8		Rated current: 15 A, Se	ensitivity current: 30 mA				
Circuit protector Applicable earth leakage breaker of Cable quantity x Size (Including grounding)	ng cable)*16		3 cores x 14 AWG	(3 cores x 2.0 mm ²)				
		8.9/8.9	9.1/9.6	8.5/8.5	8.7/8.7			
Rated operating current*18 (50/60 Hz)	[A]		For Option	ons T, MT				
등 (50/60 Hz)	1	10.7/10.7	11.0/11.0	10.5/10.5	10.8/10.8			
-		0.8/0.9 (1.0/1.0)	0.9/1.1 (1.1/1.1)	0.7/0.8 (0.9/0.9)	0.8/0.9 (1.0/1.0)			
Rated power consumption*18	[kW (kVA)]	· · · · · ·	For Option	ons T, MT	. ,			
(50/60 Hz)		0.9/1.1 (1.1/1.1)	1.0/1.3 (1.2/1.3)	0.9/1.0 (1.1/1.0)	1.1/1.1 (1.2/1.1)			
Communication function		, ,		Serial RS-485/RS-232C	, , ,			
Noise level (50/60 Hz)*9	[dB]	59/60	59/60	59/60	59/60			
Accessories*19				and maintenance handle*2				
Weight*10	[kg]		.1	4				
1 No condensation should be present				· 1 m stable with no load (

*1 No condensation should be present. During seasons or in locations where the ambient temperature is likely to fall below freezing point, please contact SMC. Use 15 % ethylene glycol aqueous solution when operating at a temperature of 10 °C or less.

*2 If tap water is used, use water that is compliant with the Water Quality Standards of the Japan Refrigeration and Air Conditioning Industry Association (JRA GL-02-1994 cooling water system - circulating type - make-

up water).

① Ambient temperature: 25 °C, ② Facility water temperature: 25 °C, ③ Circulating fluid temperature: 20 °C, ④ Circulating fluid at the rated flow, ⑤ Circulating fluid: Tap water, ⑥ Power supply: 1 0 0 VAC, ⑦ Piping

For models with a high-pressure pump mounted (Options T, MT), the cooling capacity will decrease by 300 W.

① Ambient temperature: 25 °C, ② Facility water temperature: 25 °C, ③ Circulating fluid temperature: 20 °C, ④ Circulating fluid at the rated flow, ⑤ Circulating fluid: Tap water, ⑥ Power supply: 1 0 0 VAC, ⑦ Piping

length: Shortest *5 Temperature at the thermo-chiller outlet when the circulating fluid flow is at the rated flow and the circulating fluid outlet and return port are directly connected The installation environment and power supply are within the specification

range and stable *6 The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20 °C
*7 The required flow rate for maintaining the cooling capacity or temperature

The specification of the cooling capacity and the temperature stability may not be satisfied if the flow rate is lower than the rated flow.

*8 Purchase an earth leakage breaker with a sensitivity current of 3 0 mA and a power supply of 100 VAC separately.

- Front: 1 m, height: 1 m, stable with no load, Other conditions → See *4. Weight in the dry state without circulating fluids and facility water (for water-

 - Weight in the dry state windout circulating littles and facility water (for water-cooled refrigeration)

 The weight will increase by 1 kg when Option DM (With electric conductivity control function, Applicable to DI water piping) is selected.

 The weight will increase by 5 kg when Options T (High-pressure pump mounted) or MT (Applicable to DI water piping + High-pressure pump mounted) are selected.
- The weight will decrease by 1 kg for Option Z (Removed parts)

 *11 Options M (Applicable to DI water piping) and MT (Applicable to DI water
- piping + High-pressure pump mounted) do not contain copper or brass. *12 For Option DM (With electric conductivity control function, Applicable to DI water piping)
- *13 The required flow rate when the cooling capacity load is applied under the conditions in *3
 *14 If the product is used at an altitude of 1000 m or higher, refer to "For al-
- titudes of 1000 m or higher" on page 37.

 *15 No continuous voltage fluctuation

- *15 No continuous voltage illuctuation
 *16 To be prepared by the customer
 *17 Option T (High-pressure pump mounted) contains this material.
 *18 ① Ambient temperature: 25 °C, ② Facility water temperature: 25 °C, ③
 Circulating fluid temperature: 2 0 °C, ④ Circulating fluid at the rated flow, ⑤ Circulating fluid: Tap water, ⑥ Power supply: 1 0 0 VAC, ⑦ Piping length: Shortest, ⑧ With the rated cooling load applied
 *19 For Option DM (With electric conductivity control function, Applicable
- to DI water piping), a DI filter is included.

 For pipe thread type F, a G thread conversion fitting set is included.

 For pipe thread type N, an NPT thread conversion fitting set is included.

 *20 Not included for Option Z (Removed parts)
- *21 Not included for Options Z and Z1 (Removed parts)




Thermo-chiller/Rack Mount Type Single-phase 200 to 230 VAC ROHS


HRR012/018/024/030





How to Order

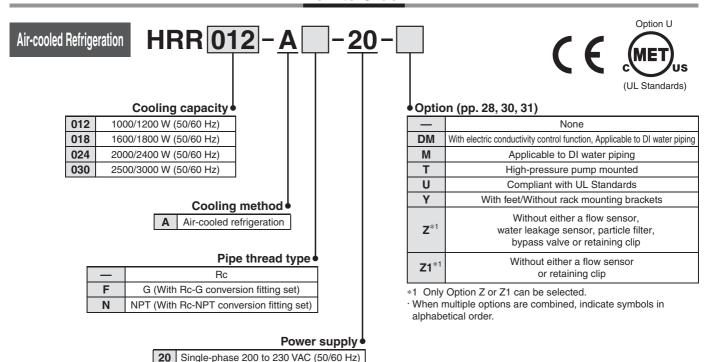

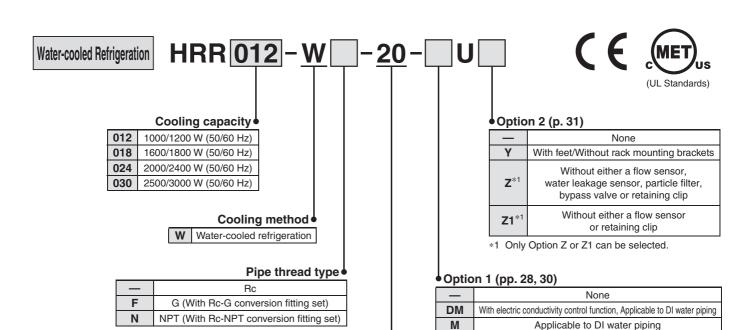

20 Single-phase 200 to 230 VAC (50/60 Hz)



High-pressure pump mounted



Specifications: 200 to 230 VAC Air-cooled Refrigeration

Model		HRR012-A-20 HRR018-A-20 HRR024-A-20 HRR030-A-20						
Cooling method			Air-cooled refrigeration					
Refrigerant			R410A	(HFC)				
Refrigerant charge	[kg]	0.3	0.38 0.47					
Control method			PID c	ontrol				
Ambient temperature/Humidity/Altitu	ude*1, 13	Temperature: 5 to 40 $^{\circ}\text{C},$ Humidity: 30 to 70 $\%$, Altitude: less than 3000 m						
Circulating fluid*2		Tap water, 15 % ethylene glycol aqueous solution						
Set temperature range*1	[°C]		5 to	35				
Cooling capacity (50/60 Hz)*3	[W]	1000/1200	1600/1800	2000/2400	2500/3000			
Heating capacity (50/60 Hz)*4	[W]	450/	450/500 550/700					
Temperature stability*5	[°C]		±0).1				
Pump capacity (50/60 Hz)*6 Rated flow (50/60 Hz)*7 Flow display range*20 Electric conductivity display range Electric conductivity setting range Particle filter nominal filtration rating*1 Bypass valve*19 Tank acceptity	[MPa]		0.13 (at 7 l/min), For Option T: 0.42 (at 1 For Option MT: 0.32 (at 1	0 l/min)/0.4 (at 14 l/min)				
ຶ່ດ Rated flow (50/60 Hz)* ⁷	[l/min]		7/7 For Option	ns T, MT: 10/14				
Flow display range*20	[l/min]		2 to 16					
≡ Electric conductivity display range	[μ S/cm]	0.1 to 48 (Only for Option DM)						
Electric conductivity setting range	[μ S/cm]	0.5 to 45 (Only for Option DM)						
Particle filter nominal filtration rating*1	⁹ [μ m]	5						
ខ្មី Bypass valve* ¹⁹		Installed						
Tank capacity	[L]	Approx. 4						
Outlet, Return port size		Rc1/2						
Drain port size		Rc1/4, With cap						
Leakage protection			Drain pan (With wate	,				
Fluid contact material		Alumi	ss steel, Copper (Heat excl na ceramic, Carbon, PP, P PPS, AS, Fluoropolymer*	E, POM, PA, FKM, EPDM, 12, Ion exchange resin*12	PVC,			
Power supply		Single-phas	se 200 to 230 VAC, 50/60 h	Hz, Allowable voltage range	e ±10 % * ¹⁴			
Circuit protector	[A]		10 For Option	ons T, MT: 15				
Applicable earth leakage breaker c	apacity*8		Rated current: 10 A F Sensitivity cu	or Options T, MT: 15 A urrent: 30 mA				
Cable quantity x Size (Including groundin	g cable)*15		3 cores x 14 AWG	(3 cores x 2.0 mm ²)				
la Control of the con		3.6/4.0	3.6/4.3	5.2/5.8	5.5/6.2			
[발 Rated operating current (50/60 Hz)*17	[A]		For Option	ons T, MT				
Rated operating current (50/60 Hz)*17		4.7/6.2	4.7/6.5	6.3/8.0	6.5/8.3			
-		0.6/0.8 (0.7/0.8)	0.7/0.9 (0.7/0.9)	0.9/1.2 (1.1/1.2)	1.0/1.2 (1.1/1.3)			
Rated power consumption (50/60 Hz)*17	[kW (kVA)]		For Option	ons T, MT				
(50/50 112)		0.9/1.2 (0.9/1.2)	0.9/1.3 (1.0/1.3)	1.2/1.6 (1.3/1.6)	1.3/1.6 (1.3/1.7)			
Communication function			Contact input/output, S	Serial RS-485/RS-232C				
Noise level (50/60 Hz)*9	[dB]	59/60	59/60	61/64	61/64			
Accessories*18		Power supply connection	ctor, Particle filter element	and maintenance handle*	¹⁹ , Operation manual			
Weight*10	[kg]	4	40 46					

- *1 No condensation should be present. During seasons or in locations where the ambient temperature is likely to fall below freezing point, please contact SMC. Use 15 % ethylene glycol aqueous solution when operating at a temperature of 10 °C or less.
- *2 If tap water is used, use water that is compliant with the Water Quality Standards of the Japan Refrigeration and Air Conditioning Industry Association (JRA GL-02-1994 cooling water system - circulating type make-up water).
- *3 ① Ambient temperature: 25 °C, ② Circulating fluid temperature: 20°C, ③ Circulating fluid at the rated flow, ④ Circulating fluid: Tap water, ⑤ Power supply: 200 VAC, ⑥ Piping length: Shortest For models with a high-pressure pump mounted (Options T, MT), the cooling capacity will decrease by 300 W.
- cooling capacity will decrease by 300 W.

 4 ① Ambient temperature: 25°C, ② Circulating fluid temperature: 20°C,
 ③ Circulating fluid at the rated flow, ④ Circulating fluid: Tap water, ⑤
 Power supply: 200 VAC, ⑥ Piping length: Shortest
- *5 Temperature at the thermo-chiller outlet when the circulating fluid flow is at the rated flow and the circulating fluid outlet and return port are directly connected
 - The installation environment and power supply are within the specification range and stable.
- *6 The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20°C
- *7 The required flow rate for maintaining the cooling capacity or temperature stability The specification of the cooling capacity and the temperature stability
- may not be satisfied if the flow rate is lower than the rated flow.
- *8 Purchase an earth leakage breaker with a sensitivity current of 30 mA and a power supply of 200 VAC separately.

- *9 Front: 1 m, height: 1 m, stable with no load, Other conditions → See *4.
- *10 Weight in the dry state without circulating fluids The weight will increase by 1 kg when Option DM (With electric conductivity control function, Applicable to DI water piping) is selected. The weight will increase by 5 kg when Options T (High-pressure pump mounted) or MT (Applicable to DI water piping + High-pressure pump mounted) are selected. The weight will decrease by 1 kg for Option Z (Removed parts)
- *11 Options M (Applicable to DI water piping) and MT (Applicable to DI water piping + High-pressure pump mounted) do not contain copper or brass.
- *12 For Option DM (With electric conductivity control function, Applicable to DI water piping)
- *13 If the product is used at an altitude of 1000 m or higher, refer to "For altitudes of 1000 m or higher" on page 37.
- *14 No continuous voltage fluctuation
- *15 To be prepared by the customer
- *16 Option T (High-pressure pump mounted) contains this material. *17 ① Ambient temperature: 25°C, ② Circulating fluid temperature: 20°C,
- *18 For Option DM (With electric conductivity control function, Applicable to DI water piping), a DI filter is included.
 For pipe thread type F, a G thread conversion fitting set is included.
- For pipe thread type N, an NPT thread conversion fitting set is included. *19 Not included for Option Z (Removed parts)
- *20 Not included for Options Z and Z1 (Removed parts)



Specifications: 200 to 230 VAC Water-cooled Refrigeration

Model		HRR012-W-20	HRR018-W-20	HRR024-W-20	HRR030-W-20			
Cooling method		Water-cooled refrigeration						
Refrigerant		R410A (HFC)						
Refrigerant charge	[kg]	0.25 0.40						
Control method		PID control						
Ambient temperature/Humidity/Altitu	ıde* ^{1, 14}	Temperature: 5 to 40°C, Humidity: 30 to 70 %, Altitude: less than 3000 m						
Circulating fluid*2			Tap water, 15 % ethylene	e glycol aqueous solution				
Set temperature range*1	[°C]		5 to 35					
Cooling capacity (50/60 Hz)*3	[W]	1000/1200	1600/1800	2000/2400	2500/3000			
Heating capacity (50/60 Hz)*4	[W]	450	/500	550/	700			
Temperature stability*5	[°C]		±0	.1				
Pump capacity (50/60 Hz)*6	[MPa]		0.13 (at 7 l/min)/ For Option T: 0.42 (at 10 For Option MT: 0.32 (at 1) I/min)/0.4 (at 14 I/min)				
	[l/min]		7/7 For Option	s T, MT: 10/14				
Flow display range*21 Electric conductivity display range	[l/min]		2 to	16				
Electric conductivity display range	[µS/cm]		0.1 to 48 (Only					
Electric conductivity setting range Particle filter nominal filtration rating*2 Bypass valve*20 Tank capacity	[µS/cm]		0.5 to 45 (Only	for Option DM)				
Particle filter nominal filtration rating*2	⁾ [μ m]		5					
Bypass valve*20		Installed						
Tank capacity	[L]	Approx. 4						
Outlet, Return port size		Rc1/2						
Drain port size		Rc1/4, With cap						
Leakage protection			Drain pan (With wate	r leakage sensor*20)				
Fluid contact material		Stainle: Alumi	nanger brazing)*11, Brass* E, POM, PA, FKM, EPDM, ¹² , Ion exchange resin*12	¹⁷ , SiC, PVC,				
Temperature range Pressure range	[°C]		5 to	40				
সূত্র Pressure range	[MPa]		0.3 to	0.5				
Required flow rate (50/60 Hz)*13 Inlet-outlet pressure differential of facility water	[l/min]	8 12 14 15						
Inlet-outlet pressure differential of facility water	[MPa]	0.3 or more						
Port size Fluid contact material			Ro	3/8				
Fluid contact material		Stainless steel, Copper (Heat exchanger brazing), Bronze, Brass, Synthetic rubber						
Power supply		Single-phase 200 to 230 VAC, 50/60 Hz, Allowable voltage range $\pm 10~\%$ *15						
Circuit protector	[A]		10 For Option	ns T, MT: 15				
Applicable earth leakage breaker co			Rated current: 10 A Formal Sensitivity cu	rrent: 30 mA				
ငable quantity x Size (Including grounding	cable)*16		3 cores x 14 AWG (3 cores x 2.0 mm ²)				
ଞ୍ଚ Rated operating current		3.2/3.6	3.3/3.6	4.9/5.1	4.9/5.2			
Rated operating current (50/60 Hz)*18	[A]		For Option	ns T, MT				
00/00 112)		4.3/5.8	4.4/5.8	6.0/7.3	6.0/7.4			
-		0.6/0.7 (0.7/0.7)	0.6/0.7 (0.7/0.7)	0.8/1.0 (1.0/1.0)	0.8/1.0 (1.0/1.0)			
Rated power consumption (50/60 Hz)*18	[kW (kVA)]		For Option	ns T, MT				
(30/00 FIZ)		0.9/1.1 (0.9/1.2)	0.9/1.1 (0.9/1.2)	1.1/1.2 (1.4/1.4)	1.1/1.2 (1.4/1.4)			
Communication function		. ,	Contact input/output, S		, ,			
Noise level (50/60 Hz)*9	[dB]	59/60	59/60	61/64	61/64			
Accessories*19			ctor, Particle filter element	and maintenance handle*2	Operation manual			
Weight*10	[kg]	4		4				
1 No condensation should be present		cone or in locations	"10 Woight in the day	state without circulating flui	do and facility water (fo			

- *1 No condensation should be present. During seasons or in locations where the ambient temperature is likely to fall below freezing point, please contact SMC. Use 15 % ethylene glycol aqueous solution when
- operating at a temperature of 10 °C or less.

 *2 If tap water is used, use water that is compliant with the Water Quality Standards of the Japan Refrigeration and Air Conditioning Industry Association
- ards of the Japan Hefrigeration and Air Conditioning Industry Association (JRA GL-02-1994 cooling water system circulating type make-up water). ① Facility water temperature: 25 °C, ② Circulating fluid temperature: 20 °C, ③ Circulating fluid at the rated flow, ④ Circulating fluid: Tap water, ⑤ Power supply: 200 VAC, ⑥ Piping length: Shortest For models with a high-pressure pump mounted (Options T, MT), the cooling capacity will decrease by 300 W. ① Ambient temperature: 25 °C, ② Facility water temperature: 25 °C, ③ Circulating fluid temperature: 20 °C, ④ Circulating fluid at the rated flow, ⑤ Circulating fluid: Tap water, ⑥ Power supply: 200 VAC, ⑦ Piping length: Shortest
- length: Shortest
- Temperature at the thermo-chiller outlet when the circulating fluid flow is at the rated flow and the circulating fluid outlet and return port are directly connected The installation environment and power supply are within the specification range and stable.
- *6 The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20 °C
 *7 The required flow rate for maintaining the cooling capacity or temperature
- The specification of the cooling capacity and the temperature stability
- may not be satisfied if the flow rate is lower than the rated flow.

 *8 Purchase an earth leakage breaker with a sensitivity current of 30 mA and a power supply of 200 VAC separately
- *9 Front: 1 m, height: 1 m, stable with no load, Other conditions → See *4.

- *10 Weight in the dry state without circulating fluids and facility water (for water-cooled refrigeration)
 The weight will increase by 1 kg when Option DM (With electric con
 - ductivity control function, Applicable to DI water piping) is selected. The weight will increase by 5 kg when Options T (High-pressure pump mounted) or MT (Applicable to DI water piping + High-pressure pump
- mounted) or Mr (Applicable to Dr Water piping + High-pressure pump mounted) are selected.

 The weight will decrease by 1 kg for Option Z (Removed parts)

 *11 Options M (Applicable to DI water piping) and MT (Applicable to DI water piping + High-pressure pump mounted) do not contain copper or brass.

 *12 For Option DM (With electric conductivity control function, Applicable to DI water piping)


 *13 The required flow rate when the cooling capacity load is applied under the conditions in *3
- the conditions in *3
 *14 If the product is used at an altitude of 1000 m or higher, refer to "For al-
- titudes of 1000 m or higher" on page 37. No continuous voltage fluctuation
- To be prepared by the customer
- *17 Option T (High-pressure pump mounted) contains this material.
 *18 ① Facility water temperature: 25 °C, ② Circulating fluid temperature: 20 °C, ③ Circulating fluid at the rated flow, ④ Circulating fluid: Tap water, ⑤ Power supply: 200 VAC, ⑥ Piping length: Shortest, ⑦ With the rated cooling load applied
 *19 For Option DM (With electric conductivity control function, Applicable
- to DI water piping), a DI filter is included.
- For pipe thread type F, a G thread conversion fitting set is included.
 For pipe thread type N, an NPT thread conversion fitting set is included.
 *20 Not included for Option Z (Removed parts)
 *21 Not included for Options Z and Z1 (Removed parts)





HRR Series


Cooling Capacity

- * If the product is used at an altitude of 1000 m or higher, refer to "Operating Environment/Storage Environment" (page 37) Item 14 "For altitudes of 1000 m or higher."
- * For models with an inverter pump mounted (-T1), the cooling capacity will decrease by about 300 W from each graph.

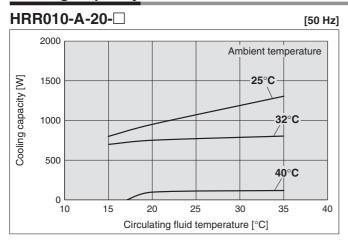

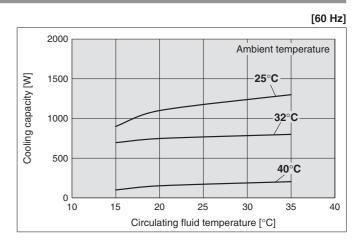

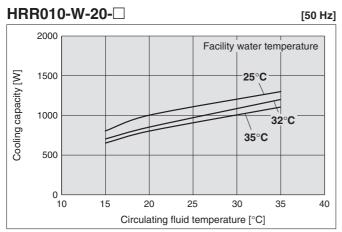


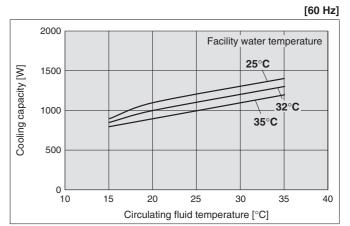



Thermo-chiller/Rack Mount Type **HRR Series**


Cooling Capacity


- * If the product is used at an altitude of 1000 m or higher, refer to "Operating Environment/Storage Environment" (page 37) Item 14 "For altitudes of 1000 m or higher."
- * For models with a high-pressure pump mounted (-T, -MT), the cooling capacity will decrease by about 300 W from each graph.

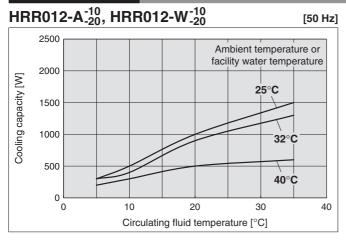


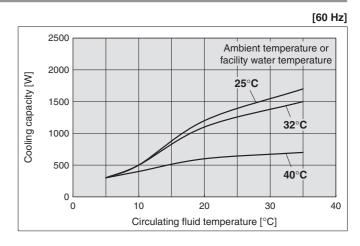


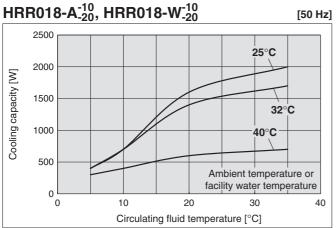


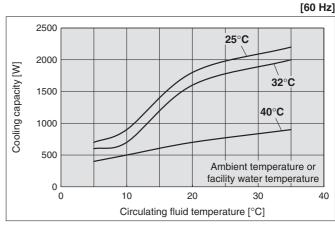

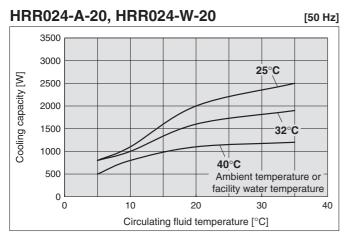

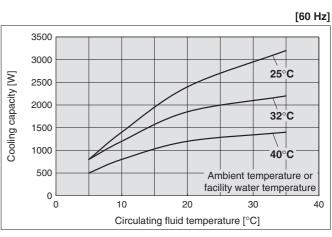


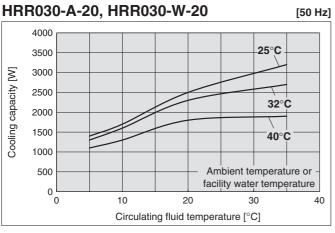


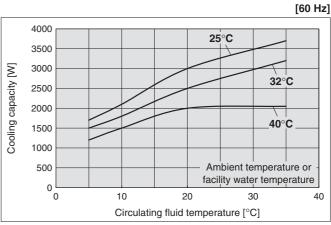



HRR Series

Heating Capacity

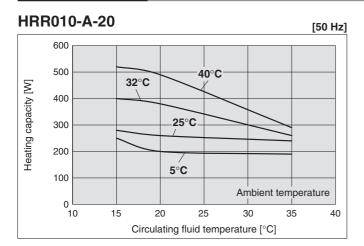


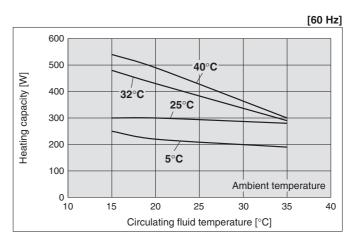


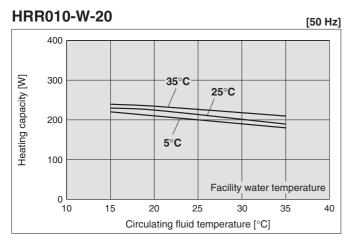


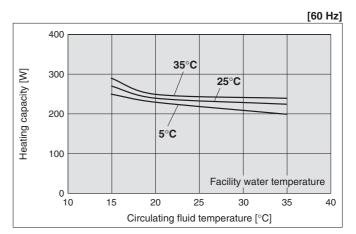


Heating Capacity




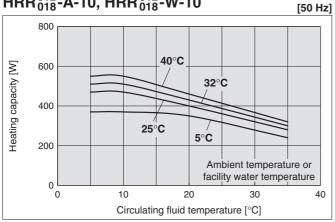

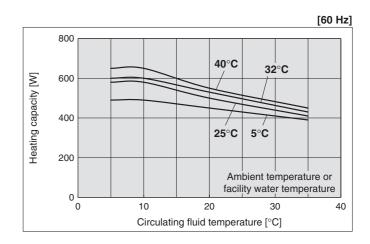



${\sf HRR}_{018}^{012} {\sf -A-20}, \, {\sf HRR}_{018}^{012} {\sf -W-20}$

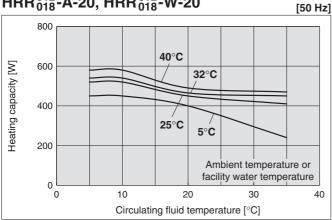

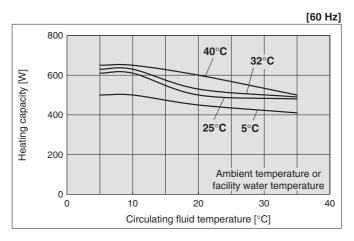

HRR₀₃₀-A-20, HRR₀₃₀-W-20

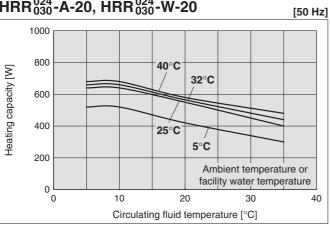


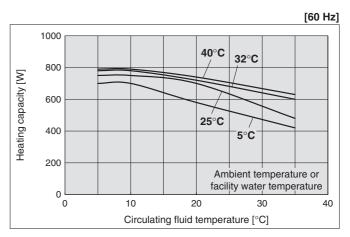


HRR Series

Pump Capacity

HRR010-A/W-20

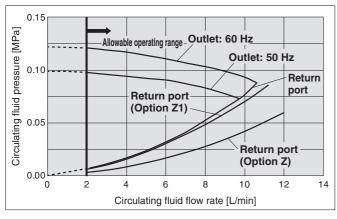


HRR 012 018 024 030 HRR 012 018 018 024 030

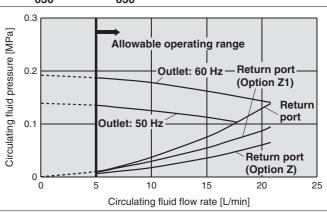


Required Facility Water Flow Rate

HRR010-W-20

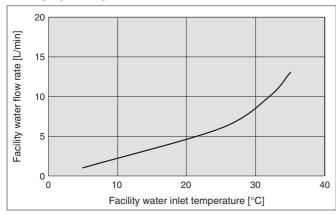

* This is the required facility water flow rate at the circulating fluid rated flow and the cooling capacity listed in the "Cooling Capacity" specifications.

HRR 012 018 024 030

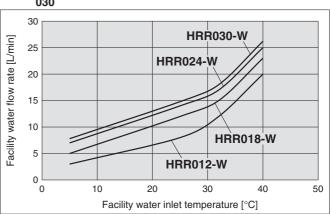


This is the required facility water flow rate at the circulating fluid rated flow and the cooling capacity listed in the "Cooling Capacity" specifications.

Dimensions


HRR010-A-20-□

* For Option Y (With feet/Without rack mounting brackets), refer to page 31.

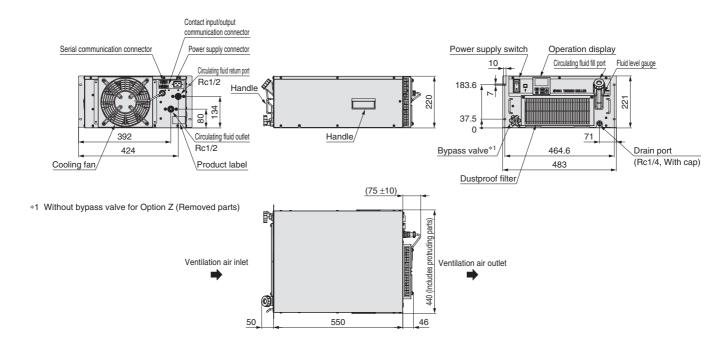

HRR010-W-20-□


* For Option Y (With feet/Without rack mounting brackets), refer to page 31.

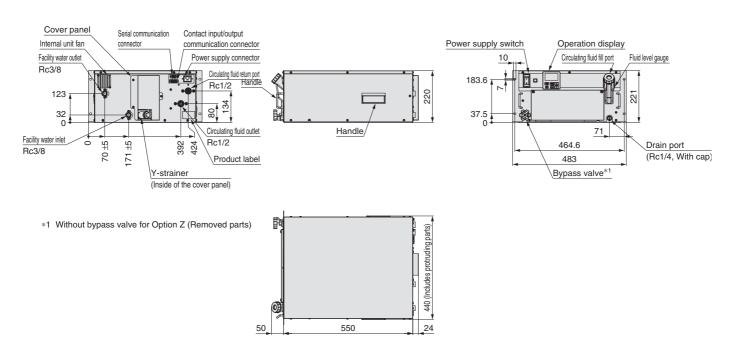


HRR Series

Dimensions: Air-cooled Refrigeration

HRR012-A, HRR018-A

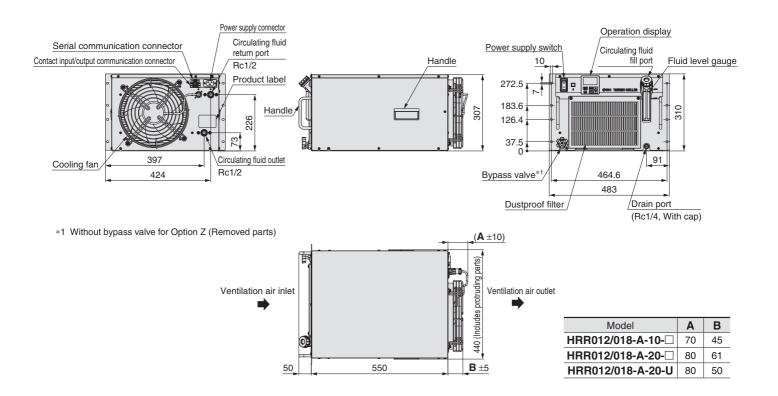


HRR024-A, HRR030-A

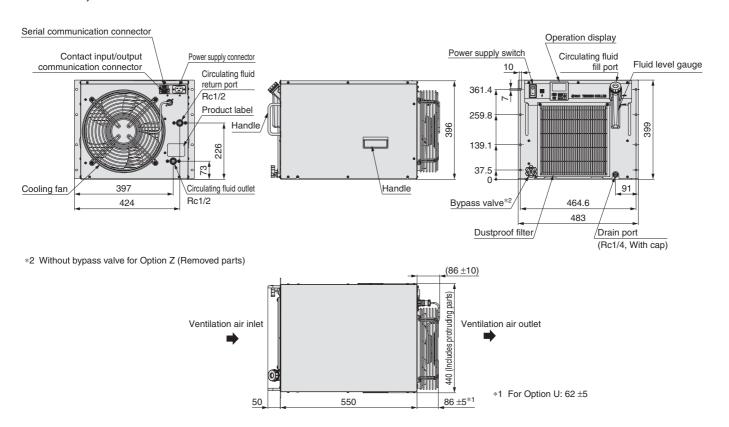


Dimensions: Water-cooled Refrigeration

HRR012-W, HRR018-W

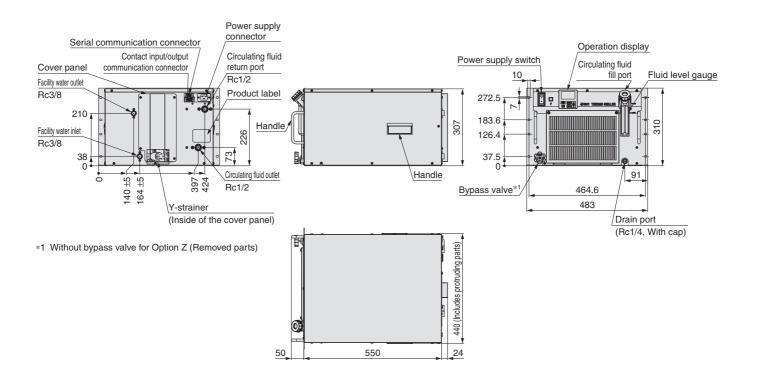


HRR024-W, HRR030-W

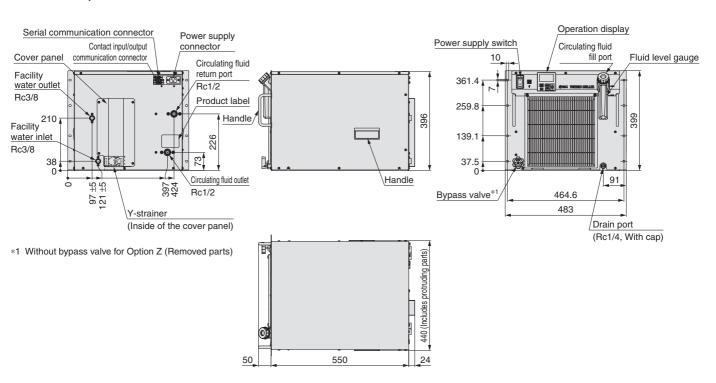

Operation Display Panel

For details, refer to the "Operation Manual" on the SMC website.

The basic operation of this unit is controlled through the operation panel on the front of the product.

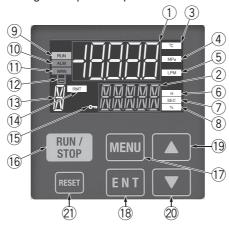

No.	Description	Function				
1	Digital display (7-segment, 5 digits)	Displays the current circulating fluid discharge temperature, pressure, flow rate, alarm codes, and other set values				
2	Digital display (11-segment, 5 digits)	Displays the circulating fluid discharge temperature and the set values of other menu items				
3	[°C] lamp	Lights up when temperature is displayed on the digital display				
4	[MPa] lamp	Lights up when pressure is displayed on the digital display				
5	[LPM] lamp	Lights up when flow rate is displayed on the digital display				
6	[H] lamp	Lights up when time is displayed on the digital display				
7	[SEC] lamp	Lights up when seconds are displayed on the digital display				
8	[%] lamp	Lights up when the pump output set value is displayed on the digital display				
9	[RUN] lamp	Lights up during operation, and goes off when it is stopped				
10	[ALM] lamp	Lights up when the FLT alarm occurs (This product will stop.)				
11	[WRN] lamp	Lights up when the WRN alarm occurs (This product will continue operation.)				
12	[ᆸ] lamp	Lights up when "AL.01 Low level in tank abnormal" or "AL.02 Low level in tank" alarm is generated				
13	Digital display (11-segment, 1 digit)	"X" is displayed when maintenance notification is generated.				
[4] [RMT] lamp Lights up during remote operation by communication function		Lights up during remote operation by communication function				
15)	[KEYLOCK] lamp	Lights up when key lock setting is active				
	(6) [RUN/STOP] key Press and hold for 1 second to start or stop.					
(i) [MENU] key Switching of each menu and cancellation of setting values		Switching of each menu and cancellation of setting values				
18	[ENT] key	Switch to setting mode and set values.				
19	[▲] key	Move item upward or increase the set value.				
20	[▼] key	Move item downward or decrease the set value.				
21)	[RESET] key	Reset the alarm.				

Alarm

The 2 4 types of alarms are displayed with the ALM indicator and the alarm code in the white upper section of the operation display. These alarms can also be output through communication protocols.

A 1 =		Location I		Display unit
Alarm	Alarm message	Initial value	Upper section (White)	Lower section (Green)
AL01	Low level in tank abnormal	FLT	AL01	$LOW \Rightarrow LEVEL \Rightarrow FLT$
AL02	Low level in tank	WRN	AL02	$LOW \Rightarrow LEVEL \Rightarrow WRN$
AL04	Water leakage*6	WRN*1	AL04	$WATER \Rightarrow LEAK$
AL09	Circulating fluid discharge pressure rise	FLT*2	AL09	HIGH ⇒ PRESS
AL10	Flow rate reduction*7	WRN*1	AL10	$LOW \Rightarrow FLOW \Rightarrow WRN$
AL11	Outside ambient temperature range*3	OFF*1	AL11	$AMB \Rightarrow TEMP \Rightarrow OUT$
AL12	Electric conductivity rise*4	WRN*5	AL12	$DI \Rightarrow ERROR$
AL13	NOT TEMP READY	OFF*1	AL13	$TEMP \Rightarrow READY \Rightarrow ERROR$
AL14	Circulating fluid temperature range rise	OFF*1	AL14	TEMP ⇒ OUT.HI
AL15	Circulating fluid temperature range drop	OFF*1	AL15	$TEMP \Rightarrow OUT.LO$
AL17	Flow rate failure*7	FLT*1	AL17	$LOW \Rightarrow FLOW \Rightarrow FLT$
AL18	High circulating fluid discharge temp.	FLT	AL18	$TEMP \Rightarrow FLT$
AL19	High circulating fluid return temp.	FLT	AL19	$RET \Rightarrow TEMP \Rightarrow FLT$

Selectable from OFF/WRN/FLT

- OFF: Disables the alarm function
- WRN: Operation of this product will continue when the alarm occurs.
 FLT: Operation of this product will stop when the alarm occurs.
- *2 Selectable from WRN/FLT
- *3 Only air-cooled refrigeration type can be set.

				Display unit
Alarm	Alarm message	Initial value	Upper section (White)	Lower section (Green)
AL21	High circulating fluid discharge pressure	FLT	AL21	$HIGH \Rightarrow PRESS \Rightarrow FLT$
AL22	Low circulating fluid discharge pressure	FLT	AL22	$LOW \Rightarrow PRESS \Rightarrow FLT$
AL24	Memory abnormal	FLT	AL24	$MEM \Rightarrow ERROR$
AL25	Contact input 1 signal detection	FLT*1	AL25	INP1 ⇒ ERROR
AL26	Contact input 2 signal detection	FLT*1	AL26	INP2 ⇒ ERROR
AL27	Forced stop	FLT	AL27	FORCE ⇒ STOP
AL28	Maintenance notice	OFF*1	AL28	$MANT \Rightarrow ALARM$
AL29	Communication error	WRN*1	AL29	COMM ⇒ ERROR
AL30	Refrigerant circuit abnormal	FLT	AL30	$REF \Rightarrow ERROR \Rightarrow 0000$
AL31	Sensor abnormal	FLT	AL31	$SENS \Rightarrow ERROR \Rightarrow 0000$
AL32	Controller abnormal	FLT	AL32	$CTRL \Rightarrow ERROR \Rightarrow 0000$

 ^{*4} Option DM (With electric conductivity control function, Applicable to DI water piping) only. When entering the range, the alarm is released automatically.
 *5 Selectable from OFF/WRN

- *6 Not generated for Option Z
- *7 Not generated for Options Z and Z1



Communication Functions

For details, refer to the "Operation Manual" on the SMC website.


Contact Input/Output Communication Specifications

Item		Specifications		
	Insulation method	Photocoupler		
	Rated input voltage	24 VDC		
Contact input signal 1, 2	Operating voltage range	21.6 to 26.4 VDC	· Run/Stop signal · External switch signal	
	Rated input current	5 mA TYP	External owners orginal	
	Input impedance	4.7 kΩ		
	Rated load voltage	48 VAC or less/30 VDC or less	Run status signal	
Contact output signal 1, 2, 3	Maximum load current	500 mA AC/DC (Resistance load)	· Alarm status signal · Signal for completion of preparation	
	Minimum load current	5 VDC 10 mA	(TEMP READY), etc.	
24 VDC Output voltage			s 500 mA MAX*1 active load)	

^{*1} When using the power supply of this product, make sure that the total load current is 500 mA or less.

Contact Input/Output Pin Nos.

Pin no.	Application	Division	Initial value (Default setting)
1	24 VDC output	Output	_
2	24 VDC output	Output	_
3	24 VDC output	Output	_
4	Contact input signal 1	Input	OFF
5	Common of contact output signal 1	Output	_
6	Common of contact output signal 2	Output	_
7	Common of contact output signal 3	Output	_
8	Unusable	_	_
9	24 COM output	Output	_
10	24 COM output	Output	_
11	Common of contact input signal	Output	_
12	Contact input signal 2	Input	OFF
13	Contact output signal 1	Output	Run status signal (N.O. type)
14	Contact output signal 2	Output	Remote status signal (N.O. type)
15	Contact output signal 3	Output	Alarm signal (N.C. type)

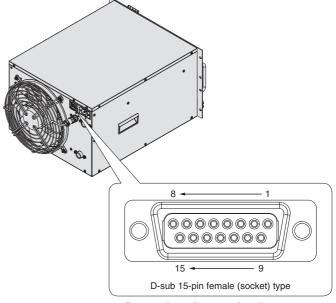

Contact input/output signal connector

Communication Functions

For details, refer to the "Operation Manual" on the SMC website.


Serial Communication

The serial communication (RS-485/RS-232C) enables the following items to be written and read out.

r Writing		7	
Run/Stop	Circulating fluid discharge temperature Status information	-	
Circulating fluid temperature setting	Circulating fluid flow rate Alarm occurrence information	-	
	Circulating fluid discharge pressure	i	
I I	Electric conductivity*1	* 1	When i
		1	Option

*1 When using the Option DM

Item	Specifications		
Connector type	D-sub 9-pin female connector		
Standard	EIA standards, RS-485 (ASCII mode/RTU mode)		
Circuit diagram	Terminal resistance SD+ SD- SG Master This product (1st slave) * Be sure to wire to the correct pin numbers according to the diagram.		
Standard	EIA standards, RS-232C (ASCII mode/RTU mode)		
Circuit diagram	RD 2 RD 3 SD SG SG This product * Be sure to wire to the correct pin numbers according to the diagram.		

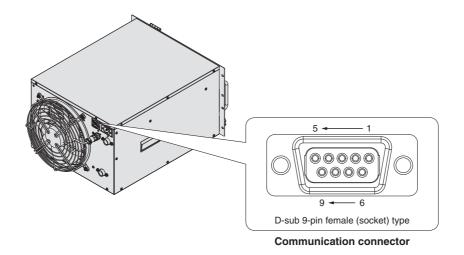

27

HRR Series Options

 Options have to be selected when ordering the thermo-chiller.
 It is not possible to add them after purchasing the unit.

Option symbol

With Electric Conductivity Control Function, Applicable to DI Water Piping

HRR _____-DM

With electric conductivity control function, Applicable to DI water piping


By entering the set value of electric conductivity and hysteresis, flow of circulating fluid to the DI filter is controlled by the solenoid valve to control electric conductivity. Contact material of the circulating fluid circuit is made from non-copper materials. (For details, refer to Option M.)

Applicable model	HRR010/012/018/024/030-□□-□-DM
Measurement range of electric conductivity	0.1 to 48.0 μS/cm
Set range of target electric conductivity	0.5 to 45.0 μS/cm*1
Set range of electric conductivity hysteresis	0.1 to 10.0 μS/cm

*1 Default setting is set to "Electric conductivity set value: 25.0 μS/cm" and "Hysteresis: 5.0 μS/cm."

Example of operation of electric conductivity control

- · Electric conductivity target value : 25.0 [μS/cm]
- · Electric conductivity control hysteresis: 5.0 [μ S/cm]

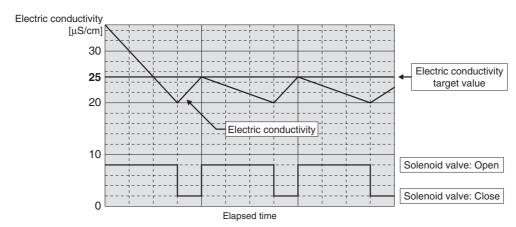



Applicable to DI Water Piping

Applicable to DI water piping

Contact material of the circulating fluid circuit is made from non-copper materials.

- · Available DI water is electric conductivity: 0.4 μS/cm or more. (Electric resistivity: 2.5 MΩ·cm or less)
- · This Option M does not have electric resistance/electric conductivity control function. If this function is necessary, Option DM should be selected.

Applicable model	HRR010/012/018/024/030-□□-□-M
Contact material for circulating fluid	Stainless steel (including heat exchanger brazing), Alumina ceramic, SiC, Carbon, PP, PE, POM, PA, FKM, EPDM, PVC, PPS, AS

* No change in external dimensions





 Options have to be selected when ordering the thermo-chiller.
 It is not possible to add them after purchasing the unit.



Inverter Pump Mounted

HRR010-□□-20-<u>T1</u>

Inverter pump mounted

Possible to choose an inverter pump in accordance with user's piping resistance

Cooling capacity will decrease by heat generated in the pump.


- · The inverter pump does not use a mechanical seal.
- · The 50 Hz and the 60 Hz inverter pumps have the same capacity. (There is no pump capacity difference between the 50 Hz and the 60 Hz.)

Applicable model			HRR010-□□-20-T1
	Rated flow (Same for both the 50 Hz and the 60 Hz)*1, 2	l/min	5 (0.35 MPa)
Pump	Maximum pump head (Same for both the 50 Hz and the 60 Hz)	m	35
	Output	W	400
Circuit protector		Α	10
Recommended earth leakage breaker capacity		Α	10
Cooling capacity*3		W	The cooling capacity reduces about 300 W from the value in the catalogue. (due to an increase in the heat generation of the pump)

- *1 The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20 °C
- *2 Required minimum flow rate for maintaining the cooling capacity or temperature stability
- *3 Cooling capacity will decrease as pump power increases.
- * When the option, inverter pump mounted, is selected, the product weight increases by 2 kg.
- * No change in external dimensions of this product

Pump Capacity

HRR010-A/W-20-T1

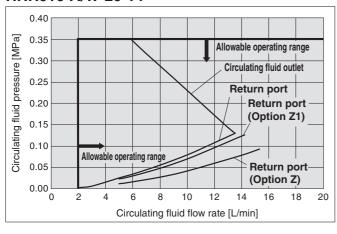



High-Pressure Pump Mounted

□□-□-T /MT

High-pressure pump mounted

Possible to choose a high-pressure pump in accordance with user's piping resistance

Cooling capacity will decrease by heat generated in the pump.

- The high-pressure pump uses a mechanical seal.
- The thermo-chiller indicates maintenance notification when driving time is passed a recommended preventive maintenance hours. Please contact to service centre to ask for maintenance of the pump and mechanical seal.


	Applicable model		HRR012/018-□□-10-T/MT*1	HRR012/018/024/030-□-20-T	HRR012/018/024/030-□-20-MT*1
	Rated flow (50/60 Hz)*2,3	l/min	7 (0.36 MPa)/10 (0.42 MPa)	10 (0.42 MPa)/14 (0.40 MPa)	10 (0.32 MPa)/14 (0.32 MPa)
Pump	Maximum pump head (50/60 Hz)	m	50	50	50
	Output	W	350	5:	50
Circuit protector		Α	15	15 (10 A fo	or standard)
Recommended earth leakage breaker capacity		Α		15	
Cooling capacity*4		W	The cooling capacity reduces about 300 W from the value in the catalogue. (due to an increase in the heat generation of the pump)		

- Option MT: Applicable to DI water piping + High-pressure pump mounted
- The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20 °C
- *3 Required minimum flow rate for maintaining the cooling capacity or temperature stability
- *4 Cooling capacity will decrease as pump power increases.


 * When the option, high-pressure pump mounted, is selected, the product weight increases by 5 kg.
- * No change in external dimensions of this product

Pump Capacity


HRR012/018-□□-10-T/MT

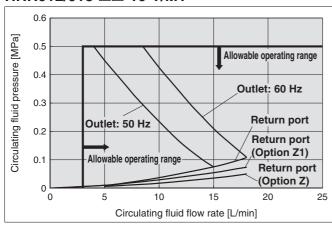

HRR012/018/024/030-□□-20-T

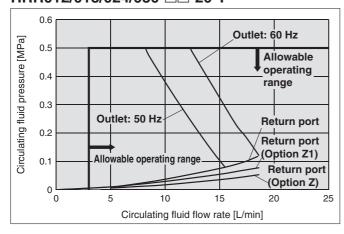


HRR012/018/024/030-□□-20-MT

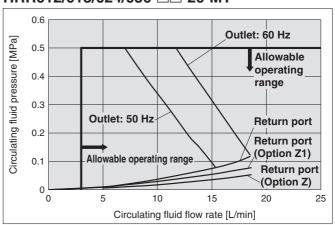


HRR Series

 Options have to be selected when ordering the thermo-chiller.
 It is not possible to add them after purchasing the unit.

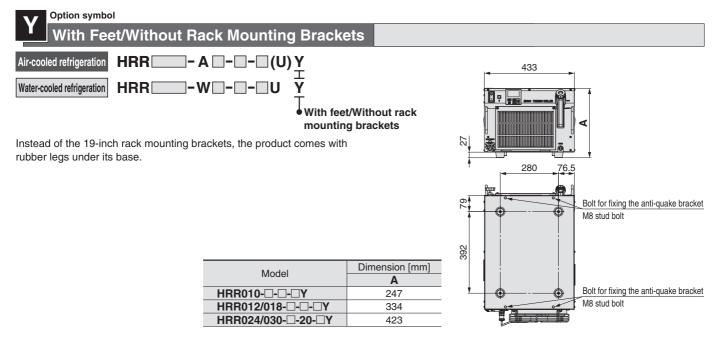





Standard product without the parts below


Z	Flow sensor, Water leakage sensor, Particle filter, Bypass valve, Retaining clip
Z 1	Flow sensor, Retaining clip

HRR Series Optional Accessories

1 Concentration Meter

This meter can be used to control the concentration of ethylene glycol aqueous solution regularly.


Part number	Applicable model
HRZ-BR002	HRR012/018-□□-10 HRR010/012/018/024/030-□□-20



2 Particle Filter Element for Replacement

Element for the maintenance of the particle filter for circulating fluid

Part number	Applicable model
HRR-PF001	HRR010-□□-20
EJ202S-005X11	HRR012/018-□□-10 HRR012/018/024/030-□□-20

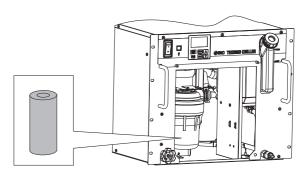

3 DI Filter Replacement Cartridge

DI filter cartridge for replacement for Option DM [Electric conductivity control type, DI water piping type]

Part number	Applicable model
HRR-DF001	HRR012/018-□□-10-DM□ HRR010/012/018/024/030-□□-20-DM□




195

4 Anti-quake Bracket

Bracket for earthquakes

Prepare the anchor bolts (M8) which are suited to the floor material by the customer. (Anti-quake bracket material: Stainless steel, thickness: 1.5 mm)

Part number	Description	Qty.	Applicable model
	Anti-quake bracket A	2	
HRR-TK001	Anti-quake bracket B	2	HRR010/012/018-□-□-□Y
חחח-ו וויייייו	Nut (M8)	4	HRR024/030-□-□-□Y
	Bolt (M8)	4	

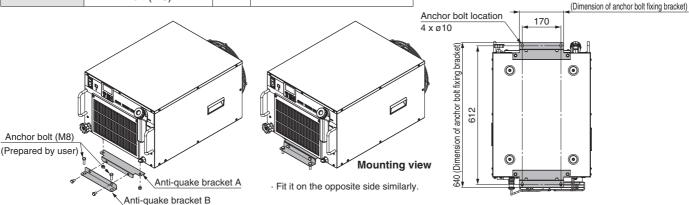




⑤ Piping Conversion Fitting (For Air-cooled Refrigeration)

■ Conversion fitting for circulating fluid + Conversion fitting for drain outlet

This fitting changes the port size for circulating fluid from Rc1/2 to G1/2 or NPT1/2, and for drain from Rc1/4 to G1/4 or NPT1/4. It is not necessary to purchase this when pipe thread type F or N is selected in "How to Order" since it is included in the product.

Part number		Applicable model
HRR-EP001 G thread conversion fitting set		HRR012/018-A-10
HRR-EP002	NPT thread conversion fitting set	HRR010/012/018/024/030-A-20

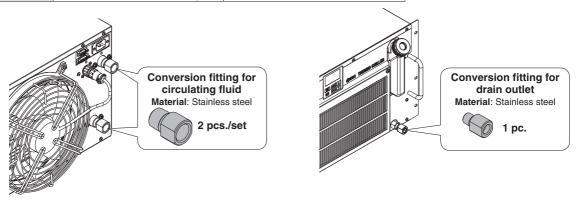


6 Piping Conversion Fitting (For Water-cooled Refrigeration)

■ Conversion fitting for circulating fluid + Conversion fitting for drain outlet

This fitting changes the port size for circulating fluid from Rc1/2 to G1/2 or NPT1/2, and for drain from Rc1/4 to G1/4 or NPT1/4. It is not necessary to purchase this when pipe thread type F or N is selected in "How to Order" since it is included in the product.

Part number		Applicable model	
HRR-EP003 G thread conversion fitting set		HRR012/018-W-10	
HRR-EP004	NPT thread conversion fitting set	HRR010/012/018/024/030-W-20	

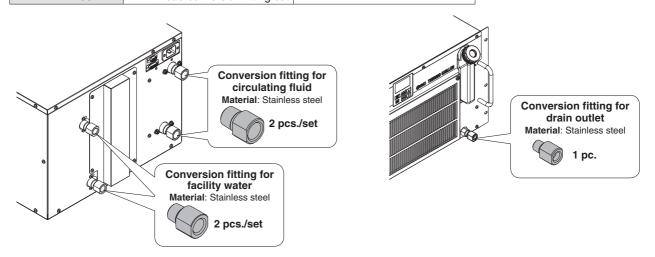

Power Supply Cable

Part number	Applicable model
HRR-CA001	HRR012/018-□□-10 HRR010/012/018/024/030-□□-20



HRR Series

Cooling Capacity Calculation

Required Cooling Capacity Calculation

Example 1: When the heat generation amount in the user's equipment is known.

The heat generation amount can be determined based on the power consumption or output of the heat generating area — i.e. the area requiring cooling — within the user's equipment.*1 I: Current

1 Derive the heat generation amount from the power consumption.

Power consumption P: 1000 [W]

$$Q = P = 1000 [W]$$

Cooling capacity = Considering a safety factor of 20 %,

2 Derive the heat generation amount from the power supply output.

Power supply output VI: 1.0 [kVA]

 $Q = P = V \times I \times Power factor$

In this example, using a power factor of 0.85:

$$= 1.0 [kVA] \times 0.85 = 0.85 [kW] = 850 [W]$$

Cooling capacity = Considering a safety factor of 20 %,

3 Derive the heat generation amount from the output.

V. Power

supply voltage

P

consumption

Output (shaft power, etc.) W: 800 [W]

$$Q = P = \frac{W}{Efficiency}$$

In this example, using an efficiency of 0.7:

$$=\frac{800}{0.7}=1143$$
 [W]

Cooling capacity = Considering a safety factor of 20 %

Q: Heat generation

User's equipment

*1 The examples above calculate the heat generation amount based on the power consumption. The examples above calculate the heat generation amount may differ due to the structure of the user's equipment.

1143 [W] x 1.2 = 1372 [W]

Example 2: When the heat generation amount in the user's equipment is not known.

Obtain the temperature difference between inlet and outlet by circulating the circulating fluid inside the user's equipment.

Heat generation amount by user's equipment Q: Unknown [W] ([J/s]) Circulating fluid : Tap water*1 Circulating fluid mass flow rate qm : $(= \rho \times qv \div 60) [kg/s]$ Circulating fluid density p : 1 [kg/dm³]

Circulating fluid (volume) flow rate qv : 10 [dm³/min] Circulating fluid specific heat C : 4.2 x 10³ [J/(kg·K)] Circulating fluid outlet temperature T1 : 293 [K] (20 [°C]) Circulating fluid return temperature T2 : 295 [K] (22 [°C])

Circulating fluid temperature difference ΔT $: 2.0 [K] (= T_2 - T_1)$ Conversion factor: minutes to seconds (SI units): 60 [s/min]

*1 Refer to page 35 for the typical physical property value of tap water or other

circulating fluids.

 $Q = q_m \times C \times (T_2 - T_1)$

$$= \frac{\rho \times q_{V} \times C \times \Delta T}{60} = \frac{1 \times 10 \times 4.2 \times 10^{3} \times 2.0}{60}$$

= 1400 [J/s] ≈ 1400 [W]

Cooling capacity = Considering a safety factor of 20 %,

Example of conventional units (Reference) Heat generation amount by user's equipment Q: Unknown [cal/h] \rightarrow [W] Circulating fluid : Tap water*1 Circulating fluid weight flow rate qm : $(= \rho \times q_v \times 60)$ [kgf/h] : 1 [kgf/L] Circulating fluid weight volume ratio γ Circulating fluid (volume) flow rate qv : 10 [l/min]

Circulating fluid specific heat C : 1.0 x 10³ [cal/(kgf.°C)] Circulating fluid outlet temperature T1 : 20 [°C]

Circulating fluid return temperature T2 : 22 [°C]

Circulating fluid temperature difference ΔT : 2.0 [°C] (= T₂ - T₁) Conversion factor: hours to minutes : 60 [min/h]

Conversion factor: kcal/h to kW : 860 [(cal/h)/W]

$$Q = \frac{q_{m} \times C \times (T_{2} - T_{1})}{860}$$

$$= \frac{\gamma \times q_{v} \times 60 \times C \times \Delta T}{860}$$

$$= \frac{1 \times 10 \times 60 \times 1.0 \times 10^{3} \times 2.0}{860}$$

$$= \frac{1200000 \text{ [cal/h]}}{860}$$

$$\approx 1400 \text{ [W]}$$

Cooling capacity = Considering a safety factor of 20 %,

1400 [W] x 1.2 = 1680 [W]

^{*} Calculation example for the temperature and flow rate based on customer's piping condition For calculating the required cooling capacity based on the displayed value of temperature and flow rate in the chiller, fully close the bypass valve.



Required Cooling Capacity Calculation

Example 3: When there is no heat generation, and when cooling the object below a certain temperature and period of time.

Heat quantity by cooled substance (per unit time) ${\bf Q}$: Unknown [W] ([J/s])


Cooled substance specific heat C $: 4.2 \times 10^3 \ [J/(kg\cdot K)]$ Cooled substance temperature when cooling begins To: 305 [K] (32 [°C])

Cooled substance temperature when cooling begins 10: 305 [K] (32 [C]) Cooled substance temperature after t hour T_t : 293 [K] (20 [°C]) Cooling temperature difference ΔT : 12 [K] (= $T_0 - T_t$) Cooling time Δt : 900 [s] (= 15 [min])

* Refer to the following for the typical physical property values by circulating fluid.

$$\begin{aligned} \mathbf{Q} &= \frac{\mathbf{m} \ \mathbf{x} \ \mathbf{C} \ \mathbf{x} \ (T0 - Tt)}{\Delta t} = \frac{\rho \ \mathbf{x} \ \mathbf{V} \ \mathbf{x} \ \mathbf{C} \ \mathbf{x} \ \Delta T}{\Delta t} \\ &= \frac{1 \ \mathbf{x} \ 20 \ \mathbf{x} \ 4.2 \ \mathbf{x} \ 10^3 \ \mathbf{x} \ 12}{900} = 1120 \ [\text{J/s}] \approx 1120 \ [\text{W}] \end{aligned}$$

Cooling capacity = Considering a safety factor of 20 %,

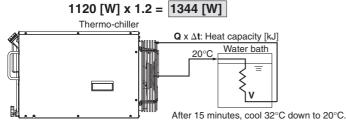

Example of conventional units (Reference)

Heat quantity by cooled substance (per unit time) $\textbf{Q}\colon Unknown\ [cal/h]\to [W]$

Cooled substance specific heat **C** : 1.0 x 10³ [cal/(kgf.°C)]

Cooled substance temperature when

cooling begins T_0 : 32 [°C] Cooled substance temperature after t hour T_t : 20 [°C]

Cooling temperature difference ΔT : 12 [°C] (= $T_0 - T_t$)

Cooling time Δt : 15 [min] Conversion factor: hours to minutes : 60 [min/h] Conversion factor: kcal/h to kW : 860 [(cal/h)/W]

$$Q = \frac{m \times C \times (T_0 - T_t)}{\Delta t \times 860} = \frac{\gamma \times V \times 60 \times C \times \Delta T}{\Delta t \times 860}$$

$$= \frac{1 \times 20 \times 60 \times 1.0 \times 10^{3} \times 12}{15 \times 860}$$

$$\approx 1120 \text{ [W]}$$

Cooling capacity = Considering a safety factor of 20 %,

1120 [W] x 1.2 = 1344 [W]

Precautions on Cooling Capacity Calculation

1. Heating capacity

When the circulating fluid temperature is set above room temperature, it needs to be heated by the thermo-chiller. The heating capacity depends on the circulating fluid temperature. Consider the radiation rate and heat capacity of the user's equipment and check beforehand if the required heating capacity is provided.

2. Pump capacity

<Circulating fluid flow rate>

Circulating fluid flow rate varies depending on the circulating fluid discharge pressure. Consider the installation height difference between the thermo-chiller and the user's equipment, and the piping resistance such as circulating fluid pipings, or piping size, or piping curves in the machine. Check beforehand if the required flow is achieved, using the pump capacity curves.

<Circulating fluid discharge pressure>

Circulating fluid discharge pressure has the possibility to increase up to the maximum pressure in the pump capacity curves. Check beforehand if the circulating fluid pipings or circulating fluid circuit of the user's equipment are fully durable against this pressure.

Circulating Fluid Typical Physical Property Values

1. This catalogue uses the following values for density and specific heat in calculating the required cooling capacity.

Density Specific heat ρ : 1 [kg/dm³] (or, using conventional units, weight volume ratio γ = 1 [kg/L]) Specific heat C: 4.19 x 10³ [J/(kg·K)] (or, using conventional units, 1 x 10³ [cal/(kgf.°C)])

2. Values for density and specific heat change slightly according to temperature shown below. Use this as a reference. 15 % Ethylene Glycol Aqueous Solution

Physical property value	Density ρ	Specific heat C	Conventional units	
Temperature	[kg/dm ³]	[J/(kg·K)]	Weight volume ratio γ [kgf/L]	Specific heat C [cal/(kgf⋅°C)]
5 °C	1.00	4.2 x 10 ³	1.00	1 x 10 ³
10 °C	1.00	4.19 x 10 ³	1.00	1 x 10 ³
15 °C	1.00	4.19 x 10 ³	1.00	1 x 10 ³
20 °C	1.00	4.18 x 10 ³	1.00	1 x 10 ³
25 °C	1.00	4.18 x 10 ³	1.00	1 x 10 ³
30 °C	1.00	4.18 x 10 ³	1.00	1 x 10 ³
35 °C	0.99	4.18 x 10 ³	0.99	1 x 10 ³
40 °C	0.99	4.18 x 10 ³	0.99	1 x 10 ³

Physical property value	Density ρ	Specific heat C	Conventional units	
Temperature	[kg/dm ³]	[J/(kg·K)]	Weight volume ratio γ [kgf/L]	Specific heat C [cal/(kgf.°C)]
5 °C	1.02	3.91 x 10 ³	1.02	0.93 x 10 ³
10 °C	1.02	3.91 x 10 ³	1.02	0.93 x 10 ³
15 °C	1.02	3.91 x 10 ³	1.02	0.93 x 10 ³
20 °C	1.01	3.91 x 10 ³	1.01	0.93 x 10 ³
25 °C	1.01	3.91 x 10 ³	1.01	0.93 x 10 ³
30 °C	1.01	3.91 x 10 ³	1.01	0.94 x 10 ³
35 °C	1.01	3.91 x 10 ³	1.01	0.94 x 10 ³
40 °C	1.01	3.92 x 10 ³	1.01	0.94 x 10 ³

Shown above are reference values. Contact circulating fluid supplier for



^{*} This is the calculated value by changing the fluid temperature only. Thus, it varies substantially depending on the water bath or piping shape.



Be sure to read this before handling the products. Refer to the back cover for safety instructions. For temperature control equipment precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smc.eu

Design

\land Warning

- This catalogue shows the specifications of a single unit.
 - Check the specifications of the single unit (contents of this catalogue) and thoroughly consider the adaptability between the user's system and this unit.
 - 2) Although a protection circuit as a single unit is installed, prepare a drain pan, water leakage sensor, discharge air facility, and emergency stop equipment, depending on the user's operating conditions. Also, the user is requested to carry out a safety design for the whole system.
- When attempting to cool areas that are open to the atmosphere (tanks, pipes), plan your piping system accordingly.

When cooling open-air external tanks, arrange the piping so that there are coil pipes for cooling inside the tanks and to carry back the entire flow volume of circulating fluid that is released.

3. Use non-corrosive material for circulating fluid contact parts.

The recommended circulating fluid is tap water or 15 % ethylene glycol aqueous solution. Using corrosive materials such as aluminum or iron for fluid contact parts such as piping may cause clogging or leakage in the circulating fluid circuit. Therefore, take sufficient care when selecting fluid contact part materials such as piping.

4. Design the piping so that no foreign matter enters the chiller.

If foreign matter, such as scales in the piping, enters the circulating fluid, this may cause the pump to malfunction.

Selection

⚠ Warning

1. Model selection

When selecting a thermo-chiller model, the amount of heat generation from the user's equipment must be known. Obtain this value, referring to "Cooling Capacity Calculation" on pages 34 and 35 before selecting a model.

Handling

1. Thoroughly read the operation manual.

Read the operation manual completely before operation. Also, keep the manual where it can be referred to as necessary.


Transportation / Carriage / Movement

Marning

- 1. This product is heavy. Pay attention to safety and the position of the product when it is transported, carried, and moved.
- 2. Read the operation manual carefully before moving the product after unpacking.

 Never put the product down on its side as this may cause failure.

The product will be delivered in the packaging shown below.

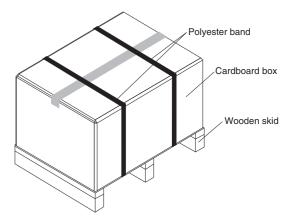

Model	Weight [kg]*1	Dimensions [mm]
HRR010-A	43	Height 405 v Wighth C10 v Donth 200
HRR010-W	41	Height 485 x Width 610 x Depth 820
HRR012-A HRR018-A	54	Height 575 v Width 610 v Dooth 990
HRR012-W HRR018-W	55	Height 575 x Width 610 x Depth 820
HRR024-A HRR030-A	61	Height 665 v Width 610 v Dooth 990
HRR024-W HRR030-W	60	Height 665 x Width 610 x Depth 820

*1 For models with an option, the weight increases as shown below.

Option	Description	Additional weight
-DM	With electric conductivity control function, Applicable to DI water piping	+1 kg
-M	Applicable to DI water piping	Not changed
-T1	Inverter pump mounted	+2 kg
-T	High-pressure pump mounted	+5 kg
-U	Compliant with UL Standards	Not changed
-Y	With feet/Without rack mounting brackets	Not changed
-Z	Without either a flow sensor, water leakage sensor, particle filter, bypass valve or retaining clip	–1 kg*²
-Z1	Without either a flow sensor or retaining clip	Not changed

^{*2} Excludes the HRR010





Be sure to read this before handling the products. Refer to the back cover for safety instructions. For temperature control equipment precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smc.eu

Operating Environment / Storage Environment

- 1. Do not use in the following environment as it will lead to a breakdown.
 - 1) Outdoors
 - In locations where water, water vapour, salt water, and oil may splash on the product
 - 3) In locations where there are dust and particles
 - In locations where corrosive gases, organic solvents, chemical fluids, or flammable gases are present (This product is not explosion proof.)
 - 5) In locations where the ambient temperature exceeds the limits as mentioned below

During transportation/storage: 0 to 50 °C (But as long as water or circulating fluid are not left inside the pipings)

During operation: 5 to 40 °C

6) In locations where the ambient humidity is out of the following range or where condensation occurs

During transportation/storage: 15 to 85 % During operation: 30 to 70 %

- 7) In locations which receive direct sunlight or radiated heat
- 8) In locations where there is a heat source nearby and the ventilation is poor
- 9) In locations where temperature substantially changes
- In locations where strong magnetic noise occurs (In locations where strong electric fields, strong magnetic fields, and surge voltage occur)
- 11) In locations where static electricity occurs, or conditions which make the product discharge static electricity
- 12) In locations where high frequency occurs
- 13) In locations where damage is likely to occur due to lightning
- 14) In locations at an altitude of 3000 m or higher (Excluding: storage and transportation)
 - * For altitudes of 1000 m or higher
 - Because of lower air density, the heat radiation efficiencies of the devices in the product will be lower in the location at an altitude of 1000 m or higher. Therefore, the maximum ambient temperature to use and the cooling capacity will lower according to the descriptions in the table below.

Select the thermo-chiller considering the descriptions.

- ① Upper limit of ambient temperature: Use the product in ambient temperature of the described value or lower at each altitude.
- ② Cooling capacity coefficient: The product's cooling capacity will lower to one that multiplied by the described value at each altitude.

Altitude [m]	①Upper limit of ambient temperature [°C] 40 °C products	② Cooling capacity coefficient
Less than 1000 m	40	1.00
Less than 1500 m	38	0.85
Less than 2000 m	36	0.80
Less than 2500 m	34	0.75
Less than 3000 m	32	0.70

- 15) In locations where strong impacts or vibrations occur
- 16) In locations where a massive force strong enough to deform the product is applied or the weight from a heavy object is applied
- 17) In locations where there is not sufficient space for maintenance

2. Install in an environment where the unit will not come into direct contact with rain or snow.

These models are for indoor use only.

Do not install outdoors where rain or snow may fall on them.

3. Conduct ventilation and cooling to discharge heat. (Air-cooled refrigeration)

The heat which is cooled down through air-cooled condenser is discharged.

When using in a room which is shut tightly, ambient temperature will exceed the specification range stipulated in this catalogue, which will activate the safety detector and stop the operation. In order to avoid this situation, discharge the heat outside of a room by ventilation or cooling facilities.

4. The product is not designed for clean room usage. It generates particles internally.





Be sure to read this before handling the products. Refer to the back cover for safety instructions. For temperature control equipment precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smc.eu

Mounting / Installation

⚠ Warning

- 1. Do not use the product outdoors.
- Do not place heavy objects on top of this product, or step on it.


The external panel can be deformed and danger can result.

⚠ Caution

- Make sure that the rack and the rack rail can support the weight of the product.
- Refer to the operation manual for this product, and secure an installation space that is necessary for the maintenance and ventilation.

<Air-cooled refrigeration>

- 1. The air-cooled type product exhausts heat using the fan that is mounted to the product. If the product is operated with insufficient ventilation, ambient temperature may exceed 4 0 °C, and this will affect the performance and life of the product. To prevent this ensure that suitable ventilation is available (see below).
- 2. For installation indoors, ventilation ports and a ventilation fan should be equipped as needed.

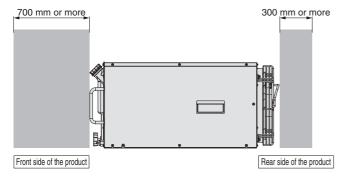

<Heat radiation amount/Required ventilation rate>

	Heat radiation	Required ventilation rate [m³/min]		
Model	amount	Differential temp. of 3 °C between	Differential temp. of 6 °C between	
	[kW]	inside and outside of installation area	inside and outside of installation area	
HRR010-A	Approx. 2	40	20	
HRR012-A	Approx. 2	40	20	
HRR018-A	Approx. 4	70	40	
HRR024-A	Approx. 5	90	50	
HRR030-A	Approx. 6	100	60	

Piping

∧ Caution

1. Regarding the circulating fluid pipings, consider carefully the suitability for shutoff pressure, temperature and circulating fluid.

If the operating performance is not sufficient, the pipings may burst during operation. Also, using corrosive materials such as aluminum or iron for fluid contact parts such as piping may cause clogging or leakage in the circulating fluid and facility water circuits. Provide protection against corrosion when you use the product.

Select the piping port size which can exceed the rated flow.

For the rated flow, refer to the pump capacity table.

- 3. When tightening at the circulating fluid inlet and outlet, drain port or overflow port of this product, use a pipe wrench to clamp the connection ports.
- 4. This product series are constant-temperature fluid circulating machines with built-in tanks.

Do not install equipment on your system side such as pumps that forcibly return the circulating fluid to the unit. Also, if you attach an external tank that is open to the air, it may become impossible to circulate the circulating fluid. Proceed with caution.

Electrical Wiring


∧ Warning

 Grounding should never be connected to a water line, gas line or lightning rod.

↑ Caution

- Communication cable should be prepared by the customer.
- 2. Provide a stable power supply which is not affected by surge or distortion.

If the voltage increase ratio (dV/dt) at the zero cross should exceed 40 V/200 $\mu sec.,$ it may result in malfunction.

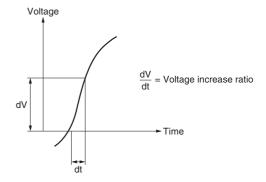



Be sure to read this before handling the products. Refer to the back cover for safety instructions. For temperature control equipment precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smc.eu

Circulating Fluid

∕!∖ Caution

- 1. Avoid oil or other foreign matter entering the circulating fluid.
- 2. When water is used as a circulating fluid, use tap water that conforms to the appropriate water quality standards. Use tap water that conforms to the standards shown below (including water used for dilution of ethylene glycol aqueous solution).

Tap Water (as a Circulating Fluid) Quality Standards

The Japan Refrigeration and Air Conditioning Industry Association

JRA GL-02-1994 "Cooling water system - Circulation type - Make-up water"

			Influ	ence	
	Item	Unit	Standard value	Corrosion	Scale generation
	pH (at 25 °C)	_	6.0 to 8.0	0	0
_	Electric conductivity (25 °C)	[µS/cm]	100*1 to 300*1	0	0
Standard item	Chloride ion (CI ⁻)	[mg/L]	50 or less	0	
2	Sulfuric acid ion (SO ₄ ²⁻)	[mg/L]	50 or less	0	
l da	Acid consumption amount (at pH4.8)	[mg/L]	50 or less		0
tar	Total hardness	[mg/L]	70 or less		0
0)	Calcium hardness (CaCO ₃)	[mg/L]	50 or less		0
	Ionic state silica (SiO ₂)	[mg/L]	30 or less		0
=	Iron (Fe)	[mg/L]	0.3 or less	0	0
<u>=</u>	Copper (Cu)	[mg/L]	0.1 or less	0	
Ce	Sulfide ion (S ₂ -)	[mg/L]	Should not be detected	0	
Reference item	Ammonium ion (NH ₄ +)	[mg/L]	0.1 or less	0	
efe	Residual chlorine (CI)	[mg/L]	0.3 or less	0	
ď	Free carbon (CO ₂)	[mg/L]	4.0 or less	0	

- *1 In the case of [M Ω ·cm], it will be 0.003 to 0.01.
- O: Factors that have an effect on corrosion or scale generation
- Even if the water quality standards are met, complete prevention of corrosion is not guaranteed.
- 3. Use an ethylene glycol aqueous solution that does not contain additives such as preservatives.
- 4. When using ethylene glycol aqueous solution, maintain a maximum concentration of 15 %.

Overly high concentrations can cause a pump overload. Low concentrations, however, can lead to freezing when circulating fluid temperature is 10 °C or lower and cause the thermo-chiller to break down.

5. A magnet pump or mechanical seal pump is used as the circulating pump for the circulating fluid.

It is particularly impossible to use liquid including metallic powder such as iron powder.

6. The circulating fluids listed below have been tested for thermo-chiller compatibility.

No.	Fluid	Manufacturer	Concentration
4	Dowcal [™] 100 Heat	The Dow Chemical	Dilute to 30 % in
'	Transfer Fluid	Company	water
2	ControXid 1642	Oelheld GmbH	Ready to use
3	Hexid A4	Applied Thermal Control Limited	Ready to use
4	Coolflow IGE	Hydratech Division of Liquitherm Technologies Group Ltd	Dilute to 25 % in water
5	NALCO® CCL105	Nalco Water, an Ecolab Company	Ready to use

- The chiller cooling capacity and pump capacity performance may change with using the fluids listed. Customers should verify the performances with the fluid and decide to use the fluid.
- · Check the compatibility with the piping and the wetted parts of the customer's equipment before use.
- · Check with the circulating fluid manufacturer for the following. 1) Countries and regions where it can be obtained and used 3) Safety data sheets
- 2) Handling and maintenance 4) Specifications and physical properties
- Concentration has to be value listed or less. Overly high concentrations can cause a pump overload. Low concentrations, however, can lead to freezing when circulating fluid temperature is 10 °C or lower and cause the thermo-chiller to break down.
- Using the fluid listed for a long time, the chiller heat exchanger performance may be reduced due to additive deposits. It is recommended to regularly flush the inside of the piping and chiller with clean water.
- In the case of a mechanical seal pump, additive deposits may appear on the outside, it is not a malfunction.

Facility Water Supply

⚠ Warning

<Water-cooled refrigeration>

- 1. The water-cooled refrigeration type thermo-chiller radiates heat to the facility water. Prepare the facility water system that satisfies the heat radiation and the facility water specifications
- Required facility water system
- <Heat radiation amount/Facility water specifications>

Model	Heat radiation [kW]	Facility water specifications
HRR010-W	Approx. 2	
HRR012-W	Approx. 2	Refer to
HRR018-W	Approx. 4	"Facility water system"
HRR024-W	Approx. 5	in the specifications.
HRR030-W	Approx. 6	

2. When using tap water as facility water, use tap water that conforms to the appropriate water quality standards.

Use tap water that conforms to the standards shown below.

<Tap Water (as Facility Water) Quality Standards>

The Japan Refrigeration and Air Conditioning Industry Association JRA GL-02-1994 "Cooling water system - Circulation type - Circulating water"

	Item	Unit	Standard value	Influence	
	nem	Offic	Standard value	Corrosion	Scale generation
	pH (at 25 °C)	_	6.5 to 8.2	0	0
_	Electric conductivity (25 °C)	[µS/cm]	100*1 to 800*1	0	0
item	Chloride ion (Cl-)	[mg/L]	200 or less	0	
	Sulfuric acid ion (SO ₄ ²⁻)	[mg/L]	200 or less	0	
Standard	Acid consumption amount (at pH4.8)	[mg/L]	100 or less		0
Stal	Total hardness	[mg/L]	200 or less		0
	Calcium hardness (CaCO ₃)	[mg/L]	150 or less		0
	Ionic state silica (SiO ₂)	[mg/L]	50 or less		0
	Iron (Fe)	[mg/L]	1.0 or less	0	0
item	Copper (Cu)	[mg/L]	0.3 or less	0	
e e	Sulfide ion (S ₂ ⁻)	[mg/L]	Should not be detected	0	
len	Ammonium ion (NH ₄ +)	[mg/L]	1.0 or less	0	
Reference	Residual chlorine (CI)	[mg/L]	0.3 or less	0	
Ľ	Free carbon (CO ₂)	[mg/L]	4.0 or less	0	

- *1 In the case of [MΩ·cm], it will be 0.001 to 0.01.
- O: Factors that have an effect on corrosion or scale generation
- Even if the water quality standards are met, complete prevention of corrosion is not guaranteed.
- 3. Supply pressure of 0.5 MPa or less.

If the supply pressure is high, it will cause water leakage.

4. Be sure to prepare your utilities so that the pressure of the thermo-chiller facility water outlet is at 0 MPa (atmospheric pressure) or more.

If the facility water outlet pressure becomes negative, the internal facility water piping may collapse, and proper flow control of facility water will be impossible.

Using deionized water as facility water may cause problems such as clogging in the piping due to metal ion.

5. Do not use fluid that includes metallic powders and other foreign materials.

It can cause issues: clogging of the circulating fluid circuit or leakage.





Be sure to read this before handling the products. Refer to the back cover for safety instructions. For temperature control equipment precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smc.eu

Operation

1. Confirmation before operation

 The fluid level of a tank should be within the specified range of "HIGH" and "LOW."

When exceeding the specified level, the circulating fluid will overflow.

2) Remove the air.

Conduct a trial operation, looking at the fluid level.

Since the fluid level will go down when the air is removed from the user's piping system, supply water once again when the fluid level is reduced. When there is no reduction in the fluid level, the job of removing the air is completed.

2. Confirmation during operation

· Check the circulating fluid temperature.

The operating temperature range of the circulating fluid is between 5 and 35 $^{\circ}$ C.

When the amount of heat generated from the user's equipment is greater than the product's capability, the circulating fluid temperature may exceed this range. Use caution regarding this matter.

3. Emergency stop method

When an abnormality is confirmed, stop the machine immediately. When operation is stopped by the RUN/STOP key, turn off the power switch.

Operation Restart Time/Operation and Suspension Frequency

⚠ Caution

- 1. Wait five minutes or more before restarting operation after it has been stopped. If the operation is restarted within five minutes, the protection circuit may activate and the operation may not start properly.
- 2. Operation and suspension frequency should not exceed 10 times per day. Frequently switching between operation and suspension may result in the malfunction of the refrigeration circuit.

Protection Circuit

- 1. If operating in the conditions below, the protection circuit will activate and an operation may not be performed or will stop.
 - Power supply voltage is not within the rated voltage range of $\pm 10~\%$.
 - In case the water level inside the tank is reduced abnormally.
 - · Circulating fluid temperature is too high.
 - Compared to the cooling capacity, the heat generation amount of the user's equipment is too high.
 - Ambient temperature is too high. (40 °C or more)
 - · Refrigerant pressure is too high.
 - Ventilation grille is clogged with dust or dirt.

Maintenance

<Periodical inspection every one month>

1. Clean the ventilation grille.

If the dustproof filter becomes clogged with dust or debris, a decline in cooling performance can result.

In order to avoid deforming or damaging the dustproof filter, clean it with a long-haired brush or air gun.

<Periodical inspection every three months>

- 1. Inspect the circulating fluid.
 - 1) When using tap water
 - · Replacement of tap water

Failure to replace the tap water can lead to the development of bacteria or algae. Replace it regularly depending on your usage conditions.

2) When using ethylene glycol aqueous solution

Use a concentration meter to confirm that the concentration does not exceed 15 % .

Dilute or add as needed to adjust the concentration.

<Periodical inspection during the winter season>

1. Make water-removal arrangements beforehand.

If there is a risk of the circulating fluid freezing when the product is stopped, release the circulating fluid in advance.

2. Consult a professional.

For additional methods to prevent freezing (such as commercially available tape heaters, etc.), consult a professional for advice.

■ Refrigerant with GWP reference

	Global warming potential (GWP)			
Refrigerant	Regulation (EU) No 517/2014 (Based on the IPCC AR4)	Revised Fluorocarbons Recovery and Destruction Law (Japanese law)		
R134a	1,430	1,430		
R404A	3,922	3,920		
R407C	1,774	1,770		
R410A	2,088	2,090		

- * This product is hermetically sealed and contains fluorinated greenhouse gases (HFC). When this product is sold on the market in the EU after January 1, 2017, it needs to be compliant with the quota system of the F-Gas Regulation in the EU.
- See specification table for refrigerant used in the product.



⚠ Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC) ¹⁾, and other safety regulations.

∴ Caution:

Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate

injury.

Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious

njury.

⚠ Danger:

Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious

njury.

ISO 4414: Pneumatic fluid power – General rules relating to systems.
 ISO 4413: Hydraulic fluid power – General rules relating to systems.
 IEC 60204-1: Safety of machinery – Electrical equipment of machines.
 (Part 1: General requirements)

ISO 10218-1: Manipulating industrial robots - Safety.

Marning

The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.

- The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
- When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
- 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions

- 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
- 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalogue.
- 3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
- 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

↑ Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary. If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements". Read and accept them before using the product.

Limited warranty and Disclaimer

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first. ²⁾ Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products.
- 2) Vacuum pads are excluded from this 1 year warranty. A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

- The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed

↑ Caution

SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country.

Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

Revision History

Edition B

- Single-phase 100 VAC (50/60 Hz) and 110 VAC (60 Hz) XY power supplies have been added.
- The circulating fluid temperature, flow rate, and electric conductivity setting/display range have been expanded.
- Number of pages has been increased from 32 to 36.

Edition C

- The HRR010 (air-cooled type, water-cooled type) has XV been added.
- Number of pages has been increased from 36 to 44.

SMC Corporation (Europe)

Austria +43 (0)2262622800 www.smc.at office@smc.at Belgium +32 (0)33551464 www.smc.be info@smc.be Bulgaria +359 (0)2807670 www.smc.bg office@smc.bg Croatia +385 (0)13707288 www.smc.hr office@smc.hr **Czech Republic** +420 541424611 office@smc.cz www.smc.cz Denmark +45 70252900 www.smcdk.com smc@smcdk.com Estonia +372 6510370 www.smcpneumatics.ee info@smcee.ee Finland +358 207513513 www.smc.fi smcfi@smc.fi France +33 (0)164761000 www.smc-france.fr info@smc-france.fr Germany +49 (0)61034020 info@smc.de www.smc.de Greece +30 210 2717265 www.smchellas.gr sales@smchellas.gr Hungary +36 23513000 www.smc.hu office@smc.hu Ireland +353 (0)14039000 www.smcautomation.ie sales@smcautomation.ie +39 03990691 www.smcitalia.it mailbox@smcitalia.it Italy +371 67817700 Latvia info@smc.lv www.smc.lv

Lithuania +370 5 2308118 info@smclt.lt www.smclt.lt Netherlands +31 (0)205318888 www.smc.nl info@smc.nl Norway +47 67129020 www.smc-norge.no post@smc-norge.no Poland +48 222119600 office@smc.pl www.smc.pl apoioclientept@smc.smces.es +351 214724500 Portugal www.smc.eu Romania +40 213205111 www.smcromania.ro smcromania@smcromania.ro Russia +7 8123036600 www.smc.eu sales@smcru.com Slovakia +421 (0)413213212 www.smc.sk office@smc.sk Slovenia +386 (0)73885412 www.smc.si office@smc.si Spain +34 945184100 www.smc.eu post@smc.smces.es Sweden +46 (0)86031200 www.smc.nu smc@smc.nu **Switzerland** +41 (0)523963131 www.smc.ch helpcenter@smc.ch Turkey +90 212 489 0 440 www.smcpnomatik.com.tr info@smcpnomatik.com.tr UK +44 (0)845 121 5122 www.smc.uk sales@smc.uk