

Circulating Fluid Temperature Controller


Refrigerated Thermo-chiller New







Air transport possible Uses a CO₂ refrigerant Greatly reduced GWP

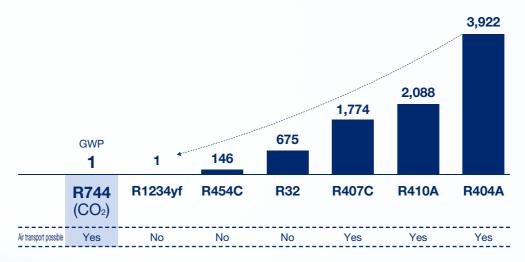

GWP = 1 Compliant with each country's refrigerant regulations As of the end of September 2024

EU refrigerant regulations : GWP150 or more US refrigerant regulations : GWP700 or more California, US refrigerant regulations: GWP750 or more

* "GWP" indicates the global warming potential. The values are based on the IPCC AR4.

Air transport possible

Classified as A1 according to ASHRAE standard 34 (non-toxic and non-flammable)

Eliminates the need to pay for F-Gas recovery & disposal

Eliminates the need for periodic inspections based on the Fluorocarbon Emissions Control Act (Japan)







Energy Saving

Inverter compressor


Reduced power consumption due to the optimal control of compressor rotations according to the load (compared with non-inverter chillers)

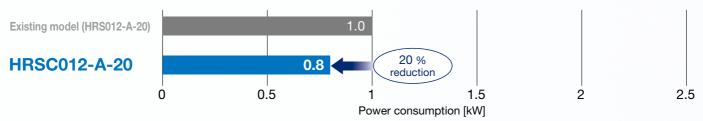

Conditions Ambient temperature: 25 °C, Circulating fluid temperature: 20 °C, Circulating fluid flow rate: 7 l/min, Heat load: 1.3 kW, Operating ratio: 50 % (Ratio of 1.3 kW heat load to 0 kW heat load)

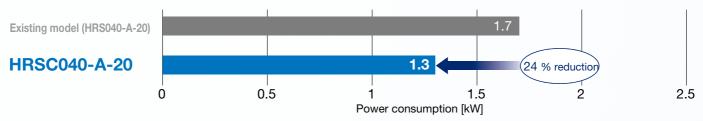


Conditions Ambient temperature: 25 °C, Circulating fluid temperature: 20 °C, Circulating fluid flow rate: 7 l/min, Heat load: 4.2 kW, Operating ratio: 50 % (Ratio of 4.2 kW heat load to 0 kW heat load)



Conditions Ambient temperature: 25 °C, Circulating fluid temperature: 20 °C, Circulating fluid flow rate: 28 l/min, Heat load: 5.1 kW, Operating ratio: 50 % (Ratio of 5.1 kW heat load to 0 kW heat load)

* Varies according to conditions

Capable of providing the same cooling capacity in both 60 Hz and 50 Hz areas due to the inverter compressor

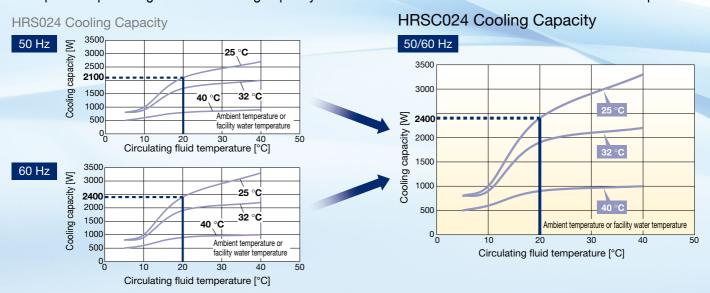




Same or better performance than the existing model

Same cooling/heating/pumping capacity and temperature stability

Same or greater cooling/heating capacity than the existing model


For the HRSC050-A-20

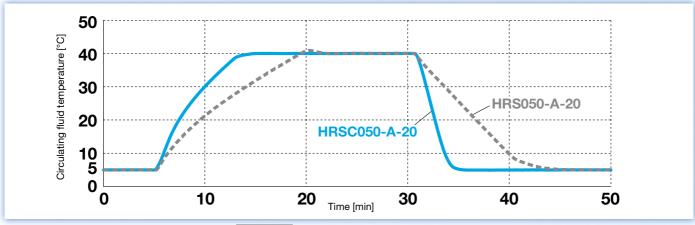

Conditions Ambient temperature: 25 °C, Circulating fluid flow rate: 28 l/min, External piping: Bypass

High temperature stability even when the heat load fluctuates

For the HRSC100-A-40

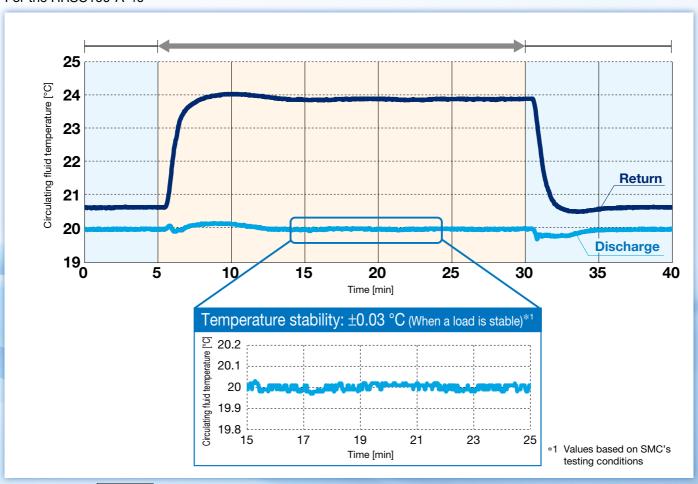

Conditions Ambient temperature: 32 °C, Circulating fluid temperature: 20 °C, Circulating fluid flow rate: 45 l/min, Heat load: 10.5 kW



Reduced environmental load due to the use of a CO₂ refrigerant

Uses a non F-gas (CO₂ refrigerant)

Refrigerant type	GWP	Flammability	Air transport	Fluorocarbon Emissions Control Act (Japan)	Installation floor area restrictions
R744 (CO ₂ refrigerant)	1	Non-flammable	Possible	Not applicable	Not applicable
R32	675	Slightly flammable	Not possible*1	Applicable	Applicable
R454C	146	Slightly flammable	Not possible*1	Applicable	Applicable
R1234yf	1	Slightly flammable	Not possible*1	Not applicable	Applicable

■ Global Warming Potential (GWP)

R744 (CO₂ refrigerant) has a GWP of 1, making it a low-environmental load refrigerant.

It will remain compatible with GWP and PFAS restrictions even if they are strengthened in the future.

Flammability

It is a highly-safe, non-flammable refrigerant.

■ Air transport possible

This refrigerant is classified as A1 according to ASHRAE 34 and is both non-toxic and non-flammable, so it can be transported by aircraft.

- *1 Refrigeration devices using slightly flammable refrigerants (A2L) such as R32, R454C, and R1234yf (with a refrigerant charge of 100 g or more) cannot be transported by aircraft.
- Not subject to the Fluorocarbon Emissions Control Act (Japan) or the refrigerant regulations of each country Zero fluorocarbon management required

Zero fluorocarbon recovery and disposal costs

Installation floor area restrictions

When installing equipment filled with a slightly flammable refrigerant, there are restrictions on the min. allowable installation floor area depending on the amount of refrigerant inside the product.

Variations


Lineup of products with cooling capacities from 1 to 10 kW and with earth leakage breakers equipped as standard

Mode	el	Cooling method	Cooling capacity	Power supply	Option	Optional accessories	Environment	International standards
· - a	HRSC012		1.3 kW		High-temperature environment	· Anti-quake bracket		
0	HRSC018		1.9 kW		specification (Cannot be selected for	Piping conversion fitting (For air-cooled, water-cooled, and options) Concentration mater.		
	HRSC024		2.4 kW	Single-phase	the HRSC030/040/ 050/060)	Concentration meter Bypass piping set Power supply cable DI filter set Electric conductivity sensor set/ Electric conductivity control set Particle filter set Drain pan set (With water leakage sensor) Replacement type dustproof filter set Filter for circulating fluid fill port		
	HRSC030		3.2 kW	200 to 230 VAC (50/60 Hz)	With automatic fluid fill			C €
	HRSC040		4.2 kW	(00/00 112)	function			
	HRSC050	Air-cooled type	5.1 kW		(Cannot be selected for			
	HRSC060	Water-cooled type	5.9 kW					
	HRSC090	3100	9.5 kW (Air-cooled type) 11 kW (Water-cooled type)	3-phase 380Y/220 to 415Y/240 VAC	With automatic fluid fill function	Piping conversion fitting Concentration meter Bypass piping set Electric conductivity control set		
	HRSC100		10.5 kW (Air-cooled type) 11.5 kW (Water-cooled type)	(50 Hz) 380Y/220 to 480Y/277 VAC (60 Hz)	With casters and adjuster feet With fluid fill port	Particle filter set Filter for circulating fluid fill port (Cannot be selected for the HRSC100) Drain pan set (With water leakage sensor) (Cannot be selected for the HRSC100) Snow protection hood (HRSC100 Air-cooled type)	(IPX4)	



Ensured interchangeability with existing models

Same external dimensions, port size, and layout

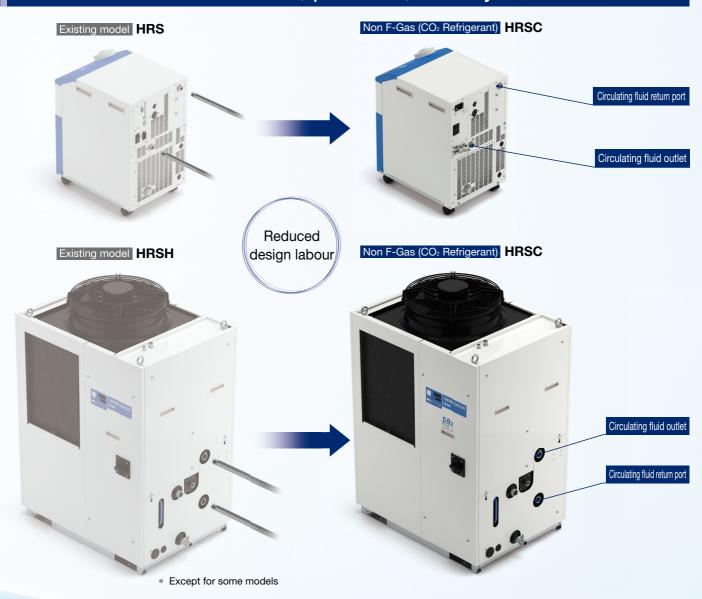


Operability the same as existing models

- Step 1 Press the RUN/STOP key.
- Step 2 Adjust the temperature setting with the value of t
- Step 3 Press the RUN key to stop operation.

 Easy operation



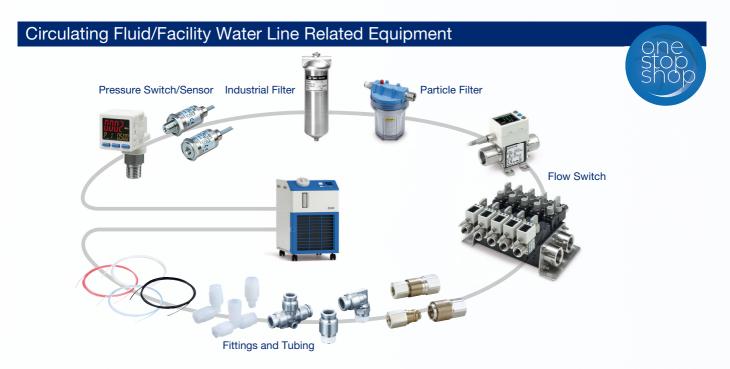

SMC's Global Maintenance Network

Products that you can count on available worldwide

Thanks to a solid inventory of maintenance parts and an experienced chiller support team capable of conducting repairs and replacements, SMC is able to respond to customers' issues quickly and precisely.

As SMC's high-quality services are available to customers all over the world, you can rest assured that



Αr	nericas

Brazil U.S.A. Mexico

	Europe
Austria	Norway
Czech Republic	Poland
Denmark	Russia
Finland	Clavalda

Finland Slovakia
France Slovenia
Germany Spain/Portugal
Hungary Sweden
Ireland Switzerland
Italy Turkey
Latvia U.K.
Netherlands

Asia and Oceania

Australia	Malaysia
China	New Zealand
Hong Kong	Philippines
India	Singapore
Indonesia	Taiwan
Japan	Thailand
Korea	Vietnam

* The names of countries and regions listed in each area are alphabetically indexed

Thermo-chiller Business Continuity Plan

Introduction of our BCP initiatives for production factories, engineering, and support systems We are dedicated to providing a sustainable product supply customers can rely on.

"Uninterrupted Operation and Resilient Supply"





Non F-Gas (CO₂ Refrigerant)

Circulating Fluid Temperature Controller Refrigerated Thermo-chiller

HRSC012 to 060 Series

Inverter compressor

Power consumption: 24 % reduction*1



GWP = 1 Compliant with each country's refrigerant regulations

Air transport possible

Temperature stability: ±0.1 °C



HRSC012/018/024

HRSC030/040

HRSC050/060

@SMC

Same width for all models: 377 mm

Model	Size [mm]	Cooling capacity	Set temperature range
HRSC012		1300 W	
HRSC018	W 377 x H 615 x D 500	1900 W	
HRSC024		2400 W	
HRSC030	W 377 x H 660 x D 500	3200 W	5 to 40 °C
HRSC040	W 3// X H 660 X D 500	4200 W	
HRSC050	W 377 x H 976 x D 592	5100 W	
HRSC060	W 3// X F 9/6 X D 392	5900 W	

Compatible with power supplies in Europe, Asia, Oceania, and North, Central, and South America

Single-phase 200 to 230 VAC (50/60 Hz)

With heating function

As the heating method uses discharged heat, a heater is unnecessary.

Earth leakage breaker equipped as standard

Convenient functions

Timer operation function/Power failure auto-restart function/ Anti-freezing operation function

Easy maintenance

Toolless maintenance of filter

Self-diagnosis function and check display

50 types of alarm codes

Communication function

Equipped with serial communication (RS232C/RS485) and contact I/Os (2 inputs and 3 outputs) as standard

Indoor use



^{*1} Compared with the non-inverter chiller (HRSC040-A-20) Conditions: Ambient temperature: 25 °C, Circulating fluid temperature: 20 °C, Circulating fluid flow rate: 7 l/min, 0 kW load: 50 %, 4.2 kW load: 50 %

CONTENTS

HRSC Series



Non F-Gas (CO₂ Refrigerant) Thermo-chiller HRSC Series

How to Order/Specifications	
Single-phase 200 to 230 VACp	. 10
Cooling Capacityp	. 12
Heating Capacityp	. 13
Dimensions ····· p	. 15
Options	
With Automatic Fluid Fill Functionp	. 18
High-Pressure Pump Mounted p.	. 18
High-Temperature Environment Specification p.	. 19

Optional Accessories
① Anti-Quake Bracket p. 20
② Piping Conversion Fitting
(For Air-Cooled Refrigeration/Water-Cooled Refrigeration) $\cdotsp.20,21$
③ Piping Conversion Fitting (For Option) p. 21
④ Concentration Meter p. 22
⑤ Bypass Piping Set·····p. 22
Rower Supply Cable p. 23
⑦ DI Filter Set p. 24
Electric Conductivity Sensor Set/
Electric Conductivity Control Set p. 25
Particle Filter Set
10 Drain Pan Set (With Water Leakage Sensor) p. 27
① Replacement Type Dustproof Filter Set p. 28
12 Filter for Circulating Fluid Fill Port p. 28
Cooling Capacity Calculation
Required Cooling Capacity Calculation p. 51
Precautions on Cooling Capacity Calculation p. 52

Circulating Fluid Typical Physical Property Values... p. 52

Non F-Gas (CO₂ Refrigerant) Thermo-chiller

Single-phase 200 to 230 VAC

HRSC Series

How to Order

Air-cooled refrigeration

HRSC 018

	3 - 1 - 3
012	Cooling capacity 1300 W
018	Cooling capacity 1900 W
024	Cooling capacity 2400 W
030	Cooling capacity 3200 W
040	Cooling capacity 4200 W
050	Cooling capacity 5100 W
060	Cooling capacity 5900 W

The pump of 050 and 060 have a mechanical seal and leakage could occur depending on circulating fluid quality. We recommend you to use the particle filter kit, HRS-PF004, as a preventive measure

Cooling method

A Air-cooled refrigeration

Pipe thread type

I	Rc				
F	F G (with Rc-G conversion fitting set)				
N	NPT (with Rc-NPT conversion fitting set)				

Optio	TI .							
Symbol	Ontion	Applicable model						
Symbol	Option	012	018	024	030	040	050	060
ı	None	•	•	•	•	•	•	•
G	High-temperature environment specification	•	•	•	ı	ı	_	ı
7	With automatic fluid fill function	•	•	•	•	•	•	•
Т	High-pressure pump mounted*1	•	•	•	•	•	_	_

- When multiple options are combined, indicate symbols in alphabetical order.
- The cooling capacity will decrease by about 300 W from the value in the catalogue.
 - The pump has a mechanical seal in it and leakage could occur depending on circulating fluid quality. We recommend you to use the particle filter kit, HRS-PF003, as a preventive measure.

Power supply

Symbol	Power supply
20	Single-phase 200 to 230 VAC (50/60 Hz)

Specifications * There are different values from standard specifications. Refer to pages 18 and 19 for details.

		Model		HRSC012-A-20	HRSC018-A-20	HRSC024-A-20	HRSC030-A-20	HRSC040-A-20	HRSC050-A-20	HRSC060-A-20		
С	ooling meth	nod		Air-cooled refrigeration								
R	efrigerant			R744 (CO ₂ , GWP: 1)								
R	efrigerant o	harge	[kg]	0.43	0.43	0.43	0.48	0.48	0.54	0.54		
С	ontrol meth	od					PID control					
Am	bient temperature/H	umidity/Altitude/Installation enviro	onment*1, *10	Temperature: 5 to 40	°C, High-temperature e	nvironment specification	n (option): 5 to 45 °C, Hu	ımidity: 30 to 70 %, Altit	tude: less than 3000 m,	Environment: Indoors		
	Circulating]	ap water, 15% e	ethylene glycol a	queous solution	*4			
	Set tempe	rature range*1	[°C]				5 to 40					
Ĕ	Cooling ca		[W]	1300	1900	2400	3200	4200	5100	5900		
stem	Heating ca		[W]	650	650	650	640	1100	1400	1300		
s	Temperatu	re stability*5	[°C]				±0.1					
Circulating fluid		Rated flow (50/60 Hz)*6, *7	[l/min]		7 (0.1	3 MPa) /7 (0.18	MPa)		23 (0.24 MPa) /28 (0.32 MPa)			
) t	Pump	Max. flow rate (50/60 Hz)	[l/min]		27/29 34/40				31/42			
Ę.	i unip	Max. pump head (50/60 Hz)	[m]		14/19					50		
la.		Output	[W]		200					550		
2	Tank capa	city	[L]	Approx. 5								
Ö	Port size			Rc1/2								
	Fluid cont	act material		Stainless steel, Copper (Heat exchanger brazing), Brass, Alumina ceramic*13, Carbon, PP, PE, POM, FKM, EPDM, PVC, SiC*14								
em	Power sup	pply		Single-phase 200 to 230 VAC (50/60 Hz), Allowable voltage range ±10 % (No continuous voltage fluctuation)								
system	Earth leakage	Rated current	[A]	10	10	15	15	20	30	30		
ल्	breaker (Standard)	Sensitivity current	[mA]	30	30	30	30	30	30	30		
ectric	Rated operati	ng current (50/60 Hz)*3	[A]	5.0/5.1	6.4/6.5	7.7/7.8	8.6/8.7	11.4/11.5	12.7/14	14.6/15.9		
ŭ		onsumption (50/60 Hz)*3	[kW (kVA)]	0.8/0.8 (1.0/1.0)	1.0/1.0 (1.3/1.3)	1.3/1.3 (1.6/1.6)	1.3/1.4 (1.8/1.8)	1.8/1.8 (2.3/2.3)	2.1/2.4 (2.5/2.8)	2.3/2.6 (2.9/3.2)		
Ν	Noise level (50/60 Hz)*8 [dB (A)]			60/61	60/61	60/61	62/65	64/66	65/68	66/68		
A	Accessories			Fitting (for drain outlet) 1 pc.*11, Power supply connector 1 pc.*12, Quick Manual (with a clear case) 1, Alarm code list sticker 1 Power supply cable: Option (sold separately) to be ordered or prepared by the user.								
W	eight*9		[kg]		51	-	5	3	7	3		

- *1 No condensation should be present.
- *2 If tap water is used, about the water quality SMC recommends, refer to the operation
- manual for water quality specifications and other usable circulating fluids.

 *3 ① Ambient temperature: 25 °C, ② Circulating fluid temperature: 20 °C, ③
 Circulating fluid at the rated flow, ④ Circulating fluid: Tap water Refer to the cooling capacity and heating capacity graphs for details.
- *4 Use a 15% ethylene glycol aqueous solution if operating in a place where the circulating fluid temperature is 10 °C or less.
- *5 Temperature at the thermo-chiller outlet when the circulating fluid flow is at the rated flow and the circulating fluid outlet and return port are directly connected. The installation environment and power supply are within the specification range and stable
- *6 The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20 °C
- The required minimum flow rate for maintaining the cooling capacity or temperature stability The specification of the cooling capacity and the temperature stability may not be satisfied if the flow rate is lower than the rated flow. (In such a case, use a bypass piping set (sold separately).)
- *8 Front: 1 m, height: 1 m, stable with no load, Other conditions → See *3.
- *9 Weight in the dry state without circulating fluids
- *10 If the product is used at an altitude of 1000 meters or higher, the maximum allowable ambient temperature and the cooling capacity decrease. For details, refer to the operation manual. It is not provided for the HRSC050/060.
- *12 It is not provided for the HRSC040/050/060.
- *13 The HRSC050/060 does not contain this material.

Non F-Gas (CO₂ Refrigerant) Thermo-chiller

Single-phase 200 to 230 VAC

HRSC Series

How to Order

Water-cooled refrigeration

HRSC 018

	.
012	Cooling capacity 1300 W
018	Cooling capacity 1900 W
024	Cooling capacity 2400 W
030	Cooling capacity 3200 W
040	Cooling capacity 4200 W
050	Cooling capacity 5100 W
060	Cooling capacity 5900 W

The pump of 050 and 060 have a mechanical seal and leakage could occur depending on circulating fluid quality. We recommend you to use the particle filter kit, HRS-PF004, as a preventive measure.

Cooling method •

A Water-cooled refrigeration

Pipe thread type

_	Rc		
F G (with Rc-G conversion fitting se			
N	NPT (with Rc-NPT conversion fitting set)		

ФОрцоп											
Symbol	Option		Applicable model								
Symbol	Ориоп	012	018	024	030	040	050	060			
_	None	•	•	•	•	•	•	•			
J	With automatic										
,	fluid fill function		•		•		•	•			
Т	High-pressure										
•	pump mounted*1	•	•		•						

- When multiple options are combined, indicate symbols in alphabetical order.
- The cooling capacity will decrease by about 300 W from the value in the catalogue.
- The pump has a mechanical seal in it and leakage could occur depending on circulating fluid quality. We recommend you to use the particle filter kit, HRS-PF003, as a preventive measure.

Power supply

Symbol	Power supply
20	Single-phase 200 to 230 VAC (50/60 Hz)

Specifications * There are different values from standard specifications. Refer to pages 18 and 19 for details.

		Model		HRSC012-W-20	HRSC018-W-20	HRSC024-W-20	HRSC030-W-20	HRSC040-W-20	HRSC050-W-20	HRSC060-W-20
Cooling method				Water-cooled refrigeration						
	Refrigerant			R744 (CO ₂ , GWP: 1)						
Re	frigerant c	harge	[kg]	0.4	0.4	0.4	0.41	0.41	0.44	0.44
C	ntrol meth	od					PID control			
Am	ient temperature/H	lumidity/Altitude/Installation en	vironment*1	Tempera	ature: 5 to 40 °C	, Humidity: 30 to	70 %, Altitude:	less than 3000 i	m, Environment:	Indoors
	Circulating	g fluid* ²			٦	ap water, 15% e	thylene glycol a	queous solution	*4	
Set temperature range*1 [°C]				5 to 40						
-E			[W]	1300	1900	2400	3200	4200	5100	5900
system	Heating ca		[W]	650	650	650	600	1000	1300	1300
	Temperatu	ure stability*5	[°C]				±0.1			
lë		Rated flow (50/60 Hz)*6, *7	[l/min]		7 (0.1	3 MPa) /7 (0.18			23 (0.24 MPa)	/28 (0.32 MPa)
) fi	Pump	Max. flow rate (50/60 Hz)	[l/min]		27/29		34,	/40	31/	42
ing	Fullip	Max. pump head (50/60 Hz)	[m]		14/19					0
lat		Output	[W]			200			55	50
Circulating fluid	Tank capa	city	[L]	Approx. 5						
Ξ	Port size			Rc1/2						
	Fluid conta	act material		Stainless steel, Copper (Heat exchanger brazing), Brass, Alumina ceramic*13,						
				Carbon, PP, PE, POM, FKM, EPDM, PVC, SiC*14						
system	Temperatu	•	[°C]	10 to 40						
sys	Pressure r		[MPa]	0.3 to 0.5						
water		w rate (50/60 Hz)*10	[l/min]	8	12	14	15	15	16	17
y W		re differential of facility water	[MPa]	0.3 or more						
Facility	Port size			Rc3/8 Rc1/2						
		act material		Stainless steel, Copper (Heat exchanger brazing), EPDM Single-phase 200 to 230 VAC (50/60 Hz), Allowable voltage range ±10 % (No continuous voltage fluctuation)						
system	Fower supply			· ·		' ''		<u> </u>		,
sys	Earth leakage	Rated current	[A]	10	10	10	15	20	20	20
ica		Sensitivity current	[mA]	30	30	30	30	30	30	30
Electrical		ng current (50/60 Hz)*3	[A]	3.1/3.2	4.0/4.1	4.4/4.5	6.1/6.2	7.6/7.7	9.4/10.7	10.3/11.6
-			<u> </u>		. ,	0.8/0.9 (0.9/1.0)		. , ,	` '	1.7/2.0 (2.0/2.3)
No	Noise level (50/60 Hz)*8 [dB (A)]			60/61	60/61	60/61	62/65	64/66	65/68	66/68
1				Fitting (for drain outlet) 1 pc.*11, Power supply connector 1 pc.*12,						
A	Accessories			Quick Manual (with a clear case) 1, Alarm code list sticker 1 Power supply cable: Option (sold separately) to be ordered or prepared by the user.						
				Р	117	ole: Option (sold			,	
W	eight*9		[kg]		50			3	7	

- *1 No condensation should be present.
- *2 If tap water is used, about the water quality SMC recommends, refer to the
- operation manual for water quality specifications and other usable circulating fluids.


 *3 ① Ambient temperature: 25 °C, ② Circulating fluid temperature: 20 °C, ③ Circulating fluid at the rated flow, ④ Circulating fluid: Tap water, ⑤ Facility water temperature: 25 °C Refer to the cooling capacity and heating capacity graphs for details.
- *4 Use a 15% ethylene glycol aqueous solution if operating in a place where the circulating fluid temperature is 10 °C or less.
 *5 Temperature at the thermo-chiller outlet when the circulating fluid flow is at the rated flow
- and the circulating fluid outlet and return port are directly connected.
- The installation environment and power supply are within the specification range and stable *6 The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20 °C
- *7 The required minimum flow rate for maintaining the cooling capacity or temperature stability The specification of the cooling capacity and the temperature stability may not be satisfied if the flow rate is lower than the rated flow. (In such a case, use a bypass piping set (sold separately).)
- *8 Front: 1 m, height: 1 m, stable with no load, Other conditions → See *3.
 *9 Weight in the dry state without circulating fluids
- The required flow rate when the cooling capacity load is applied at a circulating fluid temperature of 20 °C, and circulating fluid rated flow and facility water temperature of 25 °C. The actual facility water flow rate will vary depending on the operating conditions.
- It is not provided for the HRSC050/060.
- *12 It is not provided for the HRSC040/050/060. *13 The HRSC050/060 does not contain this material.
- *14 When option "T" is selected for the HRSC012/018/024/030/040 or when the HRSC050/060 is selected

Non F-Gas (CO₂ Refrigerant) Thermo-chiller **HRSC** Series


Cooling Capacity

- * If the product is used at an altitude of 1000 meters or higher, the maximum allowable ambient temperature and the cooling capacity decrease. For details, refer to the operation manual.
- * For models with a high-pressure pump mounted (-T), the cooling capacity will decrease by about 300 W from each graph.


HRSC012-A-20, HRSC012-W-20 (Single-phase 200 to 230 VAC) [50/60 Hz]

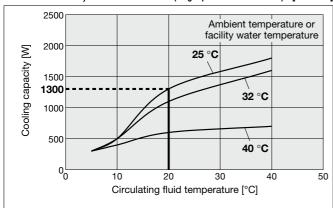


HRSC018-A-20, HRSC018-W-20 (Single-phase 200 to 230 VAC) [50/60 Hz]

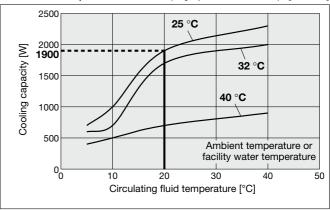


HRSC024-A-20, HRSC024-W-20 (Single-phase 200 to 230 VAC) [50/60 Hz]

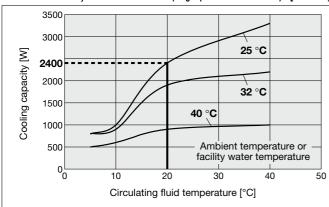


HRSC030-A-20, HRSC030-W-20 (Single-phase 200 to 230 VAC) [50/60 Hz]

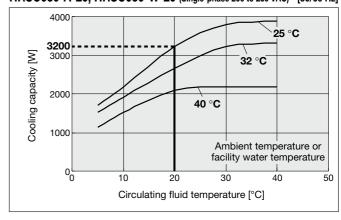


HRSC040-A-20, HRSC040-W-20 (Single-phase 200 to 230 VAC) [50/60 Hz]

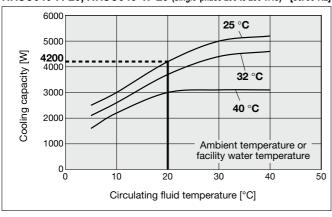

HRSC050-A-20, HRSC050-W-20 (Single-phase 200 to 230 VAC) [50/60 Hz]

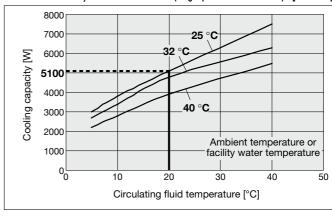


HRSC060-A-20, HRSC060-W-20 (Single-phase 200 to 230 VAC) [50/60 Hz]

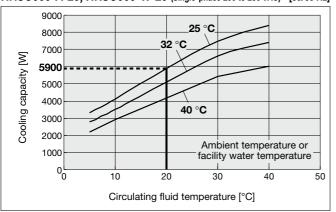


Heating Capacity

HRSC 012 018 024 A -20 (Single-phase 200 to 230 VAC)

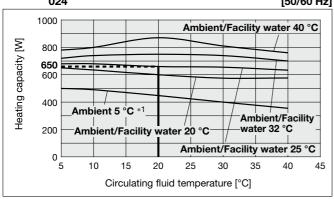


*1 Only for the air-cooled refrigeration type


HRSC030-A-20 (Single-phase 200 to 230 VAC) [50/60 Hz]

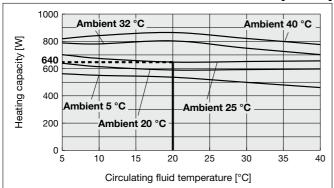


HRSC030-W-20 (Single-phase 200 to 230 VAC) [50/60 Hz]

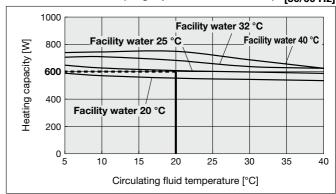


HRSC040-A-20 (Single-phase 200 to 230 VAC) [50/60 Hz]

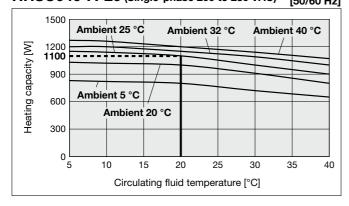


HRSC040-W-20 (Single-phase 200 to 230 VAC) [50/60 Hz]

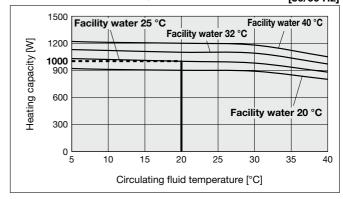

HRSC050-A-20 (Single-phase 200 to 230 VAC) [50/60 Hz]

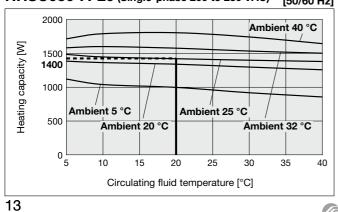



HRSC050-W-20 (Single-phase 200 to 230 VAC) [50/60 Hz]

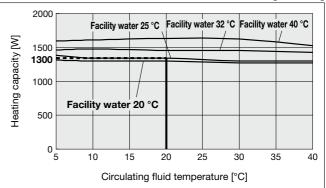

Heating Capacity


HRSC060-A-20 (Single-phase 200 to 230 VAC) [50/60 Hz]

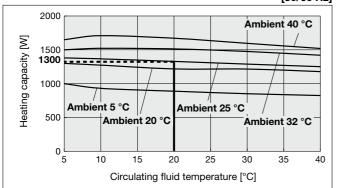

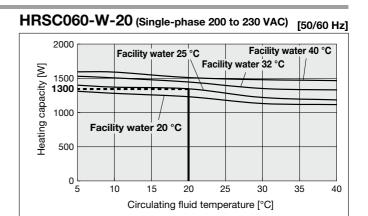


Pump Capacity

HRSC $^{012}_{018}$ - $^{\rm A}_{\rm W}$ -20 (Single-phase 200 to 230 VAC)

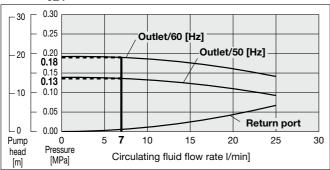


HRSC $_{060}^{050}$ - $_{W}^{A}$ -20 (Single-phase 200 to 230 VAC)

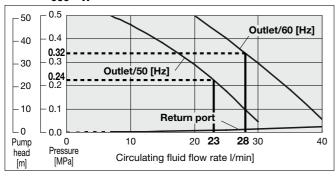


Required Facility Water Flow Rate

HRSC012-W-20, HRSC018-W-20, HRSC024-W-20 HRSC030-W-20, HRSC040-W-20, HRSC050-W-20 HRSC060-W-20

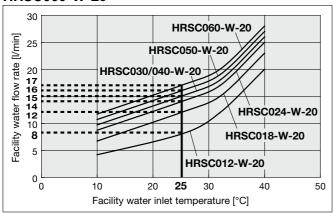


HRSC $_{040}^{030}$ - $_{W}^{A}$ -20 (Single-phase 200 to 230 VAC)

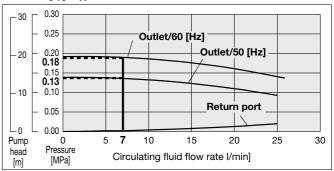

⚠ Caution


Mechanical Seal Pump

The pump used for the thermo-chiller HRSC050/060 series uses a mechanical seal with the fixed ring and rotary ring used for the shaft seal part. If foreign matter enter the gap between the seals, this may cause a trouble such as leakage from the seal part or pump lock. Therefore, it is strongly recommended to install the particle filter in the return piping of the chiller.

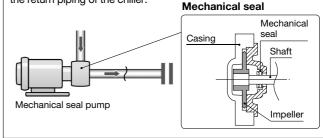

^{*} This is the facility water flow rate at the circulating fluid rated flow and the cooling capacity listed in the "Cooling Capacity" specifications.

Dimensions

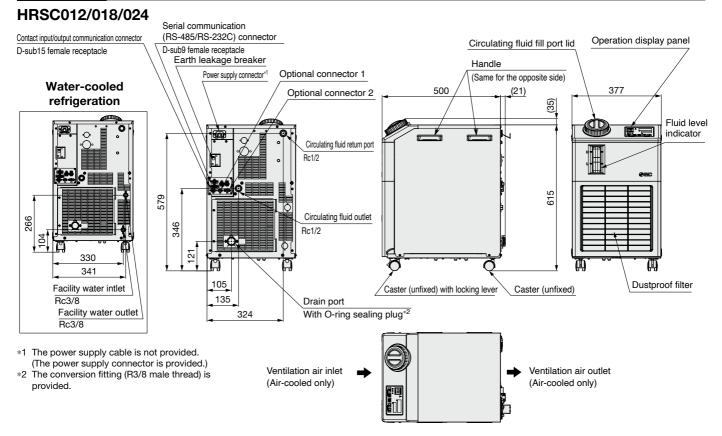

HRSC030/040-A-20 Circulating fluid fill port lid Operation display panel Handle (Same for the opposite side) Optional connector 1 Power supply connector* 500 (21) 377 Optional connector 2 Earth leakage breaker Fluid level indicator Serial communication Circulating fluid return port (RS-485/RS-232C) connector D-sub9 female receptacle 099 625 Contact input/output communication connector Circulating fluid outlet 391 D-sub15 female receptacle Rc1/2 105 Ventilation hole Drain port Dustproof filter Caster (unfixed) with locking lever With O-ring sealing plug*2 135 (Same for the opposite side) Ventilation air outlet 🛖 Caster (unfixed) HRSC040 Power cable entry (Grommet with membrane) Ventilation air inlet Ventilation air outlet *1 The power supply cable is not provided.


多SMC

Ventilation air outlet


provided.

(The power supply connector is provided.) *2 The conversion fitting (R3/8 male thread) is

Dimensions

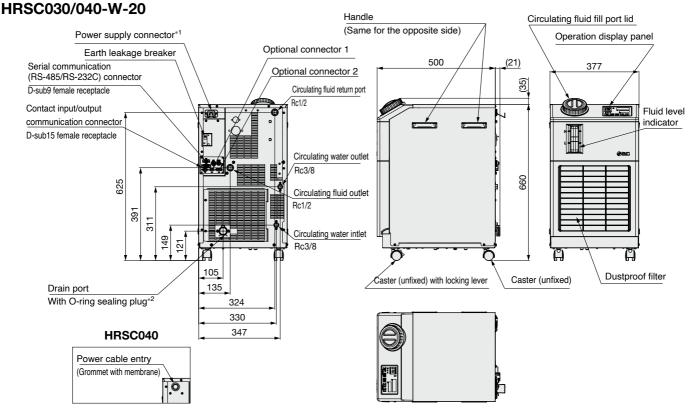


- *1 The power supply cable is not provided. (The power supply connector is provided.)
- *2 The conversion fitting (R3/8 male thread) is provided.

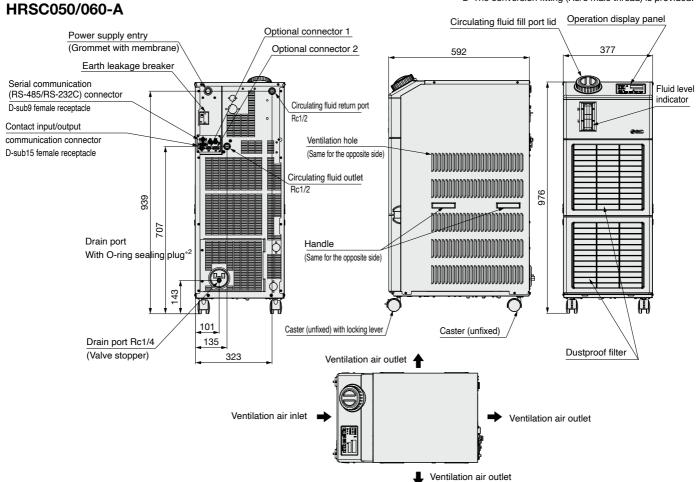


Dimensions

HRSC050/060-W

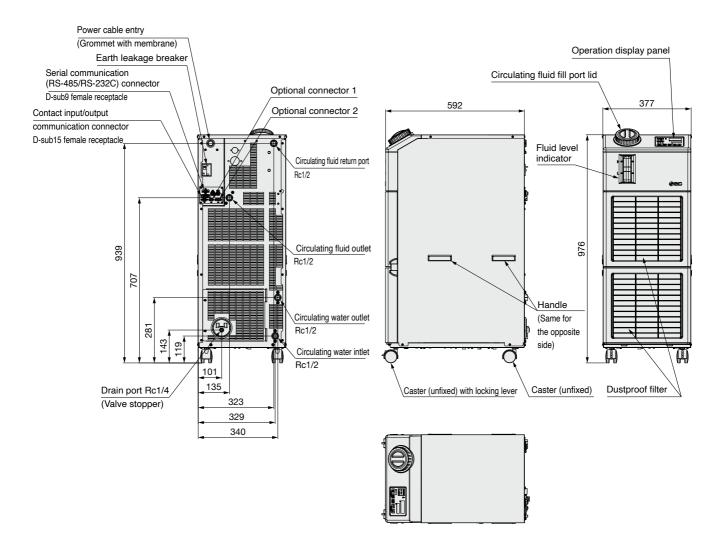


HRSC Series Options

* Options have to be selected when ordering the thermo-chiller. It is not possible to add them after purchasing the unit.




With Automatic Fluid Fill Function



By installing this at the automatic fluid fill port, the circulating fluid can be automatically supplied to the product using a built-in solenoid valve for a fluid fill while the circulating fluid is decreasing.

Applicable model	HRSC012/018/024/030/040/050/060-□□-20-J
Fluid fill method	Built-in solenoid valve for automatic fluid fill
Fluid fill pressure [MPa]	0.2 to 0.5


* When the option, with automatic fluid fill function, is selected, the weight increases by 1 kg.

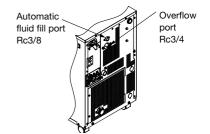



Option symbol

High-Pressure Pump Mounted



Possible to choose a high-pressure pump in accordance with user's piping resistance. Cooling capacity will decrease by heat generated in the pump.


Cannot be selected for the HRSC050/060

Applicable model			HRSC012/018/024/030-□□-20-T	HRSC040-□□-20-T	
	Rated flow (50/60 Hz)*1, *2 I/min		10 (0.44 MPa) /14 (0.40 MPa)	23 (0.18 MPa) /28 (0.23 MPa)	
Dump	Max. flow rate (50/60 Hz) I/mi		18/22	30/35	
Pump	Max. pump head (50/60 Hz) m		70	50	
	Output W		550	550	
Earth leakage breaker capacity A		Α	15	20	
Cooling capacity*3 W		W	ne cooling capacity reduces about 300 W from the value in the catalogue. (due to an increase in the heat generation of the pump)		


- *1 The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20 °C
- *2 The required minimum flow rate for maintaining the cooling capacity or temperature stability
- *3 Cooling capacity will decrease as pump power increases.
- * When the option, high-pressure pump mounted, is selected, the weight increases by 6 kg.
- * No change in external dimensions

Pump Capacity


HRSC012/018/024-□□-20-T

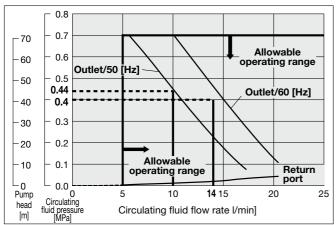

HRSC040-□□-20-T

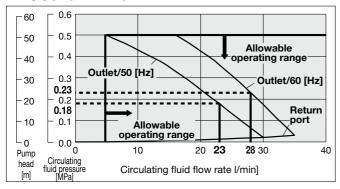

HRSC030-□□-20-T

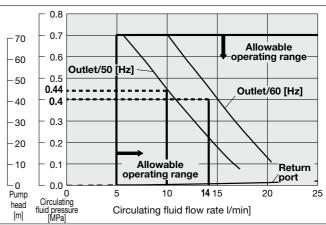


⚠ Caution

Mechanical Seal Pump

The pump used for the option T of the thermo-chiller HRSC012 to 040 uses a mechanical seal with the fixed ring and rotary ring used for the shaft seal part. If foreign matter enter the gap between the seals, this may cause a trouble such as leakage from the seal part or pump lock. Therefore, it is strongly recommended to install the particle filter in the return piping of the chiller.

Mechanical seal

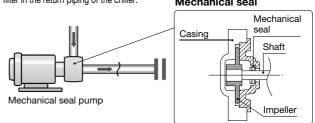



Option symbol

Applicable model

Cooling method

Power supply

Options have to be selected when ordering the thermo-chiller. It is not possible to add them after purchasing the unit.

High-Temperature Environment Specification

- A □-20- G

High-temperature environment specification

HRSC012/018/024-A□-20-G Air-cooled refrigeration Single-phase 200 to 230 VAC (50/60 Hz)


No change in external dimensions

Cannot be selected for the HRSC030/040/050/060

This product makes use at ambient temperatures of up to 45 °C possible.

Also increases cooling capacity at ambient temperature of 32 °C. (Cooling capacity is equal to standard products at ambient temperatures of less than 32 °C.)


> * Ventilation slots are added to thermo-chiller side panels. For this reason, please provide 300 mm of ventilation space next to the side panels (do not install with sides touching walls).




Ventilation slots are added to side panels (on both sides).


Cooling Capacity

- * If the product is used at an altitude of 1000 meters or higher, the maximum allowable ambient temperature and the cooling capacity decrease. For details, refer to the operation manual.
- * For models with a high-pressure pump mounted (-T), the cooling capacity will decrease by about 300 W from each graph.

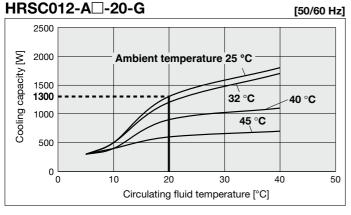



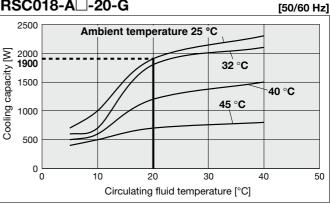

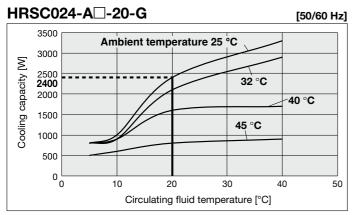


HRSC Series Optional Accessories


Anti-Quake Bracket

This bracket can be used to reduce product damage in the case of an earthquake. An anchor bolt (M8) suitable for the flooring material should be prepared separately by the user.

					[mm]
Part no. (per unit)	Applicable model	Α	В	Plate thickness	Material
HRS-TK001	HRSC012-□□-20 HRSC018-□□-20 HRSC024-□□-20	555	(590)	1.6	Zinc steel plate
	HRSC030-□□-20 HRSC040-□□-20	546	(581)		
HRS-TK002	HRSC050-□□-20 HRSC060-□□-20	664	(698)	2.0	Stainless steel

^{*} Anti-quake brackets: 2 pcs./set (enough for 1 unit)

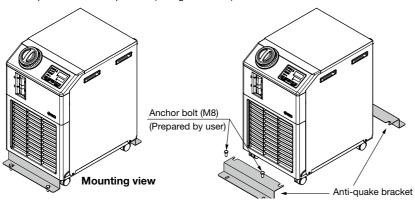

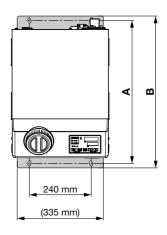

2 Piping Conversion Fitting (For Air-Cooled Refrigeration)

■ Conversion fitting for circulating fluid + Conversion fitting for drain outlet HRSC012-A□-20, HRSC018-A□-20, HRSC024-A□-20, HRSC030-A□-20, HRSC040-A□-20

This fitting changes the port size for circulating fluid from Rc1/2 to G1/2 or NPT1/2, and for drain from Rc3/8 to G3/8 or NPT3/8. It is not necessary to purchase this when pipe thread type F or N is selected in "How to Order" since it is included in the product.

	Applicable model	
HRS-EP001	HRS-EP001 G thread conversion fitting set	
HRS-EP002	NPT thread conversion fitting set	HRSC024-A-20 HRSC030-A-20 HRSC040-A-20


When the options, with automatic fluid fill function "-J", or high-pressure pump mounted "-T" are selected, purchase ③ piping conversion fitting (for option), too.


HRSC050-A□-20, HRSC060-A□-20

This fitting changes the port size for circulating fluid from Rc1/2 to G1/2 or NPT1/2, and for drain from Rc1/4 to G1/4 or NPT1/4. It is not necessary to purchase this when pipe thread type F or N is selected in "How to Order" since it is included in the product.

	Applicable model	
HRS-EP009	G thread conversion fitting set	HRSC050-A-20
HRS-EP010	NPT thread conversion fitting set	HRSC060-A-20

When the option, with automatic fluid fill function "-J", is selected, purchase ③ piping conversion fitting (for option), too.

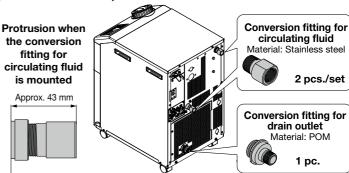

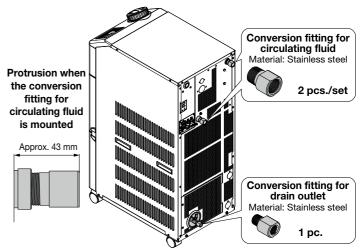



② Piping Conversion Fitting (For Water-Cooled Refrigeration)

■ Conversion fitting for circulating fluid + Conversion fitting for facility water + Conversion fitting for drain outlet HRSC012-W□-20, HRSC018-W□-20, HRSC024-W□-20, HRSC030-W□-20, HRSC040-W□-20

This fitting changes the port size for circulating fluid from Rc1/2 to G1/2 or NPT1/2, for facility water from Rc3/8 to G3/8 or NPT3/8, and for drain from Rc3/8 to G3/8 or NPT3/8. It is not necessary to purchase this when pipe thread type F or N is selected in "How to Order" since it is included in the product.

	Applicable model	
HRS-EP003	RS-EP003 G thread conversion fitting set	
HRS-EP004	•EP004 NPT thread conversion fitting set	HRSC024-W-20 HRSC030-W-20 HRSC040-W-20


When the options, with automatic fluid fill function "-J", or high-pressure pump mounted "-T" are selected, purchase (3) piping conversion fitting (for option), too.

HRSC050-W□-20, HRSC060-W□-20

This fitting changes the port size for circulating fluid or facility water from Rc1/2 to G1/2 or NPT1/2 and for drain from Rc1/4 to G1/4 or NPT1/4.

It is not necessary to purchase this when pipe thread type F or N is selected in "How to Order" since it is included in the product.

Part no.		Applicable model
HRS-EP011 G thread conversion fitting set		HRSC050-W-20
HRS-EP012	NPT thread conversion fitting set	HRSC060-W-20

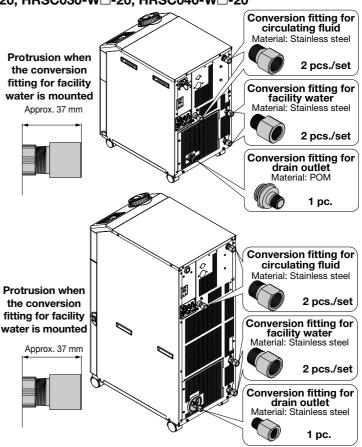

③ Piping Conversion Fitting (For Option)

■ Conversion fitting for automatic fluid fill port

This fitting changes the port size for the option, with automatic fluid fill function "-J" from Rc3/8, Rc3/4 to G3/8, G3/4 or NPT3/8, NPT3/4.


It is not necessary to purchase this when pipe thread type F or N is selected in "How to Order" since it is included in the product.


· · · · · · · · · · · · · · · · · · ·			
Part no.		Applicable model	
HRS-EP005	G thread conversion fitting set	HRSC012-□-20-J HRSC018-□-20-J HRSC024-□-20-J HRSC030-□-20-J	
HRS-EP006	NPT thread conversion fitting set	HRSC040-□-20-J HRSC050-□-20-J HRSC060-□-20-J	

■ Conversion fitting for drain outlet

This fitting changes the port size for drain outlet for the option, high-pressure pump mounted "-T" from Rc1/4 to G1/4 or NPT1/4. It is not necessary to purchase this when pipe thread type F or N is selected in "How to Order" since it is included in the product.

Part no.		Applicable model	
HRS-EP007	G thread conversion fitting	HRSC012-□-20-T HRSC018-□-20-T HRSC024-□-20-T HRSC030-□-20-T	
HRS-EP008	NPT thread conversion fitting	HRSC040-□-20-T	

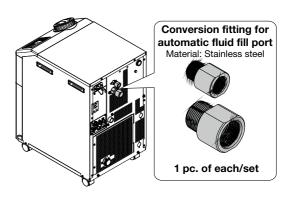

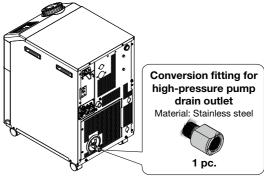


^{*1} It is not necessary to purchase this when you purchase the HRS-EP009 to 012 since it is included in the product.



4 Concentration Meter

This meter can be used to control the concentration of ethylene glycol aqueous solution regularly.

Part no.	Applicable model
	HRSC012-□□-20 HRSC018-□□-20 HRSC024-□□-20
HRZ-BR002	HRSC030-□□-20 HRSC040-□□-20 HRSC050-□□-20 HRSC060-□□-20



⑤ Bypass Piping Set

When the circulating fluid goes below the rated flow (7 l/min for the HRSC012, 018, 024, 030, 040 and 23/28 l/min for the HRSC 0 5 0 , 0 6 0), cooling capacity will be reduced and the temperature stability will be badly affected. In such a case, use the bypass piping set. A high-pressure pump is also available.


Part no.	Applicable model
	HRSC012-□□-20
HRS-BP001	HRSC018-□□-20
HN3-BPUUI	HRSC024-□□-20
	HRSC030-□□-20

Parts List

No.	Description	Fluid contact material	Qty.
	Bypass tube	PFA	1
10	Bypass tube (Part no.: TL0806)	FFA	(Approx. 700 mm)
2	Outlet piping (With ball valve)	Stainless steel	1
3	Return port piping	Stainless steel	1
4	Nipple (Size: 1/2)	Stainless steel	2

Part no.	Applicable model
	HRSC040-□□-20
HRS-BP004	HRSC050-□□-20
	HRSC060-□□-20


No.	Description	Fluid contact material	Qty.
1	Hose	PVC	1 (Approx. 700 mm)
2	Outlet piping (With ball valve)	Stainless steel	1
3	Return port piping	Stainless steel	1
4	Nipple (Size: 1/2)	Stainless steel	2
(5)	Hose band	_	2

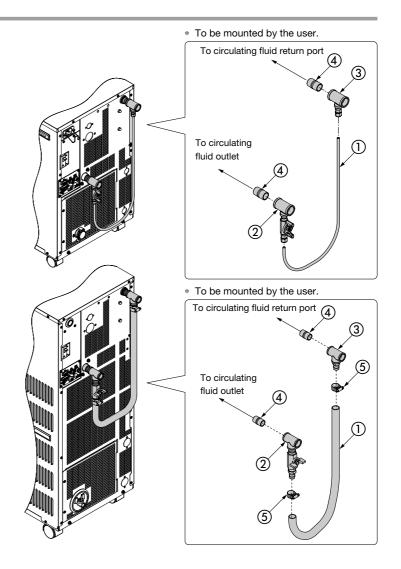

6 Power Supply Cable


■ For single-phase 200 VAC type

Part no.	Applicable model
	HRSC012-□□-20
HRR-CA001	HRSC018-□□-20
	HRSC024-□□-20
	HRSC030-□□-20



Part no.	Applicable model
HRS-CA004	HRSC040-□□-20 HRSC050-W□-20 HRSC060-W□-20

^{*} Not available for the HRSC050/060-A \square -20. To be prepared by the user.




⑦ DI Filter Set

It is possible to retain the level of electric resistance and electric conductivity by flowing the circulating through the ion replacement resin (DI filter). The set parts are in order to install DI filter to bypass circuit and flow the fixed rate of the circulating fluid to DI filter. It is not to control the value of electric resistance and electric conductivity. (Replacement cartridge: HRS-DF001)

■ Stainless steel type

Suitable for locations with dusty atmospheres.

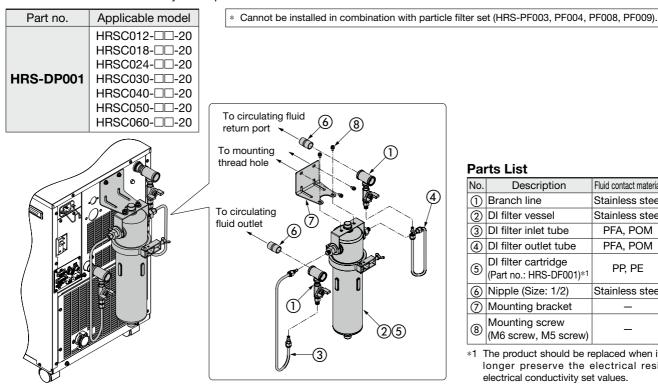

Parts List


. u.	to Elot		
No.	Description	Fluid contact material	Qty.
1	Branch line	Stainless steel	2
2	DI filter vessel	Stainless steel	1
3	DI filter inlet tube	PFA, POM	1
4	DI filter outlet tube	PFA, POM	1
(5)	DI filter cartridge (Part no.: HRS-DF001)*1	PP, PE	1
6	Nipple (Size: 1/2)	Stainless steel	2
7	Mounting bracket	_	1
8	Mounting screw (M6 screw, M5 screw)	_	2 pcs. each

*1 The product should be replaced when it can no longer preserve the electrical resistivity/ electrical conductivity set values.

■ Resin type

Lightweight and compact

Can be installed in combination with the HRS-PF001, PF002.

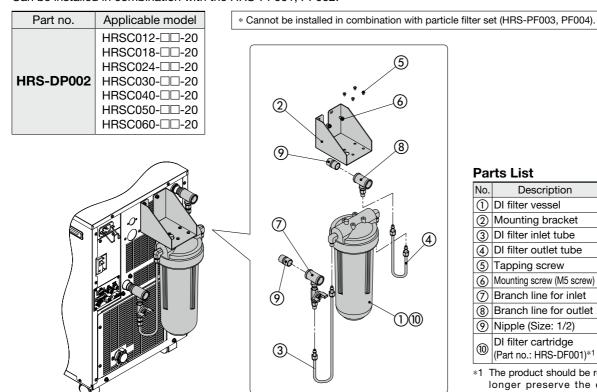

Pai	rts List		
No.	Description	Fluid contact material	Qty.
1	DI filter vessel	PC, PP	1
2	Mounting bracket	_	1
3	DI filter inlet tube	PFA, POM	1
4	DI filter outlet tube	PFA, POM	1
(5)	Tapping screw	_	4
6	Mounting screw (M5 screw)	_	2
7	Branch line for inlet	Stainless steel	1
8	Branch line for outlet	Stainless steel	1
9	Nipple (Size: 1/2)	Stainless steel	2
10	DI filter cartridge (Part no.: HRS-DF001)*1	PP, PE	1

^{*1} The product should be replaced when it can no longer preserve the electrical resistivity/ electrical conductivity set values.

8 Electric Conductivity Sensor Set/Electric Conductivity Control Set

This product can be used to display, maintain, and control the electric conductivity of the circulating fluid (Deionised water). The function differs according to the model (Refer to the table below). Refer to the Operation Manual for details.

Part no.	Applicable model
	HRSC012-□□-20
	HRSC018-□□-20
HRS-DI008	HRSC024-□□-20
	HRSC030-□□-20
HRS-DI011	HRSC040-□□-20
	HRSC050-□□-20
	HRSC060-□□-20
	HRSC012-□□-20
HRS-DI009	HRSC018-□□-20
HK2-DI009	HRSC024-□□-20
	HRSC030-□□-20

List of Function

Optional accessories	I DESCRIPTION	Electric conductivity display*1, *2	Electric conductivity maintenance	Electric conductivity control	Bypass*3
HRS-DI008	Electric conductivity sensor set	0	×	×	×
HRS-DI009	Electric conductivity control set	0	0	0	0
HRS-DI011	Electric conductivity control set	0	0	0	X


- *1 Display range is 2 to 48 µS/cm.
- *2 Readout using serial communications (RS-485/RS-232C) can be performed.
- *3 This function is dedicated for the HRS-BP001 and cannot be used for the HRSC040/050/060.

Specifications


	Electric conductivity sensor set	Electric conductivity control set	
Measurement range of electric conductivity	2.0 to 48.0 μS/cm		
Set range of electric conductivity target	_	5.0 to 45.0 μS/cm	
Set range of electric conductivity hysteresis	_	2.0 to 10.0 μS/cm	
Operating temperature range (Circulating fluid temperature)	ure) 5 to 60 °C		
Operating pressure range	0.5 MPa or less		
Current consumption*1	100 mA or less	400 mA or less	
Installation environment	Indoors		

^{*1} The allowable current of HRSC 24 VDC devices will be reduced.

[Mounting example: HRSC012-A-20 + HRS-DI008]

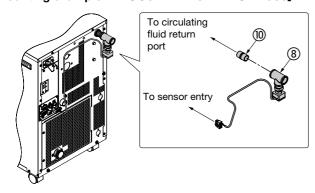

[Mounting example: HRSC012-A-20 + HRS-DI009]

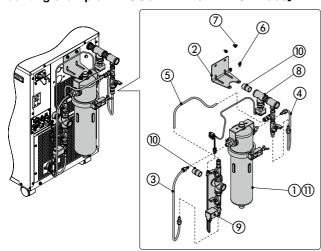


No.	Description	Fluid contact	Qty.			
INO.	Description	material	DI008	DI009	DI011	
(1)	DI filter vessel	Stainless steel	_	1	_	
\Box	Di liller vesser	PC, PP	_	_	1	
2	Mounting bracket	_	_	1	1	
3	DI filter inlet tube	PFA, POM	_	1	1	
4	DI filter outlet tube	PFA, POM	_	1	1	
(5)	Bypass tube	PFA	_	1	_	
6	Mounting screw (M6 screw)	_	_	2	_	
7	Mounting screw (M5 screw)	_	_	2	6	
8	Electric conductivity sensor	Stainless steel, PPS	1	1	1	
9	Solenoid valve for control	Stainless steel, EPDM	_	1	1	
10	Nipple (Size: 1/2)	Stainless steel	1	2	2	
11)	DI filter cartridge (Part no.: HRS-DF001)*1	PP, PE	_	1	1	

^{*1} The product should be replaced when it can no longer preserve the electrical conductivity set value.




Particle Filter Set

This set can be used to remove foreign matter from the circulating fluid.



■ For circulating fluid outlet [Used to protect your tool]


Part no.	Applicable model
HRS-PF008 (Element length) L = 125 mm	HRSC012-□□-20 HRSC040-□□-20 HRSC018-□□-20 HRSC050-□□-20 HRSC024-□□-20 HRSC030-□□-20
HRS-PF009 (Element length) L = 250 mm	HRSC050-□□-20 HRSC060-□□-20

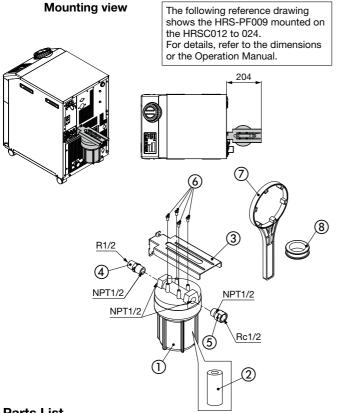

■ For circulating fluid return port [Used to protect thermo-chiller]

If foreign matter such as scales in the piping enter the circulating fluid, this may cause the pump to malfunction. Therefore, it is strongly recommended to install the particle filter set.


Part no.	Applicable model
HRS-PF003 (Element length) L = 125 mm	HRSC012-□□-20 HRSC040-□□-20 HRSC018-□□-20 HRSC050-□□-20 HRSC030-□□-20
HRS-PF004 (Element length) L = 250 mm	HRSC050-□□-20 HRSC060-□□-20

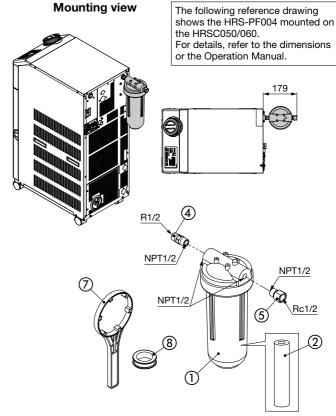

	di to List					
No.	Model	Description	Fluid contact material	Qty.	Note	
1	_	Body	PP	1	_	
	EJ202S-005X11	Element (Length L = 125 mm) Element (Length L = 250 mm)		1	For HRS-PF008/003	The product should be re
	EJ202S-075X11		PP/PE	1	FOI HN3-PF000/003	The product should be re-
2	EJ302S-005X11		PP/PE	1	For HRS-PF009/004	drop reaches 0.1 MPa.
	EJ302S-075X11	- Element (Length L = 250 mm)		1	FOI HN3-PF009/004	Trop reacties 0.1 MFa.
3	_	Particle filter bracket	_	1	For HRS-PF008/009	
4	_	Nipple	Stainless steel	1	Conversion from R to NPT	
(5)	_	Extension piece	Stainless steel	1	Conversion from NPT to Rc	
6	_	Tapping screw	_	4	_	
7	_	Handle	_	1	When -H is selected	
8	_	Sealant tape	PTFE	1	_	


(10) Drain Pan Set (With Water Leakage Sensor)

Drain pan for the thermo-chiller. Liquid leakage from the thermo-chiller can be detected by mounting the attached water leakage sensor. Anchor bolt (M 8) suitable for the flooring material should be prepared separately by the user. The current consumption of this product is 25 mA. (Therefore, the allowable current of HRSC 24 VDC devices will be reduced by 25 mA.)

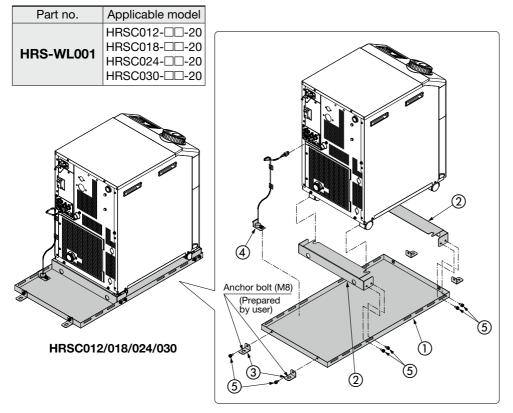

Parts List

. u. to =10t		
No.	Description	
1	Drain pan	
2	Thermo-chiller fixing bracket (2 pcs.)	
3	Drain pan fixing bracket (4 pcs.)	
4	Water leakage sensor	
(5)	Bracket fixing screw (M6 screw, 12 pcs.)	

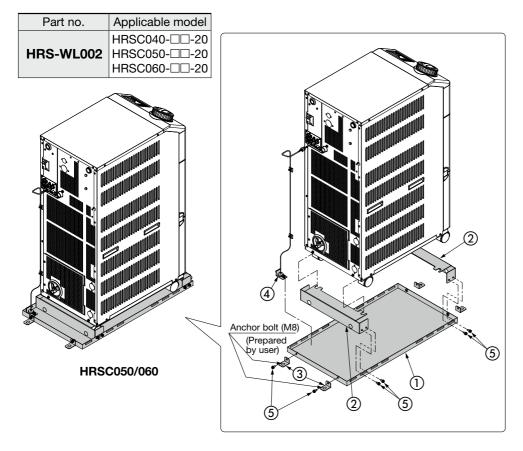

<u>. u.</u>	to Elot
No.	Description
1	Drain pan
2	Thermo-chiller fixing bracket (2 pcs.)
3	Drain pan fixing bracket (4 pcs.)
4	Water leakage sensor
(5)	Bracket fixing screw (M6 screw, 12 pcs.)


11) Replacement Type Dustproof Filter Set

A disposable dustproof filter is mounted instead of the dustproof net on the front panel.

Part no.	Applicable model
HRS-FL001	HRSC012-A□-20 HRSC018-A□-20 HRSC024-A□-20

Parts List

No.	Description	Part no.	Note
1)	Replacement type dustproof filter set	HRS-FL001	A front panel with hook-and-loop fastener for holding the filter, 5 filters are included. (No dustproof net is included.)
2	Replacement type dustproof filter	HRS-FL002	5 filters per set Size: 300 x 370

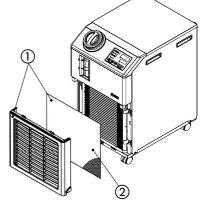


(2) Filter for Circulating Fluid Fill Port

Prevents foreign matter from entering the tank when supplying the circulating fluid. Can be used just by fitting into the circulating fluid fill port.

■ Filter for circulating fluid fill port HRS-PF007

Material	Stainless steel 304, Stainless steel 316
Mesh size	200

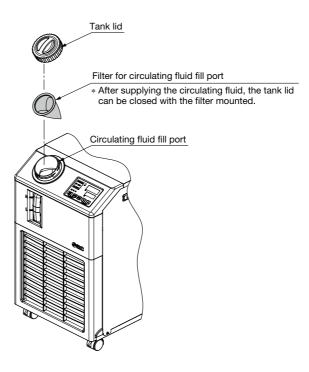

Non F-Gas (CO₂ Refrigerant)

Circulating Fluid Temperature Controller Refrigerated Thermo-chiller

HRSC090 Series

Power consumption reduced by 49 %*1
Outstanding energy saving due to the triple inverter!



RoHS

GWP = 1 Compliant with each country's refrigerant regulations

Air transport possible







Cooling capacity 9.5 kw

Temperature stability ±0.1 °C (When a load is stable)

Set temperature range $5 \, ^{\circ} \text{c}$ to $40 \, ^{\circ} \text{c}$

Compact, Space saving

Compatible with power supplies in Europe, Asia, Oceania, and North, Central, and South America

3-phase 380Y/220 to 415Y/240 VAC (50 Hz) 3-phase 380Y/220 to 480Y/277 VAC (60 Hz)

Earth leakage breaker (Standard)

Low-noise design Max. 67 dB

Max. ambient temperature 45 °c

Indoor use

- *1 Compared with the non-inverter chiller Conditions: Ambient temperature: 32 °C, Circulating fluid temperature: 20 °C, Circulating fluid flow rate: 35 l/min@0.3 MPa, 0 kW load: 50 %, 9.5 kW load: 50 %
- *2 For water-cooled type, a proportional Valve is used for the facility water flow control instead of a fan.



CONTENTS

HRSC090 Series



Non F-Gas (CO₂ Refrigerant) Thermo-chiller HRSC090 Series

How to Order/Specifications					
Air-cooled 400 Vp. 31					
Water-cooled 400 Vp. 32					
Cooling Capacityp. 33					
Pump Capacityp. 33					
Dimensionsp. 34					
Options					
With Automatic Fluid Fill Functionp. 35					

Optional Accessories

(1) Piping Conversion Fittingp	. 36
② Bypass Piping Setp	. 36
③ Electric Conductivity Control Setp	. 37
Particle Filter Setp	. 37
⑤ Filter for Circulating Fluid Fill Portp	. 38
6 Drain Pan Set (With Water Leakage Sensor) ······p	. 38

Cooling Capacity Calculation


Required Cooling Capacity Calculationp. 51
Precautions on Cooling Capacity Calculationp. 52
Circulating Fluid Typical Physical Property Valuesp. 52



Non F-Gas (CO₂ Refrigerant) Thermo-chiller Air-cooled 400 V Type

HRSC090 Series



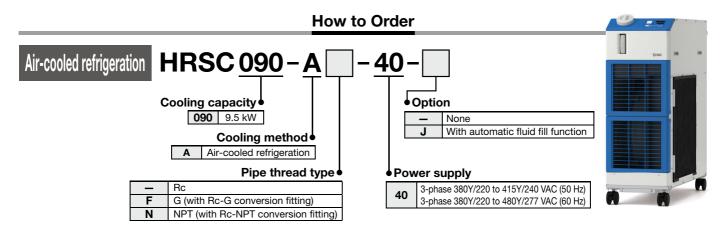

Specifications

	M	lodel		HRSC090-A-40
Cooling method				Air-cooled refrigeration
Refrigerant				R744 (CO ₂ , GWP: 1)
Refrigerant charge [kg]				0.83
Control method				PID control
ient temperatur	e/Humidity/	Altitude/Installation env	/ironment*1, 10	Temperature: 5 to 45 °C, Humidity: 30 to 70 %, Altitude: less than 3000 m, Environment: Indoors
Circulating fluid*2				Tap water, 15% Ethylene glycol aqueous solution, Deionised water
Set temperature range*1 [°C]			[°C]	5 to 40
Cooling ca	apacity*	3, 10	[kW]	9.5
Heating ca	apacity*	4	[kW]	2.5
Temperatu	ıre stabi	lity* ⁵	[°C]	±0.1
D	Rated flow (Outlet)*6 [I/		[l/min]	45 (0.5 MPa)
	Maximum flow rate		[l/min]	60
,			[m]	50
Settable p	ressure	range*7	[MPa]	0.1 to 0.5
Minimum (operating	g flow rate*8	[l/min]	20
Settable pressure range*7 [MPa] Minimum operating flow rate*8 [I/min] Tank capacity [L]			[L]	Approx.18
Circulating fluid outlet, circulating fluid return port			return port	Rc1 (Symbol F: G1, Symbol N: NPT1)
Tank drain	port			Rc1/4 (Symbol F: G1/4, Symbol N: NPT1/4)
Fluid contact material				Stainless steel, Copper (Heat exchanger brazing), Brass, Bronze, Carbon, Ceramic, PE, PVC, POM, PTFE, PP, PA, NBR, EPDM, FKM
Power supply				3-phase 380Y/220 to 415Y/240 VAC (50 Hz) Allowable voltage range ±10 % (No continuous voltage fluctuation) 3-phase 380Y/220 to 480Y/277 VAC (60 Hz) Allowable voltage range +4 %, -10 % (Max. voltage less than 500Y/289 V and no continuous voltage fluctuation)
Earth*8 leak	kage	Rated current	[A]	20
	•	Sensitivity of leak curr	rent [mA]	30
Rated ope	rating c	urrent*5	[A]	9.5
Rated power consumption*5 [kW (kVA)]			[kW (kVA)]	6.4 (6.8)
se level (Fro	ont 1 m/H	leight 1 m)*5	[dB (A)]	67
Accessories				Alarm code list stickers 2 pcs. (English 1 pc./Japanese 1 pc.), Operation Manual (for installation/operation) 2 pcs. (English 1 pc./Japanese 1 pc.), Y-strainer (40 meshes) 25A, Barrel nipple 25A, Anchor bolt fixing brackets 2 pcs. (including 4 M10 bolts)*11
ight*9			[kg]	Approx. 137
	rigerant rigerant criteria methor introl methor ient temperatur Circulating Set temper Cooling criteria methor Heating criteria methor Pump capacity Settable p Minimum Tank capa Circulating Tank drain Fluid cont Power sup Earth*8 leal breaker (Str Rated ope Rated power sessories	coling method rigerant rigerant charge ntrol method ient temperature/Humidity/ Circulating fluid*2 Set temperature racooling capacity* Heating capacity* Temperature stabing apacity* Temperature stabing apacity Rated from Maximum operating fluid outled trank drain port Fluid contact mater Power supply Earth*8 leakage breaker (Standard) Rated operating capacity Capacity Circulating fluid outled trank drain port Fluid contact mater Rated from the fluid contact materials and t	rigerant rigerant charge ntrol method lent temperature/Humidity/Altitude/Installation em Circulating fluid*2 Set temperature range*1 Cooling capacity*4 Temperature stability*5 Pump capacity Rated flow (Outlet)*6 Maximum flow rate Maximum pump head Settable pressure range*7 Minimum operating flow rate*8 Tank capacity Circulating fluid outlet, circulating fluid Tank drain port Fluid contact material Power supply Earth*8 leakage breaker (Standard) Fated operating current*5 Rated power consumption*5 se level (Front 1 m/Height 1 m)*5	poling method rigerant rigerant charge [kg] ntrol method rent temperature/Humidity/Altitude/Installation environment*1,10 Circulating fluid*2 Set temperature range*1 [°C] Cooling capacity*3,10 [kW] Heating capacity*4 [kW] Temperature stability*5 [°C] Pump capacity Maximum flow rate [l/min] Maximum flow rate [l/min] Maximum pump head [m] Settable pressure range*7 [MPa] Minimum operating flow rate*8 [l/min] Tank capacity [L] Circulating fluid outlet, circulating fluid return port Tank drain port Fluid contact material Power supply Earth*8 leakage breaker (Standard) Rated operating current*5 [A] Rated power consumption*5 [kW (kVA)] selevel (Front 1 m/Height 1 m)*5 [dB (A)]

- *1 Use a 15% ethylene glycol aqueous solution if operating in a place where the ambient temperature and/or circulating fluid temperature is 10 °C or less.
- Use fluid in condition below as the circulating fluid.

Tap water: please refer to "Specific Product Precautions". (JRA GL-02-1994)

15% ethylene glycol aqueous solution: diluted by tap water in condition above without any additives such as antiseptics. Deionised water: Electric conductivity 1 μ S/cm or higher (Electric resistivity 1 $M\Omega$ -cm or lower)

*3 ① Ambient temperature: 32 °C, ② Circulating fluid: Tap water, ③ Circulating fluid temperature: 20 °C, ④ Circulating fluid flow rate: Rated flow, ⑤ Power supply: 400 VAC *4 ① Ambient temperature: 32 °C, ② Circulating fluid: Tap water, ③ Circulating fluid flow rate: Rated flow, ④ Power supply: 400 VAC *5 ① Ambient temperature: 32 °C, ② Circulating fluid: Tap water, ③ Circulating fluid temperature: 20 °C, ④ Load: Same as the cooling capacity,


⑤ Circulating fluid flow rate: Rated flow, ⑥ Power supply: 400 VAC, ⑦ Piping length: Shortest

- *6 The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20 $^{\circ}\text{C}$
- With the pressure control mode by inverter. When the pressure control mode is not used, the pump power frequency set mode can be used.
- *8 Fluid flow rate to maintain the cooling capacity and the temperature stability. If the actual flow rate is lower than this, install a bypass piping.

*9 Weight in the dry state without circulating fluids

- *10 If the product is used at an altitude of 1000 meters or higher, the maximum allowable ambient temperature and the cooling capacity decrease. For details, refer to the
- *11 The anchor bolt fixing brackets (including 4 M10 bolts) are used for fixing to wooden skids when packaging the thermo-chiller. No anchor bolt is included.

Non F-Gas (CO₂ Refrigerant) Thermo-chiller Water-cooled 400 V Type (€ ੫੬ **HRSC090** Series

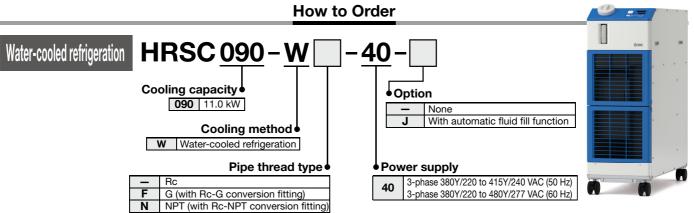

Specifications

Model			odel		HRSC090-W-40
Cooling method					Water-cooled refrigeration
Refrigerant					R744 (CO ₂ , GWP: 1)
Refrigerant charge [kg]				[kg]	1.07
Control method					PID control
Ambient temperature/Humidity/Altitude/Installation environment*1			/Altitude/Installation e	environment*1	Temperature: 5 to 45 °C, Humidity: 30 to 70 %, Altitude: less than 3000 m, Environment: Indoors
	Circulating fluid*2				Tap water, 15% Ethylene glycol aqueous solution, Deionised water
	Set temperature range*1 [°C]			[°C]	5 to 40
	Cooling capacity*3 [kW			[kW]	11.0
Ε	Heating capacity*4 [kW]			[kW]	2.5
system	Temperatu	ıre stabil	lity* ⁵	[°C]	±0.1
s	D	Rated fl	low (Outlet)*6	[l/min]	45 (0.5 MPa)
fluid	Pump capacity	Maximu	ım flow rate	[l/min]	60
Į Ę	capacity	Maximu	ım pump head	[m]	50
ij	Settable p			[MPa]	0.1 to 0.5
Circulating	Minimum o	operating	g flow rate*8	[l/min]	20
ರ	Tank capa	city		[L]	Approx. 18
Ö			t, circulating fluid	return port	Rc1 (Symbol F: G1, Symbol N: NPT1)
	Tank drain port				Rc1/4 (Symbol F: G1/4, Symbol N: NPT1/4)
	Fluid contact material				Stainless steel, Copper (Heat exchanger brazing), Brass, Bronze, Carbon, Ceramic, PE, PVC, POM, PTFE, PP, PA, NBR, EPDM, FKM
em	Temperature range [°C]			[°C]	10 to 40
),st	Pressure range [MPa]			[MPa]	0.3 to 0.5
ter	Required f	low		[l/min]	25
wa	Facility wa	ter press	sure differential	[MPa]	0.3 or more
Facility water system	Port size				Rc1/2 (Symbol F: G1/2, Symbol N: NPT1/2)
Fac	Fluid contact material				Stainless steel, Copper (Heat exchanger brazing), EPDM
al system	Power sup	oply			3-phase 380Y/220 to 415Y/240 VAC (50 Hz) Allowable voltage range ±10 % (No continuous voltage fluctuation) 3-phase 380Y/220 to 480Y/277 VAC (60 Hz) Allowable voltage range +4 %, -10 % (Max. voltage less than 500Y/289 V and no continuous voltage fluctuation)
ectrical	Earth leaka		Rated current	[A]	20
<u>e</u>			Sensitivity of leak curr	rent [mA]	30
Ē	Rated operating current*5 [A]				9.2
				[kW (kVA)]	6.2 (6.6)
Noi	se level (Fro	ont 1 m/H	leight 1 m)	[dB (A)]	65
	Accessories				Alarm code list stickers 2 pcs. (English 1 pc./Japanese 1 pc.), Operation Manual (for installation/operation) 2 pcs. (English 1 pc./Japanese 1 pc.), Y-strainer (40 meshes) 25A, Barrel nipple 25A, Anchor bolt fixing brackets 2 pcs. (including 4 M10 bolts)*10
We	ight*9			[kg]	Approx. 135
.4 I	I 1 CO/ -1	b 1 1			ting in a place where the ambient temperature and/or circulating fluid temperature is 10 °C or less

- *1 Use a 15% ethylene glycol aqueous solution if operating in a place where the ambient temperature and/or circulating fluid temperature is 10 °C or less.

*2 Use fluid in condition below as the circulating fluid. Tap water: please refer to "Specific Product Precautions". (JRA GL-02-1994)

lap water: please refer to "Specific Product Precautions". (JRA GL-02-1994)
15% ethylene glycol aqueous solution: diluted by tap water in condition above without any additives such as antiseptics.
Deionised water: Electric conductivity 1 μS/cm or higher (Electric resistivity 1 MΩ·cm or lower)
3 ① Facility water temperature: 32 °C, ② Circulating fluid: Tap water, ③ Circulating fluid temperature: 20 °C, ④ Circulating fluid flow rate: Rated flow, ④ Power supply: 400 VAC
4 ① Facility water temperature: 32 °C, ② Circulating fluid: Tap water, ③ Circulating fluid flow rate: Rated flow, ④ Power supply: 400 VAC
5 ① Facility water temperature: 32 °C, ② Circulating fluid: Tap water, ③ Circulating fluid temperature: 20 °C, ④ Load: Same as the cooling capacity, ⑤ Circulating fluid flow rate: Rated flow, ⑥ Power supply: 400 VAC, ⑦ Piping length: Shortest
6 The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20 °C
7 With the pressure control mode by inverter. When the pressure control mode is not used, the pump power frequency set mode can be used.
8 Eluid flow rate in maintain the cooling capacity, and the temperature stapility. If the actual flow rate is lower than this install a bypass pining.

- *8 Fluid flow rate to maintain the cooling capacity and the temperature stability. If the actual flow rate is lower than this, install a bypass piping.
 *9 Weight in the dry state without circulating fluids
- *10 The anchor bolt fixing brackets (including 4 M10 bolts) are used for fixing to wooden skids when packaging the thermo-chiller. No anchor bolt is included.




HRSC090 Series


Cooling Capacity

* If the product is used at an altitude of 1000 meters or higher, the maximum allowable ambient temperature and the cooling capacity decrease. For details, refer to the operation manual.

HRSC090-A□-40-□

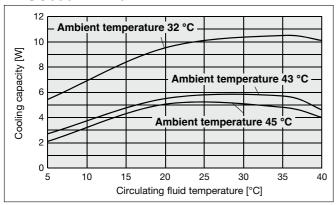


HRSC090-W□-40-□

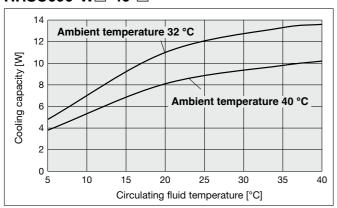

Pump Capacity


HRSC090-□□-40-□

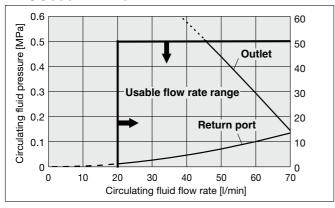

⚠ Caution

Mechanical Seal Pump


The pump used for the thermo-chiller HRSC090 series uses a mechanical seal with the fixed ring and rotary ring used for the shaft seal part. If foreign matter enter the gap between the seals, this may cause a trouble such as leakage from the seal part or pump lock. Therefore, it is strongly recommended to install the particle filter in the return piping of the chiller.

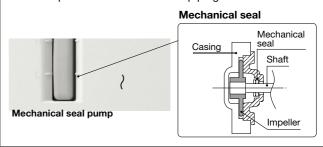



Dimensions

HRSC090-□-40

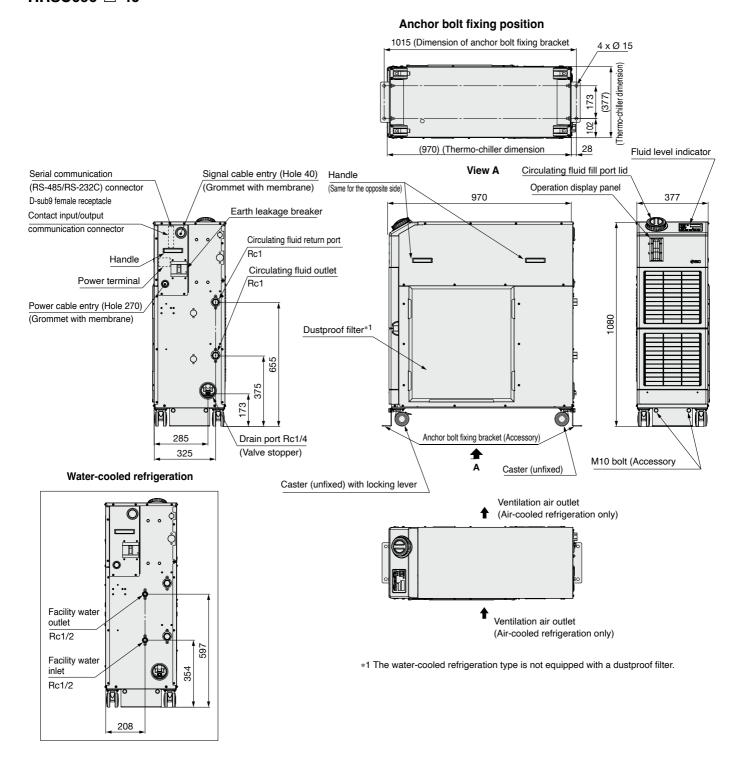

Accessory: Y-strainer mounting view

* Mount it by yourself on the circulating fluid return port.

Circulating fluid return port Rc1

Flow direction

Y-strainer
(Accessory

Barrel nipple (25A)
(Accessory

(Accessory

HRSC090 Series Options

 Options have to be selected when ordering the thermo-chiller.
 It is not possible to add them after purchasing the unit.




With Automatic Fluid Fill Function

HRSC090-□□-40-<u>J</u>

With automatic fluid fill function

By installing this at the automatic fluid fill port, the circulating fluid can be automatically supplied to the product using a built-in solenoid valve for a water fill while the circulating fluid is decreasing.

Applicable model	HRSC090-□□-40-J
Fluid fill method	Built-in solenoid valve for automatic water fill
Fluid fill pressure [MPa]	0.2 to 0.5
Feed water temperature [°C]	5 to 40

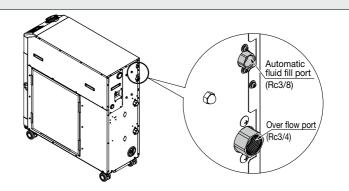

HRSC090 Series Optional Accessories

1 Piping Conversion Fitting


This is a fitting to change the port from Rc to G or NPT.


- · Circulating fluid outlet, Circulating fluid return port Rc1 → NPT1 or G1
- · Drain port Rc1/4 \rightarrow NPT1/4 or G1/4

(It is not necessary to purchase this when pipe thread type F or N is selected in "How to Order" since it is included in the product.)

Part no. Contents		Applicable model		
HRS-EP018	NPT thread conversion fitting set	HRSC090-A-40		
HRS-EP019	G thread conversion fitting set	HN3C090-A-40		

Part no.	Contents	Applicable model
HRS-EP022	NPT thread conversion fitting set	HRSC090-W-40
HRS-EP023	G thread conversion fitting set	HN3CU9U-W-4U

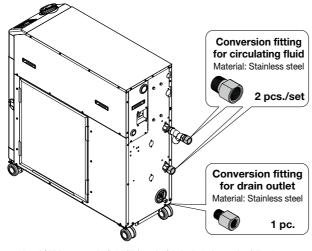

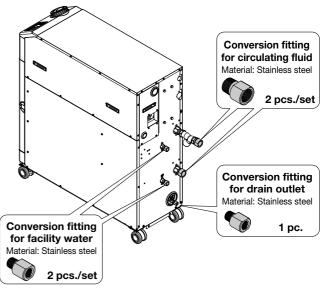

When option J (With automatic fluid fill function) is included, use the following part numbers.

- · Automatic fluid fill port Rc3/8 → NPT3/8 or G3/8
- · Overflow port Rc3/4 → NPT3/4 or G3/4
- * The conversion fittings for circulating fluid outlet/return port, drain port, facility water inlet/outlet (for water-cooled refrigeration) are also included.

Part no.	Contents	Applicable model
HRS-EP020	NPT thread conversion fitting set	HBSC000 A 40 I
HRS-EP021 G thread conversion fitting set		HN3C090-A-40-3

Part no.	Contents	Applicable model
HRS-EP024	NPT thread conversion fitting set	HBSCOOD W 40 I
HRS-EP025	G thread conversion fitting set	HU20030-M-40-2

② Bypass Piping Set


When the circulating fluid goes below the minimum operating flow rate (as shown below), cooling capacity will be reduced and the temperature stability will be badly affected. Use the bypass piping set to ensure a circulating fluid flow rate of the minimum operating flow rate or more.


Bypass Piping Set

Part no.	Applicable model	Minimum operating flow rate [I/min]
HRS-BP005	HRSC090-□□-40	20

Bypass Piping Set (Stainless Steel)

Part no.	Applicable model	Minimum operating flow rate [I/min]
HRS-BP011	HRSC090-□□-40	20

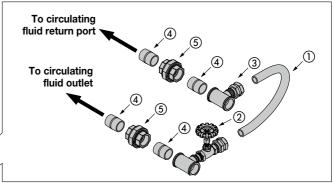

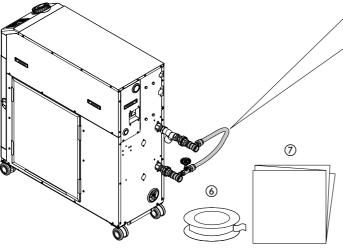


Parts List


ı aı	to List				
No. Decemention		Fluid contact	Otr.		
No.	Description	HRS-BP005	HRS-BP011	Qty.	
1	Hose (I.D.: 15 mm)	PVC	PVC	1 (Approx. 700 mm)	
2	Outlet piping assembly (With globe valve)	Stainless steel, Brass, Bronze	Stainless steel	1	
3	Return piping assembly	Stainless steel, Brass	Stainless steel	1	
4	Nipple (Size: 1 inch)	Stainless steel	Stainless steel	4	
(5)	Union (Size: 1 inch)	Stainless steel	Stainless steel	2	
6	Sealant tape	PTFE	PTFE	1	
(7)	Operation Manual	_	_	1	


③ Electric Conductivity Control Set


The set indicates and controls the electric conductivity of the circulating fluid. Refer to the Operation Manual for details.



Measurement range of electric conductivity	2.0 to 48.0 uS/cm
Set range of electric conductivity target	
Set range of electric conductivity hysteresis	
	5 to 60 °C
Operating temperature range (Circulating fluid temperature)	
Power consumption	400 mA or less

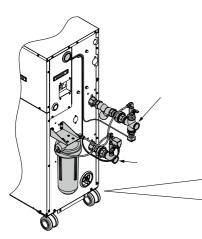

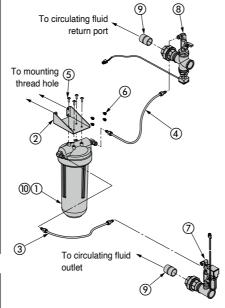

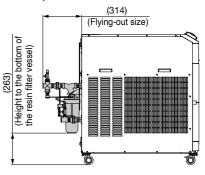

Parts List

DI filter vessel PC Mounting bracket DI filter inlet tube PFA, DI filter outlet tube PFA, Tapping screw (M5 screw) Mounting screw (M5 screw) DI control piping assembly Stainless DI sensor assembly Stainless					
Mounting bracket DI filter inlet tube PFA, DI filter outlet tube Tapping screw (M5 screw) Mounting screw (M5 screw) DI control piping assembly Stainless DI sensor assembly	ct material (Qty.			
3 DI filter inlet tube PFA, 4 DI filter outlet tube PFA, 5 Tapping screw (M5 screw) 6 Mounting screw (M5 screw) 7 DI control piping assembly Stainless (8 DI sensor assembly Stainless	PP	1			
DI filter outlet tube PFA, Tapping screw (M5 screw) Mounting screw (M5 screw) DI control piping assembly Stainless (8) DI sensor assembly Stainless	-	1			
(5) Tapping screw (M5 screw) (6) Mounting screw (M5 screw) (7) DI control piping assembly Stainless (8) DI sensor assembly Stainless	POM	1			
Mounting screw (M5 screw) DI control piping assembly Stainless DI sensor assembly Stainless	POM	1			
 DI control piping assembly Stainless DI sensor assembly Stainless 	-	4			
8 DI sensor assembly Stainless	-	4			
	eel, EPDM	1			
(Chainle (Cinc. 1 inch) Chainle	teel, PPS	1			
Nipple (Size: 1 inch) Stainle	s steel	2			
DI filter cartridge (Part no.: HRS-DF001)*1	PE	1			

1 The product should be replaced when it can no longer preserve the electrical conductivity set value.

4 Particle Filter Set

Removes foreign matter in the circulating fluid. If foreign matter such as scales in the piping enter the circulating fluid, this may cause the pump to malfunction. Therefore, it is strongly recommended to install the particle filter set. This set cannot be directly connected to the thermo-chiller. Install it in the user's piping system. For details, refer to the Operation Manual.

Particle Filter Set

HRS-PF005-ℍ

Accessory


Symbol	Accessory
_	None
Н	With handle


Fluid	Tap water
Max. operating pressure	0.65 MPa
Operating temperature range	5 to 35 °C
Nominal filtration accuracy	5 μm
Installation environment	Indoors

Parts List

No.	Description	Material	Qty.	Note
1	Body	PC, PP	1	_
2	Element*1	PP	1	_
3	Extension piece	Stainless steel	2	Conversion from NPT to Rc
4	Handle	_	1	When -H is selected
(5)	Sealant tape	PTFE	1	_

*1 The product should be replaced when the pressure drop reaches 0.1 MPa.

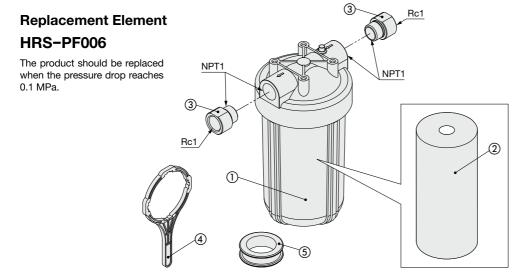

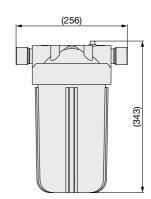


5 Filter for Circulating Fluid Fill Port

Prevents foreign matter from entering the tank when supplying the circulating fluid. Can be used just by fitting into the circulating fluid fill port.

■ Filter for circulating fluid fill port HRS-PF007


Material	Stainless steel 304, Stainless steel 316
Mesh size	200

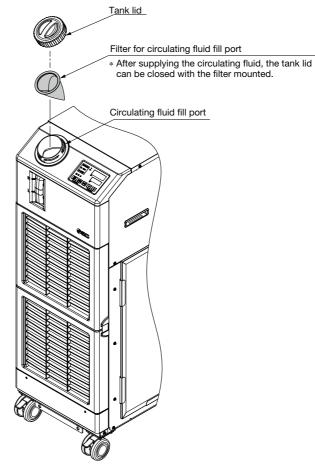

6 Drain Pan Set (With Water Leakage Sensor)

Drain pan for the thermo-chiller. Liquid leakage from the thermo-chiller can be detected by mounting the attached water leakage sensor. Align the drain pan with the hole in the bottom of the thermo-chiller for installation.

Part no.	Applicable model
HRS-WL003	HRSC090-□□-40

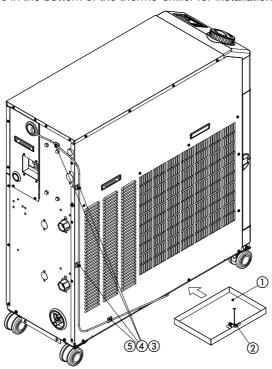

Parts	LIST
No.	Description
1	Drain pan
2	Water leakage sensor
3	Extension cable
4	Binding band (4 pcs.)
(5)	Cable fixture (4 pcs.)

Non F-Gas (CO₂ Refrigerant)

Circulating Fluid Temperature Controller Refrigerated Thermo-chiller

HRSC100 Series

Power consumption reduced by 45 %*1

Outstanding energy saving due to with the triple inverter!

RoHS

GWP = 1 Compliant with each country's refrigerant regulations









Cooling capacity 10 kw

Temperature stability ±0.1 °C (When a load is stable)

Compact, Space saving

Outdoor installation, Splashproof type (IPX4)*3

Compatible with power supplies in Europe, Asia, Oceania, and North, Central, and South America

3-phase 380Y/220 to 415Y/240 VAC (50 Hz) 3-phase 380Y/220 to 480Y/277 VAC (60 Hz)

Earth leakage breaker (Standard)

Low-noise design

Operating noise Max.

69 dE

Maintenance-free pump

A mechanical sealless immersion pump is used. No need to replace the seal \to Reduced maintenance labor

Ambient temperature 5 °C to 45 °C

(For the air-cooled type)

- *1 Compared with the non-inverter chiller Conditions: Ambient temperature: 32 °C, Circulating fluid temperature: 20 °C, Circulating fluid flow rate: 35 l/min@0.3 MPa, 0 kW load: 50 %, 10.5 kW load: 50 %
- *2 For water-cooled type, a proportional Valve is used for the facility water flow control instead of a fan.
- *3 For unexpected natural phenomena, such as stormy weather exceeding the IPX4 level, make sure to take additional protective measures.



CONTENTS

HRSC100 Series



Non F-Gas (CO₂ Refrigerant) Thermo-chiller HRSC100 Series

How to Order/Specifications	Optional Accessories
Air-cooled 400 Vp. 41	① Piping Conversion Fittingp. 47
Water-cooled 400 Vp. 42	② Caster Adjuster-foot Kit ·····p. 47
Cooling Capacityp. 43	③ Electric Conductivity Control Setp. 48
Pump Capacityp. 43	④ Bypass Piping Setp. 48
Dimensionsp. 44	⑤ Snow Protection Hood·····p. 49
	⑥ Particle Filter Setp. 50
Options	
With Caster Adjuster-footp. 46	Cooling Capacity Calculation
With Fluid Fill Portp. 46	Required Cooling Capacity Calculationp. 51
	Precautions on Cooling Capacity Calculationp. 52
	Circulating Fluid Typical Physical Property Valuesp. 52


Non F-Gas (CO2 Refrigerant) Thermo-chiller

panel is removed.)

Air-cooled 400 V Type

HRSC100 Series



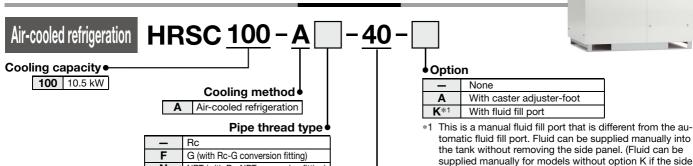

Power supply 3-phase 380Y/220 to 415Y/240 VAC (50 Hz) 3-phase 380Y/220 to 480Y/277 VAC (60 Hz)

NPT (with Rc-NPT conversion fitting)

40

Specifications

		Model		HRSC100-A-40		
Coolin	ng meth			Air-cooled refrigeration		
Refrig		ou .		R744 (CO ₂ , GWP: 1)		
	gerant cl	nargo	[kg]	0.73		
	ol meth		[kg]	PID control		
			nmont*1. 10	Temperature: 5 to 45 °C, Altitude: less than 3000 m, Environment: Indoors/Outdoors		
	Ambient temperature/Altitude/Installation environment*1, 10 Circulating fluid*2		niment. ", "	Tap water, 15 % Ethylene glycol aqueous solution, Deionised water		
		erature range*1	[°C]	1 , 3 1 ,		
		apacity*3	[kW]	5 to 35 10.5		
		apacity* ⁴	[kW]	2.5		
		apacity** ure stability*5	[°C]	2.5 +0.1		
	emperat	Rated flow (Outlet)*6	[l/min]	±0.1 45 (0.43 MPa)		
je Pu	ump	Maximum flow rate	[l/min]	43 (0.43 MPa) 120		
system ca	apacity	Maximum pump head		50		
	-44-1-1	oressure range*7		0.1 to 0.5		
		operating flow rate*8	[MPa] [l/min]	20		
5 T				25		
i ia	ank capa	luid outlet, circulating fluid re	[L]	Rc1 (Symbol F: G1, Symbol N: NPT1)		
		, ,	eturn port			
l ia	ank drai	•	[MDel	Rc3/4 (Symbol F: G3/4, Symbol N: NPT3/4) 0.2 to 0.5		
-		Supply side pressure range Supply side fluid temperatu		0.2 to 0.5 5 to 35		
	fluid fill			Rc1/2 (Symbol F: G1/2, Symbol N: NPT1/2)		
	system standard)	Automatic fluid fill por Overflow port	rτ	Rc1/2 (Symbol F: G1/2, Symbol N: NPT1/2) Rc1 (Symbol F: G1, Symbol N: NPT1)		
(31	italiualuj	Overtiow port	N4-4-1			
Fi	luid con	act material	Metal	Stainless steel, Copper (Heat exchanger brazing), Brass, Bronze		
\vdash			Resin	PTFE, PU, EPDM, PVC, NBR, POM, PE, NR, PBT		
system	ower su	pply		3-phase 380Y/220 to 415Y/240 VAC (50 Hz) Allowable voltage range ±10 % (No continuous voltage fluctuation) 3-phase 380Y/220 to 480Y/277 VAC (60 Hz) Allowable voltage range +4 %, -10 % (Max. voltage less than 500Y/289 V and no continuous voltage fluctuation)		
δ Ea	arth leak	age Rated currer	nt [A]	20		
B br	reaker (S	•	ent [mA]	30		
ectrical br	ated op	erating current*5	[A]	8.5		
l ii Ra	Rated power consumption*5 [kW (kVA)]			5.6 (5.9)		
		nt 1 m/Height 1 m)*5	[dB (A)]	69		
Water	proof sp	ecification		IPX4		
	ssories			Alarm code list stickers 2 pcs. (English 1 pc./Japanese 1 pc.), Operation Manual (for installation/operation) 2 pcs. (English 1 pc./Japanese 1 pc.), Y-strainer (40 meshes) 25A, Barrel nipple 25A, Anchor bolt fixing brackets 2 pcs. (including 6 M8 bolts)*11		
Weigh	nt*9		[kg]	Approx. 191		
	ssories	ecincation	[kg]	Alarm code list stickers 2 pcs. (English 1 pc./Japanese 1 pc.), Operation Manual (for installation/operation) 2 pcs. (English 1 pc./Japanese 1 pc.),		

- Use a 15 % ethylene glycol aqueous solution if operating in a place where the ambient temperature and/or circulating fluid temperature is 10 °C or less.
- *2 Use fluid in condition below as the circulating fluid. Tap water: Standard of The Japan Refrigeration And Air Conditioning Industry Association (JRA GL-02-1994).

- 15% ethylene glycol aqueous solution: diluted by tap water in condition above without any additives such as antiseptics.

 Deionised water: Electric conductivity 1 μS/cm or higher (Electric resistivity 1 MΩ-cm or lower)

 ① Ambient temperature: 32 °C, ② Circulating fluid: Tap water, ③ Circulating fluid temperature: 20 °C, ④ Circulating fluid flow rate: Rated flow, ⑤ Power supply: 400 VAC

 ② Ambient temperature: 32 °C, ② Circulating fluid: Tap water, ③ Circulating fluid flow rate: Rated flow, ④ Power supply: 400 VAC

 ③ Ambient temperature: 32 °C, ② Circulating fluid: Tap water, ③ Circulating fluid temperature: 20 °C, ④ Load: Same as the cooling capacity, ⑤ Circulating fluid flow rate: Rated flow, ⑥ Power supply: 400 VAC, ⑦ Piping length: Shortest
- *6 The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20 °C
 *7 With the pressure control mode by inverter. When the pressure control mode is not used, the pump power frequency set mode can be used.
- *8 Fluid flow rate to maintain the cooling capacity and the temperature stability. If the actual flow rate is lower than this, install a bypass piping.
 *9 Weight in the dry state without circulating fluids
- *10 If the product is used at an altitude of 1000 meters or higher, the maximum allowable ambient temperature and the cooling capacity decrease. For details, refer to the
- *11 The anchor bolt fixing brackets (including 6 M8 bolts) are used for fixing to wooden skids when packaging the thermo-chiller. No anchor bolt is included.

Non F-Gas (CO₂ Refrigerant) Thermo-chiller

Water-cooled 400 V Type

HRSC100 Series

How to Order

Water-cooled refrigeration HRSC 100 - W Cooling capacity • Cooling method **100** 11.5 kW Water-cooled refrigeration

Pipe thread type Ro G (with Rc-G conversion fitting) 40 NPT (with Rc-NPT conversion fitting)

Power supply 3-phase 380Y/220 to 415Y/240 VAC (50 Hz) 3-phase 380Y/220 to 480Y/277 VAC (60 Hz) Option

- O Ptio	••
_	None
Α	With caster adjuster-foot
K *1	With fluid fill port

*1 This is a manual fluid fill port that is different from the automatic fluid fill port. Fluid can be supplied manually into the tank without removing the side panel. (Fluid can be supplied manually for models without option K if the side panel is removed.)

Specifications

		Mo	del		HRSC100-W-40
Co	oling meth	od			Water-cooled refrigeration
Ref	rigerant			R744 (CO ₂ , GWP: 1)	
Ref	rigerant c	harge		[kg]	1.04
Co	ontrol method PID control				
Amb	ient temperat	ure/Altitude	/Installation enviro	nment*1, 10	Temperature: 2 to 45 °C, Altitude: less than 3000 m, Environment: Indoors/Outdoors
	Circulatin	g fluid*2			Tap water, 15 % Ethylene glycol aqueous solution, Deionised water
	Set tempe	erature ra	ange*1	[°C]	5 to 35
Cooling capacity*3 [kW]		[kW]	11.5		
Heating capacity*4 [kW]		[kW]	2.5		
Temperature stability*5 [°C]		[°C]	±0.1		
Ē	Pump	Rated fl	ow (Outlet)*6	[l/min]	45 (0.43 MPa)
system	capacity	Maximu	m flow rate	[l/min]	120
sy	capacity	Maximu	m pump head	[m]	50
fluid	Settable	ressure	range*7	[MPa]	0.1 to 0.5
ı i	Minimum	perating	flow rate*8	[l/min]	20
ing	Tank capa	acity		[L]	25
Circulating	Circulating f	luid outlet,	circulating fluid re	turn port	Rc1 (Symbol F: G1, Symbol N: NPT1)
ıc	Tank drai	n port			Rc3/4 (Symbol F: G3/4, Symbol N: NPT3/4)
Ö	Automatic	Supply sid	le pressure range	[MPa]	0.2 to 0.5
	fluid fill	Supply sid	le fluid temperatu	re [°C]	5 to 35
	system	Automa	tic fluid fill por	t	Rc1/2 (Symbol F: G1/2, Symbol N: NPT1/2)
	(Standard)	Overflov	v port		Rc1 (Symbol F: G1, Symbol N: NPT1)
	Fluid con	last mat	riol	Metal	Stainless steel, Copper (Heat exchanger brazing), Brass, Bronze
	riulu con	lact mate	riai	Resin	PTFE, PU, EPDM, PVC, NBR, POM, PE, NR, PBT
em	Temperat	ure rang	е	[°C]	5 to 40
system	Pressure	range		[MPa]	0.3 to 0.5
ter (Required	flow		[l/min]	25
Facility water	Facility wa	ter press	ure differential	[MPa]	0.3 or more
ilit	Port size				Rc1 (Symbol F: G1, Symbol N: NPT1)
Fac	Fluid con	tact mate	erial		Stainless steel, Copper (Heat exchanger brazing), EPDM
system	Power su	pply			3-phase 380Y/220 to 415Y/240 VAC (50 Hz) Allowable voltage range ± 10 % (No continuous voltage fluctuation) 3-phase 380Y/220 to 480Y/277 VAC (60 Hz) Allowable voltage range +4 %, -10 % (Max. voltage less than 500Y/289 V and no continuous voltage fluctuation)
s	Earth leak		Rated curren		20
Electrical	breaker (Standard) Sensitivity of leak current [mA]		ent [mA]	30	
ctr	Rated operating current*5 [A]			7.7	
음	Rated po	wer cons	umption*5	[kW (kVA)]	5.0 (5.4)
Noi	se level (Fro	nt 1 m/He	eight 1 m)*5	[dB (A)]	61
Wa	terproof sp	ecificatio	n		IPX4
	cessories				Alarm code list stickers 2 pcs. (English 1 pc./Japanese 1 pc.), Operation Manual (for installation/operation) 2 pcs. (English 1 pc./Japanese 1 pc.), Y-strainer (40 meshes) 25A, Barrel nipple 25A, Anchor bolt fixing brackets 2 pcs. (including 6 M8 bolts)*11
We	ight*9			[kg]	Approx. 174
					providing in a place where the ambient temperature and/or sixellating fluid temperature is 10 °C or less

Use a 15 % ethylene glycol aqueous solution if operating in a place where the ambient temperature and/or circulating fluid temperature is 10 °C or less.

Use fluid in condition below as the circulating fluid.

Tap water: Standard of The Japan Refrigeration And Air Conditioning Industry Association (JRA GL-02-1994).

15 % ethylene glycol aqueous solution: diluted by tap water in condition above without any additives such as antiseptics.

Deionised water: Electric conductivity 1 μS/cm or higher (Electric resistivity 1 MΩ·cm or lower)

① Ambient temperature: 32 °C, ② C irculating fluid: Tap water, ③ Circulating fluid temperature: 20 °C, ④ Circulating fluid flow rate: Rated flow, ⑤ Power supply: 400 VAC

② Ambient temperature: 32 °C, ② Circulating fluid: Tap water, ③ Circulating fluid flow rate: Rated flow, ⑥ Power supply: 400 VAC

③ Ambient temperature: 32 °C, ② Circulating fluid: Tap water, ③ Circulating fluid temperature: 20 °C, ④ Load: Same as the cooling capacity, ⑥ Circulating fluid flow rate: Rated flow, ⑥ Power supply: 400 VAC, ⑦ Piping length: Shortest

The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20 °C

The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20 °C With the pressure control mode by inverter. When the pressure control mode is not used, the pump power frequency set mode can be used.

- *8 Fluid flow rate to maintain the cooling capacity and the temperature stability. If the actual flow rate is lower than this, install a bypass piping.

 *9 Weight in the dry state without circulating fluids

 *10 If the product is used at an altitude of 1000 meters or higher, the maximum allowable ambient temperature and the cooling capacity decrease. For details, refer to the operation manual.


 *11 The anchor bolt fixing brackets (including 6 M8 bolts) are used for fixing to wooden skids when packaging the thermo-chiller. No anchor bolt is included.





HRSC100 Series


Cooling Capacity

* If the product is used at an altitude of 1000 meters or higher, the maximum allowable ambient temperature and the cooling capacity decrease. For details, refer to the operation manual.



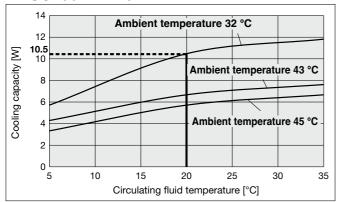




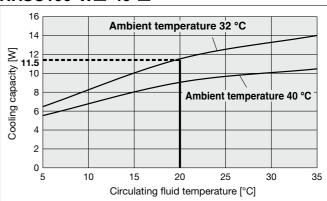


Pump Capacity

HRSC100-A□-40-□ HRSC100-W□-40-□

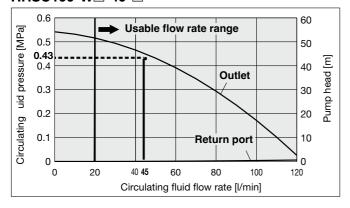

Dimensions

HRSC100-A-40 (Air-cooled 400 V type)

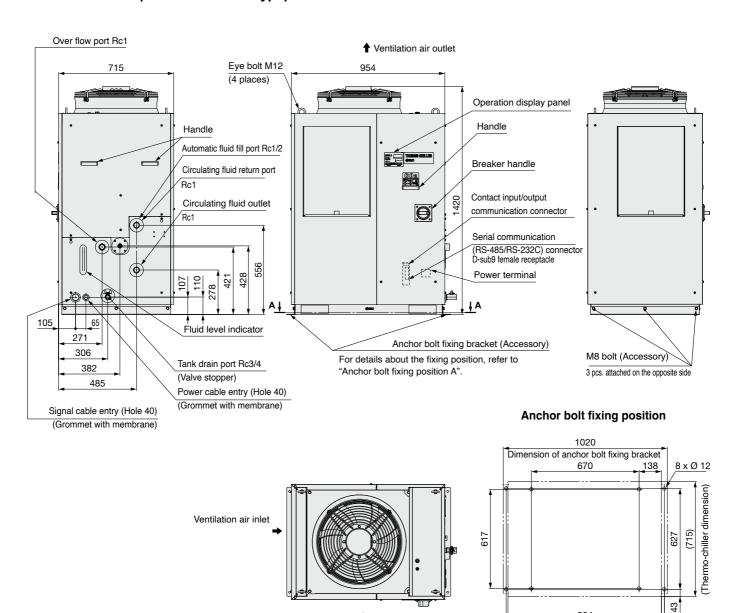

Ventilation air inlet



19

984

(954)


View A


(Thermo-chiller dimension

HRSC100 Series

Dimensions


HRSC100-W-40 (Water-cooled 400 V type)

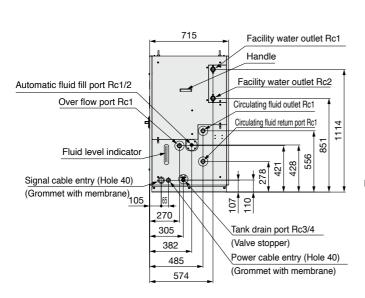

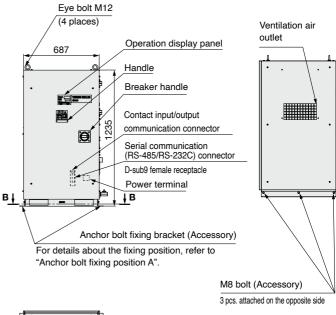




Anchor bolt fixing position B

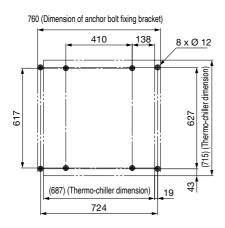

Accessory: Y-strainer mounting view

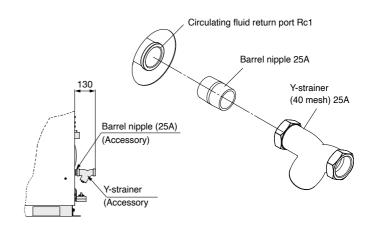

HRSC100 Series Options

 Options have to be selected when ordering the thermo-chiller.
 It is not possible to add them after purchasing the unit.



With Caster Adjuster-foot


HRSC100-□□-40-<u>A</u>

With caster adjuster-foot

Unfixed casters and adjuster feet stops are mounted.

Appliaghla madal	Di	Additional weight*1		
Applicable model	Α	В	С	[kg]
HRSC100-A□-□□-A	830	401	1538	Approx 10
HRSC100-W□-□□-A	570	401	1353	Approx. 18

*1 Refers to the amount of increase from the standard weight

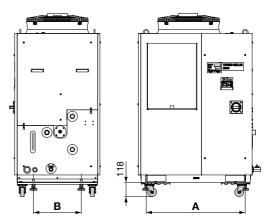



Option symbol

With Fluid Fill Port

HRSC100-□□-40-K

With fluid fill port

HRSC10040-K 271 609 Thread size: Gi 1/2 51 (With cap)	Applicable model	Dimension	[mm]	Option
#RSC100-□-40-K 271 609 51 (With cap) Fluid fill port Cap				[K: With fluid fill port] Thread size: G1 1/2
Fluid fill port	RSC100-□□-40-K	271	609	
port Cap				
Fluid fill port			Fluid fill port	Fluid fill port

SMC

HRSC100 Series Optional Accessories


1 Piping Conversion Fitting


This is a fitting to change the port from Rc to G or NPT.

- · Circulating fluid outlet, Circulating fluid return port, Overflow port Rc1 → NPT1 or G1
- · Drain port Rc3/4 → NPT3/4 or G3/4
- · Automatic fluid fill port Rc1/2 \rightarrow NPT1/2 or G1/2
- · Facility water inlet, Facility water outlet Rc1 → NPT1 or G1 (for HRS-EP015 or HRS-EP016)

(It is not necessary to purchase this when pipe thread type F or N is selected in "How to Order" since it is included in the product.)

Part no.	Contents	Applicable model
HRS-EP013	NPT thread conversion fitting set	HRSC100-A-40
HRS-EP014	G thread conversion fitting set	HN3C 100-A-40
HRS-EP015	NPT thread conversion fitting set	HRSC100-W-40
HRS-EP016	G thread conversion fitting set	HNSC 100-W-40

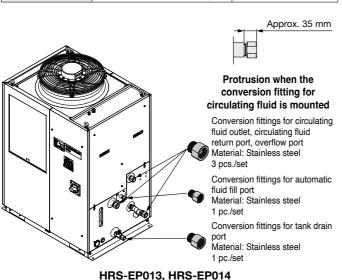

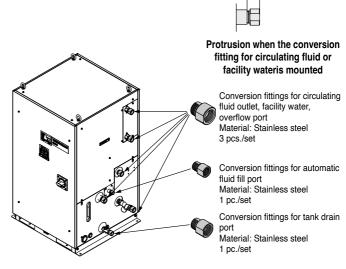

Approx. 35 mm


HRS-EP015, HRS-EP016

2 Caster Adjuster-foot Kit

This is a set of unfixed casters and adjuster feet stop.

When installed by user, it is necessary to lift the thermo-chiller by a forklift or sling work. Carefully read the procedure manual included with this kit before performing the installation.


Part no.	Applicable model	Dimension [mm]		Weight
Part 110.	Applicable model	Α	В	[kg]
HRS-KS002	HRSC100-A□-40	830	401	Δηρκον 10
HK5-K5002	HRSC100-W□-40	570	401	Approx. 18






Parts List

Description
Procedure manual
Caster adjuster-foot bracket (2 pcs.)
Fixing bolt (M8) (8 pcs.)









③ Electric Conductivity Control Set

The set indicates and controls the electric conductivity of the circulating fluid. Refer to the Operation Manual for details.

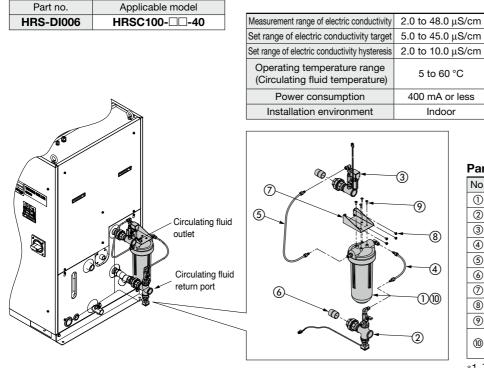

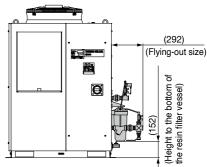

Parts List

No.	Description Fluid contact mater		Qty.
1	DI filter vessel	DI filter vessel PC, PP	
2	DI sensor assembly	Stainless steel, PPS	1
3	DI control piping assembly	Stainless steel, EPDM	1
4	DI filter outlet tube	PFA, POM	1
(5)	DI filter inlet tube	PFA, POM	1
6	Nipple (Size: 1 inch)	Stainless steel	2
7	Mounting bracket	_	1
8	Mounting screw (M5 screw)	_	4
9	Tapping screw (M5 screw)	_	4
10	DI filter cartridge (Part no.: HRS-DF001)*1	PP, PE	1

^{*1} The product should be replaced when it can no longer preserve the electrical conductivity set value.

④ Bypass Piping Set


When the circulating fluid goes below the minimum operating flow rate (as shown below), cooling capacity will be reduced and the temperature stability will be badly affected. Use the bypass piping set to ensure a circulating fluid flow rate of the minimum operating flow rate or more.

Bypass Piping Set

Part no.	Applicable model	Minimum operating flow rate [I/min]
HRS-BP005	HRSC100-□□-40	20

Bypass Piping Set (Stainless Steel)

Part no.	Applicable model	Minimum operating flow rate [l/min]
HRS-BP011	HRSC100-□□-40	20

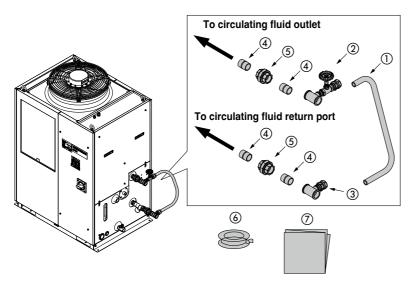

Parts List


No.	Description	Fluid conta	Otv	
INO.	Description	HRS-BP005	HRS-BP011	Qty.
1	Hose (I.D.: 15 mm)	PVC	PVC	1 (Approx. 700 mm)
2	Outlet piping assembly (With globe valve)	Stainless steel, Brass, Bronze	Stainless steel	1
3	Return piping assembly	Stainless steel, Brass	Stainless steel	1
4	Nipple (Size: 1 inch)	Stainless steel	Stainless steel	4
(5)	Union (Size: 1 inch)	Stainless steel	Stainless steel	2
6	Sealant tape	PTFE	PTFE	1
7	Operation Manual	_	_	1

HRSC100 Series


(5) Snow Protection Hood

Stainless steel snow protection hood for air-cooled chiller.

According to the mounting direction of the snow protection hood, the ventilation from the fan can be selected from four directions, front, rear, left and right.

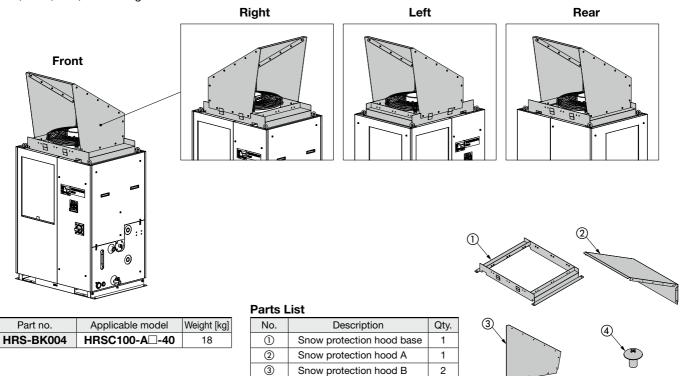

Assembly/Mounting screw

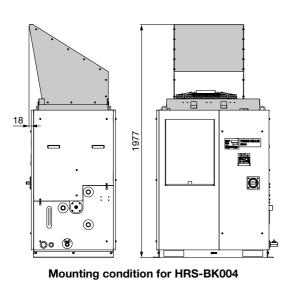


* This hood does not completely prevent snow from entering the inside of the chiller.

Optional Accessories **HRSC100** Series

6 Particle Filter Set

Removes foreign matter in the circulating fluid. This set cannot be directly connected to the thermo-chiller. Install it in the user's piping system. Refer to the Operation Manual for details.

Particle Filter Set



Fluid	Tap water	
Max. operating pressure	0.65 MPa	
Operating temperature range	5 to 35 °C	
Nominal filtration accuracy	5 μm	
Installation environment	Indoors	


Parts List


	No.	Description	Material	Qty.	Note
	1	Body	PC, PP	1	_
	2	Element*1	PP	1	_
	3	Extension piece	Stainless steel	2	Conversion from NPT to Rc
	4	Handle	_	1	When -H is selected
[(5)	Sealant tape	PTFE	1	_

^{*1} The product should be replaced when the pressure drop reaches 0.1 MPa.

Replacement Element HRS-PF006

The product should be replaced when the pressure drop reaches 0.1 MPa.

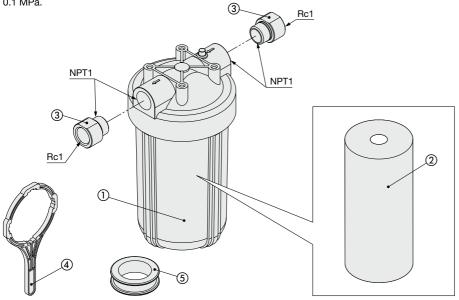

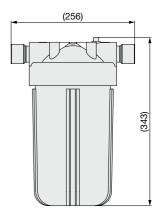

HRSC Series Cooling Capacity Calculation

Required Cooling Capacity Calculation

Example 1: When the heat generation amount in the user's equipment is known.

The heat generation amount can be determined based on the power consumption or output of the heat generating area — i.e. the area requiring cooling — within the user's equipment.*1

(1) Derive the heat generation amount from the power consumption.

Power consumption P: 7 [kW]

Q = P = 7 [kW]

Cooling capacity = Considering a safety factor of 20 %, **7 [kW] x 1.2 = |8.4 [kW]**

V: Power supply voltage

Power consumption

Q: Heat generation

② Derive the heat generation amount from the power supply output.

Power supply output VI: 8.8 [kVA]

 $Q = P = V \times I \times Power factor$

In this example, using a power factor of 0.85:

$$= 8.8 [kVA] \times 0.85 = 7.5 [kW]$$

Cooling capacity = Considering a safety factor of 20 %,

3 Derive the heat generation amount from the output.

Output (shaft power, etc.) W: 13 [kW]

$$Q = P = \frac{W}{Efficiency}$$

In this example, using an efficiency of 0.7:

$$=\frac{5.1}{0.7}=7.3$$
 [kW]

Cooling capacity = Considering a safety factor of 20 %,

Example 2: When the heat generation amount in the user's equipment is not known.

Obtain the temperature difference between inlet and outlet by circulating the circulating fluid inside the user's equipment.

Heat generation amount by user's equipment **Q**: Unknown [W] ([J/s]) Circulating fluid: Tap water*1

Circulating fluid ass flow rate **qm** . Tap water $(= \rho \times qv \div 60)$ [kg/s]

Circulating fluid density p : 1 [kg/L]

Circulating fluid (volume) flow rate **qv** : 35 [l/min]
Circulating fluid specific heat **C** : 4.186 x 10³ [J/(kg·K)]

Circulating fluid specific near C : 4.186 x 10° [J/(kg·k)] Circulating fluid outlet temperature T_1 : 293 [K] (20 [°C]) Circulating fluid return temperature T_2 : 296 [K] (23 [°C]) Circulating fluid temperature difference ΔT : 3 [K] (= T_2 – T_1)

Conversion factor: minutes to seconds (SI units): 60 [s/min]

*1 Refer to page 52 for the typical physical property value of tap water or other circulating fluids.

Q = qm x C x (T₂ - T₁)
=
$$\frac{\rho \text{ x qv x C x }\Delta\text{T}}{60}$$
 = $\frac{1 \text{ x 35 x 4.186 x 10}^3 \text{ x 3.0}}{60}$
= 7325 [J/s] \approx 7325 [W] = 7.3 [kW]

Cooling capacity = Considering a safety factor of 20 %,

7.3 [kW] x 1.2 = 8.8 [kW]

Heat generation amount by user's equipment \mathbf{Q} : Unknown [cal/h] \rightarrow [W] Circulating fluid : Tap water*1 Circulating fluid weight flow rate **qm**: (= ρ x **qv** x 60) [kgf/h] Circulating fluid weight volume ratio γ: 1 [kgf/L] Circulating fluid (volume) flow rate qv : 35 [l/min] Circulating fluid specific heat C : 1.0 x 10³ [cal/(kgf.°C)] Circulating fluid outlet temperature T1: 20 [°C] Circulating fluid return temperature T2: 23 [°C] Circulating fluid temperature difference ΔT : 3 [°C] (= $T_2 - T_1$) Conversion factor: hours to minutes: 60 [min/h] : 860 [(cal/h)/W] Conversion factor: kcal/h to kW $= \frac{\gamma \times qv \times 60 \times C \times \Delta T}{}$ 1 x 35 x 60 x 1.0 x 10³ x 3.0 ≈ 7325 [W] = 7.3 [kW] Cooling capacity = Considering a safety factor of 20 %, 7.3 [kW] x 1.2 = 8.8 [kW]

Example of conventional units (Reference)

^{*1} The examples above calculate the heat generation amount based on the power consumption. The actual heat generation amount may differ due to the structure of the user's equipment. Be sure to check it carefully.

Required Cooling Capacity Calculation

Example 3: When there is no heat generation, and when cooling the object below a certain temperature and period of time.

Heat quantity by cooled substance (per unit time) ${\bf Q}\,$: Unknown [W] ([J/s])


Cooled substance specific heat **C** : 4.186 x 10³ [J/(kg·K)] Cooled substance temperature when cooling begins **To**: 303 [K] (30 [°C])

Cooled substance temperature after t hour T_t : 293 [K] (20 [°C]) Cooling temperature difference ΔT : 10 [K] (= $T_0 - T_t$) Cooling time Δt : 900 [s] (= 15 [min])

* Refer to the following for the typical physical property values by circulating fluid.

$$Q = \frac{m \times C \times (T_0 - T_t)}{\Delta t} = \frac{\rho \times V \times C \times \Delta T}{\Delta t}$$
$$= \frac{1 \times 150 \times 4.186 \times 10^3 \times 10}{900} = 6977 \text{ [J/s]} \approx 7.0 \text{ [kW]}$$

Cooling capacity = Considering a safety factor of 20 %,



Example of conventional units (Reference)

Heat quantity by cooled substance (per unit time) $\textbf{Q}\colon Unknown\ [cal/h]\to [W]$

Cooled substance : Water Cooled substance weight \mathbf{m} : (= $\rho \times \mathbf{V}$) [kgf] Cooled substance weight volume ratio γ : 1 [kgf/L] Cooled substance total volume \mathbf{V} : 150 [L]

Cooled substance specific heat $\bf C$: 1.0 x 10³ [cal/(kgf.°C)]

Cooled substance temperature when cooling begins T_0 : 30 [°C] Cooled substance temperature after t hour T_t : 20 [°C]

Cooling temperature difference ΔT : 10 [°C] (= $T_0 - T_t$)

 $\begin{array}{lll} \mbox{Cooling time Δt} & : 15 \mbox{ [min]} \\ \mbox{Conversion factor: hours to minutes} & : 60 \mbox{ [min/h]} \\ \mbox{Conversion factor: kcal/h to kW} & : 860 \mbox{ [(cal/h)/W]} \\ \end{array}$

$$Q = \frac{m \times C \times (To - Tt)}{\Delta t \times 860} = \frac{\gamma \times V \times 60 \times C \times \Delta T}{\Delta t \times 860}$$

$$= \frac{1 \times 150 \times 60 \times 1.0 \times 10^{3} \times 10}{15 \times 860}$$

$$\approx 6977 \text{ [W]} = 7.0 \text{ [kW]}$$

Cooling capacity = Considering a safety factor of 20 %,

7.0 [kW] x 1.2 = 8.4 [kW]

This is the calculated value by changing the fluid temperature only.
 Thus, it varies substantially depending on the water bath or piping shape.

Precautions on Cooling Capacity Calculation

1. Heating capacity

When the circulating fluid temperature is set above room temperature, it needs to be heated by the thermo-chiller. The heating capacity depends on the circulating fluid temperature. Consider the radiation rate and heat capacity of the user's equipment and check beforehand if the required heating capacity is provided.

2. Pump capacity

<Circulating fluid flow rate>

Circulating fluid flow rate varies depending on the circulating fluid discharge pressure. Consider the installation height difference between the thermo-chiller and the user's equipment, and the piping resistance such as circulating fluid pipings, or piping size, or piping curves in the machine. Check beforehand if the required flow is achieved, using the pump capacity curves.

<Circulating fluid discharge pressure>

Circulating fluid discharge pressure has the possibility to increase up to the maximum pressure in the pump capacity curves. Check beforehand if the circulating fluid pipings or circulating fluid circuit of the user's equipment are fully durable against this pressure.

Circulating Fluid Typical Physical Property Values

1. This catalogue uses the following values for density and specific heat in calculating the required cooling capacity. Density ρ : 1 [kg/L] (or, using conventional units, weight volume ratio γ = 1 [kgf/L]) Specific heat **C**: 4.19 x 10³ [J/(kg·K)] (or, using conventional units, 1 x 10³ [cal/(kgf·°C)])

2. Values for density and specific heat change slightly according to temperature shown below. Use this as a reference.

Water

Physical property	Density ρ	Specific heat C	Conventi	onal units	
Temperature value	[kg/L]	[J/(kg·K)]	Weight volume ratio γ [kgf/L]	Specific heat C [cal/(kgf.°C)]	
5°C	1.00	4.2 x 10 ³	1.00	1 x 10 ³	
10 °C	1.00	4.19 x 10 ³	1.00	1 x 10 ³	
15 °C	1.00	4.19 x 10 ³	1.00	1 x 10 ³	
20 °C	1.00	4.18 x 10 ³	1.00	1 x 10 ³	
25 °C	1.00	4.18 x 10 ³	1.00	1 x 10 ³	
30 °C	1.00	4.18 x 10 ³	1.00	1 x 10 ³	
35 °C	0.99	4.18 x 10 ³	0.99	1 x 10 ³	
40 °C	0.99	4.18 x 10 ³	0.99	1 x 10 ³	

15% Ethylene Glycol Aqueous Solution

Physical property	Density ρ	Specific heat C	neat C Conventional units		
Temperature	[kg/L]	[J/(kg·K)]	Weight volume ratio γ [kgf/L]	Specific heat C [cal/(kgf.°C)]	
5°C	1.02	3.91 x 10 ³	1.02	0.93 x 10 ³	
10 °C	1.02	3.91 x 10 ³	1.02	0.93×10^3	
15 °C	1.02	3.91 x 10 ³	1.02	0.93×10^3	
20 °C	1.01	3.91 x 10 ³	1.01	0.93×10^3	
25 °C	1.01	3.91 x 10 ³	1.01	0.93×10^3	
30 °C	1.01	3.91 x 10 ³	1.01	0.94×10^3	
35 °C	1.01	3.91 x 10 ³	1.01	0.94×10^3	
40 °C	1.01	3.92×10^3	1.01	0.94×10^3	

^{*} Shown above are reference values. Contact circulating fluid supplier for details.



These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC) 1), and other safety regulations.

♠ Danger:

Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious

Marning:

Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious

Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate

1) ISO 4414: Pneumatic fluid power - General rules and safety requirements for systems and their components.

ISO 4413: Hydraulic fluid power - General rules and safety requirements for systems and their components.

IEC 60204-1: Safety of machinery - Electrical equipment of machines. (Part 1: General requirements)

ISO 10218-1: Robots and robotic devices - Safety requirements for industrial robots - Part 1: Robots.

Measurement Act.

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

- 3. Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.
 - 1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
 - 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
 - 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.
- 4. Our products cannot be used beyond their specifications. Our products are not developed, designed, and manufactured to be used under the following conditions or environments. Use under such conditions or environments is not covered.
 - 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
 - 2. Use for nuclear power, railways, aviation, space equipment, ships, vehicles, military application, equipment affecting human life, body, and property, fuel equipment, entertainment equipment, emergency shut-off circuits, press clutches, brake circuits, safety equipment, etc., and use for applications that do not conform to standard specifications such as catalogues and operation manuals.
 - 3. Use for interlock circuits, except for use with double interlock such as installing a mechanical protection function in case of failure. Please periodically inspect the product to confirm that the product is operating properly.

We develop, design, and manufacture our products to be used for automatic control equipment, and provide them for peaceful use in manufacturing industries. Use in non-manufacturing industries is not covered.

Products we manufacture and sell cannot be used for the purpose of transactions or certification specified in the

The new Measurement Act prohibits use of any unit other than SI units in Japan.

Limited warranty and **Disclaimer/Compliance** Requirements


The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements". Read and accept them before using the product.

Limited warranty and Disclaimer

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first. 2) Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products.
- 2) Vacuum pads are excluded from this 1 year warranty. A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited

Compliance Requirements

- 1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed

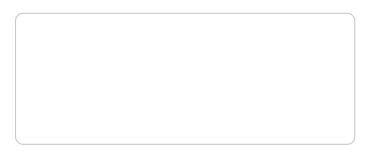

www.smclt.lt

SMC Corporation (Europe)

Austria Belgium Bulgaria Croatia **Czech Republic** +420 541424611 Denmark Estonia Finland France Germany Greece Hungary Ireland +39 03990691 Italy Latvia +371 67817700

+43 (0)2262622800 www.smc.at +32 (0)33551464 www.smc.be +359 (0)2807670 www.smc.ba +385 (0)13707288 www.smc.hr www.smc.cz +45 70252900 www.smcdk.com +372 651 0370 www.smcee.ee +358 207513513 www.smc.fi +33 (0)164761000 www.smc-france.fr +49 (0)61034020 www.smc.de +30 210 2717265 www.smchellas.gr +36 23513000 www.smc.hu +353 (0)14039000 www.smcautomation.ie www.smcitalia.it

www.smc.lv

info@smc.be sales.bg@smc.com sales.hr@smc.com office at@smc.com smc.dk@smc.com info.ee@smc.com smc.fi@smc.com supportclient.fr@smc.com info.de@smc.com sales@smchellas.gr office.hu@smc.com technical.ie@smc.com mailbox.it@smc.com info.lv@smc.com

office.at@smc.com

Lithuania +370 5 2308118 Netherlands +31 (0)205318888 Norway +47 67129020 +48 22 344 40 00 Poland Portugal +351 214724500 Romania +40 213205111 Russia +7 (812)3036600 Slovakia +421 (0)413213212 Slovenia +386 (0)73885412 Spain +34 945184100 Sweden +46 (0)86031240 +41 (0)523963131 Switzerland +90 212 489 0 440 Turkey UK +44 (0)845 121 5122

South Africa +27 10 900 1233

www.smcturkey.com.tr www.smc.uk

www.smc.nl www.smc-norge.no www.smc.pl www.smc.eu www.smcromania.ro www.smc.eu www.smc.sk www.smc.si www.smc.eu www.smc.nu www.smc.ch

info@smc.nl post.no@smc.com office.pl@smc.com apoiocliente.pt@smc.com office.ro@smc.com sales@smcru.com sales.sk@smc.com office.si@smc.com post.es@smc.com order.se@smc.com helpcenter.ch@smc.com satis.tr@smc.com sales.gb@smc.com

info.lt@smc.com

www.smcza.co.za Sales.za@smc.com