



# Operation Manual

Product Name

Compact Air Gripper

Model / Series / Product Number

MHF2-8D \*  
MHF2-12D \*  
MHF2-16D \*  
MHF2-20D \*  
MHF2-25D \*  
MHF2-32 \* D \*

**SMC Corporation**

## Safety Instructions

1. Product Specifications
  - 1-1. Specifications
  
2. Operating Method / Operation
  - 2-1. Precautions for Design
  - 2-2. Selection
  - 2-3. Installation
  - 2-4. Air supply
  - 2-5. Piping
  - 2-6. Operating Environment
  - 2-7. Lubrication
  
3. Maintenance
  - 3-1. Precautions
  - 3-2. Disassembly Drawing 1
    - Disassembly Drawing 2
    - Disassembly Drawing 3
  - 3-3. Replacement Procedure 1
    - Replacement Procedure 2
    - Replacement Procedure 3
  - 3-4. Construction/Parts list 1
    - Construction/Parts list 2
    - Construction/Parts list 3



# Safety Instruction

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of “Caution,” “Warning” or “Danger.” They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)\*1), and other safety regulations.

※1) ISO 4414: Pneumatic fluid power - General rules and safety requirements for systems and their components  
ISO 4413: Hydraulic fluid power -- General rules and safety requirements for system and their components  
IEC 60204-1: Safety of machinery -- Electrical equipment of machines (Part 1: General requirements)  
ISO 10218-1: Robots and robotic devices - Safety requirements for industrial robots - Part 1: Robots  
etc.

	<b>Danger :</b>	<b>Danger</b> indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.
	<b>Warning:</b>	<b>Warning</b> indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.
	<b>Caution:</b>	<b>Caution</b> indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.

## Warning

### **1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.**

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

### **2. Only personnel with appropriate training should operate machinery and equipment.**

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

### **3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.**

1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

### **4. Our products cannot be used beyond their specifications. Our products are not developed, designed, and manufactured to be used under the following conditions or environments. Use under such conditions or environments is not covered.**

1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
2. Use for nuclear power, railways, aviation, space equipment, ships, vehicles, military application, equipment affecting human life, body, and property, fuel equipment, entertainment equipment, emergency shut-off circuits, press clutches, brake circuits, safety equipment, etc., and use for applications that do not conform to standard specifications such as catalogs and operation manuals.
3. Use for interlock circuits, except for use with double interlock such as installing a mechanical protection function in case of failure. Please periodically inspect the product to confirm that the product is operating properly.



# Safety Instruction

## Caution

We develop, design, and manufacture our products to be used for automatic control equipment, and provide them for peaceful use in manufacturing industries. Use in non-manufacturing industries is not covered.

Products we manufacture and sell cannot be used for the purpose of transactions or certification specified in the Measurement Act. The new Measurement Act prohibits use of any unit other than SI units in Japan.

## Limited warranty and Disclaimer/Compliance Requirements

The product used is subject to the following “Limited warranty and Disclaimer” and “Compliance Requirements”. Read and accept them before using the product.

### Limited warranty and Disclaimer

1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.<sup>\*2)</sup> Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided.  
This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.  
**\*2)Vacuum pads are excluded from this 1 year warranty.**  
A vacuum pad is a consumable part, so it is warranted for a year after it is delivered.  
Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

### Compliance Requirements

1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

# 1. Product Specifications

## 1-1. Specifications

### Specifications

Model	MHF2-8D*	MHF2-12D*	MHF2-16D*	MHF2-20D*	MHF2-25D*	MHF2-32*D*	
Bore size (mm)	8	12	16	20	25	32	
Fluid	Air						
Operating pressure (MPa)	0.15 to 0.7	0.1 to 0.7					
Ambient and fluid temperature (°C)	-10 to 60 (No freezing)						
Note 1) Repeatability (mm)	±0.05				±0.04		
Maximum operating frequency (c.p.m.)	Short stroke	120			100	60	
	Middle stroke	120			100	60	
	Long stroke	60			60	30	
Lubrication	Not required						
Action	Double acting						
Note 2) Gripping force Effective gripping force per finger (N)	19	48	90	141	240	400	
Opening/closing stroke (Both sides) (mm)	Short stroke	8	12	16	20	25	32
	Middle stroke	16	24	32	40	50	64
	Long stroke	32	48	64	80	100	128
Note 3) Weight (g)	Short stroke	65	155	350	645	1,130	2,230
	Middle stroke	85	190	445	850	1,290	2,510
	Long stroke	120	275	650	1,225	1,610	3,180

Note 1) This is the value when no offset load is applied to the finger. When an offset load is applied to the finger, the maximum value is  $\pm 0.15$  mm due to the influence of backlash of the rack and pinion.

Note 2) At the pressure of 0.5 MPa, when gripping point L is 20 mm.

Note 3) Excluding the auto switch weight.

## 2. Operating Method / Operation

### 2-1. Precautions for Design

#### Warning

1. The product is designed for use only in compressed air systems. Do not operate at pressures or temperatures, etc., beyond the range of the specifications, as this can cause damage or malfunction of the cylinder and other equipment. (Refer to the specifications.)  
As the fluid, use compressed air.
2. Take safety measures (e.g. mounting protective covers) when there is a danger of fingers being caught in a gripper or workpieces causing damage etc.
3. There is a danger of workpieces dropping if there is a decrease in gripping force due to a drop in circuit pressure caused by a power failure, etc. It is necessary to take measures such as drop prevention so that injury and damage to machinery or equipment can be prevented.


#### Caution

1. On an actuator finger part with a diameter of  $\phi 8$  to  $\phi 20$ , the finite orbit type guide is used. By using this, when there are inertial force which cause by movements or rotation to the actuator, steel ball will move to one side and this will cause a large resistance and degrade the accuracy. When there are inertial force which cause by movements or rotation to the actuator, operate the finger to full stroke.


### 2-2. Selection

#### Warning


1. The gripping point should be set within the limited range.  
When the gripping point distance becomes large, the gripper attachment applies an excessively large load to the gripper sliding section, and causes adverse affects on the life of the gripper. Refer to the catalog for details.

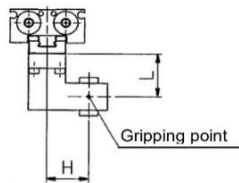

Good: "L" and "H" are appropriate distance

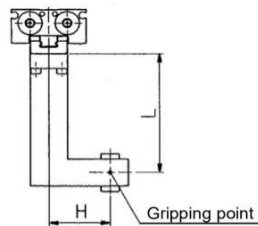


Not good: "L" is too long

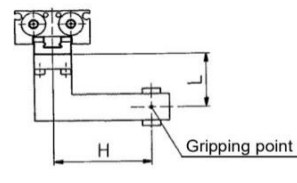

Not good: "H" is too long

2. Attachments should be designed to be as light and short as possible.


- (1) A long or heavy attachment increases the inertia force required to open or close the fingers. This may cause unsteady movement of fingers and have an adverse affect on the life of the gripper.
- (2) Design the attachment to be as short and light as possible even if the gripping point is within the limited range.

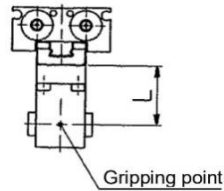

- (3) Select a larger size gripper or used two or more grippers for handling a long and/or large workpiece.

3. Provide a run off space in the attachment when using with a small or thin workpiece.

If a runoff space is not provided within the finger part, gripping becomes unsteady, and it may lead to gripping failure or slippage.

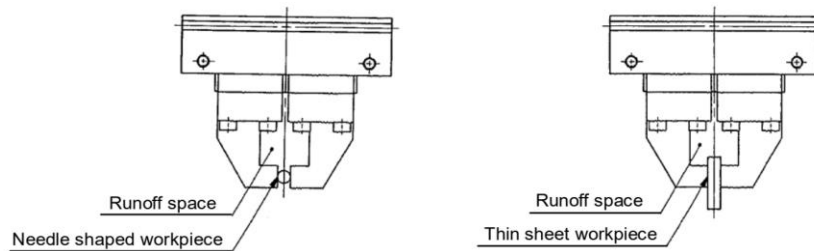

4. Select a model whose gripping force is compatible with the workpiece mass.

Incorrect selection may lead to the dropping of a workpiece, etc. Refer to the model selection criteria of each series for the effective gripping force and the workpiece mass.

5. Do not use the product in applications where excessive external force or impact force is applied.

This can result in failure. Please consult with SMC if necessary.

6. Select a model having a sufficient working finger opening/closing width.

<In case of insufficient width>

- (1) Gripping becomes unsteady due to variations in opening/closing width or workpiece diameter.
- (2) When using an auto switch, the detection may not be reliable. Refer to the Auto Switch Hysteresis section and set the stroke including the hysteresis length for reliable switch function. When using the water resistant 2-color indicator auto switch, the gripper stroke may be limited by the setting of the indicator color during detection.

7. Do not disassemble the product or make any modifications.

Do not disassemble the product or make any modifications, including additional machining. This may cause human injury and/or an accident.


## 2-3. Installation

### Warning

1. Install and operate the product only after reading the Operation Manual carefully and understanding its contents. Keep the manual where it can be referred to as necessary.
2. Allow sufficient space for maintenance and inspection.
3. Do not scratch or dent the air gripper by dropping or bumping it when mounting.  
Slight deformation can cause inaccuracies or a malfunction.
4. Tighten the screw within the specified torque range when mounting the attachment.  
Tightening with a torque above the limit can cause malfunction, while insufficient tightening can cause slippage and dropping.

#### **How to mount attachment to the finger**

Make sure to mount the attachments on fingers with the tightening torque in the table below by using bolts, etc., for the female threads on fingers.

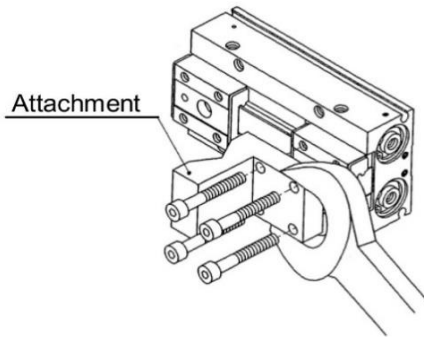


Model	Bolt	Maximum tightening torque (Nm)
MHF2-8D*	M2.5x0.45	0.36
MHF2-12D*	M3x0.5	0.63
MHF2-16D*	M4x0.7	1.5
MHF2-20D*	M4x0.7	1.5
MHF2-25D*	M5x0.8	3
MHF2-32*D*	M6x1.0	5.2

5. Tighten the screw within the specified torque range when mounting the air gripper.  
Tightening with a torque above the limit can cause malfunction, while insufficient tightening can cause slippage and dropping.




## How to Mount Air Gripper

### Top mounting (Body tapped)

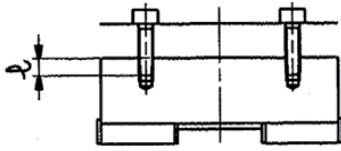


Model	Bolt	Maximum tightening torque (Nm)	Max. screw-in depth l (mm)
MHF2-8D*	M3x0.5	0.95	7
MHF2-12D*	M4x0.7	2.2	10
MHF2-16D*	M5x0.8	4.5	12
MHF2-20D*	M6x1.0	7.8	15
MHF2-25D*	M8x1.25	18.7	20
MHF2-32*D*	M10x1.5	36.7	25

### Lateral mounting (Body tapped)

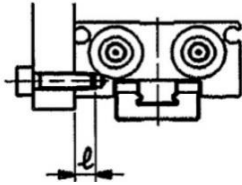


Model	Bolt	Maximum tightening torque (Nm)	Max. screw-in depth l (mm)
MHF2-8D*	M3x0.5	0.63	4
MHF2-12D*	M4x0.7	1.5	5
MHF2-16D*	M5x0.8	3	5.5
MHF2-20D*	M6x1.0	5.2	6
MHF2-25D*	M8x1.25	12.5	8
MHF2-32*D*	M10x1.5	24.5	10

### Lower side mounting (Body tapped)

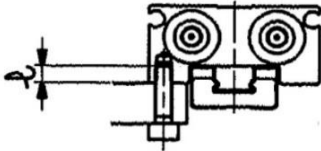

Model	Bolt	Maximum tightening torque (Nm)	Max. screw-in depth l (mm)
MHF2-8D*	M3x0.5	0.63	4
MHF2-12D*	M4x0.7	1.5	5
MHF2-16D*	M5x0.8	3	5.5
MHF2-20D*	M6x1.0	5.2	6
MHF2-25D*	M8x1.25	12.5	8
MHF2-32*D*	M10x1.5	24.5	10

## Body through-hole

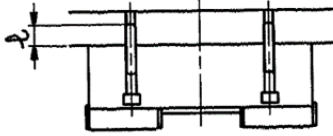

Model	Bolt	Maximum tightening torque (Nm)	Screw-in depth l (mm)
MHF2-8D*	M2.5x0.45	0.36	4
MHF2-12D*	M3x0.5	0.63	5.2
MHF2-16D*	M4x0.7	1.5	-
MHF2-20D*	M5x0.8	3	-
MHF2-25D*	M6x1.0	5.2	-
MHF2-32*D*	M8x1.25	12.5	-

\*When MHF2-8D\* and MHF2-12D\* are mounted body through-hole, use the attached special bolts.

### Attached parts / Special bolts for body-through hole mounting

Part No.			
MHF2-8D · D1	MHF2-8D2	MHF2-12D · D1	MHF2-12D2
MHF2-B08(2pcs.)	MHF2-B08(4pcs.)	MHF2-B12(2pcs.)	MHF2-B12(4pcs.)

\*When MHF2-16D\*, MHF2-20D\*, MHF2-25D\* and MHF2-32\*D\* are mounted body through-hole, use the commercially available hexagon socket head cap screws.


**⚠ Caution**

1. To mount the attachment to the finger, make sure not to apply undue strain on the finger.  
Any damage to the gripper may cause malfunction and reduce the accuracy.


2. Avoid external force to the finger.

Fingers may be damaged by a continual lateral or impact load. Provide clearance to prevent the workpiece or the attachment from striking against any object at the stroke end.


**1) Stroke end when fingers are opened**

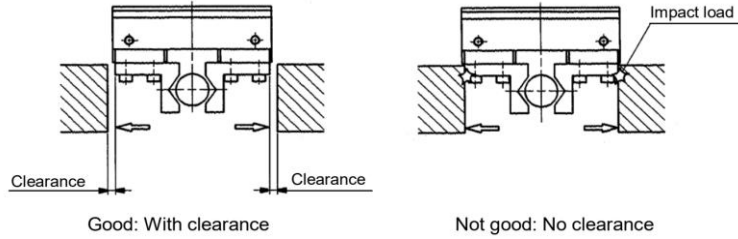

**2) Stroke end when gripper is moving**

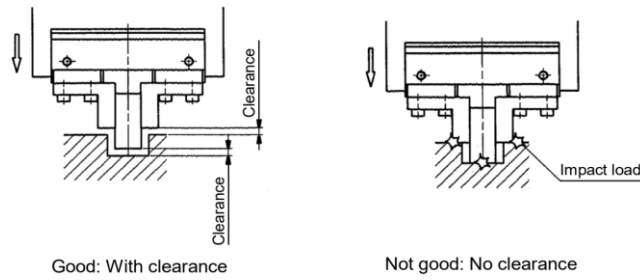


**3) When turning over**

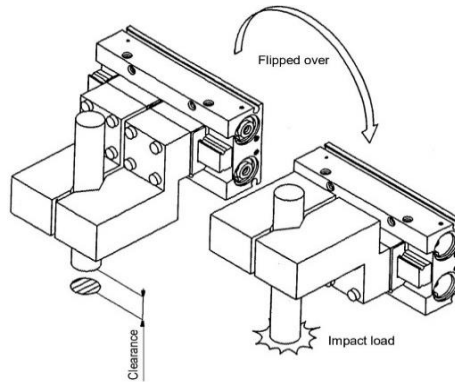

3. Adjust the gripping point so that an excessive force will not be applied to the fingers when inserting a workpiece.

Confirm that the gripper can operate without receiving any shock by testing it in manual operation mode or by low speed operation.

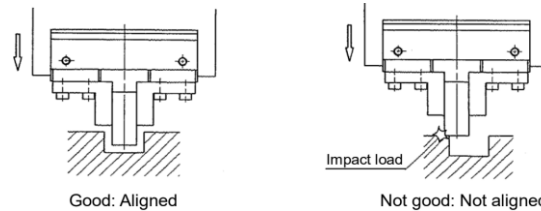

4. Adjust the finger opening/closing speed with speed controllers so that the speed is not too fast.

If the finger opening/closing speed is faster than necessary, the impact force applied to the fingers will increase. The repeatability accuracy for gripping of the work piece may deteriorate or the life may be shortened.

<Applicable speed controller>

Air gripper mounted type : AS1211F-M3, AS1201F-M5, etc.

Piping type : AS1000 series, AS1002F, etc.

## 2-4. Air Supply

### **Warning**

1. As the fluid, use compressed air.
2. Compressed air containing a large amount of condensate can cause malfunction of pneumatic equipment. An air dryer or water droplet separator should be installed upstream from the filters.
3. If condensate in the drain bowl is not emptied on a regular basis, the condensate will overflow enter the compressed air lines. This will cause a malfunction of pneumatic equipment. If the drain bowl is difficult to check and remove, installation of a drain bowl with an auto drain option is recommended.
4. Use clean air.  
Do not use compressed air that contains chemicals, synthetic oils including organic solvents, salt or corrosive gases, etc., as it can cause damage or malfunction of equipment.

### **Caution**

1. If low dew point air is used as the fluid, the lubrication characteristics of the equipment will degrade and this can affect the reliability (life) of the product. Consider use of a product compatible with low dew point, such as 25A- series.
2. Install an air filter.  
Install an air filter upstream near the valve. A filtration degree of 5  $\mu\text{m}$  or less should be selected.
3. Install an aftercooler, air dryer or drain catch before the filter and take appropriate measures.  
Compressed air that contains excessive foreign material may cause malfunction of valves and other pneumatic equipment. Take measures to ensure air quality, such as installing an aftercooler, air dryer, or water separator.

4. Use the product within the specified fluid and ambient temperature range.

When operating at temperatures below 5°C, moisture in the circuit may freeze and cause breakage of seals or a malfunction. Corrective measures should be taken to prevent freezing.

For detailed information regarding the quality of the compressed air described above, refer to SMC's "Air Cleaning Systems".

## 2-5. Piping

### **Caution**

1. Refer to the Fittings and Tubing Precautions (Best Pneumatics) for handling One-touch fittings.
2. Before piping  
Before piping, perform air blow (flushing) or clean the inside of piping to eliminate any cutting chips, cutting oil, dust, etc.

## 2-6. Operating Environment

### **Warning**

1. In an environment in which the product is considered to be particularly affected by atmosphere containing corrosive gas, chemical, sea water, water, or steam or direct attachment of any of those substances, please do not use the product.  
Depending on the atmosphere, it may influence the seals, leading to malfunction or reduction of service life.
2. Do not use in direct sunlight.
3. Do not operate in a location subject to vibration or impact.
4. Do not mount the product in locations where it is exposed to radiant heat.
5. Do not use this product in an area that is dusty, or in an environment in which water or oil splashes on the equipment.

### **Caution**

1. Note that martensitic stainless steel is used for the finger ( $\phi 8$  to  $\phi 20$ ) and guide, but its anti-corrosiveness is lower than that of austenitic stainless steel. In particular, rust may be generated in environments where waterdrops are likely to adhere due to condensation, etc.

## 2-7. Lubrication

### **Caution**

1. The non-lube type air gripper is lubricated at the factory, and can be used without any further lubrication.  
If a lubricant is used in the system, use turbine oil Class 1 (with no additive) ISO VG32.  
Furthermore, once lubrication is applied, it must be continued.  
If lubrication is later stopped, malfunction can occur due to loss of the original lubricant.  
Refer to the Material Safety Data Sheet (MSDS) of the hydraulic fluid when supplying the fluid.

## 3. Maintenance


---

### 3-1. Precautions


#### **Warning**

1. Maintenance should be performed according to the procedure indicated in the Operation Manual.  
Improper handling can cause an injury, damage and/or malfunction of equipment and machinery.
2. If handled improperly, compressed air can be dangerous. Assembly, handling, repair and element replacement of pneumatic systems should be performed by a knowledgeable and experienced person.
3. Remove drainage moisture from air filters regularly.
4. When air grippers are removed, first confirm that measures are in place to prevent any workpieces from dropping, run-away of equipment, etc. Then cut off the supply pressure and electric power and exhaust all compressed air from the system using the residual pressure release function. Before restarting the equipment, confirm that measures are taken to prevent sudden action.
5. Do not allow people to enter or place objects in the carrying path of the air gripper.  
This may cause an injury or accident.
6. Do not put hands, etc. in between the air gripper fingers or attachments.  
This may cause an injury or accident.
7. When removing the air gripper, first confirm that no workpieces are being held and then release the compressed air before removing the air gripper.  
If a workpiece is still being held, there is a danger of it being dropped.

### 3-2. Disassembly Drawing 1

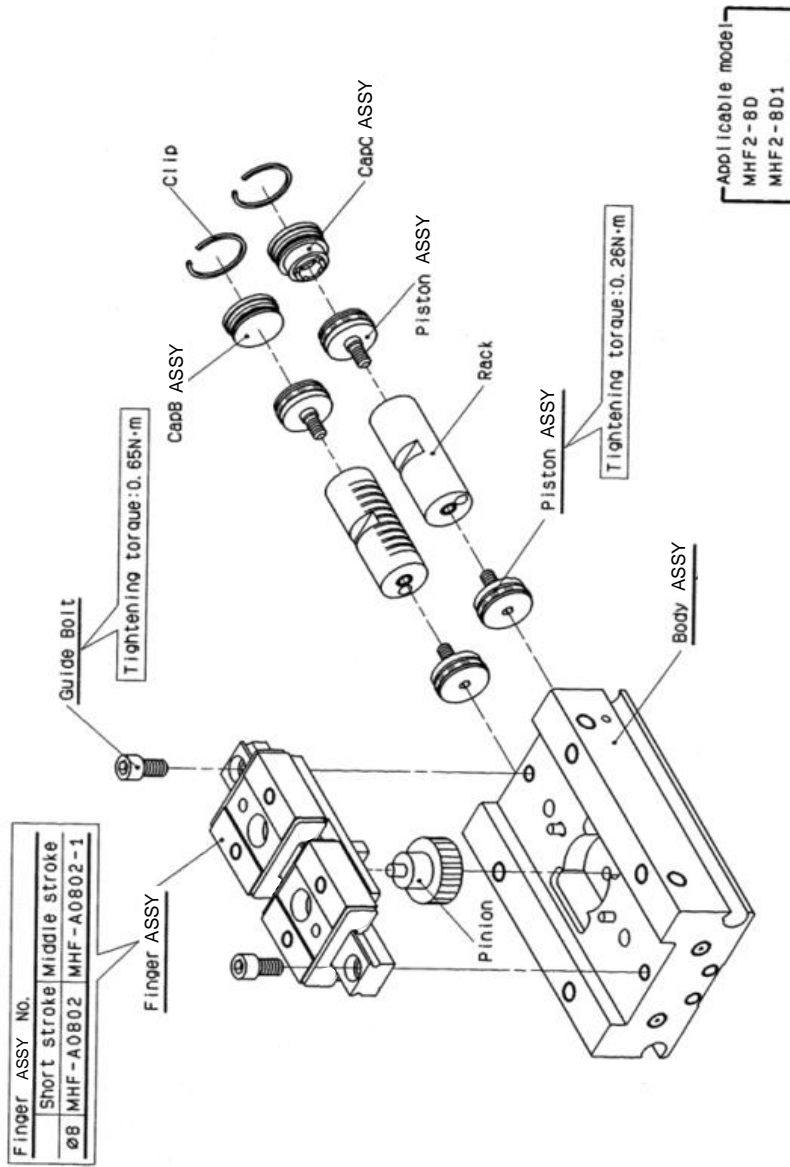


# Disassembly Drawing 2

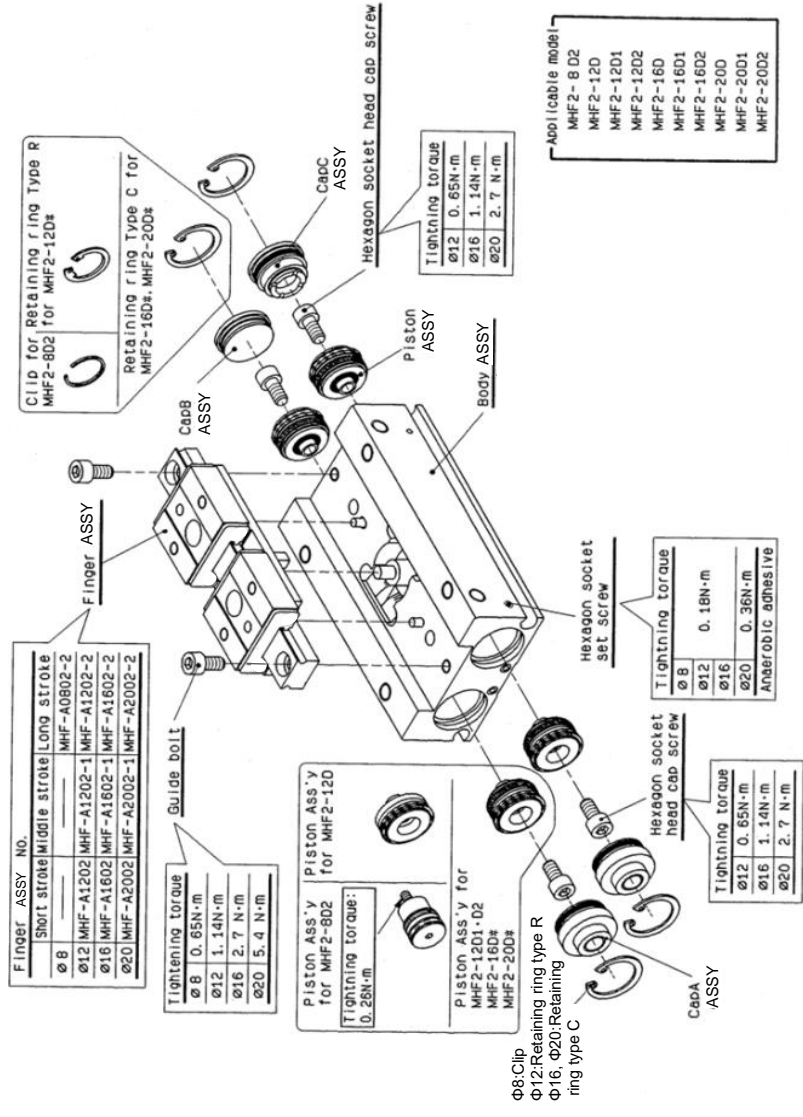




# Disassembly Drawing 3

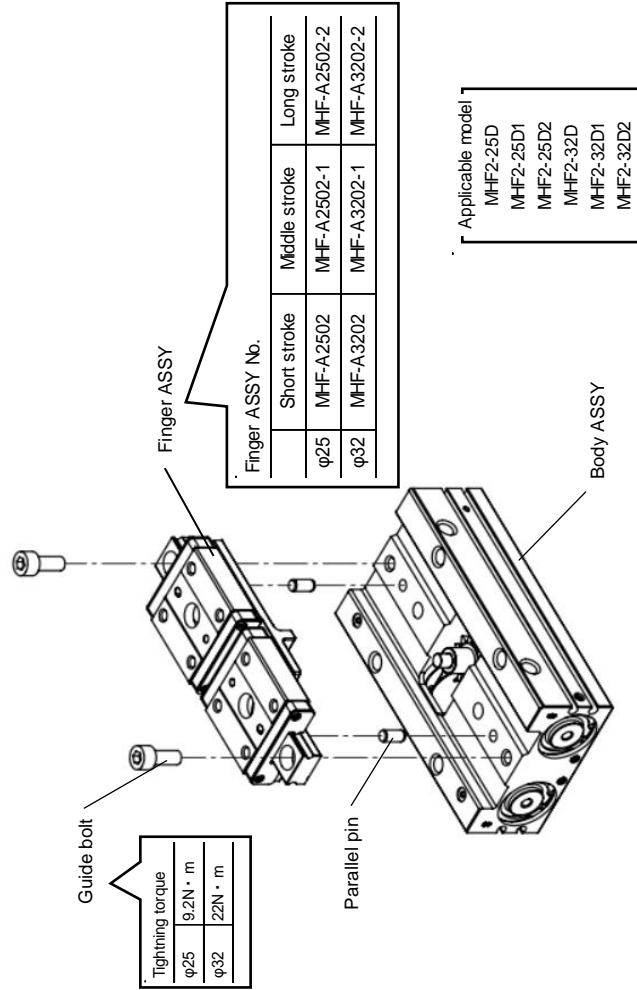

### 3-3. Replacement Procedure 1 (Applicable models : MHF2-8D,MHF2-8D1)


1. Loosen the guide bolts and remove the finger assembly.

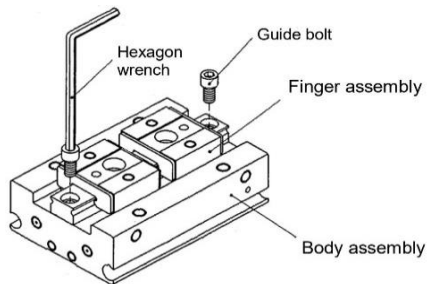


Hexagon wrench size	
	Nominal
φ8	2

Number of guide bolts		
Short stroke	Middle stroke	Long stroke
2	2	-


2. Remove the clips, cap B assemblies, and cap C assemblies.

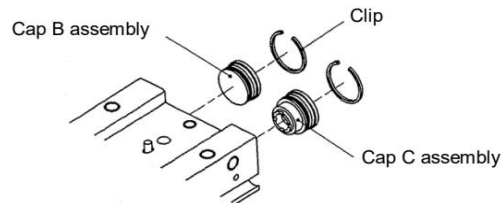

3. Remove the pinion. (Make sure to align the groove of the rack and the pinion shaft when they are assembled.)

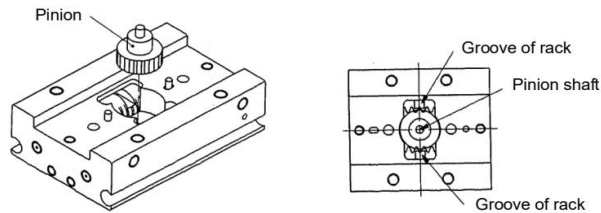

4. Remove the rack assembly, and replace the seals with new ones.

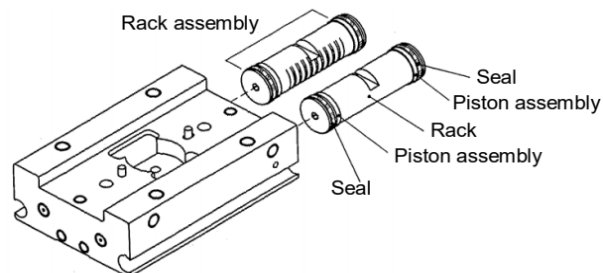

Assembly should be performed by following the removal procedure in reverse.

Refer to the disassembly drawing for the tightening torque for the guide bolt.

Use specified grease.


Specified grease package part No.

-For guide: GR-S-010 (10g)

-For cylinder: GR-L-005 (5g)

## Replacement Procedure 2 (Applicable models : MHF2-8D2, MHF2-12D\* to 20D\*)

- Loosen the guide bolts and remove the finger assembly.

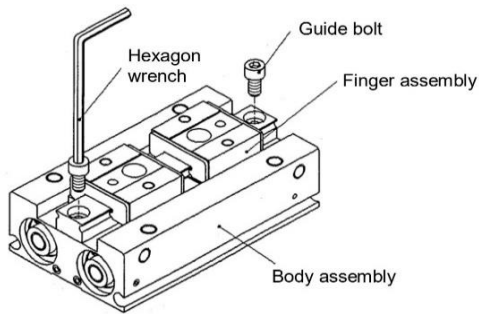


Hexagon wrench size

	Nominal
φ8	2
φ12	2.5
φ16	3
φ20	4

Number of guide bolts

	Short stroke	Middle stroke	Long stroke
φ8	-	-	4
φ12	2	2	4
φ16	2	2	4
φ20	2	2	4


- Loosen the hexagon socket set screws to remove the φ8 clips, φ12 R-shaped retaining rings, φ16 and φ20 C-shaped retaining rings, caps A, caps B and caps C.

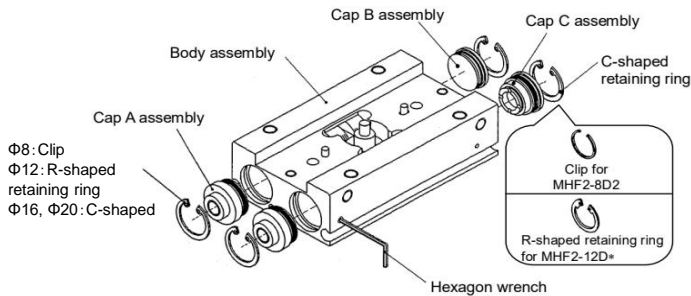

Hexagon wrench size

	Nominal
φ8	0.9
φ12	
φ16	
φ20	1.3

- Loosen the hexagon socket head cap screws on the φ8 piston assemblies to remove the piston assembly, and replace the seals with new ones. (Mounting direction of seals more than φ12 is specified)

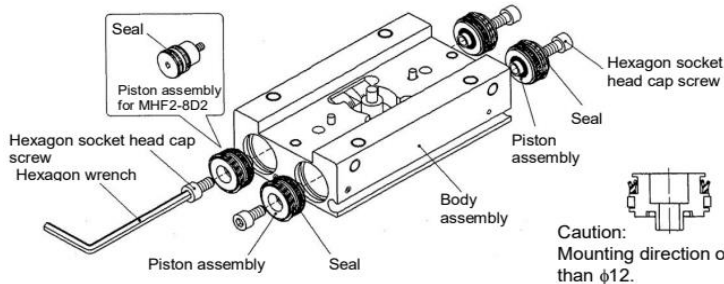

Hexagon wrench size

	Nominal
φ8	1.5
φ12	2
φ16	2.5
φ20	3

Assembly should be performed by following the removal procedure in reverse.

Refer to the disassembly drawing for the tightening torque for the guide bolts, hexagon socket set screws, and hexagon socket head set screws.

Use specified grease.


Specified grease package part No.

-For guide: GR-S-010 (10g)

-For cylinder: GR-L-005 (5g) or GR-L-010 (10g)

### Replacement Procedure 3 (Applicable models : MHF2-25D\*,32\*D\*)

1. Loosen the guide bolts and remove the finger assembly.

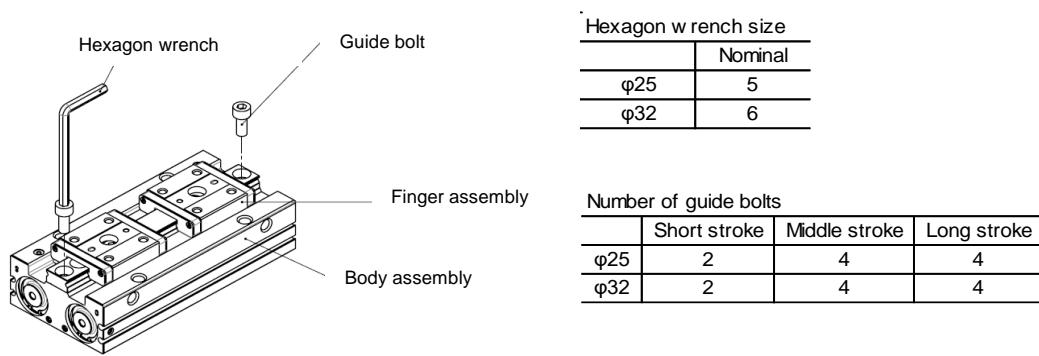

**Precautions for condition in which finger assembly is dismantled**

Finger end surface A

Finger

Finger end surface B

Guide rail

Guide rail end surface A

Guide rail end surface B

When the finger assembly has been dismantled, be absolutely sure that the finger end surface A does not protrude from the guide rail end surface A. Also be absolutely sure that the finger end surface B does not protrude from the guiderail end surface B. (Failure to follow this instruction may result in drop)


Refer to the disassembly drawing for the tightening torque for the guide bolts.

Use specified grease.

Specified grease package part No.

-For guide: GR-S-010 (10g)

### 3-4. Construction/Parts list 1 MHF2-8D, MHF2-8D1

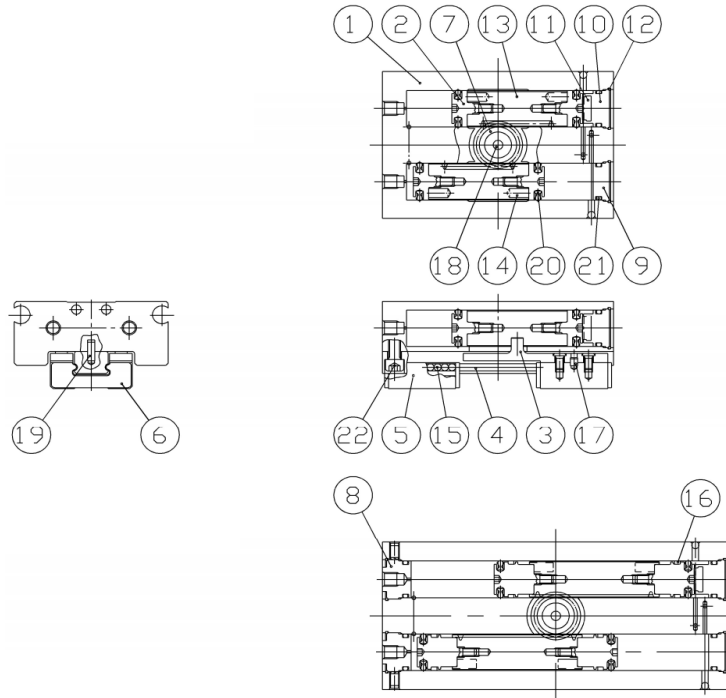

#### Components

No.	Description	Material	Note
1	Body	Aluminum alloy	Hard anodizing
2	Piston	Stainless steel	
3	Joint	Stainless steel	Heat treatment
4	Guide rail	Stainless steel	Heat treatment
5	Finger	Stainless steel	Heat treatment
6	Roller stopper	Stainless steel	
7	Pinion	Carbon steel	Heat treatment
8	Cap A	Aluminum alloy	White anodized Aluminum
9	Cap B	Aluminum alloy	White anodized Aluminum
10	Cap C	Aluminum alloy	White anodized Aluminum
11	Head damper	Polyurethane rubber	
12	Clip	Stainless steel wire	
13	Rack	Stainless steel	Nitrided
14	Magnet	Rare-earth magnet	Nickel plated
15	Steel ball	High carbon chromium bearing steel	

No.	Description	Material	Note
16	Wear ring	Synthetic resin	
17	Cross roller	High carbon chromium bearing steel	
18	Needle roller	High carbon chromium bearing steel	
19	Parallel pins	Stainless steel	
20	Piston seal	NBR	
21	Gasket	NBR	
22	Guide rail mounting screw	Chromium molybdenum steel	Zinc chromated

#### Bolts for body through-hole mounting

Order No.	Number of pieces	
	MHF2-8D	2 pieces/unit
MHF2-8D1	2 pieces/unit	
MHF2-8D2	4 pieces/unit	

\*The bolts for body through-hole mounting are attached to the product. They are also provided at an order of 1 piece or more with the above part numbers.

#### Replacement parts

Description	Order No.			Contents
	MHF2-8D	MHF2-8D1	MHF2-8D2	
Seal kit	MHF8-PS	MHF8-PS	MHF8-PS-2	12,20,21
Finger assembly	MHF-A0802	MHF-A0802-1	MHF-A0802-2	3,4,5,6,15,17,19,Mounting screw


Order with the order No. as parts No. 12, 20 and 21 are provided as a seal kit.

Refer to Disassembly Drawing on page 14 for the part No. and the replacement procedure of the finger assembly.

Grease package part number  
For guide : GR-S-010(10g)  
For cylinder : GR-L-005(5g)

## Construction/Parts list 2

MHF2-12D\* to 20D\*

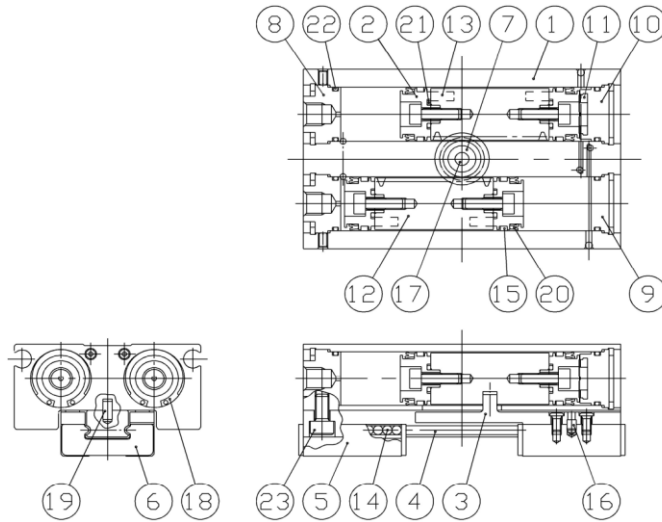

### Components

No.	Description	Material	Note
1	Body	Aluminum alloy	Hard anodizing
2	Piston	Aluminum alloy	White anodized Aluminum
3	Joint	Stainless steel	Heat treatment
4	Guide rail	Stainless steel	Heat treatment
5	Finger	Stainless steel	Heat treatment
6	Roller stopper	Stainless steel	
7	Pinion	Carbon steel	Heat treatment
8	Cap A	Aluminum alloy	White anodized Aluminum
9	Cap B	Aluminum alloy	White anodized Aluminum
10	Cap C	Aluminum alloy	White anodized Aluminum
11	Head damper	Polyurethane rubber	
12	Rack	Stainless steel	Nitrided
13	Magnet	Rare-earth magnet	Nickel plated
14	Steel ball	High carbon chromium bearing steel	
15	Wear ring	Synthetic resin	
16	φ12 : Cross roller	High carbon chromium bearing steel	
	φ16~20 : Parallel pin	Stainless steel	

No.	Description	Material	Note
17	Needle roller	High carbon chromium bearing steel	
18	φ12 : R-shaped retaining ring	Carbon steel	Phosphate coated
	φ16 to 20 : C-shaped retaining ring		
19	Parallel pins	Stainless steel	
20	Piston seal	NBR	
21	Gasket	NBR	
22	Gasket	NBR	
23	Guide rail mounting screw	Chromium molybdenum steel	Zinc chromated

### Grease package part number

MHF2-**D,D1(φ12,16,20)	GR-S-010(10g) (For guide)
MHF2-**D2(φ12)	GR-L-005(5g) (For cylinder)
MHF2-**D2(φ16,20)	GR-S-010(10g) (For guide)
	GR-L-010(10g) (For cylinder)

### Replacement parts

Description	Order No.			Contents
	MHF2-12D	MHF2-12D1	MHF2-12D2	
Seal kit	MHF12-PS	MHF12-PS	MHF12-PS	20、21、22
Finger assembly	MHF-A1202	MHF-A1202-1	MHF-A1202-2	3,4,5,6,14,16,19,Mounting screw
Description	Order No.			Contents
	MHF2-16D	MHF2-16D1	MHF2-16D2	
Seal kit	MHF16-PS	MHF16-PS	MHF16-PS	20、21、22
Finger assembly	MHF-A1602	MHF-A1602-1	MHF-A1602-2	3,4,5,6,14,16,19,Mounting screw
Description	Order No.			Contents
	MHF2-20D	MHF2-20D1	MHF2-1D2	
Seal kit	MHF20-PS	MHF20-PS	MHF20-PS	20、21、22
Finger assembly	MHF-A2002	MHF-A2002-1	MHF-A2002-2	3,4,5,6,14,16,19,Mounting screw

Order with the order No. according to the cylinder bore as parts No. 20, 21, and 22 are provided as a seal kit.

Refer to Disassembly Drawing on page 15 for the part No. and the replacement procedure of the finger assembly.

### Bolts for body through-hole mounting


Order No.	Number of pieces	
	MHF2-12D	MHF2-12D1
MHF-B12	MHF2-12D	2 pieces/unit
	MHF2-12D1	2 pieces/unit
	MHF2-12D2	4 pieces/unit

\*The bolts for body through-hole mounting are attached to the product. They are also provided at an order of 1 piece or more with the above part numbers.

\*When mounting MHF2-16D\* or MHF2-20D\* with the body through-holes, use hexagon socket head cap screws available on the market.

### Construction/Parts list 3

MHF2-25D\*,32\*D\*

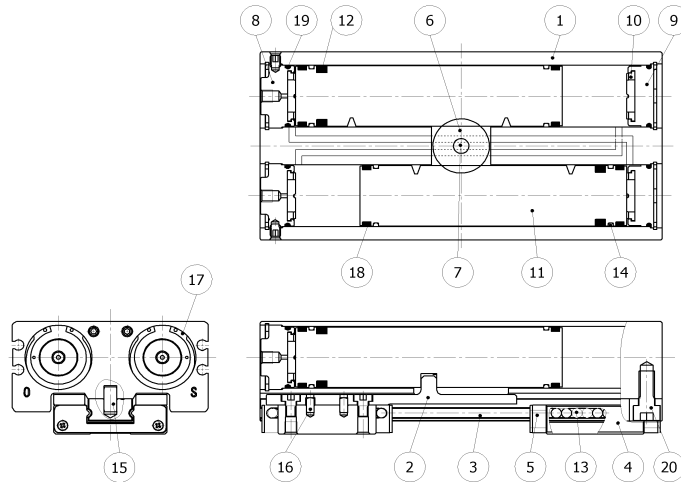

#### Components

No.	Description	Material	Note
1	Body	Aluminum alloy	Hard anodizing
2	Joint	Stainless steel	Heat treatment
3	Guide rail	Stainless steel	Heat treatment
4	Finger	High carbon chromium bearing steel	Heat treatment, Specially treated
5	Cover	Synthetic resin	
6	Pinion	Carbon steel	Heat treatment
7	Pinion shaft	Stainless steel	Heat treatment
8	Cap A	Aluminum alloy	White anodized Aluminum
9	Cap C	Aluminum alloy	White anodized Aluminum
10	Head damper	Polyurethane rubber	
11	Piston	Aluminum alloy	Hard anodizing
12	Rubber magnet	Synthetic rubber	

No.	Description	Material	Note
13	Steel ball	High carbon chromium bearing steel	
14	Wear ring	Synthetic resin	
15	Parallel pins	Stainless steel	
16	Parallel pins	Stainless steel	
17	R-shaped retaining ring	Carbon steel	Electroless nickel plated
18	Piston seal	NBR	
19	Gasket	NBR	
20	Guide rail mounting screw	Chromium molybdenum steel	Electroless nickel plated

#### Grease package part number

MHF2-25D,D1,D2(Φ25,Φ32) GR-S-010(10g)(For guide)

#### Replacement parts

Description	Order No.			Contents
	MHF2-25D	MHF2-25D1	MHF2-25D2	
Finger assembly	MHF-A2502	MHF-A2502-1	MHF-A2502-2	2,3,4,5,13,15,16,Mounting screw

Description	Order No.			Contents
	MHF2-32D	MHF2-32D1	MHF2-232D2	
Finger assembly	MHF-A3202	MHF-A3202-1	MHF-A3202-2	2,3,4,5,13,15,16,Mounting screw

Refer to Disassembly Drawing on page 16 for the part No. and the replacement procedure of the finger assembly.

### Revision history

A : Review of contents

B : Addition of MHF2-25D\*,MHF2-32\*D\*  
Review of contents

# SMC Corporation

Tel: + 81 3 5207 8249 Fax: +81 3 5298 5362

URL <https://www.smcworld.com>

---

Note: Specifications are subject to change without prior notice and any obligation on the part of the manufacturer  
© SMC Corporation All Rights Reserved