AC Servo Motor Drivers





Pulse Input Type/Positioning Type

p. **13**

Incremental Type LECSA Series



Pulse Input Type

Absolute Type LECSB Series



CC-Link Direct Input Type

Absolute Type LECSC Series

C-Link



SSCNET II Type

Absolute Type LECSS Series







Pulse Input Type/Positioning Type

Absolute Type LECSB-T Series



CC-Link Direct Input Type

Absolute Type LECSC-T Series

-Link



Safety function STO available



SSCNET II/H Type

Absolute Type LECSS-T Series



Safety function STO available

MECHATROLINK-Ⅲ Type



MECHATROLINK-II Type

Absolute Type LECYM Series

MECHATROLINK-I



p. **39**

LECYU Series MECHATROLINK-II

Absolute Type

Safety function STO available

Safety function STO available LECS LECS -T/LECY Series



p. **39**

AC Servo Motor Drivers

LECS /LECS -T/LECY Series List

2		Compatible motor		Control method		Application/Function		Compatible option			
	Series	100 W	200 W	400 W	750 W	Positioning *1	Pulse	Network direct input	*2 Synchronous	Pushing operation*4	Setup software
Incremental Type	LECSA (Pulse input type/ Positioning type)	•	•	•		Up to 7 points	•				LEC-MRC2
	LECSB (Pulse input type)	•	•	•			•				LEC-MRC2
	CC-Link LECSC (CC-Link direct input type)	•	•	•		Up to 255 points		CC-Link Ver. 1.10			LEC-MRC2
	SSCNETIII LECSS (SSCNET III type) Compatible with Mitsubishi Electric's servo system controller network	•	•	•				SSCNET	*2	*4	LEC-MRC2
ec	LECSB-T (Pulse input type/ Positioning type)	0	0	•	•	Up to 255 points	•			*4	LEC-MRC2
Absolute Type	CC-Link LECSC-T (CC-Link direct input type)	•	•	•		Up to 255 points		CC-Link Ver. 1.10			LEC-MRC2
A	Ether CAT. Ether Net/IP LECSN-T (Network card type)	•	•	•	•	Up to 255 points		PROFINET EtherCAT EtherNet/IP™			LEC-MRC2
	LECSS-T (SSCNET III/H type) Compatible with Mitsubishi Electric's servo system controller network	•	•	•				SSCNETII/H	*2	*4	LEC-MRC2
	MECHATROLINK-I LECYM	•	•	•				MECHATRO LINK-II	*3		SigmaWin+™
	MECHATROLINK-II LECYU	•	•	•				MECHATRO LINK-III	*3		SigmaWin+™

^{*1} For positioning types, the settings need to be changed in order to use the max. set values. Setup software (MR Configurator2™) LEC-MRC2 is required. *2 Available when a Mitsubishi motion controller is used as the master *3 Available when a motion controller is used as the master



 ^{*3} Available when a motion controller is used as the master
 *4 The LECSB2-T is only applicable when the control method is positioning. The point table is used to set the pushing operation settings.
 To set the pushing operation settings, an additional dedicated file (pushing operation extension file) must be downloaded separately to be used with the setup software (MR Configurator2™: LEC-MRC2□). Please download this dedicated file from the SMC website: https://www.smcworld.com When selecting the LECSS or LECSS2-T, combine it with a master station (such as the Simple Motion module manufactured by Mitsubishi Electric Corporation) which has a pushing operation function.
 ** For customer-provided PLC and motion controller setting and usage instructions, confirm with the retailer or manufacturer.


 *5 Only supports PROFINET and EtherCAT

LECS□/LECS□-T/LECY□ Series

Gain adjustment using auto tuning


Auto-tuning function

 Controls the difference between the command value and the actual action

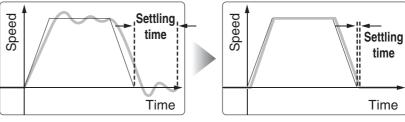

Vibration suppression control function

 Automatically suppresses low-frequency machine vibrations (1 to 100 Hz)

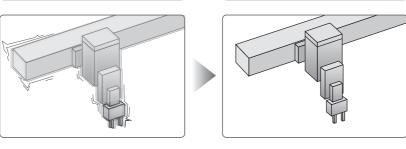

AC Servo Motor Drivers

With display setting function

One-touch adjustment button


One-touch servo adjustment

Display

Display the monitor, parameters, and alarm.

Settings

Set the parameters, monitor display, etc., with push buttons.

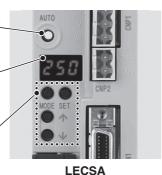


Display

Display the monitor, parameters, and alarm.

Settings

Set the parameters, monitor display, etc., with push buttons.

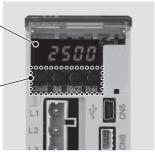

(With the front cover opened)


LECSB

Display

Display the communication status with the driver, the alarm, and the point table no.

Settings

Control the Baud rate, station number, and the occupied station count.

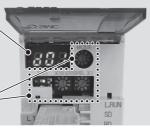

(With the front cover opened) **LECSC**

Display

Display the communication status with the driver and the alarm.

Settings

Switches for selecting the axis and switching to the test operation




(With the front cover opened) **LECSS**

Display

Display the monitor, parameters, and alarm.

Settings

Set the parameters, monitor display, etc., with push buttons.

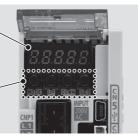


(With the front cover opened) **LECSB-T**

Display

Display the communication status with the driver, the alarm, and the point table no.

Settings

Control the Baud rate, station number, and the occupied station count.

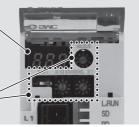


(With the front cover opened) **LECSC-T**

Display

Display the communication status with the driver and the alarm.

Settings

Switches for axis setting, control axis deactivation, switching to the test operation, etc.

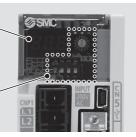


LECSS2-T

Display

Display the communication status with the driver and the alarm.

Settings

Switches for axis setting, switching to the test operation, etc.

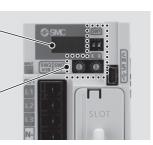


LECSN-T

Settings

Switches for station address, communication speed, number of transmission bytes, etc.



Display the driver status and alarm.

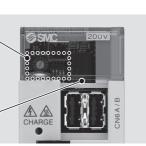


LECYM

Settings

Switches for station address, number of transmission bytes, etc.


Display


Display the driver status and alarm.

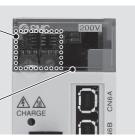



LECYU




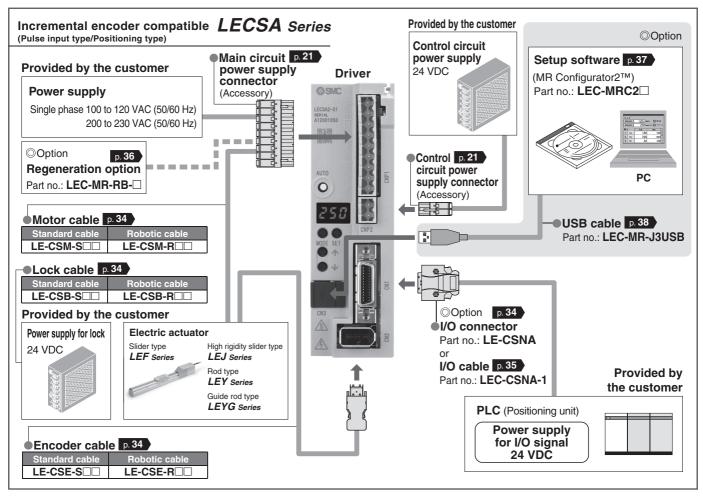


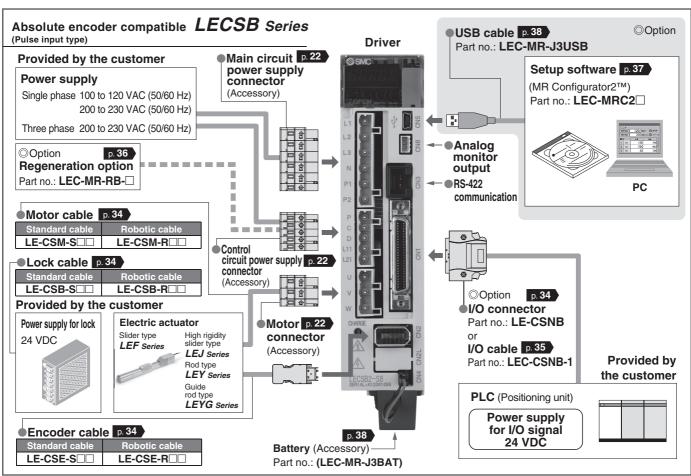


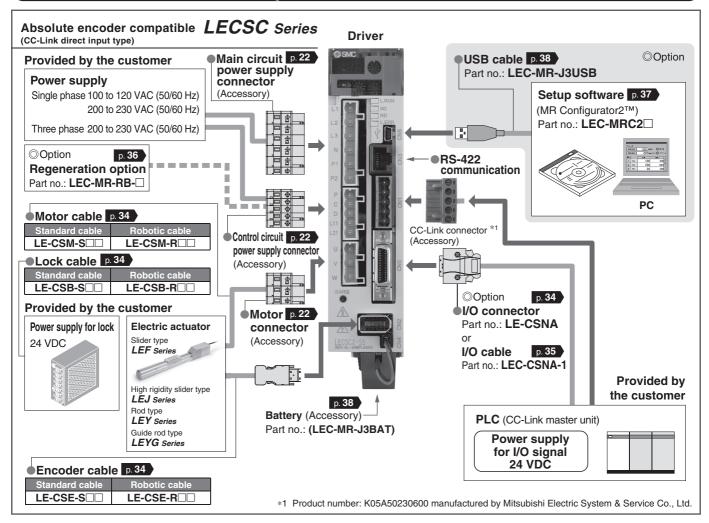


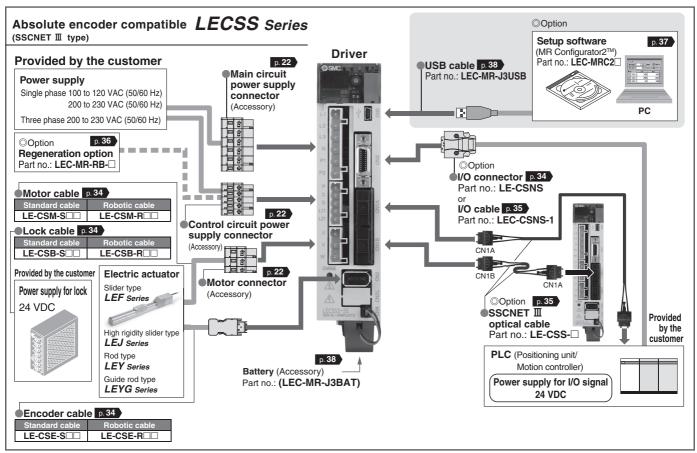


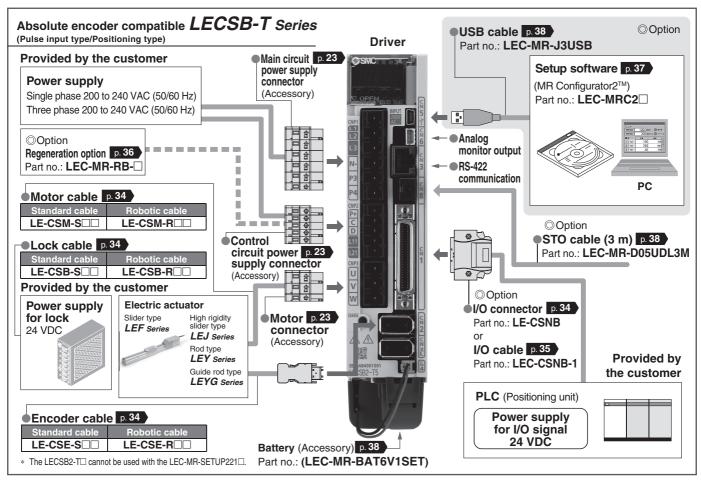


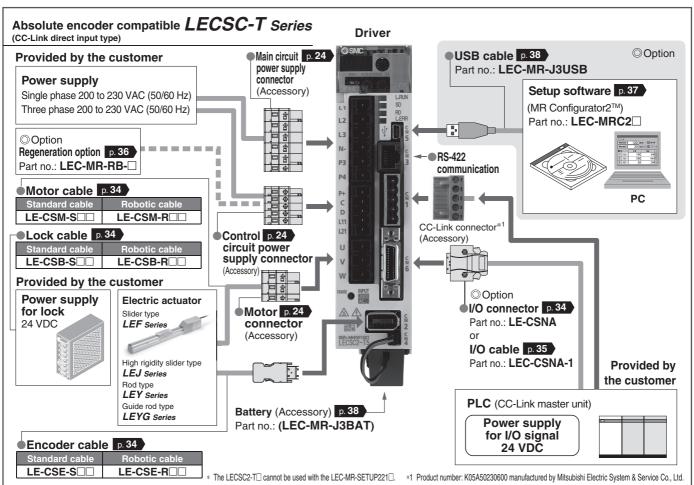

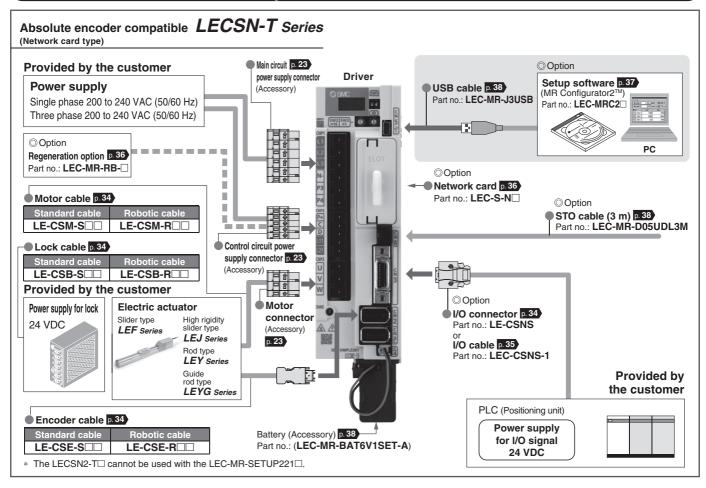

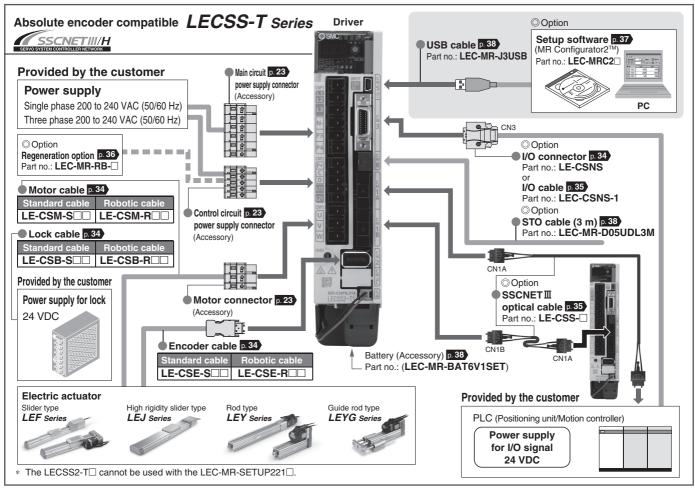

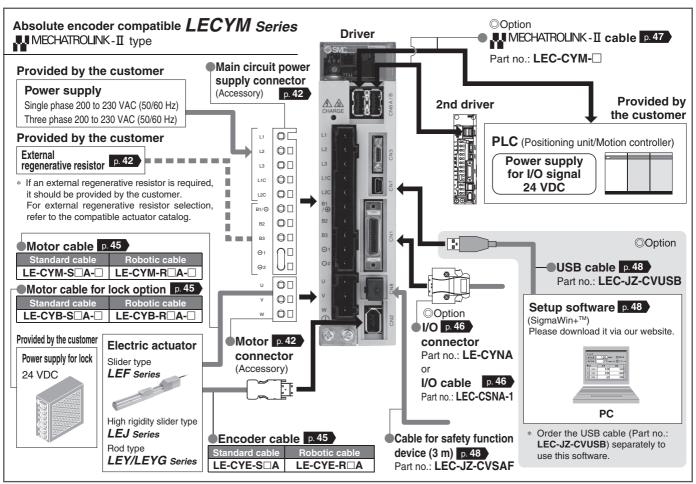

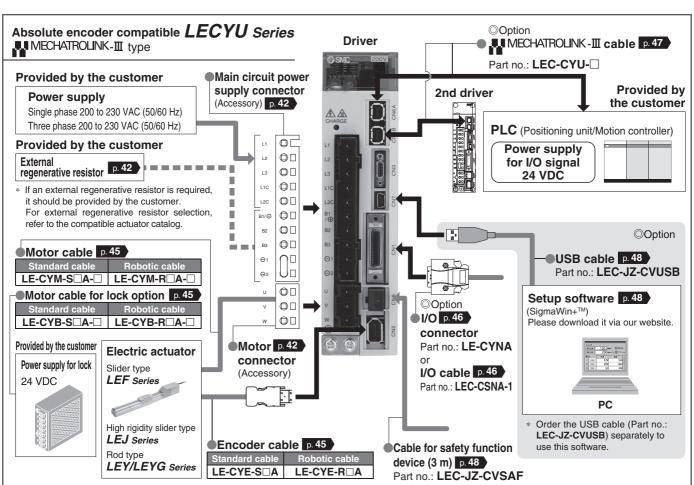

AC Servo Motor Driver

LECS Series

Power supply voltage

100 to 120 VAC 200 to 230 VAC

Motor capacity

100/200/400 W

CC-Link

Incremental Type

LECSA Series (Pulse input type/Positioning type)



• Up to 7 positioning points by point table

• Input type: Pulse input

• Control encoder: Incremental 17-bit encoder (Resolution: 131072 p/rev)

Parallel input: 6 inputsoutput: 4 outputs

LECSB Series (Pulse input type)



• Input type: Pulse input

• Control encoder: Absolute 18-bit encoder (Resolution: 262144 p/rev)

Parallel input: 10 inputs output: 6 outputs

LECSC Series (CC-Link direct input type)



Absolute Type

Position data/speed data setting and operation start/stop



- Up to 32 drivers can be connected (when 2 stations are occupied) with CC-Link communication.
- Applicable Fieldbus protocol: CC-Link (Ver. 1.10, Max. communication speed: 10 Mbps)
- Control encoder: Absolute 18-bit encoder (Resolution: 262144 p/rev)

LECSS Series (SSCNET III type)





- Compatible with Mitsubishi Electric's servo system controller network
- Reduced wiring and SSCNET III optical cable for one-touch connection
- The SSCNET III optical cable provides enhanced noise resistance.
- Up to 16 drivers can be connected with SSCNET III communication.
- Control encoder: Absolute 18-bit encoder (Resolution: 262144 p/rev)



Power supply voltage

200 to 240 VAC

Motor capacity

100/200/400 W

CC-Link

LECSB-T Series (Pulse input type/Positioning type)



- Positioning by up to 255 point tables
- Input type: Pulse input (Sink (NPN) type interface/Source (PNP) type interface)
- Control encoder: Absolute 22-bit encoder (Resolution: 4194304 p/rev)
- STO (Safe Torque Off) safety function available
- Parallel input: 10 inputs output: 6 outputs

LECSC-T Series (CC-Link direct input type)



- Position data/speed data setting and operation start/stop
- Positioning by up to 255 point tables (when 2 stations are occupied)
- Up to 32 drivers can be connected (when 2 stations are occupied) with CC-Link communication.
- Applicable Fieldbus protocol: CC-Link (Ver. 1.10, Max. communication speed: 10 Mbps)
- Control encoder: Absolute 18-bit encoder (Resolution: 262144 p/rev)

ECSN-T Series (Network card type)



- Supports ** Supports **, Ether CAT. **, and Ether Net/IP*
- Supports 3 types of network card (PROFINET, EtherCAT, and EtherNet/IP™)
- STO (Safe Torque Off) safety function available
- Control encoder: Absolute 22-bit encoder (Resolution: 4194304 p/rev)

LECSS-T Series (SSCNET III/H type)



Applicable Fieldbus protocol:

 SSCNETIII/H





- (High-speed optical communication, max. bidirectional communication speed: 150 Mbps)
- Bidirectional communication speed: 3 times
- SSCNET II/H and SSCNET III products are compatible.
- Improved noise resistance
- STO (Safe Torque Off) safety function available
- Control encoder: Absolute 22-bit encoder (Resolution: 4194304 p/rev)



Power supply voltage

200 to 230 VAC

Motor capacity

100/200/400 W

LECYM Series (MECHATROLINK-II type)





- Number of connectable drivers: 30 units (Transmission distance: Max. 50 m in total)
- Max. transmission speed: 10 Mbps
- Min. transmission cycle: 250 μs
- Control encoder: Absolute 20-bit encoder (Resolution: 1048576 p/rev)
- STO (Safe Torque Off) safety function available
- Compliant with the SEMI F47 Standard (Torque limit for low DC power supply voltage for main circuit)

LECYU Series (MECHATROLINK-III type)





- Applicable Fieldbus protocol: ♣️MECHATROLINK-Ⅲ
- Number of connectable drivers: 62 units (Transmission distance: Max. 75 m between stations)
- Max. transmission speed: 100 Mbps
- Min. transmission cycle: 125 μs
- Control encoder: Absolute 20-bit encoder (Resolution: 1048576 p/rev)
- STO (Safe Torque Off) safety function available
- Compliant with the SEMI F47 Standard (Torque limit for low DC power supply voltage for main circuit)

Absolute Type

AC Servo Motor

Incremental 7	Type/Absolute	Type LEC	S LECS	☐-T Series
---------------	---------------	----------	--------	------------

LECSA	LECSB	LECSC	LECSS
I FCCP T	THE COOK TO	J. J	LECSS T

How to Order p. 1
Dimensions p. 1
Specificationsp. 1
Power Supply Wiring Examplep. 2
Control Signal Wiring Examplep. 2
Options

AC Servo Motor

™ MECHATROLINK Compatible Absolute Type LECY□ Series

Specific Product Precautions



How to Orderp. 3	39
Dimensionsp. 3	39
Specificationsp. 4	10
Power Supply Wiring Examplep. 2	12
Control Signal Wiring Examplep. 4	13
Optionsp. 4	15

Compatible actuators

AC Servo Motor Driver

Incremental Type

LECSA Series (Pulse Input Type/Positioning Type)







* Only the LECSA and LECST-T are compliant

Absolute Type

LECSB (Pulse Input Type)/LECSC (CC-Link Direct Input Type)/LECSS (SSCNET II Type)

LECSB-T (Pulse Input Type/Positioning Type)/LECSC-T (CC-Link Direct Input Type)

Compatible motor type

LECSN-T (Network Card Type)/LECSS-T (SSCNET III/H Type) Series


How to Order

For LECSA/LECSB/LECSC/LECSS









Power supply voltage

1	100 to 120 VAC, 50/60 Hz
2	200 to 230 VAC, 50/60 Hz



* If an I/O connector is required, order the

part number "LE-CSN\(\sigma\)" separately. If an I/O cable is required, order the part number "LEC-CSN\(\sigma\)-1" separately.


(Since the electric actuator will not operate without emergency stop (EMG) wiring for the LECSB, an I/O connector or an I/O cable is required.)

	/1		
Symbol	Type	Capacity	Encoder
S1	AC servo motor (S2*1)	100 W	
S3 AC servo motor (S3*1)		200 W	Incremental
S4	AC servo motor (S4*1)*2	400 W	
S5 AC servo motor (S6*1)		100 W	
S7 AC servo motor (S7*1)		200 W	Absolute
S8	AC servo motor (S8*1)*2	400 W	

^{*1} The symbol shows the motor type (actuator).

For LECSB-T/LECSC-T/LECSS-T



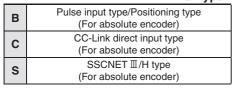

Power supply voltage

2	200 to 240 VAC, 50/60 Hz (For LECSB2-T/LECSS2-T)
2	200 to 230 VAC, 50/60 Hz (For LECSC2-T)



- If an I/O connector is required, order the part number "LE-CSN□" separately.
- * If an I/O cable is required, order the part number "LEC-CSN□-1" separately. (Since the electric actuator will not operate without forced stop (EM2) wiring when using the LECSB-T in any mode other than positioning mode, an I/O connector or an I/O cable is required.)

Compatible motor type

Type Symbol Capacity Encoder T5 AC servo motor (T6*1 100 W AC servo motor (T7*1 200 W **T7** Absolute AC servo motor (T8*1) **T8** 400 W AC servo motor (T9*1, *2) 750 W **T9**

*1 The symbol shows the motor type (actuator).

*2 Only supports the pulse input type/positioning type driver type

For LECSN-T

LECSN2-T5-9



Network card type N (For absolute encoder)

> Power supply voltage 200 to 240 VAC, 50/60 Hz

		Compan	ble illotol type
Symbol	Type	Capacity	Encoder
T5	AC servo motor (T6*1)	100 W	
T7 AC servo motor (T7*1)		200 W	Abaaluta
T8	AC servo motor (T8*1)	400 W	Absolute
T9	AC serve motor (T9*1)	750 W	

*1 The symbol shows the motor type (actuator).



- * If an I/O connector is required, order the part number "LE-CSNS" separately.
- If an I/O cable is required, order the part number "LEC-CSNS-1" separately.

Network card type*1


Nil	Nil Without network card			
E	EtherCAT			
9	EtherNet/IP™			
Р	PROFINET			


^{*1} Only the "Without network card" option is UL compliant.

^{*2} Only available for power supply voltage "200 to 230 VAC"

LECSA


For LECSA□-S1, S3 2 x ø6 Mounting hole 40 (Bearing surface thickness 5) CNP1 CNP2 130 120 CN1 9 CN3 5.5

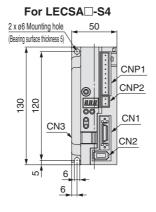

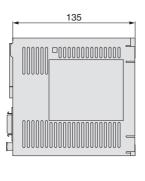


Connector name	Description
CN1	I/O signal connector
CN2	Encoder connector
CN3	USB communication connector
CNP1	Main circuit power supply connector
CNP2	Control circuit power supply connector


LECSB

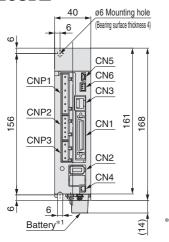



*1 Battery included

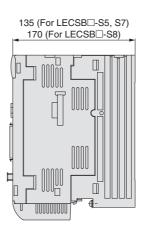


Connector name	Description
CN1	I/O signal connector
CN2	Encoder connector
CN3	RS-422 communication connector
CN4	Battery connector
CN5	USB communication connector
CN6	Analog monitor connector
CNP1	Main circuit power supply connector
CNP2	Control circuit power supply connector
CNP3	Servo motor power connector

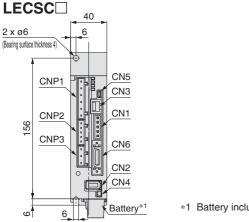

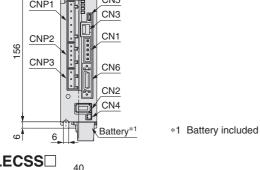

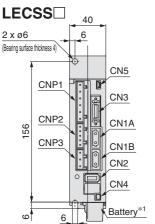

*1 Battery included

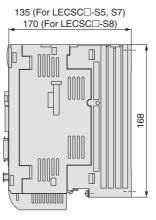

135 (For LECSS□-S5, S7) 170 (For LECSS□-S8)	1
	168


Description
CC-Link connector
Encoder connector
RS-422 communication connector
Battery connector
USB communication connector
I/O signal connector
Main circuit power supply connector
Control circuit power supply connector
Servo motor power connector

Connector name	Description
CN1A	Front axis connector for SSCNET II optical cable
CN1B	Rear axis connector for SSCNET II optical cable
CN2	Encoder connector
CN3	I/O signal connector
CN4	Battery connector
CN5	USB communication connector
CNP1	Main circuit power supply connector
CNP2	Control circuit power supply connector
CNP3	Servo motor power connector

LECS□/LECS□-T Series

Dimensions


LECSB2-T□

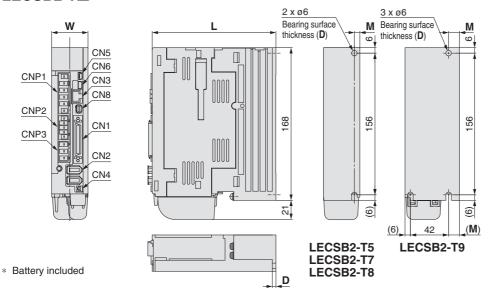


Connector name	Description
CN1	I/O signal connector
CN2	Encoder connector
CN3	RS-422 communication connector
CN4	Battery connector
CN5	USB communication connector
CN6	Analog monitor connector
CN8	STO input signal connector
CNP1	Main circuit power supply connector
CNP2	Control circuit power supply connector
CNP3	Servo motor power connector

Dimensions [mm]					
Model	M				
LECSB2-T5	40	135	4	6	
LECSB2-T7					
LECSB2-T8		170	5		
LECSB2-T9	60	185	6	12	

LECSC2-T□

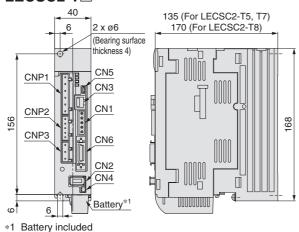

Connector name	Description
CN1	CC-Link connector
CN2	Encoder connector
CN3	RS-422 communication connector
CN4	Battery connector
CN5	USB communication connector
CN6	I/O signal connector
CNP1	Main circuit power supply connector
CNP2	Control circuit power supply connector
CNP3	Servo motor power connector

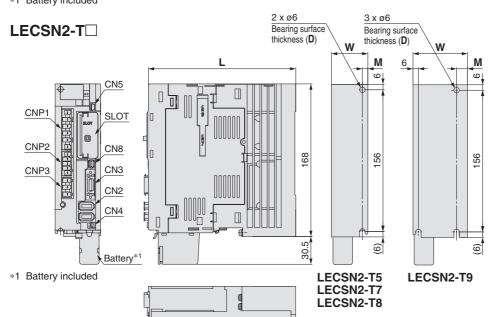

Connector name	Description
CN3	I/O signal connector
CN2	Encoder connector
CN4	Battery connector
CN5	USB communication connector
CN8	STO input signal connector
CNP1	Main circuit power supply connector
CNP2	Control circuit power supply connector
CNP3	Servo motor power connector
SLOT	Network card slot


Dimensions				[mm]
Model	W	L	D	M
LECSN2-T5				
LECSN2-T7	50	161	5	6
LECSN2-T8				
LECSN2-T9	60	191	6	12

D

AC Servo Motor Driver LECS /LECS -T Series

Dimensions

LECSS2-T□

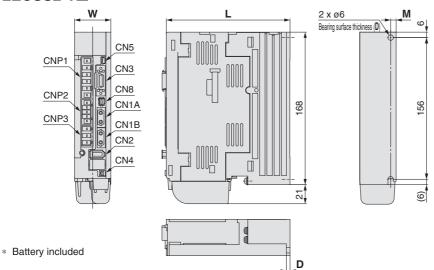

Connector name	Description
CN1A	Front axis connector for SSCNET III/H
CN1B	Rear axis connector for SSCNET II/H
CN2	Encoder connector
CN3	I/O signal connector
CN4	Battery connector
CN5	USB communication connector
CN8	STO input signal connector
CNP1	Main circuit power supply connector
CNP2	Control circuit power supply connector
CNP3	Servo motor power connector

Dimensions				[mm]
Model	W	L	D	M
LECSS2-T5		135	4	
LECSS2-T7	40	133	4	6
LECSS2-T8		170	5	

LECS□/**LECS**□-**T** Series

Specifications

LECSA Series

	Model	LECSA1-S1	LECSA1-S3	LECSA2-S1	LECSA2-S3	LECSA2-S4	
Compatil	ole motor capacity [W]	100 200 100 200			400		
Compatil	ole encoder		Incremental 17-bi	t encoder (Resolution	on: 131072 p/rev)		
Main	Power voltage [V]	Single phase 100 to	gle phase 100 to 120 VAC (50/60 Hz) Single phase 200 to 2			0 VAC (50/60 Hz)	
power	Allowable voltage fluctuation [V]	Single phase 85 to 132 VAC		Singl	e phase 170 to 253	VAC	
supply	Rated current [A]	3.0	5.0	1.5	2.4	4.5	
Control	Control power supply voltage [V]			24 VDC			
power	Allowable voltage fluctuation [V]			21.6 to 26.4 VDC			
supply	Rated current [A]			0.5			
Parallel i	nput			6 inputs			
Parallel c	output			4 outputs			
Max. inpu	ut pulse frequency [pps]		1 M (for differentia	receiver), 200 k (fo	or open collector)*2		
	In-position range setting [pulse]	0 to ±65535 (Command pulse unit)					
	Error excessive	±3 rotations					
Function	Torque limit	Parameter setting					
	Communication		l	JSB communication	١		
	Point table			Up to 7 points			
Operating	g temperature range [°C]		(to 55 (No freezing)		
Operating	g humidity range [%RH]		90 oi	r less (No condensa	ation)		
Storage t	temperature range [°C]	-20 to 65 (No freezing)					
Storage humidity range [%RH]		90 or less (No condensation)					
Insulatio	n resistance [MΩ]		Between the	housing and SG: 1	0 (500 VDC)		
Weight [g] 600 700				00		700	

LECSB Series

	Model	LECSB1-S5	LECSB1-S7	LECSB2-S5	LECSB2-S7	LECSB2-S8	
Compatil	ole motor capacity [W]	100	200	100	200	400	
Compatil	ole encoder		Absolute 18-bit	encoder (Resolution	n: 262144 p/rev)		
Main	Power voltage [V]	Single phase 100 to	Single phase 100 to 120 VAC (50/60 Hz)		Three phase 200 to 230 VAC (50/60 Hz) Single phase 200 to 230 VAC (50/60 Hz)		
power supply	Allowable voltage fluctuation [V]	Single phase 8	85 to 132 VAC	Three phase 170 to 253 VAC Single phase 170 to 253 VAC			
	Rated current [A]	3.0	5.0	0.9	1.5	2.6	
Control	Control power supply voltage [V]	Single phase 100 to	120 VAC (50/60 Hz)	Single pha	se 200 to 230 VAC	(50/60 Hz)	
power	Allowable voltage fluctuation [V]	Single phase 8	85 to 132 VAC	Single phase 170 to 253 VAC		VAC	
supply	Rated current [A]	0.4		0.2			
Parallel in	nput			10 inputs			
Parallel o	output			6 outputs			
Max. inpu	ut pulse frequency [pps]	1 M (for differential receiver), 200 k (for open collector)*2					
	In-position range setting [pulse]	0 to ±10000 (Command pulse unit)					
Function	Error excessive			±3 rotations			
unction	Torque limit	Parameter setting or external analog input setting (0 to 10 VDC)					
	Communication		USB commur	nication, RS422 con	nmunication*1		
Operating	g temperature range [°C]		(to 55 (No freezing)		
Operating	g humidity range [%RH]		90 oi	r less (No condensa	ation)		
Storage temperature range [°C] —20 to 65 (No freezing)							
Storage I	numidity range [%RH]	90 or less (No condensation)					
Insulation	n resistance [MΩ]		Between the	housing and SG: 1	0 (500 VDC)		
Weight [g] 800 1000					1000		



^{*1} USB communication and RS422 communication cannot be performed at the same time.
*2 If the command pulse input is open collector method, it supports only the sink (NPN) type interface. It does not correspond to the source (PNP) type

AC Servo Motor Driver LECS /LECS -T Series

Specifications

LECSC Series

LLCSC		odel	LECSC1-S5	LECSC1-S7	LECSC2-S5	LECSC2-S7	LECSC2-S8
Compatib	le motor cap	acity [W]	100	200	100	200	400
Compatib	le encoder		Absolute 18-bit encoder (Resolution: 262144 p/rev)				
Main	Power voltage [V]		Single phase 1 (50/6			se 200 to 230 VAC se 200 to 230 VAC	` '
power supply	Allowable v	oltage fluctuation [V]	Single phase 8	35 to 132 VAC		e phase 170 to 253 e phase 170 to 253	
	Rated curre	nt [A]	3.0	5.0	0.9	1.5	2.6
Control	Control pow	ver supply voltage [V]	Single phase 1 (50/6		Single	e phase 200 to 230 (50/60 Hz)	VAC
supply	Allowable ve	oltage fluctuation [V]	Single phase 8	35 to 132 VAC	Single	e phase 170 to 253	VAC
	Rated curre		0.	.4		0.2	
	Applicable Fi	ieldbus protocol (Version)		CC-Link	communication (V	er. 1.10)	
	Connection	cable	CC-Link	Ver. 1.10 complia	nt cable (Shielded 3	3-core twisted pair	cable)*1
Communication specifications	Remote stat	ion number			1 to 64		
	Cable length	Communication speed [bps]/ Maximum overall cable length [m]	16 k/1200, 625 k/900, 2.5 M/400, 5 M/160, 10 M/100				
	length	Cable length between stations [m]	0.2 or more				
	I/O occupation area (Inputs/Outputs)		1 station occupied (Remote I/O 32 points/32 points)/(Remote register 4 words/4 words) 2 stations occupied (Remote I/O 64 points/64 points)/(Remote register 8 words/8 words)				
	Number of connectable drivers		Up to 42 (when 1 station is occupied by 1 driver), Up to 32 (when 2 stations are occupied by 1 driver), when there are only remote device stations.				
	Remote reg	ister input	Available with CC-Link communication (2 stations occupied)				
Command method	Point table I	No. input	CC-Link communi	cation (1 station oc cation (2 stations o	on, RS422 commun ccupied): 31 points occupied): 255 poin		
	Indexer positioning input		Available with CC-Link communication CC-Link communication (1 station occupied): 31 points CC-Link communication (2 stations occupied): 255 points				
Communication function			USB communication, RS-422 communication*2				
Operating temperature range [°C]			0 to 55 (No freezing)				
Operating humidity range [%RH]			90 or less (No condensation)				
Storage temperature range [°C]			-20 to 65 (No freezing)				
Storage humidity range [%RH]			90 or less (No condensation)				
Insulation resistance [M Ω]			Between the housing and SG: 10 (500 VDC)				
Weight [g			800 1000				
1 If the eve	tom comprisos	of both CC-Link Ver. 1.00 a	nd Ver 1 10 complis	ent cables Ver 1 00	enacifications are a	onlied to the overall	cable length and th

^{*1} If the system comprises of both CC-Link Ver. 1.00 and Ver. 1.10 compliant cables, Ver. 1.00 specifications are applied to the overall cable length and the cable length between stations.

LECSS Series

	Model	LECSS1-S5	LECSS1-S7	LECSS2-S5	LECSS2-S7	LECSS2-S8
Compati	ble motor capacity [W]	100	200	100	200	400
Compati	ble encoder		Absolute 18-bit	encoder (Resolutio	n: 262144 p/rev)	
Main	Power voltage [V]		00 to 120 VAC 0 Hz)		se 200 to 230 VAC se 200 to 230 VAC	` ,
power supply	Allowable voltage fluctuation [V]	Single phase	85 to 132 VAC	Three phase 170 to 253 VAC Single phase 170 to 253 VAC		
	Rated current [A]	3.0	5.0	0.9	1.5	2.6
Control	Control power supply voltage [V]	Single phase 100 to 120 VAC (50/60 Hz)		Single phase 200 to 230 VAC (50/60 Hz)		
power supply	Allowable voltage fluctuation [V]	Single phase 85 to 132 VAC		Single phase 170 to 253 VAC		
oupp.y	Rated current [A]	0.4 0.2				
Applicab	le Fieldbus protocol	SSCNET II (High-speed optical communication)				
Commur	nication function	USB communication				
Operatin	g temperature range [°C]	0 to 55 (No freezing)				
Operatin	g humidity range [%RH]	90 or less (No condensation)				
Storage temperature range [°C]			-2	20 to 65 (No freezin	ıg)	
Storage humidity range [%RH]		90 or less (No condensation)				
Insulation resistance [MΩ]		Between the housing and SG: 10 (500 VDC)				
Weight [g]		80	00		1000



^{*2} USB communication and RS422 communication cannot be performed at the same time.

LECS□/**LECS**□-**T** Series

Specifications

LECSB-T Series

	Model	LECSB2-T5	LECSB2-T7	LECSB2-T8	LECSB2-T9	
Compati	ble motor capacity [W]	100	200	400	750	
Compati	ble encoder	Ab	solute 22-bit encoder (F	Resolution: 4194304 p/re	ev)	
Main	Power voltage [V]	Three phase 200	to 240 VAC (50/60 Hz),	Single phase 200 to 24	0 VAC (50/60 Hz)	
power	Allowable voltage fluctuation [V]	Three phase 170 to 264 VAC (50/60 Hz), Single phase 170 to 264 VAC (50/60 Hz)				
supply	Rated current [A]	0.9	1.5	2.6	3.8	
Control	Control power supply voltage [V]		Single phase 200 to	240 VAC (50/60 Hz)		
power	Allowable voltage fluctuation [V]		Single phase 1	70 to 264 VAC		
supply	Rated current [A]		0	.2		
Parallel i	nput		10 ir	puts		
Parallel o	Parallel output 6 outputs					
Max. inp	ut pulse frequency [pps]	4 M (for differential receiver), 200 k (for open collector)				
	In-position range setting [pulse]	0 to ±65535 (Command pulse unit)				
	Error excessive	±3 rotations				
Function	Torque limit	Parameter setting or external analog input setting (0 to 10 VDC)				
runction	Communication	USB communication, RS422 communication*1				
	Point table	Up to 255 points				
	Pushing operation	Point table no. input method, Up to 127 points				
Operatin	g temperature range [°C]		0 to 55 (N	o freezing)		
Operatin	g humidity range [%RH]		90 or less (No	condensation)		
Storage 1	temperature range [°C]	-20 to 65 (No freezing)				
Storage humidity range [%RH]			90 or less (No	condensation)		
Insulatio	n resistance [MΩ]		Between the housing	and SG: 10 (500 VDC)		
Weight [g]	80	00	1000	1400	

st 1 USB communication and RS422 communication cannot be performed at the same time.

LECSC-T Series

	Model		LECSC2-T5	LECSC2-T7	LECSC2-T8		
Compatil	ole motor cap	acity [W]	100	200	400		
Compatil	ole encoder		Absolute 18-bit encoder (Resolution: 262144 p/rev)				
Main	Power volta	ge [V]	Three phase 200 to 230 VAC (50/60 Hz), Single phase 200 to 230 VAC (50/60 Hz)				
power Allowable voltage flu		oltage fluctuation [V]	Three phase 1	70 to 253 VAC, Single phase 1	70 to 253 VAC		
supply	supply Rated current [A]		0.9	1.5	2.6		
Control	Control pow	er supply voltage [V]	Sing	e phase 200 to 230 VAC (50/60) Hz)		
power	Allowable ve	oltage fluctuation [V]		Single phase 170 to 253 VAC			
supply	Rated curre	nt [A]		0.2			
	Applicable Fi	ieldbus protocol (Version)	C	C-Link communication (Ver. 1.1	0)		
	Connection	cable	CC-Link Ver. 1.10 cc	empliant cable (Shielded 3-core	twisted pair cable)*1		
	Remote stat	tion number		1 to 64			
Communication specifications	Cable length	Communication speed [bps]/ Maximum overall cable length [m]	16 k/1200, 625 k/900, 2.5 M/400, 5 M/160, 10 M/100				
specifications	lengui	Cable length between stations [m]	0.2 or more				
	I/O occupati (Inputs/Out		1 station occupied (Remote I/O 32 points/32 points)/(Remote register 4 words/4 words) 2 stations occupied (Remote I/O 64 points/64 points)/(Remote register 8 words/8 words)				
	Number of o	connectable drivers	Up to 42 (when 1 station is occupied by 1 driver), Up to 32 (when 2 stations are occupied by 1 driver), when there are only remote device stations.				
	Remote reg	ister input	Available with CC-Link communication (2 stations occupied)				
Command method	Point table I	No. input	Available with CC-Link communication, RS422 communication CC-Link communication (1 station occupied): 31 points, CC-Link communication (2 stations occupied): 255 points RS422 communication: 255 points				
	Indexer positioning input		Available with CC-Link communication CC-Link communication (1 station occupied): 31 points, CC-Link communication (2 stations occupied): 255 points				
Commun	ication functi	ion	USB communication, RS-422 communication*2				
	g temperature			0 to 55 (No freezing)			
Operating humidity range [%RH]			90 or less (No condensation)				
	emperature r	0.1	-20 to 65 (No freezing)				
	numidity rang		90 or less (No condensation)				
Insulatio	n resistance [[MΩ]	Between the housing and SG: 10 (500 VDC)				
Weight [9]		80	00	1000		

^{*1} If the system comprises of both CC-Link Ver. 1.00 and Ver. 1.10 compliant cables, Ver. 1.00 specifications are applied to the overall cable length and the cable length between stations.

*2 USB communication and RS422 communication cannot be performed at the same time.



AC Servo Motor Driver LECS /LECS -T Series

Specifications

LECSN-T Series

	Model	LECSN2-T5	LECSN2-T7	LECSN2-T8	LECSN2-T9		
Compatil	ole motor capacity [W]	100	200	400	750		
Compatil	ole encoder	Ab	solute 22-bit encoder (F	Resolution: 4194304 p/r	ev)		
Main	Power voltage [V]	Three phase 200 to 240 VAC (50/60 Hz), Single phase 200 to 240 VAC (50/60 Hz)					
power	Allowable voltage fluctuation [V]	Three phase 170 to 264 VAC (50/60 Hz), Single phase 170 to 264 VAC (50/60 Hz					
supply	Rated current [A]	0.9	1.5	2.6	3.8		
Control	Control power supply voltage [V]		Single phase 200 to	240 VAC (50/60 Hz)			
power	Allowable voltage fluctuation [V]	Single phase 170 to 264 VAC					
supply	Rated current [A]	0.2					
Applicable Fieldbus protocol		PROFINET, EtherCAT, EtherNet/IP™					
Function	Communication	USB communication					
runction	Point table*1	Up to 255 points					
Operating	g temperature range [°C]	0 to 55 (No freezing)					
Operating	g humidity range [%RH]	90 or less (No condensation)					
Storage temperature range [°C]		-20 to 65 (No freezing)					
Storage humidity range [%RH]		90 or less (No condensation)					
Insulation resistance [MΩ]		Between the housing and SG: 10 (500 VDC)					
Weight [o	3]		1000		1400		

^{*1} Only supports PROFINET and EtherCAT


LECSS-T Series

Model		LECSS2-T5	LECSS2-T7	LECSS2-T8		
Compatil	ble motor capacity [W]	100	200	400		
Compatil	ble encoder	Absolute 2	2-bit encoder (Resolution: 4194	1304 p/rev)		
Main	Power voltage [V]	Three phase 200 to 240 VAC (50/60 Hz), Single phase 200 to 240 VAC (50/60 Hz)				
power	Allowable voltage fluctuation [V]	Three phase 170 to 264 VAC (50/60 Hz), Single phase 170 to 264 VAC (50/60 Hz)				
supply	Rated current [A]	0.9	1.5	2.6		
Control	Control power supply voltage [V]	Sing	le phase 200 to 240 VAC (50/60) Hz)		
power	Allowable voltage fluctuation [V]					
supply	Rated current [A]		0.2			
Applicab	ole Fieldbus protocol	SSCNET II/H (High-speed optical communication)				
Commun	nication function	USB communication				
Operatin	ng temperature range [°C]	0 to 55 (No freezing)				
Operatin	ng humidity range [%RH]	90 or less (No condensation)				
Storage temperature range [°C]		-20 to 65 (No freezing)				
Storage humidity range [%RH]		90 or less (No condensation)				
Insulation resistance [M Ω]		Betwee	en the housing and SG: 10 (500) VDC)		
Weight [g	g]	80	00	1000		

LECS□/LECS□-T Series

Power Supply Wiring Example: LECSA

LECSA□-□

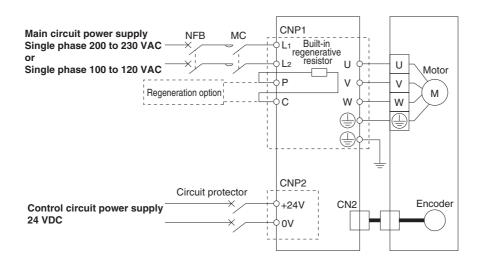



Main Circuit Power Supply Connector: CNP1 * Accessory

Terminal name	Function	Details	
	Protective earth (PE)	Should be grounded by connecting the servo motor's earth terminal and the control panel's protective earth (PE)	
L ₁	Main circuit	Connect the main circuit power supply. LECSA1: Single phase 100 to 120 VAC, 50/60 Hz	
L2	power supply	LECSA2: Single phase 200 to 230 VAC, 50/60 Hz	
Р	Regeneration option	Terminal to connect regeneration option LECSA□-S1: Not connected at time of shipping LECSA□-S3, S4: Connected at time of shipping	
С	negeneration option	If regeneration option is required for "Model Selection," connect to this terminal.	
U	Servo motor power (U)		
V	Servo motor power (V)	Connect to motor cable (U, V, W).	
W	Servo motor power (W)		

Control Circuit Power Supply Connector: CNP2 * Accessory


Terminal name	Function	Details
24V	Control circuit power supply (24 V)	24 V side of the control circuit power supply (24 VDC) supplied to the driver
0V	Control circuit power supply (0 V)	0 V side of the control circuit power supply (24 VDC) supplied to the driver

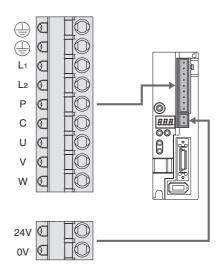

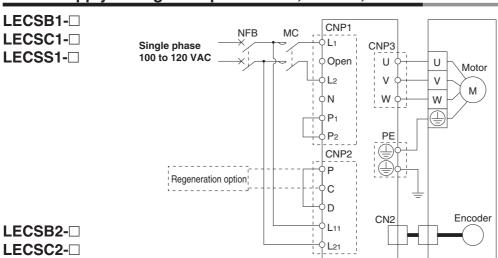


For single phase 200 VAC

LECSS2-□

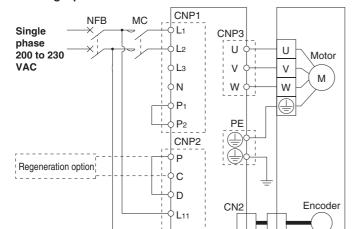



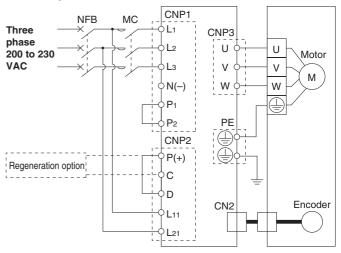

* For single phase 200 to 230 VAC, power supply should be connected to L1 and L2 terminals, with nothing connected to L3.

Main Circuit Power Supply Connector: CNP1 * Accessory


Terminal name	Function	Details
L ₁		Connect the main circuit power supply.
L2	Main circuit power supply	LECSB1/LECSC1/LECSS1: Single phase 100 to 120 VAC, 50/60 Hz Connection terminal: L1, L2 LECSB2/LECSC2/LECSS2: Single phase 200 to 230 VAC, 50/60 Hz Connection terminal: L1, L2
Lз	parrar cappin	Three phase 200 to 230 VAC, 50/60 Hz Connection terminal: L1, L2, L3
N	Do not connect.	
P ₁		Connect between P ₁ and P ₂ . (Connected at time of shipping)
P ₂	'	Connect between F1 and F2. (Connected at time of shipping)

Control Circuit Power Supply Connector: CNP2 * Accessory

Terminal name	Function	Details			
Р	Regeneration	Connect between P and D. (Connected at time of shipping)			
С	option	* If regeneration option is required for "Model Selection," connect to this			
D	ориоп	terminal.			
L ₁₁	Control circuit	Connect the control circuit power supply. LECSB1/LECSC1/LECSS1: Single phase 100 to 120 VAC, 50/60 Hz Connection terminal: L11, L21			
L21	power supply	LECSB1/LECSC1/LECSS1: Single phase 100 to 120 VAC, 50/60 Hz. Connection terminal: L11, L21 LECSB2/LECSC2/LECSS2: Single phase 200 to 230 VAC, 50/60 Hz. Connection terminal: L11, L21			

Motor Connector: CNP3 * Accessory

Terminal name	Function	Details
U	Servo motor power (U)	
V	Servo motor power (V)	Connect to motor cable (U, V, W).
W	Servo motor power (W)	

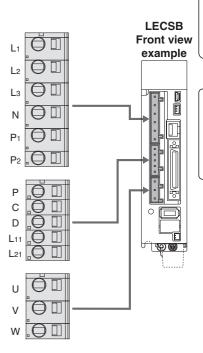

LECS / LECS - T Series


LECY Series

Specific Product Precautions


LECS /LECS -T Series

Power Supply Wiring Example: LECSB2-T□, LECSS2-T□, LECSN2-T□

For single phase 200 VAC

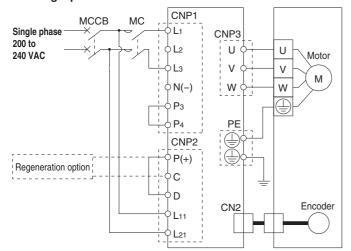

For three phase 200 VAC

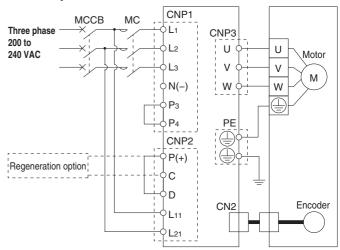

* For single phase 200 to 240 VAC, power supply should be connected to L₁ and L₃ terminals, with nothing connected to L₂. Please note that the wiring locations differ from the LECS□.

Main Circuit Power Supply Connector: CNP1 | * Acce


Terminal name	Function	Details		
L ₁		Connect the main circuit power supply.		
L ₂	Main circuit	LECSB2-T/LECSS2-T/LECSN2-T:		
Lз	power supply	Single phase 200 to 240 VAC, 50/60 Hz Connection terminal: L1, L3 Three phase 200 to 240 VAC, 50/60 Hz Connection terminal: L1, L2, L3		
N(-)	Do not connect.			
Рз	Connect between P ₃ and P ₄ . (Connected at time of shipping)			
P4	,	Connect between P3 and P4. (Connected at time of shipping)		

Control Circuit Power Supply Connector: CNP2 | * Accessory

Terminal name	Function	Details	
P(+)	Regeneration option	Connect between P(+) and D. (Connected at time of shipping) * If regeneration option is required for "Model Selection," connect to this	
D	option	terminal.	
L ₁₁	Control circuit	Connect the control circuit power supply. LECSB2-T/LECSS2-T/LECSN2-T:	
L21	power supply	Single phase 200 to 240 VAC, 50/60 Hz Connection terminal: L ₁₁ , L ₂₁	

Motor Connector: CNP3 * Accessory

Terminal na	me Function	Details
U	Servo motor power (U)	
V	Servo motor power (V)	Connect to motor cable (U, V, W).
W	Servo motor power (W)	

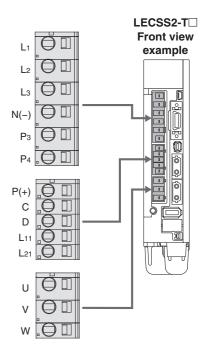

Power Supply Wiring Example: LECSC2-T□

P4

CNP2

P(+)

С

D


L11

L21

For single phase 200 VAC CNP1 NFB МС L₁ Single phase CNP3 200 to U U 230 VAC Lз ٧ ٧ N W W

Regeneration option

For three phase 200 VAC

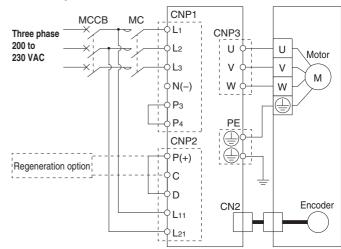

* For single phase 200 to 230 VAC, power supply should be connected to L1 and L2 terminals, with nothing connected to L3.

Motor

Μ

Main Circuit Power Supply Connector: CNP1 * Accessory

Terminal name	Function	Details
L ₁	Main circuit	Connect the main circuit power supply.
L ₂	power supply	LECSC2-T: Single phase 200 to 230 VAC, 50/60 Hz Connection terminal: L1, L2
Lз	power suppry	Three phase 200 to 230 VAC, 50/60 Hz Connection terminal: L1, L2, L3
N	Do not connect.	
Рз	Connect between P ₃ and P ₄ . (Connected at time of shipping)	
P4	'	Connect between P3 and P4. (Connected at time of shipping)


CN₂

Control Circuit Power Supply Connector: CNP2 * Accessory

Terminal name	Function	Details	
P(+)	Regeneration option	Connect between P and D. (Connected at time of shipping) * If regeneration option is required for "Model Selection," connect to this	
D	Орион	terminal.	
L11	Control circuit	Connect the control circuit power supply.	
L21	power supply	LECSC2-T: Single phase 200 to 230 VAC, 50/60 Hz Connection terminal: L11, L21	

Motor Connector: CNP3 * Accessory

Terminal name	Function	Details
U	Servo motor power (U)	
V	Servo motor power (V)	Connect to motor cable (U, V, W).
\//	Servo motor nower (W)	

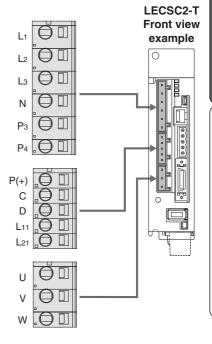


LECS /LECS -T Series

Control Signal Wiring Example: LECSA

LECSA□-□

This wiring example shows connection with a PLC (FX3U- $\square\square$ MT/ES) manufactured by Mitsubishi Electric Corporation as when used in position control mode. Refer to the LECSA series Operation Manual and any technical literature or operation manuals for your PLC and positioning unit before connecting to another PLC or positioning unit.

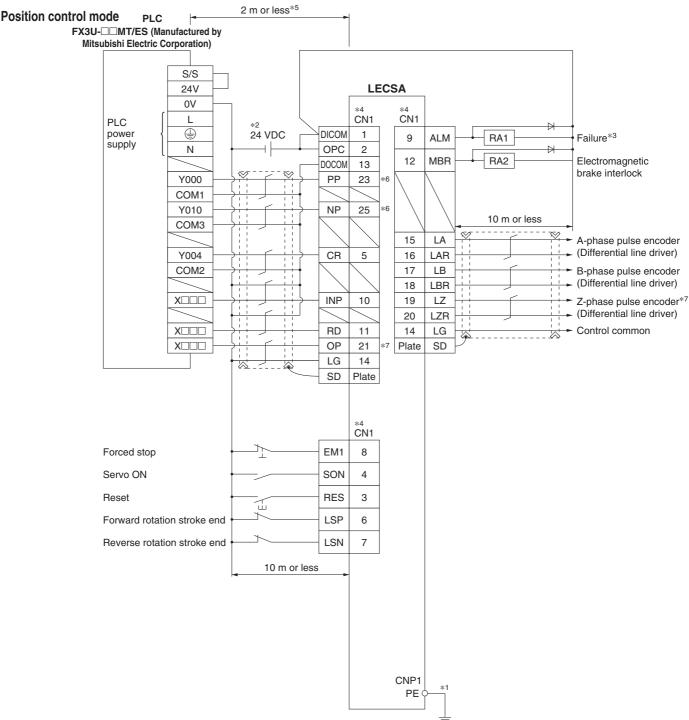


- *1 For preventing electric shock, be sure to connect the driver main circuit power supply connector (CNP1)'s protective earth (PE) terminal (marked 🏐) to the control panel's protective earth (PE).
- *2 For interface use, supply 24 VDC ±10% 200 mA using an external source. 200 mA is the value when all I/O command signals are being used. In addition, reducing the number of inputs/outputs can decrease the current capacity. Refer to the Operation Manual for required current for interface.
- *3 The failure (ALM) is normally ON. When it is OFF (alarm occurs), stop the PLC signal using the sequence program.
- *4 Signals of the same name are connected inside the driver.
- *5 For command pulse input with an open collector method. When a positioning unit loaded with a differential line driver method is used, it is 10 m or less.
- *6 If the command pulse input is open collector method, it supports only the sink (NPN) type interface. It does not correspond to the source (PNP) type
- *7 The Z-phase pulse encoder corresponds to the differential line driver method and the open collector method. If the Z-phase pulse encoder is using the open collector method, it supports only the sink (NPN) type interface. It does not correspond to the source (PNP) type interface.

AC Servo Motor Driver LECS /LECS -T Series

Control Signal Wiring Example: LECSA

In this wiring example, the device of the CN1-10 pin in the initial status has been changed to the device shown below. For details on the device and changing method, refer to the LECSA series Operation Manual. CN1-10: MEND (Travel completion)

Positioning mode (Point table method) For sink (NPN) I/O interface

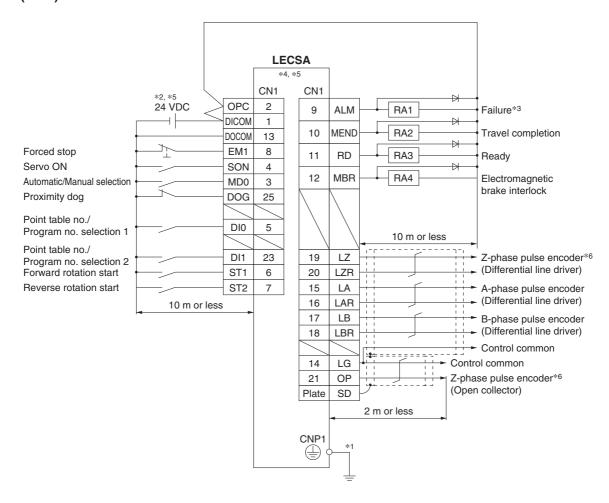


- *1 For preventing electric shock, be sure to connect the driver's protective earth (PE) terminal (marked 🏐) to the control panel's protective earth (PE).
- *2 For interface use, supply 24 VDC ±10% 200 mA using an external source. 200 mA is the value when all I/O command signals are being used. In addition, reducing the number of inputs/outputs can decrease the current capacity.
- *3 The failure (ALM) is normally ON.
- *4 Signals of the same name are connected inside the driver.
- *5 The wiring example is for the sink (NPN) type interface. Refer to the LECSA series Operation Manual for the source (PNP) type interface. Note that the 23 pin and 25 pin cannot be used for the source type interface.
- *6 The Z-phase pulse encoder corresponds to the differential line driver method and the open collector method. If the Z-phase pulse encoder is using the open collector method, it supports only the sink (NPN) type interface. It does not correspond to the source (PNP) type interface.



LECS /LECS -T Series

Control Signal Wiring Example: LECSB


This wiring example shows connection with a positioning unit (QD75D) manufactured by Mitsubishi Electric Corporation as when used in position control mode. Refer to the LECSB series Operation Manual and any technical literature or operation manuals for your PLC and positioning unit before connecting to another PLC or positioning unit.

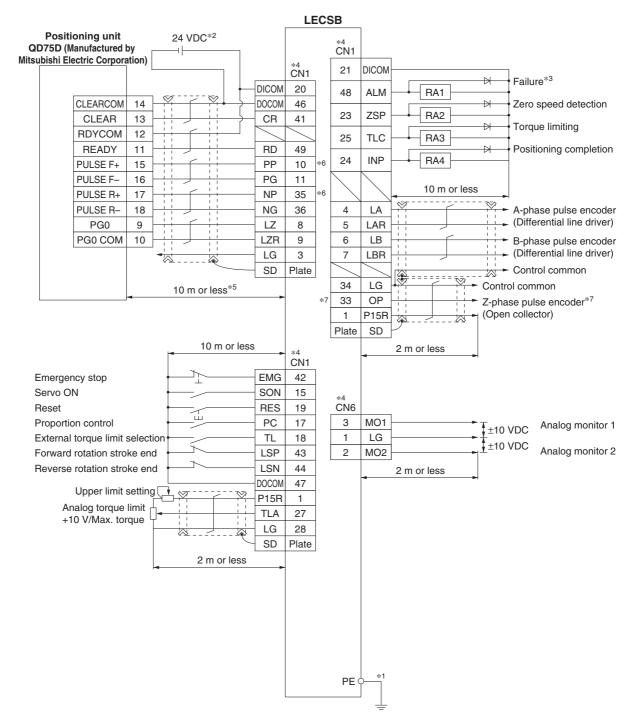

- *1 For preventing electric shock, be sure to connect the driver's protective earth (PE) terminal (marked 🏐) to the control panel's protective earth (PE).
- *2 For interface use, supply 24 VDC $\pm 10\%$ 300 mA using an external source.
- *3 The failure (ALM) is normally ON. When it is OFF (alarm occurs), stop the PLC signal using the sequence program.
- *4 Signals of the same name are connected inside the driver.
- *5 For command pulse input with a differential line driver method. For open collector method, it is 2 m or less.
- *6 If the command pulse input is open collector method, it supports only the sink (NPN) type interface. It does not correspond to the source (PNP) type interface.
- *7 The Z-phase pulse encoder corresponds to the differential line driver method and the open collector method. If the Z-phase pulse encoder is using the open collector method, it supports only the sink (NPN) type interface. It does not correspond to the source (PNP) type interface.




Control Signal Wiring Example: LECSC, LECSC2-T□

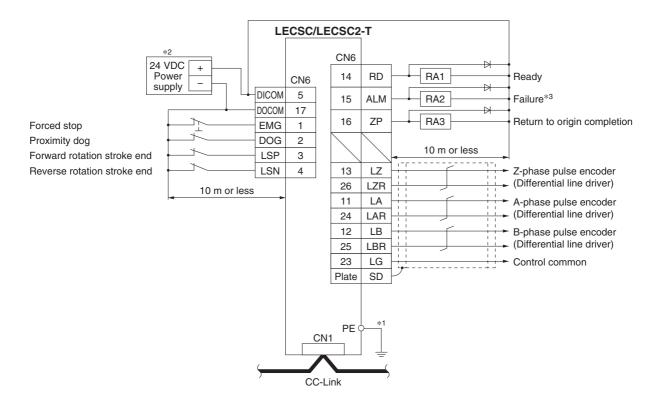

- *1 For preventing electric shock, be sure to connect the driver's protective earth (PE) terminal (marked 🏐) to the control panel's protective earth (PE).
- *2 For interface use, supply 24 VDC ±10% 150 mA using an external source.
- *3 The failure (ALM) is normally ON. When it is OFF (alarm occurs), stop the PLC signal using the sequence program.

LECS /LECS -T Series

Control Signal Wiring Example: LECSS

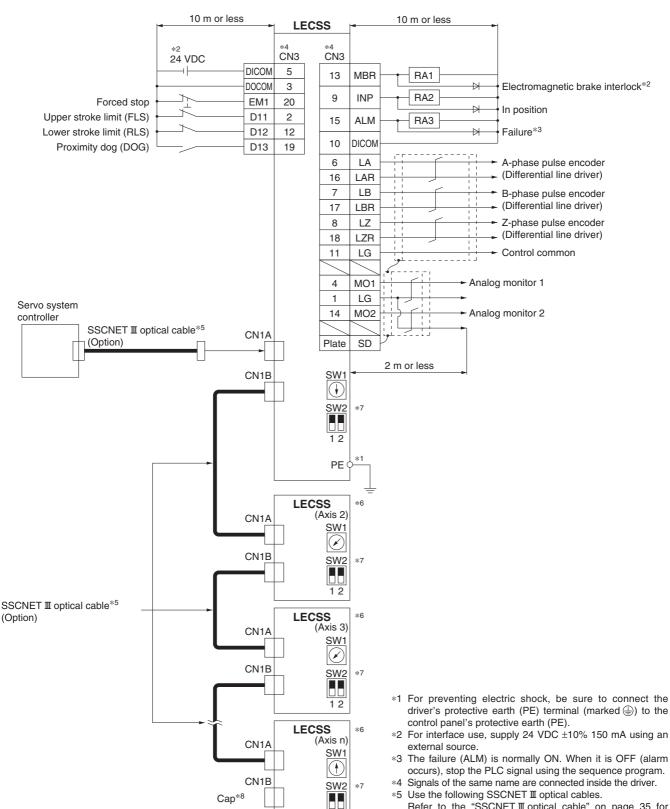

- driver's protective earth (PE) terminal (marked (a)) to the

- Refer to the "SSCNET III optical cable" on page 35 for cable product numbers.

Cable	Product no.	Cable length
SSCNET III optical cable	LE-CSS-□	0.15 m to 3 m

- *6 Connections from Axis 2 onward are omitted.
- *7 Up to 16 axes can be set.
- *8 Be sure to place a cap on unused CN1A/CN1B.




1 2

AC Servo Motor Driver LECS /LECS -T Series

Control Signal Wiring Example: LECSB2-T□

This wiring example shows connection with a positioning unit (QD75D) manufactured by Mitsubishi Electric Corporation as when used in position control mode. Refer to the LECSB 2 -T series Operation Manual and any technical literature or operation manuals for your PLC and positioning unit before connecting to another PLC or positioning unit.

Position control mode For sink (NPN) I/O interface

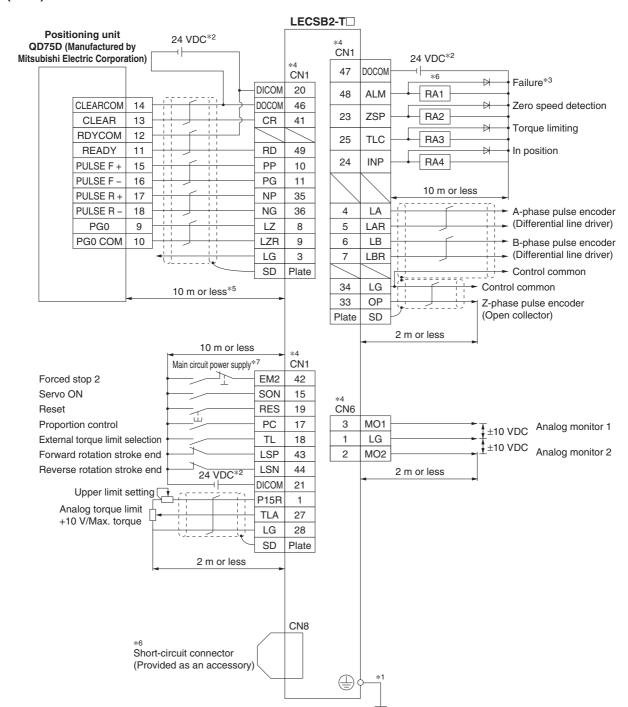

- *1 For preventing electric shock, be sure to connect the driver's protective earth (PE) terminal (marked 🏐) to the control panel's protective earth (PE).
- *2 For interface use, supply 24 VDC ±10% using an external source. Set the total current capacity to 500 mA. 500 mA is the value when all I/O command signals are being used. In addition, reducing the number of inputs/outputs can decrease the current capacity.
- *3 The failure (ALM) is normally ON. When it is OFF (alarm occurs), stop the PLC signal using the sequence program.
- *4 Signals of the same name are connected inside the driver.
- *5 For command pulse input with a differential line driver method. For open collector method, it is 2 m or less.
- *6 When not using the STO function, use the driver with the short-circuit connector (provided as an accessory) inserted.
- *7 Configure a circuit to turn off EM2 when the main circuit power is turned off to prevent any unexpected restarts of the driver.




LECS /LECS -T Series

Control Signal Wiring Example: LECSB2-T□

In this wiring example, the devices of the CN1-22 pin, CN1-23 pin, and CN1-25 pin in the initial status have been changed to the devices shown below. For details on the devices and changing method, refer to the LECSB2-T series Operation Manual. CN1-22: CPO (Rough match)/CN1-23: ZP (Return to origin completion)/CN1-25: MEND (Travel completion)

Positioning mode (Point table method) For sink (NPN) I/O interface

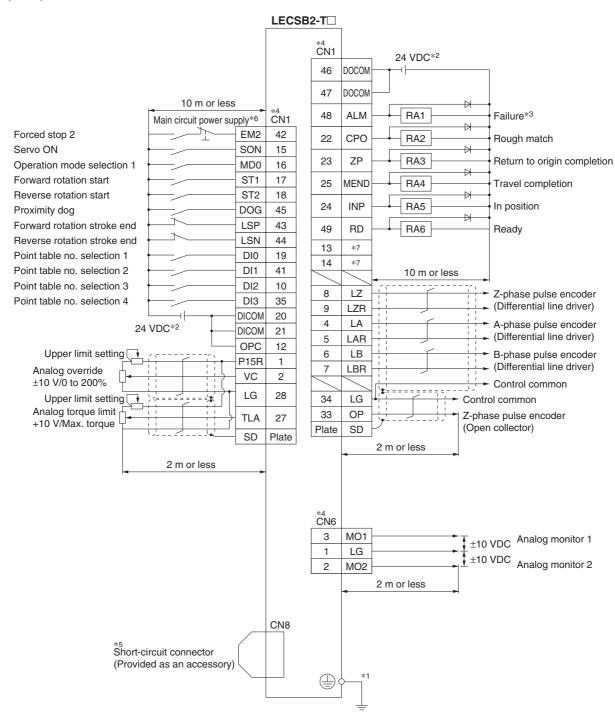


- *1 For preventing electric shock, be sure to connect the servo amplifier's protective earth (PE) terminal (marked) to the control panel's protective earth
- *2 For interface use, supply 24 VDC ±10% using an external source. Set the total current capacity to 500 mA. 500 mA is the value when all I/O command signals are being used. In addition, reducing the number of inputs/outputs can decrease the current capacity.
- *3 The ALM (Failure) is normally ON. (Normally closed contact)
- *4 Signals of the same name are connected inside the servo amplifier.
- *5 When not using the STO function, use the servo amplifier with the short-circuit connector (provided as an accessory) inserted.
- *6 Configure a circuit to turn off EM2 when the main circuit power is turned off to prevent any unexpected restarts of the driver.
- *7 Output devices are not assigned in the initial status. Assign the output devices as necessary.



AC Servo Motor Driver LECS /LECS -T Series

Control Signal Wiring Example: LECSN2-T□

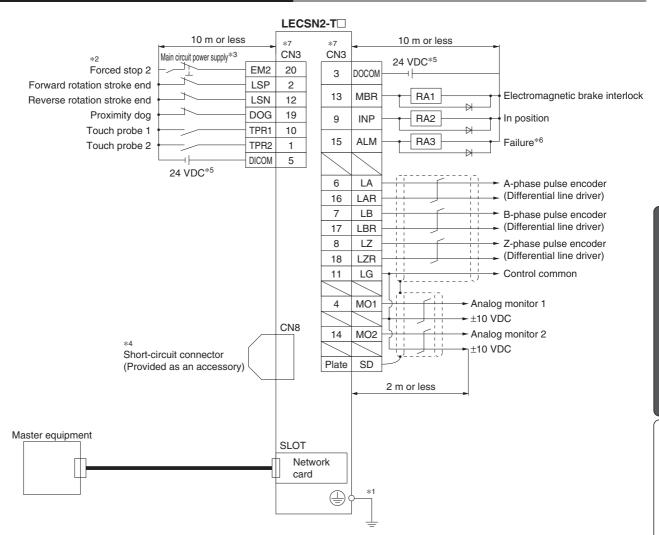


- *1 For preventing electric shock, be sure to connect the driver's protective earth (PE), terminal (marked (a)) to the control panel's protective earth (PE).
- *2 If the master equipment does not have forced stop function, always install the forced stop 2 switch (normally closed contact).
- *3 Configure a circuit to turn off EM2 when the main circuit power is turned off to prevent any unexpected restarts of the driver.
- *4 When not using the STO function, use the driver with the short-circuit connector (provided as an accessory) inserted.
- *5 For interface use, supply 24 VDC ±10% using an external source. Set the total current capacity to 300 mA. 300 mA is the value when all I/O command signals are being used. In addition, reducing the number of inputs/outputs can decrease the current capacity.

SMC

- *6 The ALM (Failure) is normally ON. (Normally closed contact)
- *7 Signals of the same name are connected inside the driver.

LECS /LECS -T Series

Control Signal Wiring Example: LECSS2-T□

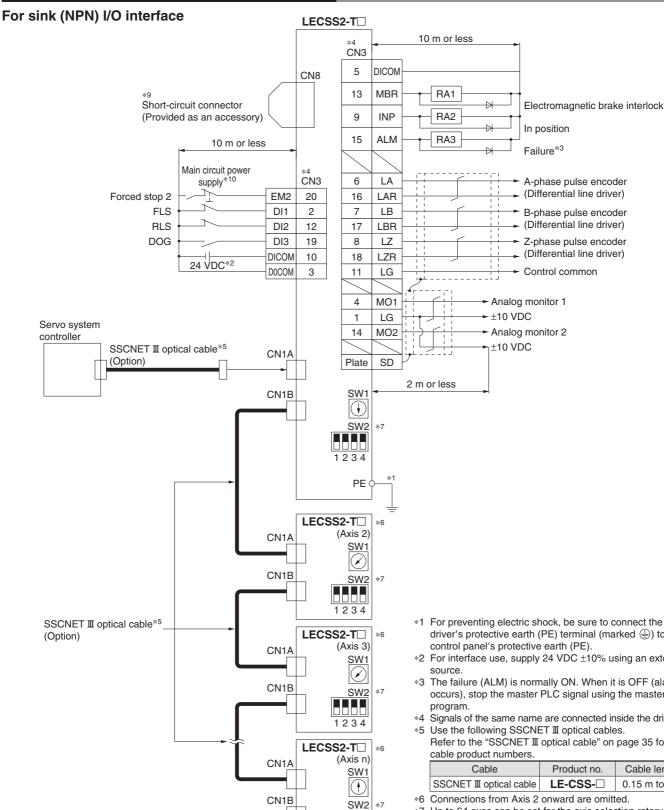

- *1 For preventing electric shock, be sure to connect the driver's protective earth (PE) terminal (marked (1)) to the
- *2 For interface use, supply 24 VDC ±10% using an external
- *3 The failure (ALM) is normally ON. When it is OFF (alarm occurs), stop the master PLC signal using the master PLC
- *4 Signals of the same name are connected inside the driver.
- Refer to the "SSCNET III optical cable" on page 35 for

Cable	Product no.	Cable length
SSCNET I optical cable	LE-CSS-□	0.15 m to 3 m


- *6 Connections from Axis 2 onward are omitted.
- Up to 64 axes can be set for the axis selection rotary switch (SW1) and auxiliary axis number setting switches (SW2-3, SW2-4) in combination. Note that the number of connection axes depends on the specifications of the master PLC
- *8 Be sure to place a cap on unused CN1A/CN1B.
- When not using the STO function, use the driver with the shortcircuit connector (provided as an accessory) inserted.
- *10 Configure a circuit to turn off EM2 when the main circuit power is turned off to prevent any unexpected restarts of the driver.




1234

Cap*8


Motor cable, Lock cable, Encoder cable (LECS□, LECS□-T common)

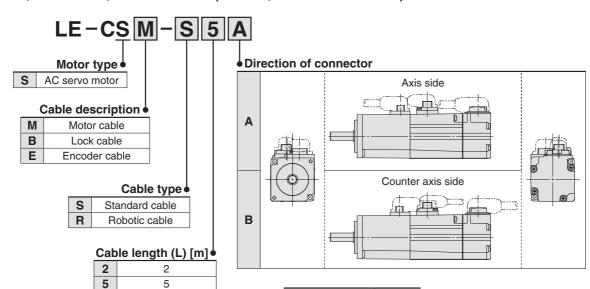



Α

10



		LL COM CL		100
-CSM-R□A		LE-CSM-S5□	5	400
-CSM-R□B	5.7	LE-CSM-SA□	10	800
		LE-CSM-R2□	2	180
		LE-CSM-R5□	5	400
		LE-CSM-RA□	10	800
Product no.	ø D			
-CSB-S□A		Weight		

Weight

Product no.

LF-CSM-S2

LE-CSB-L	∟ ∟: Lock	cable*'		
_			۵۵	-
<u>.</u> ⊛,			> †	
<u></u>		,	+	
	(00.0)			

Product no.	ØD
LE-CSB-S□A	4.7
LE-CSB-S□B	4.7
LE-CSB-R□A	4.5
LE-CSB-R□B	4.5

LE-CSNB

LE-CSE-□□: Encoder cable



*1 If using an actuator with a lock, a lock cable is required.

Length [m]	Weight [g]
2	80
5	200
10	400
2	80
5	200
10	400
	5 10 2 5

Weight


Product no.	Length [m]	Weight [g]
LE-CSE-S2□	2	220
LE-CSE-S5□	5	600
LE-CSE-SA□	10	1200
LE-CSE-R2□	2	220
LE-CSE-R5□	5	600
LE-CSE-RA□	10	1200

I/O connector (Without cable, Connector only)


LE-CSNA Driver type LECSA□, LECSC□-S□/ LECSC2-T□ LECSB□-S□/LECSB2-T□ LECSN2-T□, LECSS□-S□/LECSS2-T□

В

S



	•
37.2	
*	
-	39



33.3	
39	

LE-CSNS

Weight	
Product no.	Weight [g]
LE-CSNA	25
LE-CSNB	30

LE-CSNS

- LE-CSNA: 10126-3000PE (connector)/10326-52F0-008 (shell kit) manufactured by 3M Japan Limited or equivalent
- LE-CSNB: 10150-3000PE (connector)/10350-52F0-008 (shell kit) manufactured by 3M Japan Limited or equivalent
- LE-CSNS: 10120-3000PE (connector)/10320-52F0-008 (shell kit) manufactured by 3M Japan Limited or equivalent
- Applicable conductor size: AWG24 to 30
- If using the LECSB, emergency stop (EMG) wiring is required in all cases. If using the LECSB-T in any mode other than positioning mode, forced stop (EM2) wiring is required in all cases. (The electric actuator will not operate without the wiring.)

Prepare an I/O connector or an I/O cable in advance.


16

Length [m] Weight [g]

LECS LECS -T Series

Options

SSCNET III optical cable (LECSS□-S□, LECSS2-T□)

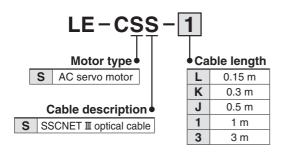



 * LE-CSS-□ is MR-J3BUS□M manufactured by Mitsubishi Electric Corporation.

Weight

Product no.	Length [m]	Weight [g]	
LE-CSS-L	0.15	100	
LE-CSS-K	0.3	100	
LE-CSS-J	0.5	200	
LE-CSS-1	1	200	
LE-CSS-3	3	200	

I/O cable

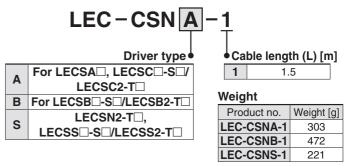

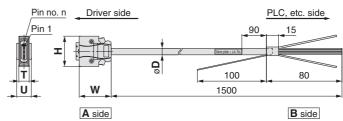

- * LEC-CSNA-1: 10126-3000PE (connector)/10326-52F0-008 (shell kit) manufactured by 3M Japan Limited or equivalent LEC-CSNB-1: 10150-3000PE (connector)/10350-52F0-008 (shell kit) manufactured by 3M Japan Limited or equivalent LEC-CSNS-1: 10120-3000PE (connector)/10320-52F0-008 (shell kit) manufactured by 3M Japan Limited or equivalent
- * Conductor size: AWG24
- * If using the LECSB, emergency stop (EMG) wiring is required in all cases. If using the LECSB-T in any mode other than positioning mode, forced stop (EM 2) wiring is required in all cases. (The electric actuator will not operate without the wiring.)

Prepare an I/O connector or an I/O cable in advance.

Cable O.D.

Product no.	øD
LEC-CSNA-1	11.1
LEC-CSNB-1	13.8
LEC-CSNS-1	9.1

Dimensions/Pin Nos.

Product no.	W	Н	Т	U	Pin no. n
LEC-CSNA-1		37.2		14	14
LEC-CSNB-1	39	52.4	12.7	18	26
LEC-CSNS-1		33.3		14	21

Wiring

LEC-CSNA-1: Pin nos. 1 to 26 LEC-CSNB-1: Pin nos. 1 to 50 LEC-CSNS-1: Pin nos. 1 to 20

Connector		Pair no.	Insulation	Det ment	Dot
pin no.		of wire	color	Dot mark	color
	1	1	0		Red
	2		Orange		Black
	3	2	Light		Red
	4	2	gray		Black
	5	3	White		Red
	6	3	vviile		Black
	7	4	Yellow		Red
	8	4			Black
A side	9	5	Pink		Red
8	10				Black
	11	6	Orange		Red
	12	6			Black
	13	7	Light		Red
	14 7	gray		Black	
	15	_	\A/I-!+-		Red
	16	8	White		Black
	17	0	Yellow		Red
	18	9			Black

Connector		nector	Pair no.	Insulation	Dot mark	Dot
F	pin no.		of wire	color	Dollilark	color
		19	10	Pink		Red
		20	10	FILIK		Black
		21	44	0		Red
	22 11	Orange		Black		
		23	12	Light		Red
		24	12	gray		Black
	25	13	White		Red	
100	5	26	13	vviille		Black
A side		27	14	Yellow		Red
		28				Black
		29	15	Pink		Red
	30	FILIK		Black		
		31	16	Orange		Red
		32				Black
		33	17	Light		Red
		34	17	gray		Black

Connector pin no.		Pair no. of wire	Insulation color	Dot mark	Dot color
	35	10	White		Red
	36	18			Black
	37	19	V-II		Red
	38	19	Yellow		Black
	39	20	Pink		Red
	40				Black
4	41	21	Orange		Red
ide	42				Black
A side	43	22	Light		Red
	44		gray		Black
	45	23	White		Red
	46				Black
	47	24	Yellow		Red
	48	24	renow		Black
	49	25	Pink		Red
	50	25			Black

Regeneration option (LECS□ common)


LEC-MR-RB-12

Regeneration option type


032	Allowable regenerative power 30 W
12	Allowable regenerative power 100 W

 Confirm regeneration option to be used in "Model Selection."

LEC-MR-RB-032

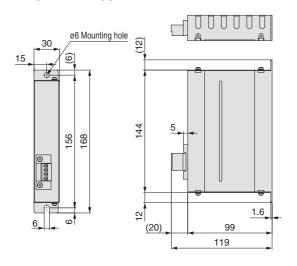

LEC-MR-RB-12

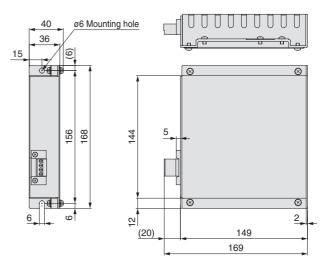

Weight

Product no.	Weight [kg]	
LEC-MR-RB-032	0.5	


* MR-RB032 manufactured by Mitsubishi Electric Corporation

Weight

Product no.	Weight [kg]			
LEC-MR-RB-12	1.1			

* MR-RB12 manufactured by Mitsubishi Electric Corporation

Network card (LECSN2-T□)




Network card type

N9	EtherNet/IP™
NE	EtherCAT
NP	PROFINET

LEC-S-□ common







Weight

Product no.	Weight [g]		
LEC-S-□	30		



LECS /LECS -T Series

Options



Setup software (MR Configurator2™) (LECSA, LECSB, LECSC, LECSS, LECSB2-T□, LECSC2-T□, LECSS-T, LECSN2-T□ common)

LEC-MRC2

Display language

Nil	Japanese version		
Е	English version		
С	Chinese version		

* SW1DNC-MRC2- manufactured by Mitsubishi Electric Corporation Refer to Mitsubishi Electric Corporation's website for operating environment and version upgrade information.

MR Configurator2™ is a registered trademark or trademark of Mitsubishi Electric Corporation.

Adjustment, waveform display, diagnostics, parameter read/write, and test operation can be performed upon a PC. Compatible PC

When using setup software (MR Configurator2™), use an IBM PC/AT compatible PC that meets the following operating conditions.

Hardware Requirements

Equipment		Setup software (MR Configurator2 [™]) LEC-MRC2 □	*
*1, 2, 3, 4, 5, 6, 7, 8, 9, 10 PC	os	Microsoft® Windows® 10 Edition Microsoft® Windows® 10 Enterprise Microsoft® Windows® 10 Pro Microsoft® Windows® 10 Home Microsoft® Windows® 8.1 Enterprise Microsoft® Windows® 8.1 Pro Microsoft® Windows® 8.1 Pro Microsoft® Windows® 8.1 Pro Microsoft® Windows® 8 Enterprise Microsoft® Windows® 8 Pro Microsoft® Windows® 7 Professional Microsoft® Windows® 7 Enterprise Microsoft® Windows® 7 Professional Microsoft® Windows® 7 Ferenium Microsoft® Windows® 7 Starter Microsoft® Windows® 7 Starter Microsoft® Windows® 8 Enterprise Microsoft® Windows® 8 Pro Microsoft® Windows® 9 Professional Microsoft® Windows® 10 Home Premium Microsoft® Windows Vista® Enterprise Microsoft® Windows Vista® Business Microsoft® Windows Vista® Home Premium Microsoft® Windows Vista® Home Basic Microsoft® Windows Vista® Home Basic Microsoft® Windows® XP Professional, Service Pack 3 or later Microsoft® Windows® XP Home Edition, Service Pack 3 or later	**
	Hard disk	1 GB or more of free space	*
	Communication interface	Use USB port.	
Display		Resolution 1024 x 768 or more Must be capable of high color (16-bit) display. Connectable with the PC above	*
Keyboar	d	Connectable with the PC above	1
Mouse		Connectable with the PC above	*
Printer		Connectable with the PC above	
USB cab	ole ^{*11}	LEC-MR-J3USB	J

Setup Software Compatible Drivers

Commodible	Setup software			
Compatible driver	MR Configurator™	MR Configurator2™		
unver	LEC-MR-SETUP221□	LEC-MRC2□		
LECSA	0	0		
LECSB□-S□	0	0		
LECSC□-S□	0	0		
LECSS□-S□	0	0		
LECSB2-T□		0		
LECSC2-T□	_	0		
LECSS2-T□		0		
LECSN2-T□		0		

- *1 Before using a PC for setting LECSA point table method/program operation method, upgrade to version 1.18U (Japanese version)/ version 1.19V (English version) or later. Refer to Mitsubishi Electric Corporation's website for version upgrade information.
- *2 Windows® and Windows Vista® are registered trademarks of Microsoft Corporation in the United States and other countries.
- *3 On some PCs, setup software (MR Configurator2™) may not run properly.
- The following functions cannot be used. If any of the following functions is used, this product may not operate normally.
 - · Start of application in Windows® compatible mode
 - · Fast User Switching
 - · Remote Desktop

 - Windows XP Mode
 Windows Touch or Touch
 - · Modern UI
 - · Client Hyper-V
 - **Tablet Mode**
 - · Virtual desktop
 - 6 4 -bit OSs are not supported, except for Microsoft® Windows®7 or later
- *5 Multi-display is set, the screen of this product may not operate normally.
- *6 The size of the text or other items on the screen is not changed to the specified value (96 DPI, 100%, 9 pt, etc.), the screen of this product may not operate normally.
- *7 Changed the resolution of the screen during operating, the screen of this product may not operate normally.
- Please use by "Standard User," "Administrator" in Windows Vista® or later.
- *9 Using a PC for setting Windows® 10, upgrade to version 1.52E or later.
 - Using a PC for setting Windows®8.1, upgrade to version 1.25B or later
 - Using a PC for setting Windows®8, upgrade to version 1.20W or later.
 - Refer to Mitsubishi Electric Corporation's website for version upgrade information.
- *10 If .NET Framework 3.5 (including .NET 2.0 and 3.0) have been disabled in Windows® 7 or later, it is necessary to enable it.
- *11 Order USB cable separately.
 - This cable is compatible with the setup software (MR Configurator™: LEC-MR-SETUP221□).



LEC-MR-J3USB

* MR-J3USBCBL3M manufactured by Mitsubishi Electric Corporation

Weight: 140 g

Cable for connecting PC and driver when using the setup software (MR Configurator 2^{TM})

Do not use any cable other than this cable.

STO cable (3 m)


(Only for LECSB2-T \square , LECSN2-T \square , and LECSS2-T \square)

LEC-MR-D05UDL3M

* MR-D05UDL3M manufactured by Mitsubishi Electric Corporation

Cable for connecting the driver and device, when using the safety function

Do not use any cable other than this cable.



Weight: 500 g

Battery

LEC-MR-J3BAT

* MR-J3BAT manufactured by Mitsubishi Electric Corporation

Battery for replacement

Absolute position data is maintained by installing the battery to the driver.



Weight: 30 g


* The LEC-MR-J3BAT is a single battery that uses lithium metal battery ER6V. When transporting lithium metal batteries and devices with built-in lithium metal batteries by a method subject to UN regulations, it is necessary to apply measures according to the regulations stipulated in the United Nations Recommendations on the Transport of Dangerous Goods, the Technical Instructions (ICAO-TI) of the International Civil Aviation Organization (ICAO), and the International Maritime Dangerous Goods Code (IMDG CODE) of the International Maritime Organization (IMO). If a customer is transporting products such as shown above, it is necessary to confirm the latest regulations, or the laws and regulations of the country of transport on your own, in order to apply the proper measures. Please contact SMC sales representative for details.

LEC-MR-BAT6V1SET

* MR-BAT6V1SET manufactured by Mitsubishi Electric Corporation

Battery for replacement

Absolute position data is maintained by installing the battery to the driver.




LEC-MR-BAT6V1SET-A

* MR-BAT6V1SET-A manufactured by Mitsubishi Electric Corporation

Battery for replacement

Absolute position data is maintained by installing the battery to the driver.



The LEC-MR-BAT6V1SET and LEC-MR-BAT6V1SET-A are assembled batteries that use lithium metal battery 2CR17335A.
When transporting lithium metal batteries and devices with built-in lithium metal

When transporting lithium metal batteries and devices with built-in lithium metal batteries by a method subject to UN regulations, it is necessary to apply measures according to the regulations stipulated in the United Nations Recommendations on the Transport of Dangerous Goods, the Technical Instructions (ICAO-TI) of the International Civil Aviation Organization (ICAO), and the International Maritime Dangerous Goods Code (IMDG CODE) of the International Maritime Organization (IMO). If a customer is transporting products such as shown above, it is necessary to confirm the latest regulations, or the laws and regulations of the country of transport on your own, in order to apply the proper measures. Please contact SMC sales representative for details.

Battery Types and Compatible Drivers

Compatible	Battery type			
driver	LEC-MR-J3BAT	LEC-MR-BAT6V1SET	LEC-MR-BAT6V1SET-A	
LECSB□-S□	0	_	_	
LECSC□-S□	0	_	_	
LECSS□-S□	0	_	_	
LECSB□-T□	_	0	_	
LECSC□-T□	0	_	_	
LECSS□-T□	_	0	_	
LECSN□-T□	_	_	0	



LECY Seri

Specific Product Precautions



MECHATROLINK Compatible

AC Servo Motor Driver Absolute Type

LECYM/LECYU Series


(.... MECHATROLINK-III Type)








How to Order

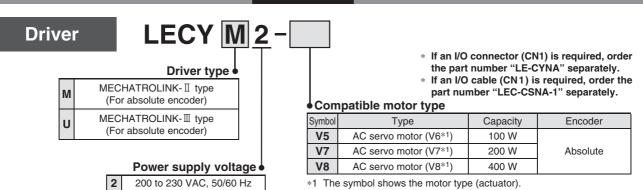

Dimensions



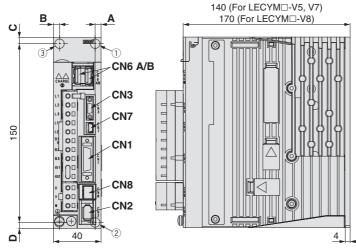


Connector name	Description
CN1	I/O signal connector
CN2	Encoder connector
CN3*1	Digital operator connector
CN6A MECHATROLINK- I communication	
CN6B	MECHATROLINK- II communication connector
CN7	PC connector
CN8 Safety connector	

Digital operator is JUSP-OP05A-1-E manufactured by YASKAWA Electric Corporation.
When using the digital operator, it should be provided by the customer.

Motor	Hole	Mou	nting o	dimens	sions	Mounting
capacity	position	Α	В	С	D	hole
V5 (100 W)	12	5	_	5	5	
V7 (200 W)	12	5	_	5	5	ø5
V8 (400 W)	23	5	5	5	5	

The mounting hole position varies depending on the motor capacity.

MECHATROLINK-III type LECYU2-V□

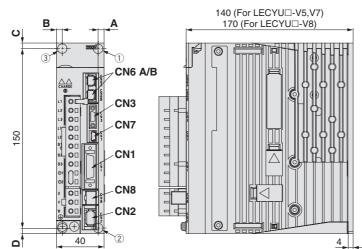

Connector name	Description	
CN1	I/O signal connector	
CN2	Encoder connector	
CN3*1	Digital operator connector	
CN6A	MECHATROLINK- II communication connector	
CN6B	MECHATROLINK- II communication connector	
CN7	PC connector	
CN8	Safety connector	

*1 Digital operator is JUSP-OP05A-1-E manufactured by YASKAWA Electric Corporation.
When using the digital operator, it should be provided by the customer.

Motor	Hole	Mou	nting o	dimens	sions	Mounting
capacity	position	Α	В	С	D	hole
V5 (100 W)	12	5	_	5	5	
V7 (200 W)	12	5	_	5	5	ø5
V8 (400 W)	(2)(3)	5	5	5	5	

The mounting hole position varies depending on the motor capacity.



AC Servo Motor Driver $LECY_U^M$ Series

Specifications

Mo	odel		LECYM2-V5	LECYM2-V7	LECYM2-V8
Compatible motor capacity [W]		100	200	400	
Compatible encoder		Absolute 20-bit encoder (Resolution: 1048576 p/rev)			
Main circuit power Power voltage [V]		Three phas	se 200 to 230 VAC (50/60) Hz)	
supply	Allowable voltage flu	ctuation [V]	Three	e phase 170 to 253 VAC	
041	Power voltage [V	/]	Single pha	se 200 to 230 VAC (50/6	0 Hz)
Control power supply	Allowable voltage flu	ctuation [V]	Single	e phase 170 to 253 VAC	
Power supply capacity (a	at rated output) [/	A]	0.91 1.6 2.8		
Input circuit			NPN (Sinl	k circuit)/PNP (Source cir	cuit)
Parallel input	Number of optional allocations	7 inputs	[Initial allocation]		limit (/N-CL)
	Number of fixed allocations	1 output	· Servo alarm (ALM)		
(4 outputs)	Number of optional allocations	3 outputs	[Initial allocation] Lock (/BK) [Can be allocated by setting the parameters] Positioning completion (/COIN) Speed limit detection (/VLT) Speed coincidence detection (/V-CMP) Rotation detection (/TGON) Warning (/WARN) Servo ready (/S-RDY) Near (/NEAR) Torque limit detection (/CLT) Signal allocations can be performed, and positive and negative logic can be changed.		
Communication protocol		protocol		MECHATROLINK- II	
	Station address			41H to 5FH	
	Transmission speed			10 Mbps	
MECHATROLINK	Transmission cy	cle	250 µs, 0.5 r	ms to 4 ms (Multiples of C	0.5 ms)
communication	Number of transmis	ssion bytes	•	17 bytes, 32 bytes	,
	Max. number of	stations	30		
	Cable length		Overall cable length: 50 m or less, Cable length between the stations: 0.5 m or more		
	Control method		Position, speed, or torque co	ontrol with MECHATROL	INK- I communication
Command method	Command input		MECHATROLINK- I command (Motion, data setting, monitoring, or adjustment)		
	Gain adjustment		Tuning-less/Advanced auto tuning/One-parameter tuning		
	Communication	setting	USB commu	nication, RS-422 commun	nication
	Torque limit		Internal torque limit, external	torque limit, and torque li	mit by analog command
Function Encoder output		Phase	A, B, Z: Line driver outpu	ıt	
	Emergency stop		CN8 Safety function		
Overtravel		Dynamic brake stop, deceleration to a stop, or free run to a stop at P-OT or N-OT			
Alarm		Alarm signal, MECHATROLINK- I command			
Operating temperature range [°C]		0 to 55 (No freezing)			
Operating humidity range [%RH]		90 or less (No condensation)			
Storage temperature ran			-20 to 85 (No freezing)		
Storage humidity range	_		90 or less (No condensation)		
Insulation resistance [M				10 MΩ (500 VDC)	
Weight [g]		900	,	1000	



$LECY_U^M$ Series

Specifications


MECHATROLINK-III Type

	Model		LECYU2-V5	LECYU2-V7	LECYU2-V8	
Compatible motor capacity [W]		100	200	400		
Compatible encoder			Absolute	20-bit encoder (Resolution: 1048	3576 p/rev)	
Main circuit power Power voltage [V]		Three phase 200 to 230 VAC (50/60 Hz)				
supply Allowable voltage fluctuation [V]			Three phase 170 to 253 VAC	<u> </u>		
	Power voltage [\	/]	Sin	gle phase 200 to 230 VAC (50/60) Hz)	
Control power supply	Allowable voltage flu	ctuation [V]		Single phase 170 to 253 VAC	,	
Power supply capacity	y (at rated output) [A]	0.91 1.6 2.8			
Input circuit	· · · · ·		NPN (Sink circuit)/PNP (Source circuit)			
Parallel input (7 inputs)	Number of optional allocations	7 inputs	[Initial allocation]			
	Number of fixed allocations	1 output	· Servo alarm (ALM)			
Parallel output (4 outputs)	Number of optional allocations	3 outputs	[Initial allocation] Lock (/BK) [Can be allocated by setting the parameters] Positioning completion (/COIN) Speed limit detection (/VLT) Speed coincidence detection (/V-CMP) Rotation detection (/TGON) Warning (/WARN) Servo ready (/S-RDY) Near (/NEAR) Torque limit detection (/CLT) Signal allocations can be performed, and positive and negative logic can be changed.			
	Communication protocol			MECHATROLINK-Ⅲ		
	Station address			03H to EFH		
	Transmission sp	peed		100 Mbps		
MECHATROLINK	Transmission cy	/cle	125 µs, 250 µs,	500 μs, 750 μs, 1 ms to 4 ms (M	ultiples of 0.5 ms)	
communication	Number of transmis		16 bytes, 32 bytes, 48 bytes			
	Max. number of		62			
	Cable length		Cable length between the stations: 0.5 m or more, 75 m or less			
	Control method		Position, speed, or to	r torque control with MECHATROLINK-II communication		
Command method				MECHATROLINK-Ⅲ command tion, data setting, monitoring, or adjustment)		
	Gain adjustment	t	Tuning-less	s/Advanced auto tuning/One-parameter tuning		
	Communication	setting	USB	communication, RS-422 commun	nication	
	Torque limit		Internal torque limit, ex	xternal torque limit, and torque lir		
Function	Encoder output			Phase A, B, Z: Line driver output	t	
	Emergency stop			CN8 Safety function		
Overtravel		Dynamic brake stop, deceleration to a stop, or free run to a stop at P-OT or N-OT				
	Alarm		Alarm	n signal, MECHATROLINK-Ⅲ cor	mmand	
Operating temperature	e range [°C]			0 to 55 (No freezing)		
Operating humidity range [%RH]		90 or less (No condensation)				
Storage temperature r	ange [°C]		-20 to 85 (No freezing)			
Storage humidity rang	je [%RH]		90 or less (No condensation)			
Insulation resistance [M Ω]				10 MΩ (500 VDC)		
Weight [g]			9	00	1000	



Power Supply Wiring Example: LECY□

■Three phase 200 V LECYM2-□ LECYU2-□

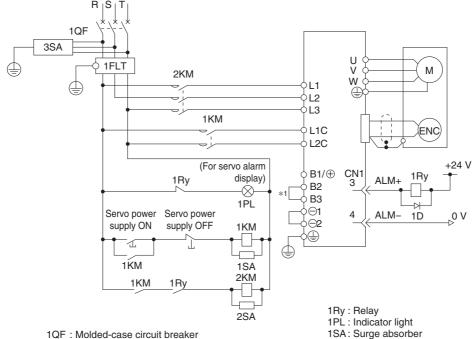

1FLT: Noise filter

1KM: Magnetic contactor (for control power supply) 2KM: Magnetic contactor (for main circuit power supply) 2SA: Surge absorber 3SA: Surge absorber 1D : Flywheel diode

*1 For the LECY□2-V5, LECY□2-V7, and LECY□2-V8, terminals B2 and B3 are not short-circuited. Do not short-circuit these terminals.

Main Circuit Power Supply Connector * Accessory

Terminal name	Function	Details
L1	Main circuit power	Connect the main circuit power supply.
L2	supply	Single phase 200 to 230 VAC, 50/60 Hz Connection terminal: L1, L2
L3	Supply	Three phase 200 to 230 VAC, 50/60 Hz Connection terminal: L1, L2, L3
L1C	Control power supply	Connect the control power supply.
L2C	Control power supply	Single phase 200 to 230 VAC, 50/60 Hz Connection terminal: L1C, L2C
B1/+	External regenerative	When the regenerative resistor is required, connect it
B2	resistor	between terminals B1(+) and B2.
B3	connection terminal	between terminals BT(+) and BZ.
⊝1	Main circuit negative	(⊃1 and (⊃)2 are connected at shipment.
⊝2	terminal	Tand 22 are connected at snipment.


Motor Connector * Accessory

	Total Collination Processory				
Terminal name	Function	Details			
U	Servo motor power (U)				
V	Servo motor power (V)	Connect to motor cable (U, V, W).			
W	Servo motor power (W)				

Power Supply Wire Specifications


ower ouppry wire opecifications		
Item	Specifications	
Applicable	L1, L2, L3, L1C, L2C	
wire size	Single wire, Twisted wire, AWG14 (2.0 mm ²)	
Stripped wire length	8 to 9 mm	

Main circuit power supply connector

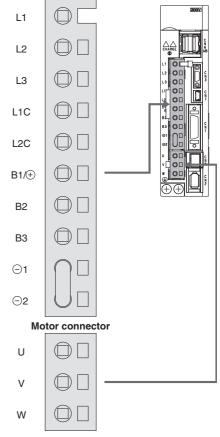

LECY^M Series

Control Signal Wiring Example: LECYM

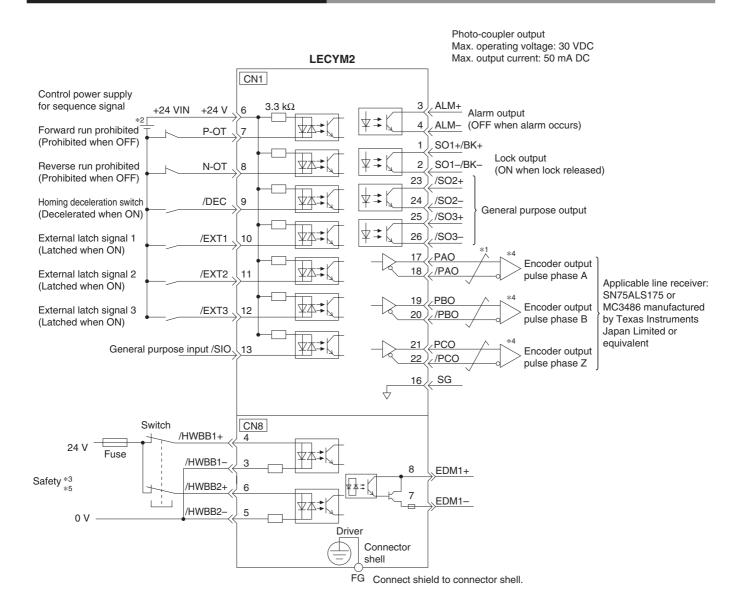

^{*1 \$\}neq\$ shows twisted-pair wires.

^{*2} The 24 VDC power supply is not included. Use a 24 VDC power supply with double insulation or reinforced insulation.


^{*3} When using the safety function, a safety function device must be connected to the wiring that is necessary to activate the safety function. Otherwise, the servo motor is not turned ON. When not using the safety function, use the driver with the Safety Jumper Connector (provided as an accessory) inserted into the CN8.

^{*4} Always use line receivers to receive the output signals.

^{**} The functions allocated to the input signals /DEC, P-OT, N-OT, /EXT1, /EXT2, and /EXT3, and the output signals /SO1, /SO2, and /SO3 can be changed by setting the parameters.

^{*5} It is a safety function equivalent to the STO function (IEC 61800-5-2) using the hard wire base block function (HWBB).

Control Signal Wiring Example: LECYU

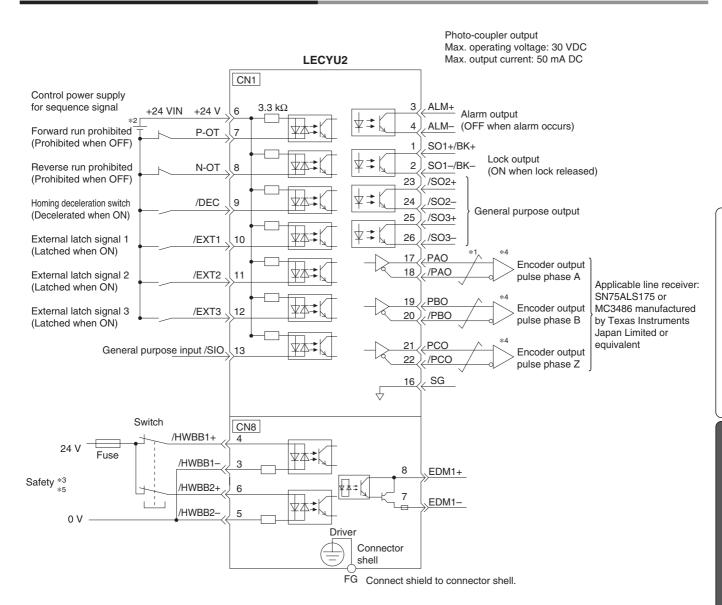

- *1 ≠ shows twisted-pair wires.
- *2 The 24 VDC power supply is not included. Use a 24 VDC power supply with double insulation or reinforced insulation.
- *3 When using the safety function, a safety function device must be connected to the wiring that is necessary to activate the safety function. Otherwise, the servo motor is not turned ON. When not using the safety function, use the driver with the Safety Jumper Connector (provided as an accessory) inserted into the CN8.
- *4 Always use line receivers to receive the output signals.
 - ** The functions allocated to the input signals /DEC, P-OT, N-OT, /EXT1, /EXT2, and /EXT3, and the output signals /SO1, /SO2, and /SO3 can be changed by setting the parameters.
- *5 It is a safety function equivalent to the STO function (IEC 61800-5-2) using the hard wire base block function (HWBB).



LECY^M Series


Options

Motor cable, Motor cable for lock option, Encoder cable (LECYM/LECYU common)


5

10

20

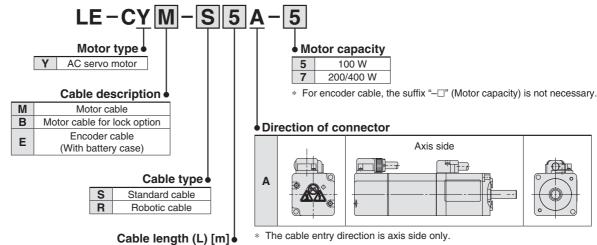

LE-CYM-□□A-□: Motor cable




3 5


Α

С

LE-CYB-□□A-□: Motor cable for lock option

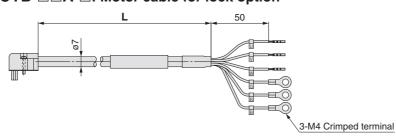

LE-CYE-□□A: Encoder cable

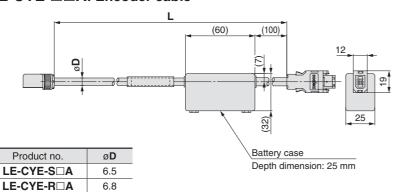

Weight

Product no.	Length [m]	Weight [g]	Note
LE-CYM-S3A-5	3	250	
LE-CYM-S5A-5	5	390	100 W
LE-CYM-SAA-5	10	750	100 00
LE-CYM-SCA-5	20	1500	
LE-CYM-S3A-7	3	250	
LE-CYM-S5A-7	5	390	200/
LE-CYM-SAA-7	10	750	400 W
LE-CYM-SCA-7	20	1500	
LE-CYM-R3A-5	3	220	
LE-CYM-R5A-5	5	350	100 W
LE-CYM-RAA-5	10	670	100 00
LE-CYM-RCA-5	20	1300	
LE-CYM-R3A-7	3	220	
LE-CYM-R5A-7	5	350	200/
LE-CYM-RAA-7	10	670	400 W
LE-CYM-RCA-7	20	1300	

Weight

weight			
Product no.	Length [m]	Weight [g]	Note
LE-CYB-S3A-5	3	240	
LE-CYB-S5A-5	5	390	100 W
LE-CYB-SAA-5	10	750	100 00
LE-CYB-SCA-5	20	1490	
LE-CYB-S3A-7	3	240	
LE-CYB-S5A-7	5	390	200/
LE-CYB-SAA-7	10	750	400 W
LE-CYB-SCA-7	20	1490	
LE-CYB-R3A-5	3	220	
LE-CYB-R5A-5	5	350	100 W
LE-CYB-RAA-5	10	670	100 00
LE-CYB-RCA-5	20	1300	
LE-CYB-R3A-7	3	220	
LE-CYB-R5A-7	5	350	200/
LE-CYB-RAA-7	10	670	400 W
LE-CYB-RCA-7	20	1300	


Weight

Length [m]	Weight [g]
3	230
5	360
10	680
20	1250
3	220
5	330
10	660
20	1240
	3 5 10 20 3 5 10

^{*} LE-CYM-S□A-□ is JZSP-CSM0□-□□-E manufactured by YASKAWA CONTROLS CO., LTD. LE-CYB-S□A-□ is JZSP-CSM1□-□□-E manufactured by YASKAWA CONTROLS CO., LTD. LE-CYE-S□A is JZSP-CSP05-□□-E manufactured by YASKAWA CONTROLS CO., LTD.

 $[\]begin{tabular}{ll} LE-CYM-R$$\square$A-$\square$ is JZSP-CSM2$$\square-$\square-$E$ manufactured by YASKAWA CONTROLS CO., LTD. \\ LE-CYB-R$$\square$A-$\square$ is JZSP-CSM3$$\square-$\square-$E$ manufactured by YASKAWA CONTROLS CO., LTD. \\ LE-CYE-R$$\squareA is JZSP-CSP25-$\square-$E$ manufactured by YASKAWA CONTROLS CO., LTD. \\ \end{tabular}$

I/O connector (Without cable, Connector only)








Weight

Product no.	Weight [g]
LE-CYNA	25


- * LE-CYNA: 10126-3000PE (connector)/10326-52F0-008 (shell kit) manufactured by 3M Japan Limited or equivalent
- * Conductor size: AWG24 to 30

I/O cable



Weight

Product no.	Weight [g]
LEC-CSNA-1	303

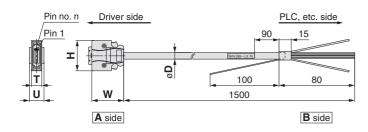

- * LEC-CSNA-1: 10126-3000PE (connector)/10326-52F0-008 (shell kit) manufactured by 3M Japan Limited or equivalent
- * Conductor size: AWG24

Wiring

LEC-CSNA-1: Pin nos. 1 to 26

Connector pin no.		Pair no. of wire	Insulation color	Dot mark	Dot color
	1	1	0		Red
	2	'	Orange		Black
	3	2	Light		Red
	4		gray		Black
A side	5	3	White		Red
8	6		vvriite _	Black	
	7	4	Yellow		Red
	8		reliow		Black
	9	5	Pink		Red
	10	٥	FILIK		Black

Connector				Dot mark	Dot
pin no.		of wire	color		color
	11	6	Orange		Red
	12	0			Black
	13	7	Light		Red
	14	_ ′	gray		Black
ide	15	8	White		Red
A side	16	0			Black
_	17	9	Yellow		Red
	18	9	reliow		Black
	19	10	Pink		Red
	20	10			Black

Connector pin no.		Pair no. of wire	Insulation color	Dot mark	Dot color
	21	11	Orongo		Red
	22	11	Orange		Black
ide	23 24	12	Light		Red
S ∠	24	12	gray		Black
	25	13	White		Red
	26	13			Black

Cable O.D.


Product no.	øD
LEC-CSNA-1	11.1

Dimensions/Pin No.

Product no.	W	Н	Т	U	Pin no. n
LEC-CSNA-1	39	37.2	12.7	14	14


LECY^M Series

Options

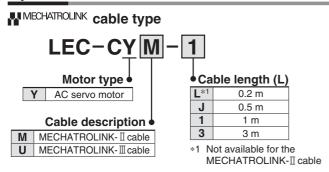

- * LEC-CYM- \square is JEPMC-W6002- \square -E manufactured by YASKAWA CONTROLS CO., LTD.
- * LEC-CYU- \square is JEPMC-W6012- \square -E manufactured by YASKAWA CONTROLS CO., LTD.


₩ MECHATROLINK-II cable



Weight

Product no.	Length [m]	Weight [g]
LEC-CYM-J	0.5	50
LEC-CYM-1	1	80
LEC-CYM-3	3	200

™MECHATROLINK-**II** cable




Weight

Product no.	Length [m]	Weight [g]
LEC-CYU-L	0.2	21
LEC-CYU-J	0.5	41
LEC-CYU-1	1	75
LEC-CYU-3	3	205

Terminating connector for ₩MECHATROLINK-II

LEC-CYRM

* LEC-CYRM is JEPMC-W6022-E manufactured by YASKAWA CONTROLS CO., LTD.



Weight: 10 g

Options





LECYM2 LECYU2

Drivers

Setup software (SigmaWin+™) (LECYM/LECYU common)

* Please download the SigmaWin+™ via our website.
 SigmaWin+™ is a registered trademark or trademark of YASKAWA Electric Corporation.

Adjustment, waveform display, parameter read/write, and test operation can be performed upon a PC. Compatible PC

When using setup software (SigmaWin+TM), use an IBM PC/AT compatible PC that meets the following operating conditions.

Hardware Requirements

Equipment		Setup software (SigmaWin+™)		
	OS	Windows® XP*5, Windows Vista®, Windows® 7 (32-bit/64-bit)		
*1, 2, 3, 4 PC	Available HD space	350 MB or more (When the software is installed, 400 MB or more is recommended.)		
	Communication interface	Use USB port.		
Display		XVGA monitor (1024 x 768 or more, "The small font is used.") 256 color or more (65536 color or more is recommended.)		
		Connectable with the PC above		
Keyboard		Connectable with the PC above		
Mouse		Connectable with the PC above		
Printer		Connectable with the PC above		
USB cable		LEC-JZ-CVUSB*6		
Other		Adobe Reader Ver. 5.0 or higher (* Except Ver. 6.0)		


- *1 Windows, Windows Vista®, Windows® 7 are registered trademarks of Microsoft Corporation in the United States and/or other countries.
- *2 On some PCs, this software may not run properly.
- *3 Not compatible with 64-bit Windows® XP and 64-bit Windows Vista®
- *4 For Windows® XP, please use it by the administrator authority (When installing and using it.).
- *5 In PC that uses the program to correct the problem of HotfixQ328310, it is likely to fail in the installation. In that case, please use the program to correct the problem of HotfixQ329623.
- *6 Order USB cable separately.

Battery (LECYM/LECYU common) LEC-JZ-CVBAT

* JZSP-BA01 manufactured by YASKAWA CONTROLS CO., LTD.

Battery for replacement

Absolute position data is maintained by installing the battery to the battery case of the encoder cable.




USB cable (2.5 m)

LEC-JZ-CVUSB

* JZSP-CVS06-02-E manufactured by YASKAWA CONTROLS CO., LTD.

Cable for connecting PC and driver when using the setup software (SigmaWin+ $^{\text{TM}}$)

Do not use any cable other than this cable.



* The LEC-JZ-CVBAT is a single battery that uses lithium metal battery ER3V.

When transporting lithium metal batteries and devices with built-in lithium metal batteries by a method subject to UN regulations, it is necessary to apply measures according to the regulations stipulated in the United Nations Recommendations on the Transport of Dangerous Goods, the Technical Instructions (ICAO-TI) of the International Civil Aviation Organization (ICAO), and the International Maritime Dangerous Goods Code (IMDG CODE) of the International Maritime Organization (IMO). If a customer is transporting products such as shown above, it is necessary to confirm the latest regulations, or the laws and regulations of the country of transport on your own, in order to apply the proper measures. Please contact SMC sales representative for details.


Cable for safety function device (3 m)

LEC-JZ-CVSAF

* JZSP-CVH03-03-E manufactured by YASKAWA CONTROLS CO., LTD.

Cable for connecting the driver and device when using the safety function

Do not use any cable other than this cable.



Weight: 150 g





LECS□/LECS□-T/LECY□ Series Specific Product Precautions 1

Be sure to read this before handling the products. For safety instructions and electric actuator precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

Design / Selection

⚠ Warning

1. Be sure to apply the specified voltage.

Otherwise, malfunction or breakage may occur. If the applied voltage is lower than the specified voltage, it is possible that the load will not be able to be moved due to an internal voltage drop of the driver. Please check the operating voltage before use.

2. Do not operate the product beyond the specifications.

Otherwise, a fire, malfunction, or actuator damage may result. Please check the specifications before use.

3. Install an emergency stop circuit.

Please install an emergency stop outside of the enclosure so that the system operation can be stopped immediately and the power supply can be intercepted.

- 4. In order to prevent any damage caused by the breakdown or malfunction of the driver and its peripheral devices, a backup system should be established in advance by giving a multiple-layered structure or a failsafe design to the equipment, etc.
- 5. If the danger of human injury is expected due to abnormal heat generation, smoking, ignition, etc., of the driver and its peripheral devices, cut off the power supply of the product and the system immediately.
- 6. The parameters of the driver are set to initial values. Please change the parameters according to the specifications of the customer's equipment before use. Refer to the operation manual for parameter details.

Handling

Marning

1. Do not touch the inside of the driver and its peripheral devices.

Doing so may cause an electric shock or damage to the driver.

2. Do not perform the operation or setting of the product with wet hands.

Doing so may cause an electric shock.

Products with damage or those missing any components should not be used.

An electric shock, fire, or injury may result.

Use only the specified combination between the electric actuator and the driver.

Failure to do so may cause damage to the actuator or the driver.

Be careful not to be hit by workpieces while the actuator is moving.

It may cause an injury.

6. Do not connect the power supply or power on the product before confirming the area to which the workpiece moves is safe.

The movement of the workpiece may cause an accident.

- 7. Do not touch the product when it is energized and for some time after the power has been disconnected, as it is very hot. Doing so may lead to a burn due to the high temperature.
- 8. Before installation, wiring, and maintenance, the voltage should be checked with a tester 5 minutes after the power supply has been turned off.

Otherwise, an electric shock, fire, or injury may result.

Handling

Marning

Static electricity may cause a malfunction or break the driver. Do not touch the driver while power is supplied.

When touching the driver for maintenance, take sufficient measures to eliminate static electricity.

Do not use the product in an area where dust, powder dust, water, chemicals, or oil is in the air.

It will cause failure or malfunction.

11. Do not use the product in an area where a magnetic field is generated.

It will cause failure or malfunction.

- Do not install the product in an environment containing flammable gas, explosive gas, or corrosive gas.
 It could lead to fire, explosion, or corrosion.
- Radiant heat from strong heat sources, such as a furnace, direct sunlight, etc., should not be applied to the product.

It will cause failure of the driver or its peripheral devices.

14. Do not use the product in an environment subject to a temperature cycle.

It will cause failure of the driver or its peripheral devices.

Do not use the product in a place where surges are generated.

When there are units that generate a large amount of surge around the product (e.g. solenoid type lifters, high-frequency induction furnaces, motors, etc.), this may cause deterioration or damage to the product's internal circuit. Avoid sources of surge generation and crossed lines.

16. Do not install the product in an environment under the effect of vibrations and impacts.

It will cause failure or malfunction.

17. When a surge-generating load, such as a relay or solenoid valve, is driven directly, use a product that incorporates a surge absorption element.

Installation

Marning

 Install the driver and its peripheral devices on a fireproof material.

Direct installation on or near a flammable material may cause a fire.

2. Do not install the product in a place subject to vibrations and impacts.

It will cause failure or malfunction.

- The driver should be mounted on a vertical wall in a vertical direction. Also, be sure not to cover the driver's suction/exhaust ports.
- 4. Install the driver and its peripheral devices on a flat surface.

If the mounting surface is distorted or uneven, an unacceptable force may be added to the housing, etc., causing problems.





LECS□/LECS□-T/LECY□ Series Specific Product Precautions 2

Be sure to read this before handling the products. For safety instructions and electric actuator precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

Power Supply

⚠ Caution

- 1. Use a power supply that has low noise between lines and between the power and ground.
 - In cases where noise is high, an isolation transformer should be used.
- To prevent lightning surges, appropriate measures should be taken. Ground the surge absorber for lightning separately from the grounding of the driver and its peripheral devices.

Wiring


Marning

- The driver will be damaged if a commercial power supply (100/200 V) is added to the driver's servo motor power (U, V, and W). Be sure to check wiring for mistakes when the power supply is turned on.
- Connect the ends of the U, V, and W wires of the motor cable correctly to the phases (U, V, and W) of the servo motor power. If these wires do not match up, the servo motor cannot be controlled.

Grounding

⚠ Warning

 For grounding the actuator, connect the copper wire of the actuator to the driver's protective earth (PE) terminal and connect the copper wire of the driver to the earth via the control panel's protective earth (PE) terminal.
 Do not connect them directly to the control panel's protective earth (PE) terminal.

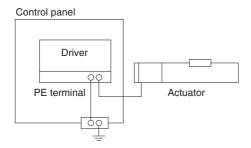

In the unlikely event that a malfunction is caused by the ground, please disconnect it.

Maintenance

⚠ Warning

- Perform a maintenance and inspection periodically. Confirm wiring and screws are not loose. Loose screws or wires may cause unintentional malfunction.
- 2. Conduct an appropriate functional inspection after completing the maintenance and inspection.
 - At times where the equipment or machinery does not operate properly, conduct an emergency stop of the system. Otherwise, an unexpected malfunction may occur and it will become impossible to ensure safety. Conduct a test of the emergency stop in order to confirm the safety of the equipment.
- 3. Do not disassemble, modify, or repair the driver and its peripheral devices.
- Do not put anything conductive or flammable inside the driver.

It may cause a fire.

- Do not conduct an insulation resistance test or withstand voltage test on this product.
- Ensure sufficient space for maintenance activities.
 Design the system allowing the required space for maintenance and inspection.



Safety Instructions Be sure to read the "Handling Precautions for SMC Products" (M-E03-3) and "Operation Manual" before use.

SMC Corporation

Akihabara UDX 15F,
4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN
Phone: 03-5207-8249 Fax: 03-5298-5362
https://www.smcworld.com
© 2021 SMC Corporation All Rights Reserved