High Precision Type

Electric Slide Table



New Size 25 has been added.

Positioning repeatability

±**0.01** mm

Due to the adoption of a ball screw drive

Lost motion

O.1 mm or less


Increased vertical work load					
_	_ =			16	25
5 times or more		New	LESYH	12 kg	20 kg
	or more	Existing model	LESH	2 kg	4 kg



■ Battery-less absolute encoder compatible

Step motor controller JXC Series

Battery-less absolute type (Step motor 24 VDC)

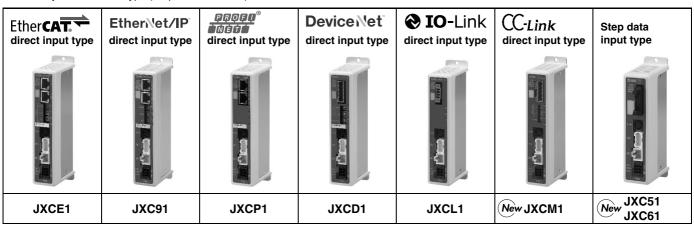

■ Trademark

EtherNet/IP™ is a trademark of ODVA. DeviceNet™ is a trademark of ODVA.

EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.





High Precision Type/Electric Slide Table LESYH-X171

Model Selection 1



Selection Procedure



Check the work loadspeed.





Check the allowable moment.

Selection Example



Step 1 Check the work load-speed. <Speed-Work load graph> (page 2)

Select a model based on the workpiece mass and speed while referencing the speed-work load graph.

Selection example) The LESYH16 □A-50-X171 can be temporarily selected as a possible candidate based on the graph shown on the right side.

Step 2 Check the cycle time.

It is possible to obtain an approximate cycle time by using method 1, but if more detailed cycle time is required, use method 2.

* Although it is possible to make a suitable selection by using method 1, this calculation is based on a maximum load condition. Therefore, if a more detailed selection for each load is required, use method 2.

Method 1: Check the cycle time graph. (Refer to the Web Catalogue.)

Method 2: Calculation <Speed-Work load graph> (page 2)

Calculate the cycle time using the following calculation method.

Cycle time:

T can be found from the following equation.

$$T = T1 + T2 + T3 + T4 [s]$$

• T1: Acceleration time and T3: Deceleration time can be found by the following equation.

• T2: Constant speed time can be found from the following equation.


$$T2 = \frac{L - 0.5 \cdot V \cdot (T1 + T3)}{V} [s]$$

• T4: Settling time varies depending on the conditions such as motor types, load, and in position of the step data. Therefore, calculate the settling time while referencing the following value.


$$T4 = 0.15 [s]$$

Operating conditions


- Workpiece mass: 1 [kg]
- Speed: 200 [mm/s]
- Mounting orientation: Vertical
- Stroke: 50 [mm]
- Acceleration/Deceleration: 3000 [mm/s²]
- Cycle time: 0.5 s

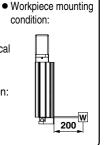

LESYH16□□-X171/Step Motor Vertical

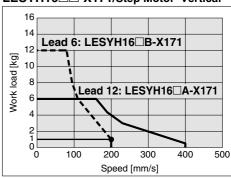

<Speed-Work load graph>

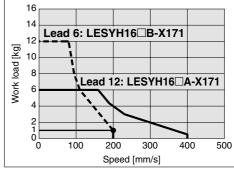

The cycle time can be found as follows.

Calculation example)

T1 to T4 can be calculated as follows.

 $= \frac{50 - 0.5 \cdot 200 \cdot (0.04 + 0.04)}{1}$

200

T1 = V/a1 = 200/3000 = 0.07 [s],

T3 = V/a2 = 200/3000 = 0.07 [s]

 $T2 = \frac{L - 0.5 \cdot V \cdot (T1 + T3)}{V}$

= 0.21 [s]

T4 = 0.15 [s]

$$T = T1 + T2 + T3 + T4$$


$$= 0.07 + 0.21 + 0.07 + 0.15$$

$$= 0.50 [s]$$


Step 3 Check the allowable moment.

- <Static allowable moment> (page 2)
- **Oynamic allowable moment>** (pages 3, 4)

Confirm the moment that applies to the actuator is within the allowable range for both static and dynamic conditions.

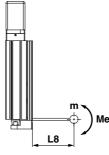

LESYH16-X171/Pitching

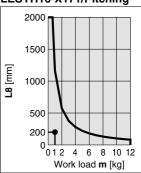


<Dynamic allowable moment>




Speed-Work Load Graph (Guide)

LESYH16□-X171


Horizontal

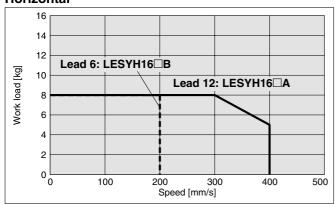


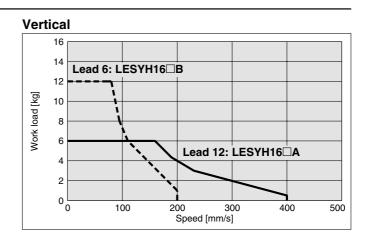

LESYH25□-X171

Horizontal

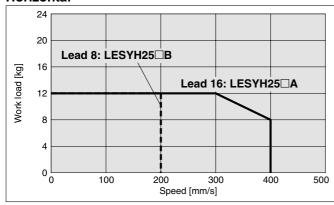

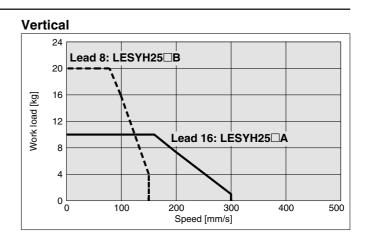

Static Allowable Moment


Model	LESYH16-X171		LESYH25-X171		171
Stroke [mm]	50	100	50	100	150
Pitching [N·m]	26	43	77	112	155
Yawing [N·m]	26	43	11	112	155
Rolling [N·m] 48		146	177	152	





Dynamic Allowable Moment


* This graph shows the amount of allowable overhang (guide unit) when the centre of gravity of the workpiece overhangs in one direction. When selecting the overhang, refer to "Calculation of Guide Load Factor" or the Electric Actuator Model Selection Software for confirmation, https://www.smc.eu

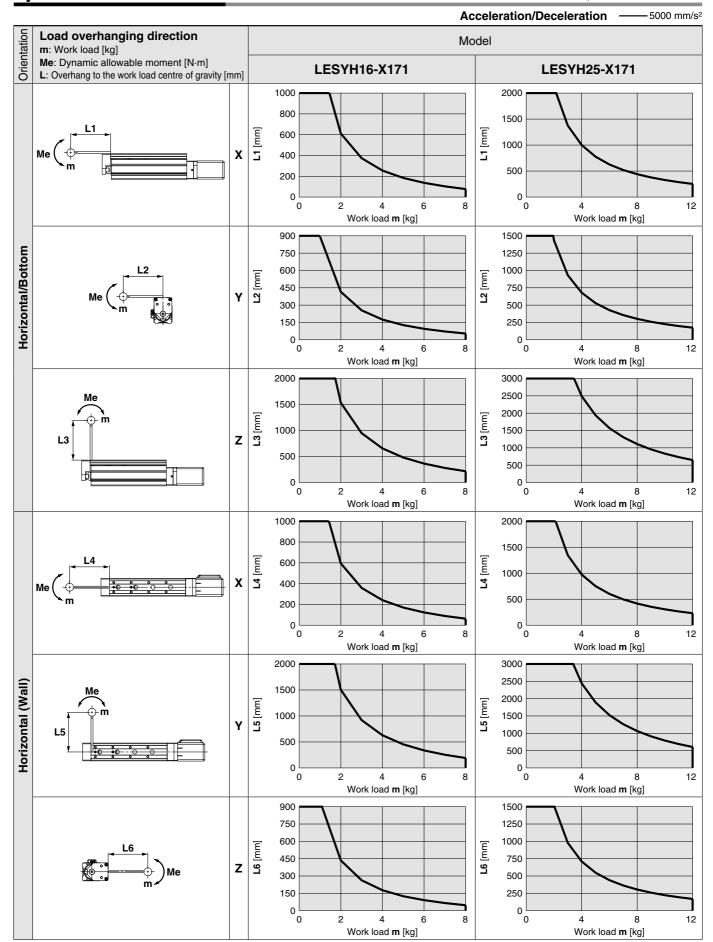



Dynamic Allowable Moment

* This graph shows the amount of allowable overhang (guide unit) when the centre of gravity of the workpiece overhangs in one direction. When selecting the overhang, refer to "Calculation of Guide Load Factor" or the Electric Actuator Model Selection Software for confirmation, https://www.smc.eu

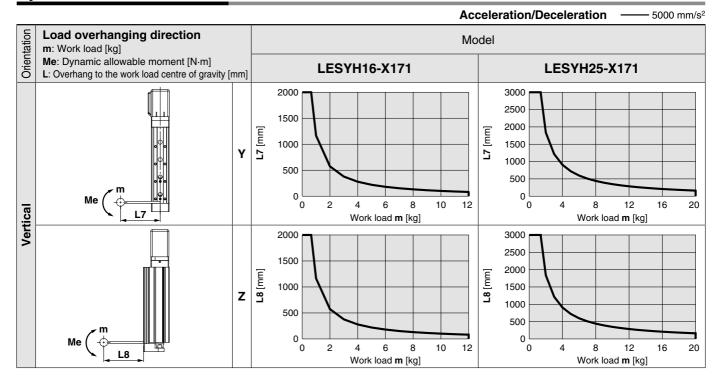

Calculation of Guide Load Factor

1. Decide operating conditions.

Model: LESYH

Size: 16

Mounting orientation: Horizontal/Bottom/Wall/Vertical

Acceleration [mm/s²]: **a** Work load [kg]: **m**

Work load centre position [mm]: Xc/Yc/Zc

- 2. Select the target graph with reference to the model, size, and mounting orientation.
- 3. Based on the acceleration and work load, obtain the overhang [mm]: Lx/Ly/Lz from the graph.
- 4. Calculate the load factor for each direction.

 $\alpha x = Xc/Lx$, $\alpha y = Yc/Ly$, $\alpha z = Zc/Lz$

5. Confirm the total of $\alpha \mathbf{x}$, $\alpha \mathbf{y}$, and $\alpha \mathbf{z}$ is 1 or less.

 $\alpha x + \alpha y + \alpha z \le 1$

When 1 is exceeded, please consider a reduction of acceleration and work load, or a change of the work load centre position and series.

Example

1. Operating conditions

Model: LESYH


Size: 16


Mounting orientation: Horizontal Acceleration [mm/s²]: 5000


Work load [kg]: 4.0

Work load centre position [mm]: Xc = 80, Yc = 50, Zc = 60

2. Select three graphs from the top on page 3.

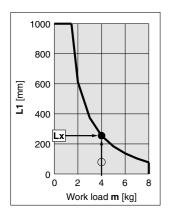

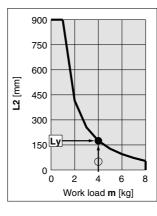

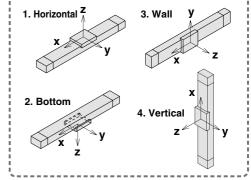

---- Mounting orientation


- 3. Lx = 250 mm, Ly = 160 mm, Lz = 700 mm
- 4. The load factor for each direction can be obtained as follows.

 $\alpha x = 80/250 = 0.32$

 α **y** = 50/160 = 0.32

 $\alpha z = 60/700 = 0.09$

5. $\alpha \mathbf{x} + \alpha \mathbf{y} + \alpha \mathbf{z} = \mathbf{0.73} \le \mathbf{1}$

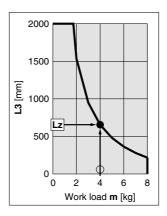

Battery-less Absolute (Step Motor 24 VDC)

High Precision Type/Electric Slide Table LESYH-X171

Model Selection 2



Selection Procedure







Selection Example Operating conditions

- Pushing force: 150 N
- Workpiece mass: 1 kg
- Speed: 100 mm/s
- Stroke: 100 mm
- Mounting position: Vertical upward
- Pushing time + Operation (A): 1.5 s
- Full cycle time (B): 10 s



Step 1 Check the required force.

Calculate the approximate required force for a pushing operation.

Selection example) • Pushing force: 150 [N]

• Workpiece mass: 1 [kg]

The approximate required force can be found to be 150 + 10 = 160 [N].

Select a model based on the approximate required force while referencing the specifications (page 9).

Selection example based on the specifications)

- Approximate required force: 160 [N]
- Speed: 100 [mm/s]

The LESYH16□A-X171 can be temporarily selected as a possible candidate.

Then, calculate the required force for a pushing operation. If the mounting position is vertical upward, add the actuator table weight.

Selection example based on the table weight)

• LESYH16 □-X171 table weight: 0.7 [kg] The required force can be found to be 160 + 7 = 167 [N].

Step 2 Check the pushing force set value. <Pushing force set value>

Select a model based on the pushing force in the specifications, and confirm the pushing force set value. Selection example)

• Required force: 167 [N]

The **LESYH16**□**A-X171** can be temporarily selected as a possible candidate.

The pushing force set value is 64 [%].

Step 3 Check the duty ratio.

Confirm the allowable duty ratio based on the pushing force set value while referencing the allowable duty ratio. Selection example based on the allowable duty ratio)

• Pushing force set value: 64 [%]

The allowable duty ratio can be found to be 20 [%]. Calculate the duty ratio for the operating conditions, and confirm it does not exceed the allowable duty ratio.

Selection example) • Pushing time + Operation (A): 1.5 s

• Full cycle time (B): 10 s

The duty ratio can be found to be $1.5/10 \times 100 = 15 \%$, and this is within the allowable range.

Table Weight

Unit [kg]

Model	Stroke [mm]			
iviouei	50	100	150	
LESYH16-X171	0.4	0.7		
LESYH25-X171	0.9	1.3	1.7	

^{*} If the mounting position is vertical upward, add the table weight.

Allowable Duty Ratio Step Motor (Servo 24 VDC)

Pushing force set value [%]	Duty ratio [%]	Continuous pushing time [min]
35	_	_
50 or less	30 or less	5 or less
70 or less	20 or less	3 or less


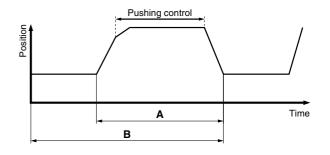


Table Accuracy


* These values are initial guideline values.

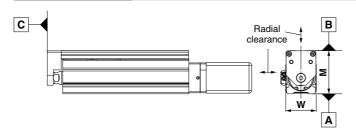

Model	LESYH16-X171	LESYH25-X171
B side parallelism to A side [mm]	Refer to Table 1.	
B side traveling parallelism to A side [mm]	Refer to	Graph 1.
C side perpendicularity to A side [mm]	0.05	
M dimension tolerance [mm]	mm] ±0.3	
W dimension tolerance [mm]	±C).2
Radial clearance [µm]	-10 to 0	-14 to 0

Table 1 B side parallelism to A side

Model	Stroke [mm]		
iviodei	50	100	150
LESYH16-X171	0.05	0.08	_
LESYH25-X171	0.06	0.08	0.125

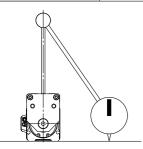

Traveling parallelism:

The amount of deflection on a dial gauge when the table travels a full stroke with the body secured on a reference base surface

Graph 1 B side traveling parallelism to A side

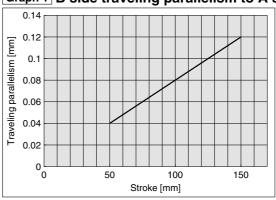


Table Deflection (Reference Value)

* These values are initial guideline values.

Table displacement due to pitch moment load Table displacement when loads are applied to the section marked with the arrow with the slide table stuck out.

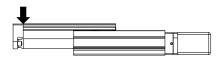


Table displacement due to yaw moment load Table displacement when loads are applied to the section marked with the arrow with the slide table stuck out.





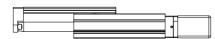



Table displacement due to roll moment load Table displacement of section A when loads are applied to the section F with the slide table retracted.




LESYH16-X171

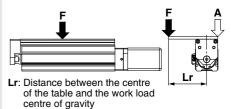

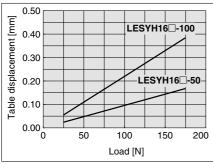


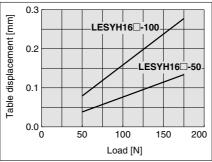


LESYH16-X171

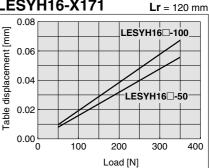


LESYH25-X171

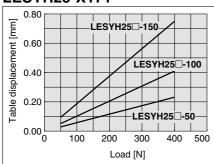

LESYH25-X171

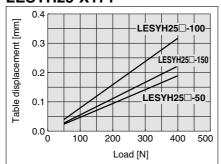

LESYH25-X171

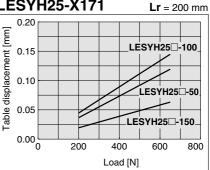




Battery-less Absolute Encoder:

High Precision Type/Electric Slide Table

LESYH-X171



Motor mounting position: Left side parallel

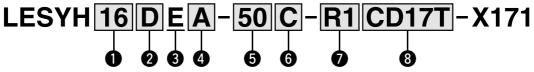

For details on controllers, refer to the next page.



2 Mo	tor mounting position
D	In-line

D	In-line		
R	Right side parallel		
L	Left side parallel		

<u> </u>	Мо	tor	type	

E Battery-less absolute (Step motor 24 VDC)

4	Lead	[mm]
•		L

SI.	ze
16	25
12	16
6	8
	16 12

_		
-		
10 10	Stroke	Immi
~	JUNE	

	Si	ze
	16	25
50	•	•
100	•	•
150	I	•


6	Motor	option

С	With cover
W	With lock/cover

Actuator cable type/length

Hobotic	cable		[m]
_	Without cable	R8	8* ¹
R1	1.5	RA	10* ¹
R3	3	RB	15* ¹
R5	5	RC	20*1

Battery-less Absolute Encoder: LESYH-X171 High Precision Type/Electric Slide Table Battery-less Absolute (Step Motor 24 VDC)

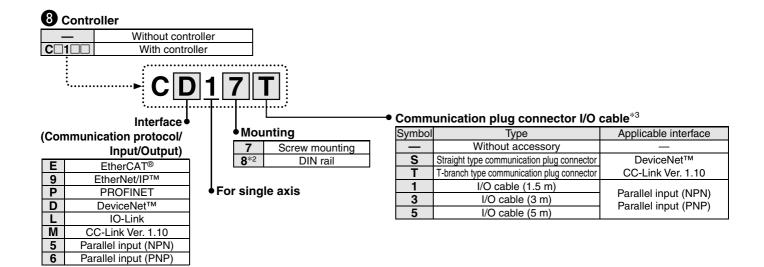

- *1 Produced upon receipt of order
- *2 The DIN rail is not included. Order it separately.

- *3 Select "—" for anything other than DeviceNet™, CC-Link, or parallel input.
 - Select "—," "S," or "T" for DeviceNet™ or CC-Link. Select "—," "1," "3," or "5" for parallel input.

⚠ Caution

[CE-compliant products]

EMC compliance was tested by combining the electric actuator LES series and the controller JXC series.

The EMC depends on the configuration of the customer's control panel and the relationship with other electrical equipment and wiring. Therefore, compliance with the EMC directive cannot be certified for SMC components incorporated into the customer's equipment under actual operating conditions. As a result, it is necessary for the customer to verify compliance with the EMC directive for the machinery and equipment as a whole.

[Precautions relating to differences in controller versions]


When the JXC series is to be used in combination with the battery-less absolute encoder, use a controller that is version V3.4 or S3.4 or higher. For details, refer to the **Web Catalogue**.

The actuator and controller are sold as a package.

Confirm that the combination of the controller and actuator is correct.

<Check the following before use.>

*1 Check the actuator labell for the model number. This number should match that of the controller.

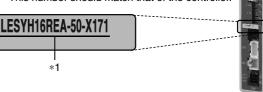

Refer to the Operation Manual for using the products. Please download it via our website, https://www.smc.eu

Туре	EtherCAT® direct input type	EtherNet/IPTM direct input type	PROFINET direct input type	DeviceNet™ direct input type	IO-Link direct input type	CC-Link direct input type	Step data input type			
Series	JXCE1	JXC91	JXCP1	JXCD1	JXCL1	JXCM1	JXC51 JXC61			
Features	EtherCAT® direct input	EtherNet/IP™ direct input	PROFINET direct input	DeviceNet™ direct input	IO-Link direct input	CC-Link direct input	Parallel I/O			
Compatible		Battery-less absolute								
motor		(Step motor 24 VDC)								
Max. number of step data				64 points						
Power supply voltage				24 VDC						
Reference page			1	6			22			



Specifications

Step Motor (Servo/24 VDC)

Model		LESYH16□EB-X171	LESYH16□EA-X171	LESYH25 EB-X171 LESYH25 EA-X1					
Stroke [mm]			50,	100	50, 100, 150				
	Max. work load [kg]*1 *3	Horizontal	8	3	1	2			
	wax. work load [kg]	Vertical	12	6	20	10			
	Pushing force 35 % to 70 9	% [N]* ² * ³	174 to 348	91 to 182	210 to 420	109 to 218			
S	Speed [mm/s]*1 *3		10 to 200	20 to 400	10 to 200	20 to 400			
specifications	Pushing speed [mm/s]		10 to 30	20 to 30	10 to 30	20 to 30			
fica	Max. acceleration/decelerat	tion [mm/s ²]		50	00				
eci	Positioning repeatability [mm]		±0	.01				
	Lost motion [mm]*4			0.1 o	r less				
Actuator	Screw lead [mm]		6	12	8	16			
Ę	Impact/Vibration resistance	e [m/s²]*5	50/20						
Ă	Actuation type		Ball screw/LESYH□D Ball screw + Belt/LESYH□(R, L)						
	Guide type	,	Linear guide (Circulating type)						
	Operating temperature rar	nge [°C]	5 to 40						
	Operating humidity range	[%RH]	90 or less (No condensation)						
ous	Motor size			□42 □56					
Electric specifications	Motor type			Battery-less absolute	(Step motor 24 VDC)				
peci	Encoder (Angular displacen	nent sensor)		Battery-les	ss absolute				
trics	Power supply voltage [V]		24 VDC ±10 %						
Elec	Power [W]*6 *8		Max. po	ower 48	Max. po	wer 104			
tions	Туре			Non-magn	etising lock				
Lock unit specifications	Holding force [N]		157	78	216	108			
unitsp	Power consumption [W]*8	*7			5				
Lock	Rated voltage [V]			24 VDC	±10 %				

- *1 Speed changes according to the work load. Check "Speed-Work Load Graph (Guide)" on page 2.
- *2 Pushing force accuracy is ± 20 % (F.S.).
- *3 The speed and force may change depending on the cable length, load, and mounting conditions. Furthermore, if the cable length exceeds 5 m, then it will decrease by up to 10 % for each 5 m. (At 15 m: Reduced by up to 20 %)
- *4 A reference value for correcting an error in reciprocal operation
- *5 Vibration resistance: No malfunction occurred in a test ranging between 4 5 to 2 0 0 0 Hz. The test was performed in both an axial direction and a perpendicular direction to the lead screw. (The test was performed with the actuator in the initial state.)

 Impact resistance: No malfunction occurred when the actuator was tested with a drop tester in both an axial direction and a perpendicular direction to
 - Impact resistance: No malfunction occurred when the actuator was tested with a drop tester in both an axial direction and a perpendicular direction to the lead screw. (The test was performed with the actuator in the initial state.)

[kg]

- *6 Indicates the max. power during operation (including the controller)
 This value can be used for the selection of the power supply.
- *7 With lock only
- *8 For an actuator with lock, add the power consumption for the lock.

Weight

With Cover


Model	Stroke						
iviodei	50	100	150				
LESYH16(D, R, L)-□-X171	1.87	2.26	_				
LESYH25(D, R, L)-□-X171	3.50	4.10	4.90				


Additional Weight


radicional troignic		נפייו	
Size	16	25	
With lock/cover	0.32	0.61	




Dimensions

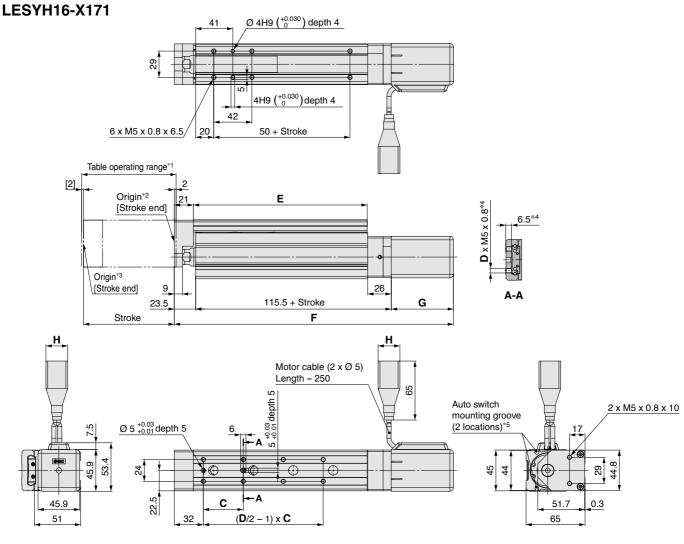

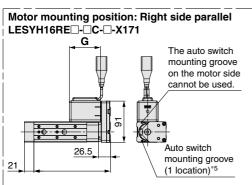

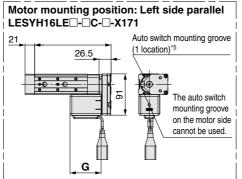

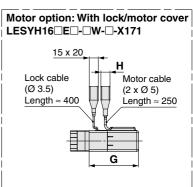

- *1 This is the range within which the table can move when it returns to origin. Make sure workpieces mounted on the table do not interfere with the workpieces and facilities around the table.
- *2 Position after return to origin
- *3 [] for when the direction of return to origin has changed
- *4 If the workpiece retaining screws are too long, they may come in contact with the guide block, resulting in a malfunction.


 Use screws of a length equal to or shorter than the thread length.
- *5 Order the auto switch for checking the limit and the intermediate signal separately. Applicable to the D-M9□, D-M9□E, and D-M9□W (2-colour indicator)

Dimensions								
Model	Stroke	Motor option	С	D	Е	F	G	Н
LESYH16DE□-50C-□-X171	50	C: With cover	40	6	116.5	257.5	68.5	
LESYH16DE□-100C-□-X171	100	C. Willi Cover	44	8	191.5	307.5		24
LESYH16DE□-50W-□-X171	50	W: With lock/cover	40	6	116.5	298	109	24
LESYH16DE□-100W-□-X171	100	vv. vviti i iOCK/COVEI	44	8	191.5	348	109	





Dimensions

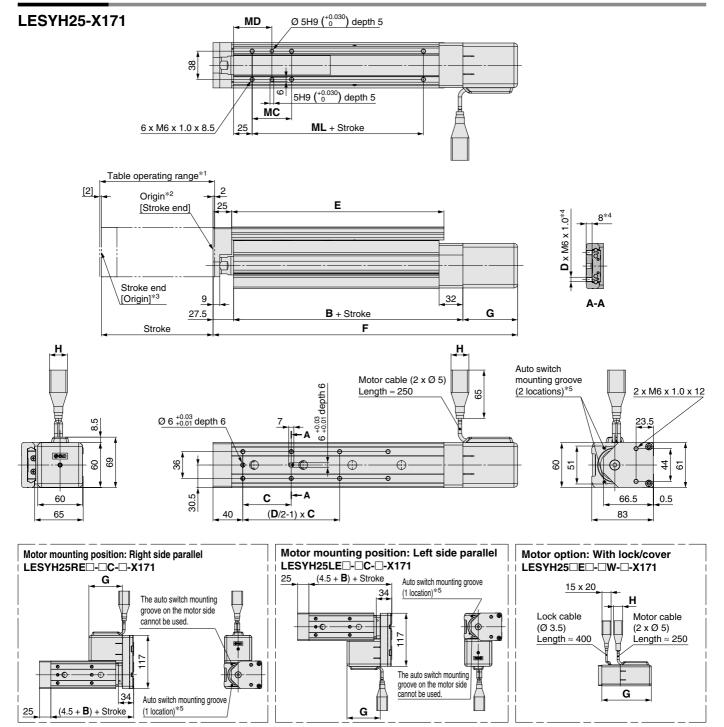


- *1 This is the range within which the table can move when it returns to origin. Make sure workpieces mounted on the table do not interfere with the workpieces and facilities around the table.
- *2 Position after return to origin
- *3 [] for when the direction of return to origin has changed
- *4 If the workpiece retaining screws are too long, they may come in contact with the guide block, resulting in a malfunction. Use screws of a length equal to or shorter than the thread length.
- *5 Order the auto switch for checking the limit and the intermediate signal separately. Applicable to the D-M9□, D-M9□E, and D-M9□W (2-colour indicator) For details, refer to the **Web Catalogue**.

Dimensions												[mm]
Model	Stroke	Motor option	В	С	D	E	F	G	Н	MC	MD	ML
LESYH25DE□-50C-□-X171	50		128	75	4	143	279			36	43	50
LESYH25DE□-100C-□-X171	100	C: With cover	120	48	0	207	329	73.5		30	43	50
LESYH25DE□-150C-□-X171	150		158	65	0	285	409		24	53	51.5	80
LESYH25DE□-50W-□-X171	50		128	75	4	143	322		24	36	43	50
LESYH25DE□-100W-□-X171	100	W: With lock/cover	120	48	0	207	372	116.5		30	43	50
LESYH25DE□-150W-□-X171	150		158	65	0	285	452			53	51.5	80

LESYH Series Auto Switch Mounting

Auto Switch Mounting Position

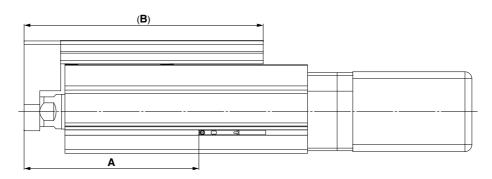


			[mm]
Size	Stroke	Α	В
16	50	100.5	137.5
10	100	150.5	212.5
	50	108	168
25	100	158	232
	150	238	310

Auto Switch Mounting

When mounting the auto switches, they should be inserted into the actuator's auto switch mounting groove as shown in the drawing below. After setting in the mounting position, use a flat head watchmaker's screwdriver to tighten the auto switch mounting screw that is included.

Auto Switch Mounting Screw Tightening Torque				
Auto switch model	Tightening torque			
D-M9□(V)				
D-M9□W(V)	0.05 to 0.10			
D-M9□F				

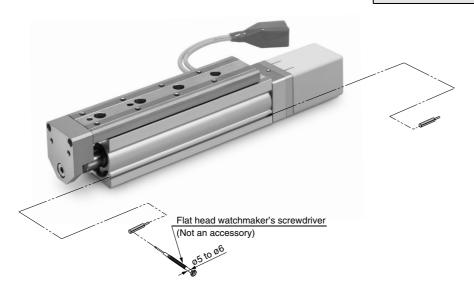

* When tightening the auto switch mounting screw (included with auto switch), use a watchmaker's screwdriver with a handle diameter of about 5 to 6 mm.



Solid State Auto Switch Direct Mounting Type

D-M9N(V)/D-M9P(V)/D-M9B(V) **(** € RoHS



Grommet

- 2-wire load current is reduced (2.5 to 40 mA).
- Using flexible cable as standard



. Caution

Precautions

Fix the auto switch with the existing screw installed on the auto switch body. The auto switch may be damaged if a screw other than the one supplied is used.

Auto Switch Specifications

Refer to the SMC website for details on products that are compliant with international standards.

PLC: Programmable Logic Controller

D-M9 □, D-M9 [□V (With indicator light)					
Auto switch model	D-M9N	D-M9NV	D-M9P	D-M9PV	D-M9B	D-M9BV
Electrical entry direction	In-line	Perpendicular	In-line	Perpendicular	In-line	Perpendicular
Wiring type		3-w	/ire		2-v	vire
Output type	NF	PN	PI	VΡ		_
Applicable load		IC circuit, Relay, PLC			24 VDC r	elay, PLC
Power supply voltage	5, 12, 24 VDC (4.5 to 28 V) —			_		
Current consumption		10 mA or less				_
Load voltage	28 VDC	28 VDC or less —			24 VDC (10	to 28 VDC)
Load current	40 mA or less 2.5 to 40 m.			40 mA		
Internal voltage drop	0.8 V or less at 10 mA (2 V or less at 40 mA) 4 V or less			r less		
Leakage current	100 μA or less at 24 VDC 0.8 mA or less			or less		
Indicator light	Red LED illuminates when turned ON.					
Standard			CE marki	ng, RoHS		•

Oilproof Flexible Heavy-duty Lead Wire Specifications

Auto swi	tch model	D-M9N(V) D-M9P(V) D-M9B(V		D-M9B(V)
Sheath	Outside diameter [mm]	2.6		
Insulator	Number of cores	3 cores (Brown/Blue/Black) 2 cores (Brown/Bl		
insulator	Outside diameter [mm]	0.88		
Conductor	Effective area [mm²]	0.15		
Conductor	Strand diameter [mm]	0.05		
Minimum bending radius	s [mm] (Reference values)	17		

- * Refer to the **Web Catalogue** for solid state auto switch common specifications.
- Refer to the Web Catalogue for lead wire lengths.

Weight

[g]

Auto swit	tch model	D-M9N(V)	D-M9P(V)	D-M9B(V)
	0.5 m ()	8		7
Lead wire length	1 m (M)	14		13
Lead wire length	3 m (L)	41		38
	5 m (Z)	68		63

Dimensions [mm] **D-M9**□ D-M9□V Most sensitive position Most sensitive position Mounting screw M2.5 x 4 L Indicator light Mounting screw M2.5 x 4 L Slotted set screw Slotted set screw (flat point) (3000)Indicator light Ø 2.6 19.5

Normally Closed Solid State Auto Switch Direct Mounting Type D-M9NE(V)/D-M9PE(V)/D-M9BE(V) $\subset \in$

Grommet

- Output signal turns on when no magnetic force is detected.
- Can be used for the actuator adopted by the solid state auto switch D-M9 series (excluding special order products)



.⚠Caution

Precautions

Fix the auto switch with the existing screw installed on the auto switch body. The auto switch may be damaged if a screw other than the one supplied is used.

Auto Switch Specifications

Refer to the SMC website for details on products that are compliant with international standards.

PLC: Programmable Logic Controller

D-M9□E, D-M9□EV (With indicator light)						
Auto switch model	D-M9NE	D-M9NEV	D-M9PE	D-M9PEV	D-M9BE	D-M9BEV
Electrical entry direction	In-line	Perpendicular	In-line	Perpendicular	In-line	Perpendicular
Wiring type		3-w	/ire		2-v	vire
Output type	NF	PN	PI	VΡ	1	_
Applicable load		IC circuit, Relay, PLC 24 VDC relay, PLC			elay, PLC	
Power supply voltage	5, 12, 24 VDC (4.5 to 28 V) —			_		
Current consumption		10 mA	or less		1	_
Load voltage	28 VDC	28 VDC or less — 24 V			24 VDC (10	to 28 VDC)
Load current	40 mA or less 2.5 to 40 mA			40 mA		
Internal voltage drop	0.8 V or less at 10 mA (2 V or less at 40 mA) 4 V or less			r less		
Leakage current	100 μA or less at 24 VDC 0.8 mA or less			or less		
Indicator light	Red LED illuminates when turned ON.					
Standard			CE marki	ng, RoHS		

Oilproof Flexible Heavy-duty Lead Wire Specifications

Auto swi	tch model	D-M9NE(V) D-M9PE(V) D-M9BE		D-M9BE(V)
Sheath	Outside diameter [mm]	2.6		
Insulator	Number of cores	3 cores (Brown/Blue/Black) 2 cores (Brown/B		
insulator	Outside diameter [mm]	0.88		
Conductor	Effective area [mm²]	0.15		
Conductor	Strand diameter [mm]	0.05		
Minimum bending radius	s [mm] (Reference values)	17		

- Refer to the Web Catalogue for solid state auto switch common specifications.
- Refer to the Web Catalogue for lead wire lengths.

Weight

Auto swit	ch model	D-M9NE(V)	D-M9PE(V)	D-M9BE(V)
	0.5 m ()	8		7
Lood wire length	1 m (M)*1	14		13
Lead wire length	3 m (L)	4	1	38
	5 m (Z)*1	68		63

^{*1} The 1 m and 5 m options are produced upon receipt of order.

Dimensions [mm] D-M9□E D-M9□EV Most sensitive position Most sensitive position Mounting screw M2.5 x 4 L Indicator light 500 (1000) (3000) (5000) Mounting screw M2.5 x 4 L Slotted set screw Slotted set screw (flat point) 0.3 Indicator light Ø 2.6 4.6 19.5

[g]

D-M9NW(V)/D-M9PW(V)/D-M9BW(V) $\subset \in$



[g]

Grommet

- 2-wire load current is reduced (2.5 to 40 mA).
- Using flexible cable as standard spec.
- The proper operating range can be determined by the colour of the light. (Red → Green ← Red)



∆Caution

Precautions

Fix the auto switch with the existing screw installed on the auto switch body. The auto switch may be damaged if a screw other than the one supplied is used.

Auto Switch Specifications

Refer to the SMC website for details on products that are compliant with international standards.

PLC: Programmable Logic Controller

D-M9□W, D-M	D-M9□W, D-M9□WV (With indicator light)					
Auto switch model	D-M9NW	D-M9NWV	D-M9PW	D-M9PWV	D-M9BW	D-M9BWV
Electrical entry direction	In-line	Perpendicular	In-line	Perpendicular	In-line	Perpendicular
Wiring type		3-v	vire		2-v	vire
Output type	N	PN	PI	VΡ	ı	_
Applicable load		IC circuit, Relay, PLC			24 VDC r	elay, PLC
Power supply voltage	4	5, 12, 24 VDC (4.5 to 28 V)			ı	_
Current consumption		10 mA or less			ı	_
Load voltage	28 VDC	28 VDC or less —			24 VDC (10	to 28 VDC)
Load current		40 mA	or less		2.5 to	40 mA
Internal voltage drop	0.8 V or l	0.8 V or less at 10 mA (2 V or less at 40 mA)			4 V o	r less
Leakage current	100 μA or less at 24 VDC			0.8 mA	or less	
Indicator light		Operating range Red LED illuminates. Proper operating range Green LED illuminates.			s.	
Standard			CE marki	ng, RoHS		

Oilproof Flexible Heavy-duty Lead Wire Specifications

Auto swi	tch model	D-M9NW(V) D-M9PW(V) D-M9BW(V			
Sheath	Outside diameter [mm]	2.6			
Insulator	Number of cores	3 cores (Brown/Blue/Black) 2 cores (Brown/Bl			
Insulator	Outside diameter [mm]	0.88			
Conductor	Effective area [mm²]	0.15			
Conductor	Strand diameter [mm]	0.05			
Minimum bending radius	[mm] (Reference values)	17			

- * Refer to the Web Catalogue for solid state auto switch common specifications.
- * Refer to the Web Catalogue for lead wire lengths.

Weight


Auto swit	ch model	D-M9NW(V) D-M9PW(V		D-M9BW(V)
	0.5 m ()	8		7
Lead wire length	1 m (M)	14 41 68		13
Lead wire length	3 m (L)			38
	5 m (Z)			63

Dimensions [mm] D-M9□W D-M9 WV Most sensitive position Most sensitive position Mounting screw M2.5 x 4 L Indicator light 500 (1000) (3000) (5000) Mounting screw M2.5 x 4 L Slotted set screw Slotted set screw (flat point) 0.3 Indicator light Ø 2.6 4.6 19.5

Step Motor Controller JXCE1/91/P1/D1/L1/M1 Series



How to Order

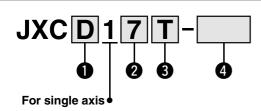

Communication protocol

E	EtherCAT®			
9	EtherNet/IP™			
Р	PROFINET			
D	DeviceNet™			
L	IO-Link			
M	CC-Link			

2 Mounting

7	Screw mounting
8 *1	DIN rail

*1 The DIN rail is not included. It must be ordered separately. (Refer to page 21.)



Device Net

Option

_	Without option						
S	With straight type communication plug						
Т	With T-branch type communication plug						

* Select "-" for anything other than JXCD 1 and JXCM1.


4 Actuator part number

Without cable specifications and actuator options Example: Enter "LESYH16DEA-50-X171" for the LESYH16DEA-50C-R1□□-X171.

The controller is sold as single unit after the compatible actuator is set.

Confirm that the combination of the controller and actuator is correct.

(1) Check the actuator labell for the model number. This number should match that of the controller.

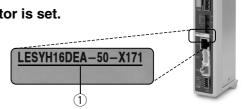

Refer to the operation manual for using the products. Please download it via our website, https://www.smc.eu

JXCE1/91/P1/D1/L1/M1 Series

Specifications

Model		JXCE1	JXC91	JXCP1	JXCD1	JXCL1	JXCM1		
Ne	twork		EtherCAT®	EtherNet/IP™	PROFINET	DeviceNet™	IO-Link	CC-Link	
Compatible motor				Step motor (Servo/24 VDC)					
Power supply					Power voltage:	24 VDC ±10 %			
Current consumption (Controller)			200 mA or less	130 mA or less	200 mA or less	100 mA or less	100 mA or less	100 mA or less	
Co	mpatible	encoder			Battery-less absolute	(4096 pulse/rotation)			
us	A !! L .	Protocol	EtherCAT®*2	EtherNet/IP™*2	PROFINET*2	DeviceNet™	IO-Link	CC-Link	
specifications	Applicable system	Version*1	Conformance Test Record V.1.2.6	Volume 1 (Edition 3.14) Volume 2 (Edition 1.15)	Specification Version 2.32	Volume 1 (Edition 3.14) Volume 3 (Edition 1.13)	Version 1.1 Port Class A	Ver. 1.10	
			100 Mbps*2	10/100 Mbps*2 (Automatic negotiation)	100 Mbps*2	125/250/500 kbps	230.4 kbps (COM3)	156 kbps, 625 kbps, 2.5 Mbps, 5 Mbps, 10 Mbps	
ical	Configuration file*3		ESI file	EDS file	GSDML file	EDS file	IODD file	CSP+ file	
Communication	I/O occupation area		Input 20 bytes Output 36 bytes	Input 36 bytes Output 36 bytes	Input 36 bytes Output 36 bytes	Input 4, 10, 20 bytes Output 4, 12, 20, 36 bytes	Input 14 bytes Output 22 bytes	1 station, 2 stations, 4 stations	
ပြ	Terminating resistor		Not included						
Me	emory				EEP	ROM			
LE	D indicate	r	PWR, RUN, ALM, ERR	PWR, ALM, MS, NS	PWR,ALM,SF,BF	PWR, ALM, MS, NS	PWR, ALM, COM	PWR, ALM, L ERR, L RUN	
Ca	ble length	[m]	Actuator cable: 20 or less						
Cooling system Operating temperature range [°C] Operating humidity range [%RH] Insulation resistance [ΜΩ]			Natural air cooling						
			0 to 55 (No freezing)						
					90 or less (No	condensation)			
				Between	n all external terminal	s and the case: 50 (50	00 VDC)		
Weight [g]			220 (Screw mounting) 240 (DIN rail mounting)	210 (Screw mounting) 230 (DIN rail mounting)		210 (Screw mounting) 230 (DIN rail mounting)		170 (Screw mounting) 190 (DIN rail mounting)	

^{*1} Please note that versions are subject to change.

■ Trademark

EtherNet/IP™ is a trademark of ODVA.

DeviceNet™ is a trademark of ODVA.

EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.



^{*2} Use a shielded communication cable with CAT5 or higher for the PROFINET, EtherNet/IP™, and EtherCAT®.

st 3 The files can be downloaded from the SMC website.

Step Motor Controller JXCE1/91/P1/D1/L1/M1 Series

Example of Operation Command

In addition to the step data input of 64 points maximum in each communication protocol, the changing of each parameter can be performed in real time via numerical data defined operation.

* Numerical values other than "Moving force," "Area 1," and "Area 2" can be used to perform operation under numerical instructions from JXCL1.

<Application example> Movement between 2 points

No.	Movement mode	Speed	Position	Acceleration	Deceleration	Pushing force	Trigger LV	Pushing speed	Moving force	Area 1	Area 2	In position
0	1: Absolute	100	10	3000	3000	0	0	0	100	0	0	0.50
1	1: Absolute	100	100	3000	3000	0	0	0	100	0	0	0.50

<Step no. defined operation>

Sequence 1: Servo ON instruction

Sequence 2: Instruction to return to origin

Sequence 3: Specify step data No. 0 to input the DRIVE signal.

Sequence 4: Specify step data No. 1 after the DRIVE signal has been temporarily turned OFF to input the DRIVE signal.

<Numerical data defined operation>


Sequence 1: Servo ON instruction

Sequence 2: Instruction to return to origin

Sequence 3: Specify step data No. 0 and turn ON the input instruction flag (position). Input 10 in the target position. Subsequently the start flag turns ON.

Sequence 4: Turn ON step data No. 0 and the input instruction flag (position) to change the target position to 100 while the start flag is ON.


The same operation can be performed with any operation command.

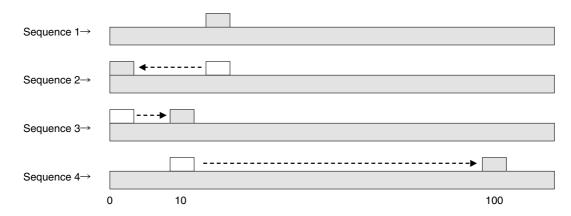




JXCE1/91/P1/D1/L1/M1 Series


Dimensions

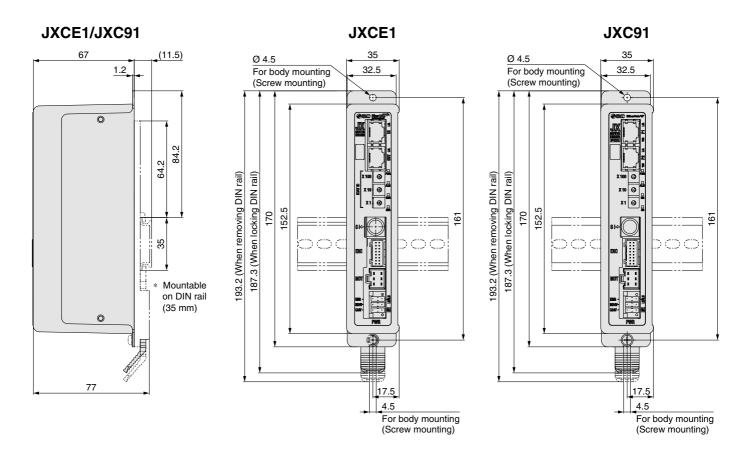

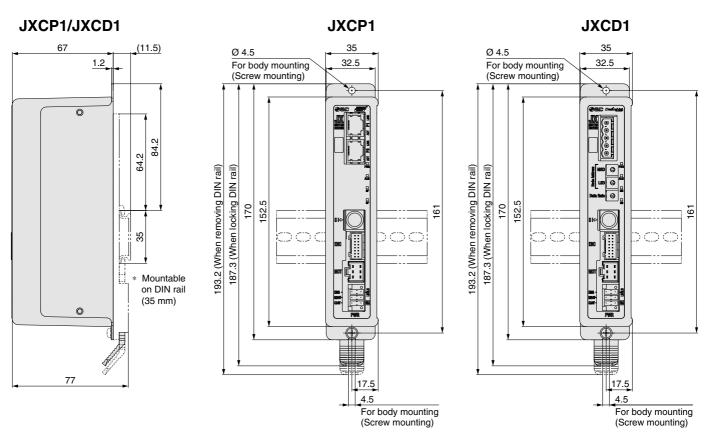

Step Motor Controller JXCE1/91/P1/D1/L1/M1 Series

Dimensions

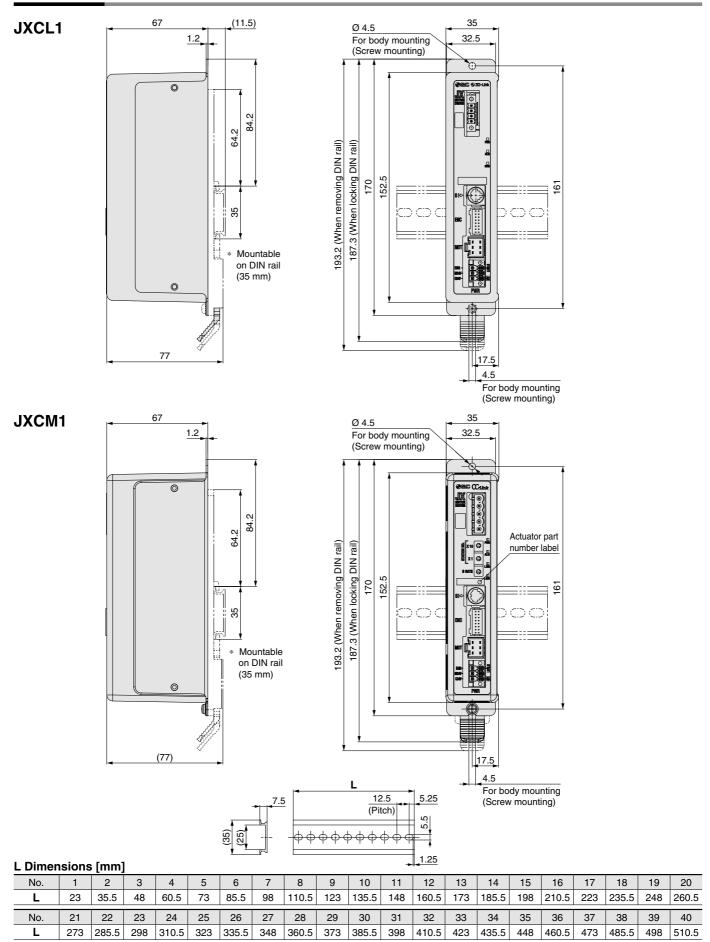

JXCE1/91/P1/D1/L1/M1 Series

Options

■ Communication cable for controller setting

- Controller setting software
- USB driver

Download from SMC's website:


https://www.smc.eu

Hardware Requirements

OS	Windows®7, Windows®8.1, Windows®10
Communication interface	USB 1.1 or USB 2.0 ports
Display	1024 x 768 or more


Windows®7, Windows®8.1, and Windows®10 are registered trademarks of Microsoft Corporation in the United States.

1) Communication cable JXC-W2A-C

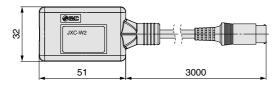

* It can be connected to the controller directly.

2 USB cable LEC-W2-U

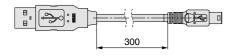

IDIN rail mounting adapter LEC-3-D0

* With 2 mounting screws


This should be used when the DIN rail mounting adapter is mounted onto a screw mounting type controller afterward.

■ DIN rail AXT100-DR-□

* For \square , enter a number from the No. line in the table on page 20. Refer to the dimension drawings on page 20 for the mounting dimensions.

■Power supply plug JXC-CPW

* The power supply plug is an accessory.

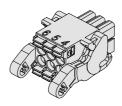

l (6) (5) (4)
1(3)(2)(1)

(4) OV (1) C24V

2 M24V ③ EMG

(5) N.C. (6) LK RLS

Power supply plug

i Owci s	apply plag	
Terminal name	Function	Details
0V	Common supply (–)	M24V terminal/C24V terminal/EMG terminal/LK RLS terminal are common (-).
M24V	Motor power supply (+)	Motor power supply (+) of the controller
C24V	Control power supply (+)	Control power supply (+) of the controller
EMG	Stop (+)	Connection terminal of the external stop circuit
LK RLS	Lock release (+)	Connection terminal of the lock release switch

■Communication plug connector

For DeviceNet™

Straight type T-branch type Communication plug JXC-CD-S JXC-CD-T






connector for DeviceNet™

Terminal name	
V+	Power supply (+) for DeviceNet™
CAN_H	Communication wire (High)
Drain	Grounding wire/Shielded wire
CAN_L	Communication wire (Low)
V–	Power supply (−) for DeviceNet™

For IO-Link Straight type JXC-CL-S

The communication plug connector for IO-Link is an accessory.

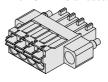

Communication plug connector for IO-Link

Terminal no.	Terminal name	Details
1	L+	+24 V
2	NC	N/A
3	L-	0 V
4	C/Q	IO-Link signal

For CC-Link

Straight type T-branch type **LEC-CMJ-S** LEC-CMJ-T






Communication plug connector for CC-Link						
Terminal name						
Terminal name	Details					

Terminal name	Details
DA	CC-Link communication line A
DB	CC-Link communication line B
DG	CC-Link ground line
SLD	CC-Link shield
FG	Frame ground

■ Conversion cable P5062-5 (Cable length: 300 mm)

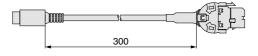


* To connect the teaching box (LEC-T1-3 G G) or controller setting kit (LEC-W2) to the controller, a conversion cable is required.




Controller (Step Data Input Type)

JXC51/61 Series



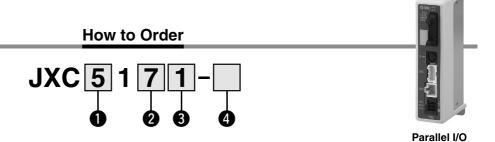

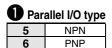

2 Mounting						
7	Screw mounting					
8*1	DIN rail					

^{*1} The DIN rail is not included. Order it separately.

3 I/O cable length [m] 4 A

_	None	
1	1.5	
3	3	
5	5	

4 Actuator part number

LESYH16DEA-50-X171

Without cable specifications and actuator options Example: Enter "LESYH16DEA-50-X171" for the LESYH16DEA-50C-R1□□-X171.

The controller is sold as single unit after the compatible actuator is set.

Confirm that the combination of the controller and actuator is correct.

<Check the following before use.>

- ① Check the actuator labell for the model number. This number should match that of the controller.
- 2 Check that the Parallel I/O configuration matches (NPN or PNP).



Specifications


Mandal	JXC51
Model	JXC61
Compatible motor	Step motor (Servo/24 VDC)
Power supply	Power voltage: 24 VDC ±10 %
Current consumption (Controller)	100 mA or less
Compatible encoder	Battery-less absolute (4096 pulse/rotation)
Parallel input	11 inputs (Photo-coupler isolation)
Parallel output	13 outputs (Photo-coupler isolation)
Serial communication	RS485 (Only for the LEC-T1 and JXC-W2)
Memory	EEPROM
LED indicator	PWR, ALM
Cable length [m]	Actuator cable: 20 or less
Cooling system	Natural air cooling
Operating temperature range [°C]	0 to 55 °C
Operating humidity range [%RH]	90 or less (No condensation)
Insulation resistance [M Ω]	Between all external terminals and the case: 50 (50 VDC)
Weight [g]	150 (Screw mounting), 170 (DIN rail mounting)




JXC51/61 Series

How to Mount

a) Screw mounting (JXC□1□□-□) (Installation with two M4 screws)

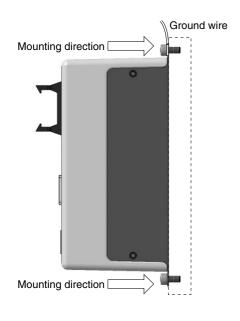

b) DIN rail mounting (JXC 1 D-) (Installation with the DIN rail)

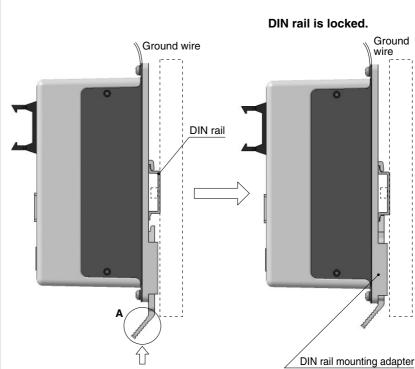


Hook the controller on the DIN rail and press the lever of section **A** in the arrow direction to lock it.

st When size 25 or more of the LE series are used, the space between the controllers should be 10 mm or more.

DIN rail AXT100-DR-□

* For \square , enter a number from the No. line in the table below. Refer to the dimension drawings on page 24 for the mounting dimensions.

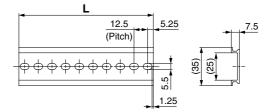

L Dimensions [mm]

No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L	23	35.5	48	60.5	73	85.5	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5
No.	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40


DIN rail mounting adapter

LEC-D0 (with 2 mounting screws)

This should be used when the DIN rail mounting adapter is mounted onto a screw mounting type controller afterward.



Dimensions

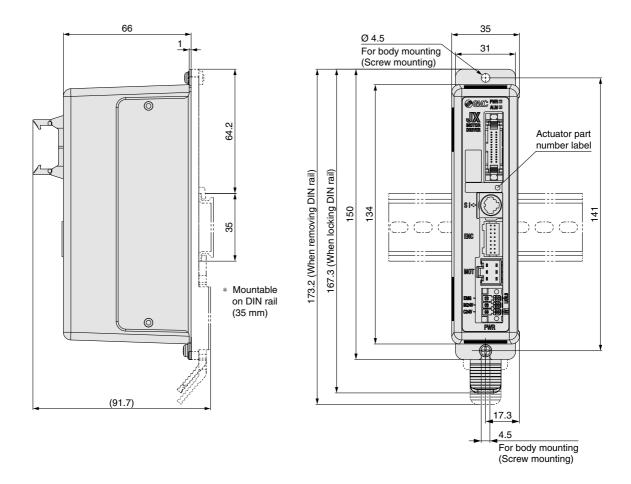

JXC51/61 Series


Wiring Example 1

Parallel I/O Connector

- * When you connect a PLC to the parallel I/O connector, use the I/O cable (LEC-CN5-□).

 * The wiring changes depending on the type of parallel I/O (NBM).
- The wiring changes depending on the type of parallel I/O (NPN or PNP).


Wiring diagram JXC51□□-□ (NPN)

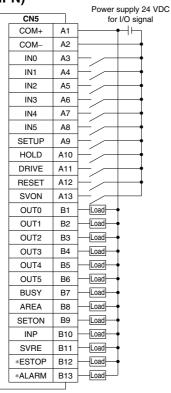

Input Signal

Name	Details
COM+	Connects the power supply 24 V for input/output signal
COM-	Connects the power supply 0 V for input/output signal
INO to IN5	Step data specified bit no.
CALL OT OALL	(Input is instructed by combining IN0 to 5.)
SETUP	Instruction to return to origin
HOLD	Temporarily stops operation
DRIVE	Instruction to drive
RESET	Resets alarm and interrupts operation
SVON	Servo ON instruction

JXC61□□-□ (PNP)

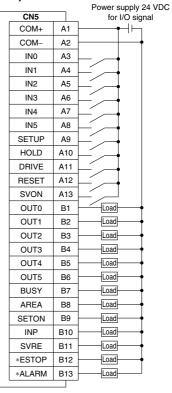

Output Signal

Output Oigila	-
Name	Details
OUT0 to OUT5	Outputs the step data no. during operation
BUSY	Outputs when the actuator is moving
AREA	Outputs within the step data area output setting range
SETON	Outputs when returning to origin
INP	Outputs when target position or target force is reached (Turns on when the positioning or pushing is completed.)
SVRE	Outputs when servo is on
*ESTOP*1	OFF when EMG stop is instructed
*ALARM*1	OFF when alarm is generated

^{*1} Signal of negative-logic circuit (N.C.)


Step Data Setting

Sten Data (Positioning)

1. Step data setting for positioning

In this setting, the actuator moves toward and stops at the target position.

The following diagram shows the setting items and operation. The setting items and set values for this operation are stated below.

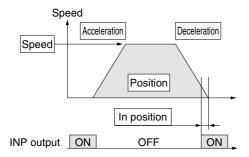


- : Need to be set.
- ○: Need to be adjusted as required.
- Setting is not required

Step	Data (Positionin	g) —: Setting is not required.		
Necessity	Item	Details		
0	Movement MOD	When the absolute position is required, set Absolute. When the relative position is required, set Relative.		
0	Speed	Transfer speed to the target position		
0	Position	Target position		
0	Acceleration	Parameter which defines how rapidly the actuator reaches the speed set. The higher the set value, the faster it reaches the speed set.		
0	Deceleration	Parameter which defines how rapidly the actuator comes to stop. The higher the set value, the quicker it stops.		
0	Pushing force	Set 0. (If values 1 to 100 are set, the operation will be changed to the pushing operation.)		
_	Trigger LV	Setting is not required.		
_	Pushing speed	Setting is not required.		
0	Moving force	Max. torque during the positioning operation (No specific change is required.)		
0	Area 1, Area 2	Condition that turns on the AREA output signal.		
0	In position	Condition that turns on the INP output signal. When the actuator enters the range of [in position], the INP output signal turns on. (It is unnecessary to change this from the initial value.) When it is necessary to output the arrival signal before the operation is completed, make the value larger.		

2. Step data setting for pushing

The actuator moves toward the pushing start position, and when it reaches that position, it starts pushing with the set force or less.

The following diagram shows the setting items and operation. The setting items and set values for this operation are stated below.

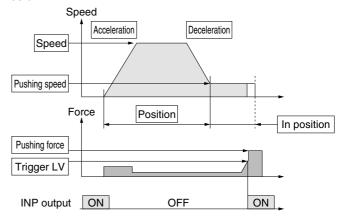

Step Data (Pushing)


- ©: Need to be set.
- O: Need to be adjusted as required.

	Data (i dailing)	O. Need to be adjusted as required
Necessity	Item	Details
0	Movement MOD	When the absolute position is required, set Absolute. When the relative position is required, set Relative.
0	Speed	Transfer speed to the pushing start position
0	Position	Pushing start position
0	Acceleration	Parameter which defines how rapidly the actuator reaches the speed set. The higher the set value, the faster it reaches the speed set.
0	Deceleration	Parameter which defines how rapidly the actuator comes to stop. The higher the set value, the quicker it stops.
0	Pushing force	Pushing force ratio is defined. The setting range differs depending on the electric actuator type. Refer to the operation manual for the electric actuator.
0	Trigger LV	Condition that turns on the INP output signal. The INP output signal turns on when the generated force exceeds the value. Trigger level should be the pushing force or less.
0	Pushing speed	Pushing speed during pushing. When the speed is set fast, the electric actuator and workpieces might be damaged due to the impact when they hit the end, so this set value should be smaller. Refer to the operation manual for the electric actuator.
0	Moving force	Max. torque during the positioning operation (No specific change is required.)
0	Area 1, Area 2	Condition that turns on the AREA output signal.
0	In position	Transfer distance during pushing. If the transferred distance exceeds the setting, it stops even if it is not pushing. If the transfer distance is exceeded, the INP output signal will not turn on.




JXC51/61 Series


Signal Timing

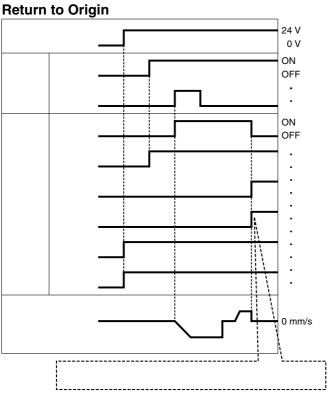


* "*ALARM" and "*ESTOP" are expressed as negative-logic circuits.

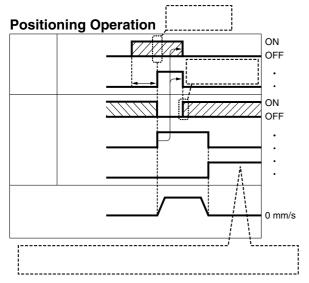


* "OUT" is output when "DRIVE" is changed from ON to OFF. (When power supply is applied, "DRIVE" or "RESET" is turned ON or "*ESTOP" is turned OFF, all of the "OUT" outputs are OFF.)

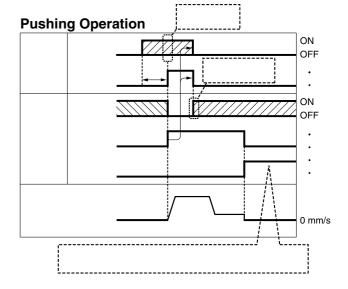

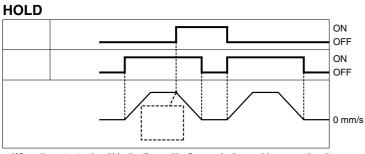

 When the actuator is within the "In position" range in the pushing operation, it does not stop even if HOLD signal is input.

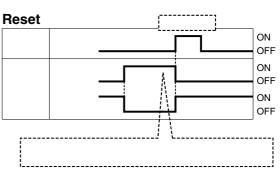


* "*ALARM" is expressed as a negative-logic circuit.



Options

■ Power supply plug JXC-CPW

The power supply plug is an accessory.
 Applicable cable size> AWG20 (0.5 mm²), cover diameter 2.0 mm or less

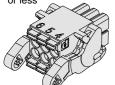

000	1
(6)(5)(4)	l
0 0 0	l
(തെ (തെ (ന	l
	ı

① C24V ④ 0V ② M24V ⑤ N.C.

③ EMG ⑥ LK RLS

Power supply plug terminal

Terminal name	Function	Details
0V	Common supply (–)	M24V terminal/C24V terminal/EMG terminal/LK RLS terminal are common (-).
M24V	Motor power supply (+)	Motor power supply (+) of the controller
C24V	Control power supply (+)	Control power supply (+) of the controller
EMG	Stop (+)	Connection terminal of the external stop circuit
LK RLS	Lock release (+)	Connection terminal of the lock release switch

■ Communication cable for controller setting

- Controller setting software
- USB driver

Download from SMC's website:


https://www.smc.eu

Hardware Requirements

OS	Windows [®] 7, Windows [®] 8.1, Windows [®] 10
Communication interface	USB 1.1 or USB 2.0 ports
Display	1024 x 768 or more


 Windows®7, Windows®8.1, and Windows®10 are registered trademarks of Microsoft Corporation in the United States.

1) Communication cable JXC-W2A-C

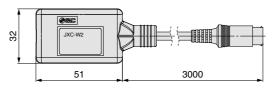


* It can be connected to the controller directly.

② USB cable LEC-W2-U

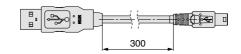



■ Conversion cable P5062-5 (Cable length: 300 mm)

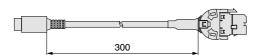

* To connect the teaching box (LEC-T1-3□G□) or controller setting kit (LEC-W2) to the controller, a conversion cable is required.

■I/O cable

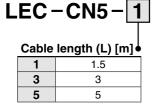

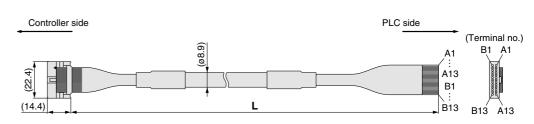

Conductor size: AWG28

Weight

Product no.	Weight [g]
LEC-CN5-1	170
LEC-CN5-3	320
LEC-CN5-5	520

Connector	Insulation	Dot	Dot
pin no.	colour	mark	colour
A1	Light brown		Black
A2	Light brown		Red
A3	Yellow		Black
A4	Yellow		Red
A5	Light green		Black
A6	Light green		Red
A7	Grey		Black
A8	Grey		Red
A9	White		Black
A10	White		Red
A11	Light brown		Black
A12	Light brown		Red
A13	Yellow		Black


Connector	Insulation	Dot	Dot
pin no.	colour	mark	colour
B1	Yellow		Red
B2	Light green		Black
В3	Light green		Red
B4	Grey		Black
B5	Grey		Red
B6	White		Black
B7	White		Red
B8	Light brown		Black
B9	Light brown		Red
B10	Yellow		Black
B11	Yellow		Red
B12	Light green		Black
B13	Light green		Red
_		Shield	




JXCE1/91/P1/D1/L1/M1 Series JXC51/61 Series

Options: Actuator Cable

[Robotic cable for battery-less absolute (Step motor 24 VDC)]

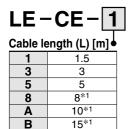



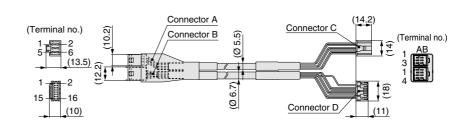



Weight


Product no.	Weight [g]	Note
LE-CE-1	190	
LE-CE-3	360	
LE-CE-5	570	
LE-CE-8	900	Robotic cable
LE-CE-A	1120	
LE-CE-B	1680	
LE-CE-C	2210	

Signal	Connector A terminal no.		Cable colour	Connector C terminal no.
Α	B-1	-	Brown	2
Ā	A-1	•	Red	1
В	B-2	•	Orange	6
B	A-2		Yellow	5
COM-A/COM	B-3		Green	3
COM-B/—	A-3		Blue	4
Signal	Connector B terminal no.	Shield	Cable colour	Connector D terminal no.
Vcc	B-1		Brown	12
GND	A-1		Black	13
Ā	B-2		Red	7
Α	A-2		Black	6
B	B-3		Orange	9
В	A-3	 	Black	8
SD+ (RX)	B-4		Yellow	11
SD- (TX)	A-4	 	Black	10
		·	Black	3

[Robotic cable with lock for battery-less absolute (Step motor 24 VDC)]

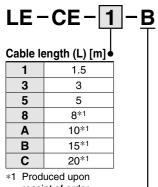

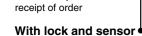

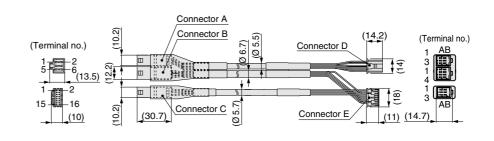

Trial look and comes.

Weight

Product no.	Weight [g]	Note
LE-CE-1-B	240	
LE-CE-3-B	460	
LE-CE-5-B	740	
LE-CE-8-B	1170	Robotic cable
LE-CE-A-B	1460	
LE-CE-B-B	2120	
LE-CE-C-B	2890	

Signal A Ā B	Connector A terminal no. B-1 A-1 B-2		Cable colour Brown Red Orange	Connector D terminal no.
B COM-A/COM	A-2 B-3		Yellow Green	5
COM-B/—	A-3		Blue	4
COIVI-B/—			blue	
Signal	Connector B terminal no.	Shield	Cable colour	Connector E terminal no.
Vcc	B-1		Brown	12
GND	A-1		Black	13
Ā	B-2		Red	7
Α	A-2		Black	6
B	B-3		Orange	9
В	A-3		Black	8
SD+ (RX)	B-4		Yellow	11
SD- (TX)	A-4	· · · · · · · · · · · · · · · · · · ·	Black	10
	Connector C	νγ	Black	3
Signal	terminal no.			
Lock (+)	B-1 ·		Red	4
Lock (-)	A-1		Black	5
Sensor (+)	B-3		Brown	1
Sensor (-)	A-3		Blue	2





JXCE1/91/P1/D1/L1/M1/51/61 Series Precautions Relating to Differences in Controller Versions


As the controller version of the JXC series differs, the internal parameters are not compatible.

- If using the JXC□1□-BC or JXC□1□-BC-E, please use the latest version of the JXC-BCW (parameter writing tool).
- There are currently 3 versions available: version 1 products (V1.□ or S1.□), version 2 products (V2.□ or S2.□), and version 3 products (V3.□ or S3.□). Keep in mind that in order to write a backup file (.bkp) to another controller with the JXC-BCW, it needs to be the same version as the controller that created the file. (For example, a backup file created by a version 1 product can only be written to another version 1 product, and so on.) A backup file for the electric actuator with battery-less absolute encoder can only be written between version 3.4 or higher product (the backup file of version 2 or earlier products cannot be written).

Identifying Version Symbols




JXC□1 Series Version V3.□ or S3.□ Products

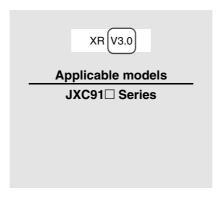


XR S3.0 T1.0
Applicable models
JXCD1□ Series
JXCE1□ Series
JXCP1□ Series
JXCL1□ Series
JXCM1□ Series
JXC51/61□ Series

JXC□1 Series Version V2.□ or S2.□ Products

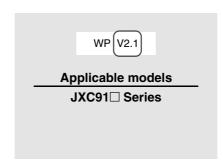

WP S2.2 T1.1
Applicable models
JXCD1□ Series
JXCE1□ Series
JXCP1□ Series
JXCL1□ Series

JXC□1 Series Version V1.□ or S1.□ Products

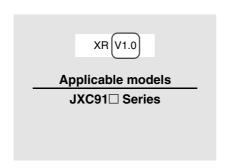


XR S1.0 T1.0
Applicable models
JXCD1□ Series
JXCE1□ Series
JXCP1□ Series
JXCL1□ Series

■ Trademark

EtherNet/IP™ is a trademark of ODVA. DeviceNet™ is a trademark of ODVA.

EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.



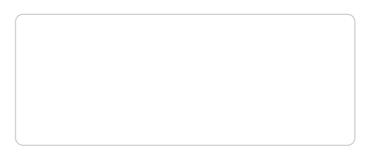

SMC Corporation (Europe)

Austria +43 (0)2262622800 www.smc.at Belgium +32 (0)33551464 www.smc.be Bulgaria +359 (0)2807670 Croatia +385 (0)13707288 www.smc.hr Czech Republic +420 541424611 www.smc.cz Denmark +45 70252900 Estonia +372 651 0370 Finland +358 207513513 France Germany +49 (0)61034020 Greece +30 210 2717265 Hungary +36 23513000 Ireland +39 03990691 Italy Latvia +371 67817700

www.smc.bg www.smcdk.com www.smcee.ee www.smc.fi +33 (0)164761000 www.smc-france.fr www.smc.de www.smchellas.gr www.smc.hu +353 (0)14039000 www.smcautomation.ie www.smcitalia.it www.smc.lv

office@smc.at info@smc.be office@smc.bg office@smc.hr office@smc.cz smc@smcdk.com info@smcee.ee smcfi@smc.fi supportclient@smc-france.fr info@smc.de sales@smchellas.gr office@smc.hu sales@smcautomation.ie mailbox@smcitalia.it info@smc.lv

Lithuania +370 5 2308118 www.smclt.lt Netherlands +31 (0)205318888 www.smc.nl Norway www.smc-norge.no +47 67129020 +48 222119600 Poland www.smc.pl Portugal +351 214724500 www.smc.eu Romania +40 213205111 www.smcromania.ro Russia +7 (812)3036600 www.smc.eu Slovakia +421 (0)413213212 www.smc.sk Slovenia +386 (0)73885412 www.smc.si Spain +34 945184100 www.smc.eu Sweden +46 (0)86031240 www.smc.nu **Switzerland** +41 (0)523963131 www.smc.ch Turkey +90 212 489 0 440 www.smcturkey.com.tr UK +44 (0)845 121 5122 www.smc.uk

info@smclt.lt info@smc.nl post@smc-norge.no office@smc.pl apoioclientept@smc.smces.es smcromania@smcromania.ro sales@smcru.com office@smc.sk office@smc.si post@smc.smces.es smc@smc.nu info@smc.ch satis@smcturkey.com.tr sales@smc.uk

South Africa +27 10 900 1233 zasales@smcza.co.za www.smcza.co.za